

Dodge Durango 2016 – 2018 fuse box diagram

Power Distribution Center

The Power Distribution Center is located in the engine compartment near the battery.

Cavity	Cartridge Fuse	Micro Fuse	Description
F03	60		Radiator Fan
F05	40		Compressor for Air Suspension – If Equipped
F06	40		Antilock Brakes/Electronic Stability Control Pump
F07	40		Starter Solenoid
F09	40		Diesel Fuel Heater (Diesel engine only) / Brake Vacuum Pump
F10	40		Body Controller / Exterior Lighting #2
F11	30		Trailer Tow Electric Brake – If Equipped
F12	40		Body Controller #3 / Interior Lights
F13	40		Blower Motor Front
F14	40		Body Controller #4 / Exterior Lighting #1
F17	30		Headlamp Washer- If Equipped

F19	20		Headrest Solenoid- If Equipped
F20	30		Passenger Door Module
F22	20		Engine Control Module
F23	30		Interior Lights #1
F24	30		Driver Door Module
F25	30		Front Wipers
F26	30		Antilock Brakes/Stability Control Module/Valves
F28	20		Trailer Tow Backup Lights – If Equipped
F29	20		Trailer Tow Parking Lights – If Equipped
F30	30		Trailer Tow Receptacle – If Equipped
F32	30		Drive Train Control Module
F34	30		Slip Differential Control
F35	30		Sunroof – If Equipped
F36	30		Rear Defroster
F37	30		Rear Blower Motor – If Equipped

F38	30		Power Inverter 115V AC – If Equipped
F39	30		Power Liftgate – If Equipped
F40		10	Daytime Running Lights/Headlamp Leveling
F42		20	Horn
F44		10	Diagnostic Port
F49		10	Integrated Central Stack / Climate Control
F50		20	Air Suspension Control Module – If Equipped
F51		10	Ignition Node Module / Keyless Ignition/ Steering Column Lock
F52		5	Battery Sensor
F53		20	Trailer Tow – Left Turn/Stop Lights – If Equipped
F56		15	Additional Content (Diesel engine only)
F57		20	NOx Sensor
F58		15	HID Headlamps LH – If Equipped
F59		10	Purging Pump (Diesel engine only)
F60		15	Transmission Control Module

F61		10	Transmission Control Module/PM Sensor (Diesel engine only)
F62		10	Air Conditioning Clutch
F63		20	Ignition Coils (Gas), Urea Heater (Diesel)
F64		25	Fuel Injectors / Powertrain
F66		10	Sunroof / Passenger Window Switches /Rain Sensor
F67		15	CD / DVD / Bluetooth Hands-free Module – If Equipped
F68		20	Rear Wiper Motor
F69		15	Spotlight Feed – If Equipped
F70		20	Fuel Pump Motor
F71		30	Audio Amplifier
F72		10	PCM (If Equipped)
F73		15	HID Headlamp RH – If Equipped
F75		10	Dual Batt Control (If Equipped)
F76		10	Antilock Brakes/Electronic Stability Control
F77		10	Drivetrain Control Module/Front Axle Disconnect Module

F78		10	Engine Control Module / Electric Power Steering
F80		10	Universal Garage Door Opener / Compass / Anti-Intrusion Module
F81		20	Trailer Tow Right Turn/Stop Lights
F82		10	Steering Column Control Module/ Cruise Control / DTV
F83		10	Fuel Door
F84		15	Switch Bank/Instrument Cluster
F85		10	Airbag Module
F86		10	Airbag Module
F87		10	Air Suspension – If Equipped/ Trailer Tow / Steering Column Control Module
F88		15	Instrument Panel Cluster
F90		20	Power Outlet (Rear seats) Selectable
F91			
F92		10	Rear Console Lamp – If Equipped
F93		20	Cigar Lighter

F94		10	Shifter / Transfer Case Module
F95		10	Rear Camera / Park Assist
F96		10	Rear Seat Heater Switch / Flashlamp Charger – If Equipped
F97		20	Rear Heated Seats & Heated Steering Wheel – If Equipped
F98		20	Front Heated Seats – If Equipped
F99		10	Climate Control / Driver Assistance Systems Module / DSRC
F100		10	Active Damping – If Equipped
F101		15	Electrochromatic Mirror/Smart High Beams – If Equipped
F103		10	Cabin Heater (Diesel Engine Only)/Rear HVAC
F104		20	Power Outlets (Instrument Panel/Center Console)