


Chevrolet Lumina 1998 – 2001 fuse box diagram

Instrument Panel Fuse Block

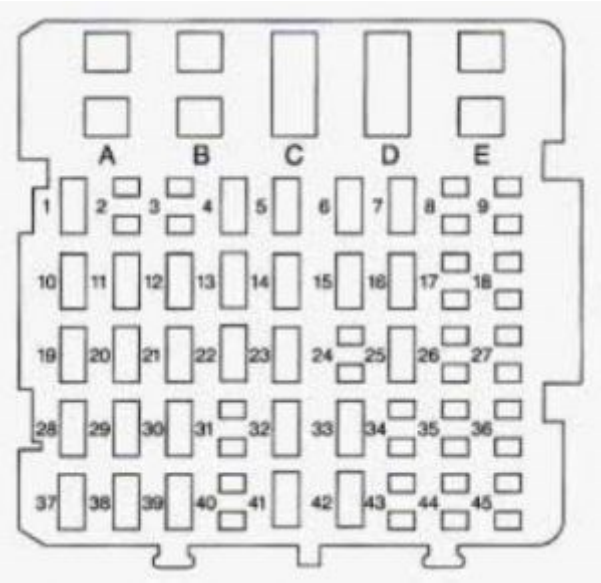

Chevrolet Lumina – fuse box – instrument


panel

Circuit Breaker	Usage
A	Not Used
B	Not Used
C	Power Windows
D	Power Seats
E	Not Used

Fuse	Description
1	CIGAR LIGHTER — Instrument Panel and Console Cigar Lighter
2	Not Used
3	Not Used
4	HVAC — HVAC Control Assembly Solenoid Box, Mix Motor, DRL Module, HVAC Control Head, Defogger Relay, (S.E.O.) Digital Speedometer
5	Hazard Flash
6	R.H. Spot Lamp (S.E.O)
7	Starter Relay
8	Not Used
9	Not Used
10	I/P Electronics Battery — Chime Module, Electronic Brake Control Module (EBCM), Theft-Deterrent Module, Radio DL
11	Power Accessory #2 — Sunroof Control Unit, (S.E.O.) Accessory Feed
12	Anti-Theft/PCM — Theft-Deterrent Module, Powertrain Control Module, (PCM) IGN Syst. Relay
13	ABS — Electronic Brake Control Module (EBCM), ABS Relay
14	HVAC Blower Motor — Blower Motor Relay
15	L.H. Spot Lamp (S.E.O)

16	Steering Wheel Control #1 — Steering Wheel Radio Control Lighting
17	Not Used
18	Not Used
19	Power Accessory #1 — Door Lock Switches, Trunk Courtesy Lamp, O/S Mirror Switch, (S.E.O.) Emergency Vehicle-Rear Compartment Lid Lamp or Window Panel Lamps
20	Steering Wheel Control #2 — Steering Wheel Radio Controls
21	Air Bag — Air Bag System
22	Cruise Control — Cruise Control Cut-Out Switch, Cruise Control Module, Turn Signal Cruise Control Switch
23	Stoplamps — Stoplamp Switch (Brake)
24	Not Used
25	English/Metric (S.E.O.)
26	Not Used
27	Not Used
28	CTSY Lamps — Vanity Mirrors, I/P Compartment Lamp, US Lighted Rearview Mirror, Dome Lamp
29	WIPER — Wiper Switch
30	TURN SIGNAL — Turn Signal Flasher
31	Not Used
32	Power Locks — Door Lock Relay, Remote Keyless Entry Receiv
33	DRL MDL — Daytime Running Lamp Module, (S.E.O.) Accessory Switch
34	Not Used
35	Not Used
36	Not Used
37	Rear Defog — Rear Window Defogger Switch Relay
38	Radio — Radio, Power Drop
39	I/P Electronics Ignition Feed — Headlamp Switch, Instrument Cluster, Chime Module, Keyless Entry Receiver, Stoplamp switch (TCC and BTSL) (S.E.O.) Accessory Switch
40	Not Used
41	Power Drop
42	Evap. Sol. — Evaporation Emissions (EVAP) Canister Vent Solenoid Valve
43	Not Used
44	Not Used
45	Not Used

Underhood Electrical Center — Passenger's Side

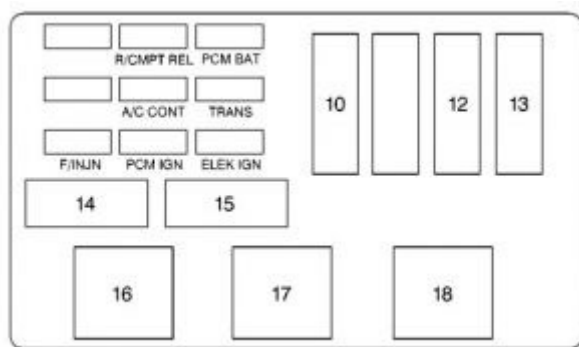


Chevrolet Lumina – fuse box – passenger side

underhood electrical center

Fuse	Description
R/CMPT REL	Remote Trunk Release, Back-up Lamps, Remote Control Door Lock Receive
PCM BAT	Powertrain Control Module (PCM), Fuel Pump Relay, Fan Cont #1 and #2 Rela
A/C CONT	A/C CMPR Relay
TRANS	Automatic Transaxle
F/INJN	Fuel Injectors
PCM IGN	Mass Air Flow (MAF) Sensor Heated Oxygen Sensor #1 and #2 Evaporative Emissions (EVAP) Canister Purge Solenoid Valve
ELEK IGN	Electronic Ignition (EI) Control Module
10	I/P Fuse Block
12	Passenger's Side Underhood Electrical Center, IGN SYST Relay, WCMPT REL Fuse, PCM BAT Fuse
13	FAN CONT #1 Relay

Relay	Description
14	FUEL PUMP
15	A/C CMPR
16	FAN CONT #2 — Secondary Cooling Fan (Passenger Side)
17	FAN CONT #1– Primary Cooling Fan (Driver Side)
18	IGN SYST

Underhood Electrical Center — Driver Side

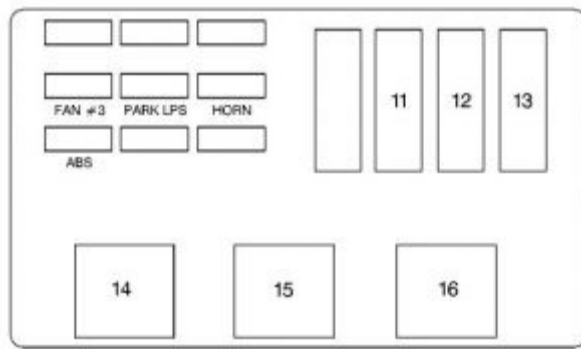

Chevrolet Lumina – fuse box – driver side

underhood electrical center

Fuse	Usage
FAN#3	FAN #3 Relay
PARK LPS	Headlamp Switch
HORN	Horn Relay
ABS	Anti-Lock Brake System
11	Circuit Breaker C, Starter Relay, STR WHL Control # 2, Power Accessory #2, and Theft Deterrent Relay
12	HD LPS — Circuit Breaker to Headlamp Switch
13	ABS — ABS Relay

Relay	Description
14	ABS — Anti-Lock Brake System
15	FAN CONT #3 — Secondary Cooling Fan (Passenger's Side)
16	HORN