


Toyota Verso 2009 – 2011 fuse box diagrams

Fuse box in engine compartment

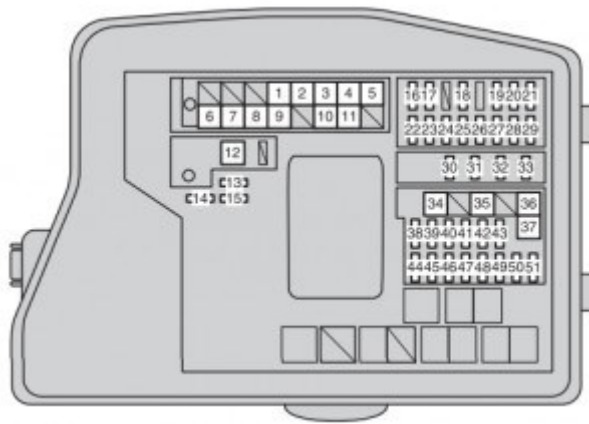

Toyota Verso – fuse box – engine compartment

Fuse	Ampere	Circuit
1 H-LP CLN	30	Headlight cleaner
2 RDI FAN	40	Electric cooling fan(s)
3 CDS FAN	30	Electric cooling fan(s)*1
4 ABS NO.1	50	Anti-lock brake system, VSC+
5 HTR	50	Air conditioning system
6 ALT	120*2 140*1	Charging system, RDI FAN, CDS FAN, H-LP CLN, FUEL OPN, ABS NO.1, ABS NO.2, FR DEICER, HTR, STV HTR, PWR OUTLET, HTR SUB NO.1, HTR SUB NO.2, HTR SUB NO.3, ECU-IG NO.2, HTR-IG, WIPER, RR WIPER, WASHER, ECU-IG NO.1, ECU-IG NO.3, SEAT HTR, AM1, DOOR, STOP, FR DOOR, POWER, RR DOOR, RL DOOR, OBD, ACC-B, RR FOG, FR FOG, DEF, TAIL, PANEL
7 EPS	80	Electric power steering
8 GLOW*1	80	Engine glow system
9 P-SYSTEM*2	30	VALVEMATIC system
10 P/I	50	EFI MAIN, HORN, IG2, EDU
11 H-LP MAIN	50	H-LP LH LO, H-LP RH LO, H-LP LH HI, H-LP RH HI
12 E-PKB	30	No circuit
13 SPARE	10	Spare fuse

14	SPARE	30	Spare fuse
15	SPARE	20	Spare fuse
16	AMP	30	No circuit
17	DOOR NO.2	25	Main body ECU
18	ECU-B2	10	Smart entry & start system, air conditioning system, power windows
19	ECU-B	10	Gauges and meters, main body ECU, steering sensor, double locking system, wireless remote control, smart entry & start system
20	RAD NO.1	15	Audio system
21	DOME	10	Luggage compartment light, vanity lights, engine switch light, front door courtesy lights, personal/interior lights, personal lights, foot lights
22	AM2 NO.2	7,5	Starting system
23	ALT-S	7,5	No circuit
24	TURN- HAZ	10	Turn signal lights, emergency flashers
25	ETCS ^{*2}	10	Electronic throttle control system
26	AM2	30	Starting system
27	A/F ^{*1}	20	Exhaust system
28	STRG LOCK	20	Steering lock system
29	IGT/INJ ^{*2}	15	Multiport fuel injection system/ sequential multiport fuel injection system, ignition system
30	EDU ^{*1}	20	Multiport fuel injection system/ sequential multiport fuel injection system
31	EFI MAIN	20 ^{*2} 30 ^{*1}	Multiport fuel injection system/ sequential multiport fuel injection system, automatic transmission ^{*3} , EFI NO.1, EFI NO.2, EFI NO.3 ^{*3}
32	HORN	15	Horn
33	IG2	15	IGN, METER
34	HTR SUB NO.1	30	Air conditioning system

35	HTR SUB NO.2	30	Air conditioning system
36	HTR SUB NO.3	30	Air conditioning system
37	PWR SEAT LH	30	No circuit
38	PWR OUTLET	15	Power outlet
39	PSB	30	No circuit
40	FUEL OPN	10	No circuit
41	FR DEICER	20	No circuit
42	ABS NO.2	30	Anti-lock brake system, VSC+
43	STV HTR*1	25	Power heater
44	EFI NO.3*3	7,5	Automatic transmission
45	IG2 NO.2	7,5	Starting system
46	EFI NO.2	10	Air intake system, air flow meter, exhaust system
47	EFI NO.1	10	Multiport fuel injection system/ sequential multiport fuel injection system, air flow meter, exhaust system*1
48	H-LP RH HI	10	Right-hand headlight (high beam)
49	H-LP LH HI	10	Left-hand headlight (high beam)
50	H-LP RH LO	15*4	Right-hand discharge headlights (low beam)
		10*5	Right-hand headlight (low beam)
51	H-LP LH LO	15*4	Left-hand discharge headlights (low beam)
		10*5	Left-hand headlight (low beam)

*1: Vehicles with diesel engine


*2: Vehicles with gasoline engine

*3: Vehicles with diesel engine and automatic transmission

*4: Vehicles with discharge headlights

*5: Vehicles with halogen headlights

Fuse box under the instrument panel (type A)

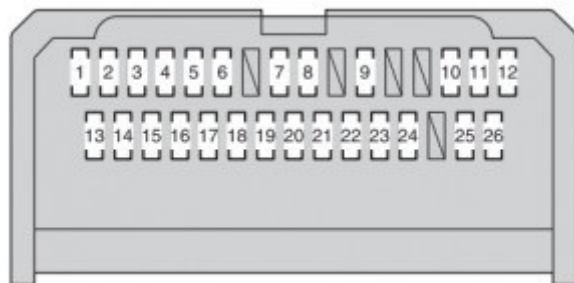

Toyota Verso – fuse box – instrument panel (type A)


Fuse	Ampere	Circuit
1 TAIL	10	Front position lights, tail lights, license plate lights, rear fog light, front fog lights, manual headlight leveling dial, instrument cluster lights
2 PAMEL	7,5	Air conditioning system switch, audio system, Multidrive or automatic transmission shift lever illumination, auxiliary box light, airbag manual on-off system, emergency flashers, cigarette lighter, headlight cleaner switch, headlight leveling dial, steering switch, VSC OFF switch, seat heater switch, "SPORT" switch, Toyota parking assist-sensor ECU, Toyota parking assist-sensor switch
3 ECU-IG NO.3	10	Panoramic roof shade, auto antiglare inside rear view mirror, smart entry & start system, audio system
4 FR DOOR	20	Power windows (passenger side)
5 RL DOOR	20	Power windows (rear left)
6 RR DOOR	20	Power windows (rear right)
7 CIG	15	Cigarette lighter
8 ACC	7,5	Shift lock system, audio system, main body ECU, power outlet
9 MIR HTR	10	Outside rear view mirror defoggers
10 RR FOG	7,5	Rear fog light
11 IGN	7,5	Steering lock system, SRS airbag system, multiport fuel injection system/sequential multiport fuel injection system, automatic transmission*1, starting system
12 METER	7,5	Gauges and meters

13	SEAT HTR*2	15	Seat heaters
14	HTR-IG	10	Air conditioning system
15	WIPER	25	Windshield wipers, rain-sensing windshield wipers
16	RR WIPER	15	Rear window wiper
17	WASHER	15	Windshield washers, rear window washer
18	ECU-IG NO.1	10	Main body ECU, electric cooling fan(s), shift lock system, anti-lock brake system, steering sensor, VSC+, headlight cleaner, SEQUENTIAL switch, automatic headlight leveling system, Electric Power Steering
19	ECU-IG NO.2	10	Back-up lights, charging system, emergency flashers, rear window defogger, front passenger's seat belt reminder light, "PASSENGER AIRBAG" indicator, air conditioning system, Toyota parking assist-sensor indicator, Toyota parking assistsensor switch
20	OBD	7,5	On-board diagnosis system
21	STOP	10	Stop lights, high mounted stoplight, anti-lock brake system, VSC+, shift lock system, starting system
22	SUNROOF	20	Panoramic roof shade
23	DOOR	25	Power door lock system
24	ACC-B	25	CIG, ACC
25	FR FOG	15	Front fog lights
26	AM1	7,5	Starting system, ACC, CIG, ECU-IG NO.2, HTR-IG, WIPER, RR WIPER, WASHER, ECU-IG NO.1, ECU-IG NO.3

*1: Vehicles with diesel engine and automatic transmission

*2: Vehicles with seat heater

Fuse box under the instrument panel (type B

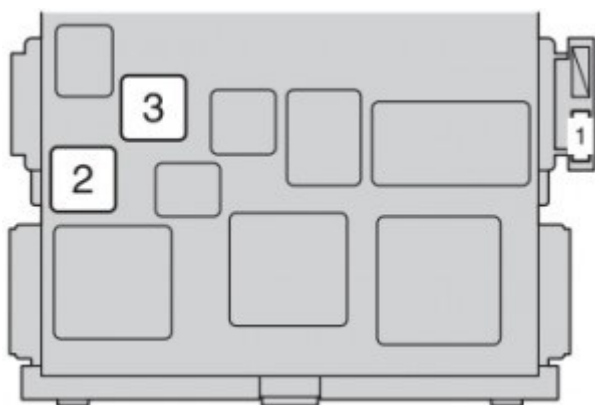

Toyota Verso – fuse box – instrument panel type B

Fuse	Ampere	Circuit
1 WIPER NO.2	7,5	Charging system, driver support system ECU
2 DEF	30	Rear window defogger, MIR HTR
3 POWER	30	Power windows (driver side)

WARNING: Terminal and harness assignments for individual connectors will vary depending on vehicle equipment level, model, and market.