

23.A/C Filter**A: REPLACEMENT**

For the A/C filter replacement procedures, refer to the AC section. <Ref. to AC-52, REPLACEMENT, A/C Filter.>

ENGINE SECTION

This service manual has been prepared to provide SUBARU service personnel with the necessary information and data for the correct maintenance and repair of SUBARU vehicles.

This manual includes the procedures for maintenance, disassembling, reassembling, inspection and adjustment of components and diagnostics for guidance of experienced mechanics.

Please peruse and utilize this manual fully to ensure complete repair work for satisfying our customers by keeping their vehicle in optimum condition. When replacement of parts during repair work is needed, be sure to use SUBARU genuine parts.

All information, illustration and specifications contained in this manual are based on the latest product information available at the time of publication approval.

FUEL INJECTION (FUEL SYSTEMS)**FU(H6DO)****EMISSION CONTROL
(AUX. EMISSION CONTROL DEVICES)****EC(H6DO)****INTAKE (INDUCTION)****IN(H6DO)****MECHANICAL****ME(H6DO)****EXHAUST****EX(H6DO)****COOLING****CO(H6DO)****LUBRICATION****LU(H6DO)****SPEED CONTROL SYSTEMS****SP(H6DO)****IGNITION****IG(H6DO)****STARTING/CHARGING SYSTEMS****SC(H6DO)****ENGINE (DIAGNOSTICS)****EN(H6DO)(diag)****GENERAL DESCRIPTION****GD(H6DO)**

FUEL INJECTION (FUEL SYSTEMS)

FU(H6DO)

	Page
1. General Description	2
2. Throttle Body	12
3. Intake Manifold	13
4. Engine Coolant Temperature Sensor	18
5. Crankshaft Position Sensor	19
6. Camshaft Position Sensor	20
7. Knock Sensor	21
8. Throttle Position Sensor	22
9. Manifold Absolute Pressure Sensor	23
10. Mass Air Flow and Intake Air Temperature Sensor	24
11. Fuel Injector	25
12. Variable Valve Lift Diagnosis Oil Pressure Switch	27
13. Oil Temperature Sensor	28
14. Front Oxygen (A/F) Sensor	29
15. Rear Oxygen Sensor	31
16. Engine Control Module (ECM)	33
17. Main Relay	34
18. Fuel Pump Relay	35
19. Electronic Throttle Control Relay	36
20. Fuel Pump Control Unit	37
21. Fuel	38
22. Fuel Tank	40
23. Fuel Filler Pipe	43
24. Fuel Pump	45
25. Fuel Level Sensor	47
26. Fuel Sub Level Sensor	48
27. Fuel Filter	49
28. Fuel Delivery & Evaporation Lines	50
29. Fuel System Trouble in General	54