


4. Engine Oil Filter

A: REPLACEMENT


CAUTION:

Be careful not to spill the engine oil on exhaust pipe to prevent it from emitting smoke or fire. If engine oil is spilled on the exhaust pipe, wipe it off completely.

1) Remove the service hole cover clip.

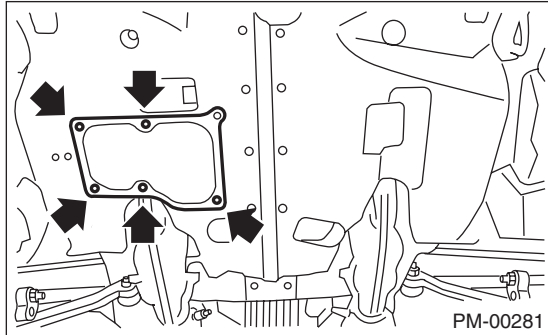


2) Rotate the service hole cover in the direction of the arrow.

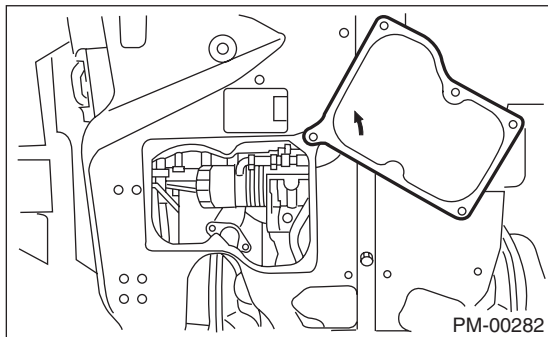

3) Remove the oil filter using ST.

ST 49857000 OIL FILTER WRENCH (OUTER DIAMETER: 80 mm (3.15 in))

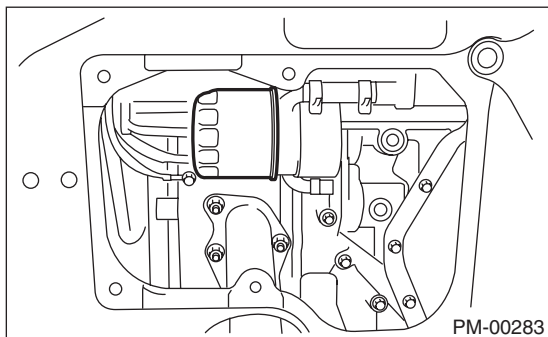

4) Obtain a new oil filter and apply a thin coat of engine oil to the seal rubber.

5) Install the oil filter by turning it by hand, while being careful not to damage seal rubber. Then, after the seal rubber touches the oil cooler, tighten it a further 3/4 turn.

CAUTION:

Do not tighten excessively, because this can cause oil leaks.

6) After installing the oil filter, run the engine and make sure that no oil is leaking around seal rubber.

NOTE:

The filter element and filter case are permanently jointed; therefore, interior cleaning is not necessary.

7) Check the engine oil level. <Ref. to PM-6, INSPECTION, Engine Oil.>