


10.Rear Wiper Motor


A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the rear wiper arm. <Ref. to WW-19, REMOVAL, Rear Wiper Arm.>
- 3) Remove the rear gate lower trim. <Ref. to EI-60, REMOVAL, Rear Gate Trim.>
- 4) Disconnect the harness connector of wiper motor assembly.
- 5) Remove the bolt, and then remove the wiper assembly.

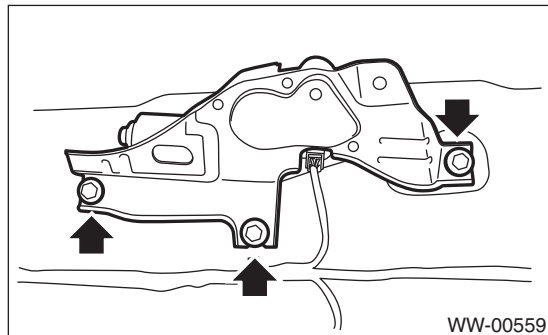

B: INSTALLATION


- 1) Install in the reverse order of removal.
- 2) As shown in the figure, make sure that the diamond mark of the pivot cap is facing upward.

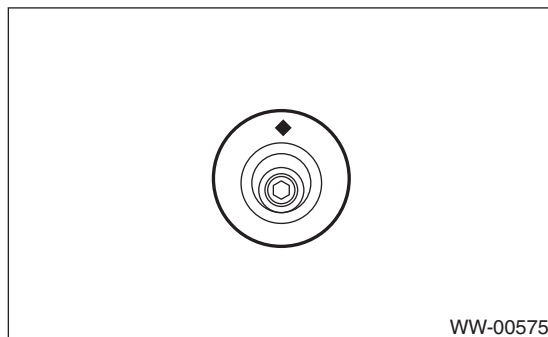


Tightening torque:
Refer to “COMPONENT” of “General Description”.
<Ref. to WW-4, REAR WIPER, COMPONENT, General Description.>

C: INSPECTION

- 1) Connect the battery to the wiper motor connector and confirm that wiper motor operates.

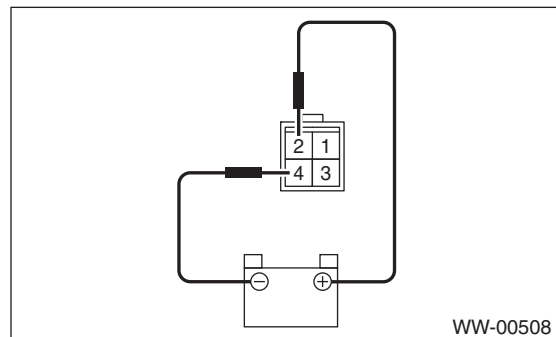

- 2) Connect the battery to the connector terminal, run the motor and disconnect the terminal connection, and stop the wiper motor in mid motion.

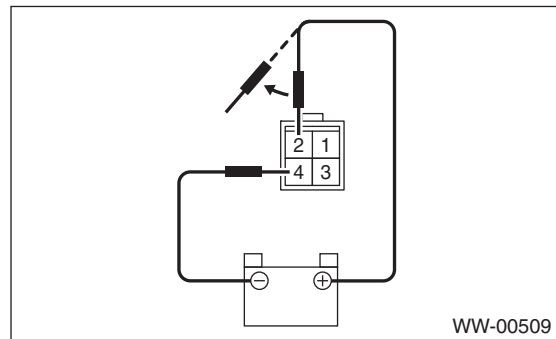

- 3) Connect the battery and confirm that the motor stops at the automatic stop position after the motor operates at low speed.

