


Washer Tank and Motor

WIPER AND WASHER SYSTEMS


5. Washer Tank and Motor

A: REMOVAL


- 1) Open the front hood.
- 2) Disconnect the ground cable from the battery.
- 3) Remove the front bumper. <Ref. to EI-28, REMOVAL, Front Bumper.>
- 4) Remove the clip of the washer tank duct.

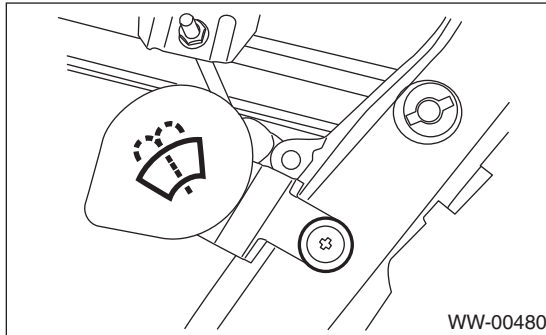


- 5) Remove the washer motor cover, and disconnect the connector.

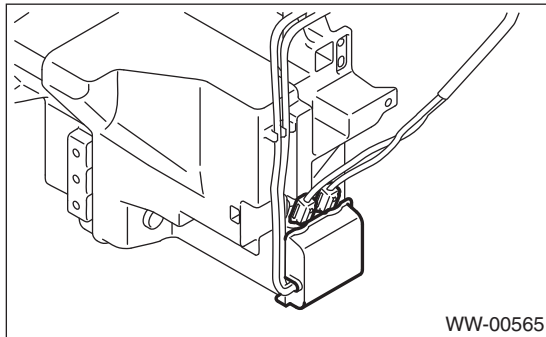

- 6) Disconnect the hose.

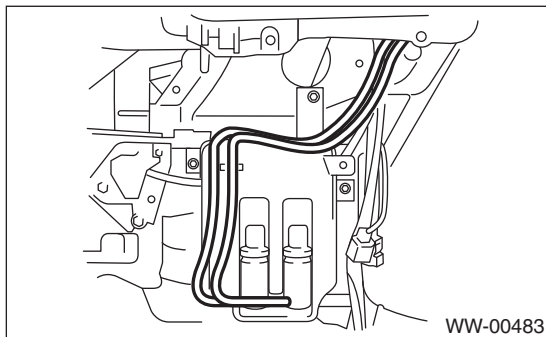

- 7) Remove the bolts and nuts and remove the washer tank.

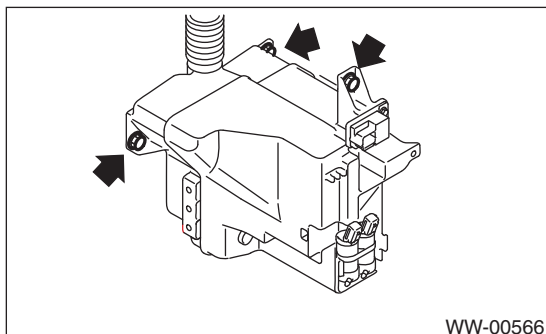

B: INSTALLATION


Install in the reverse order of removal.

Tightening torque:

6.0 N·m (0.61 kgf-m, 4.4 ft-lb)

C: DISASSEMBLY

Pull out the washer motor from the tank.

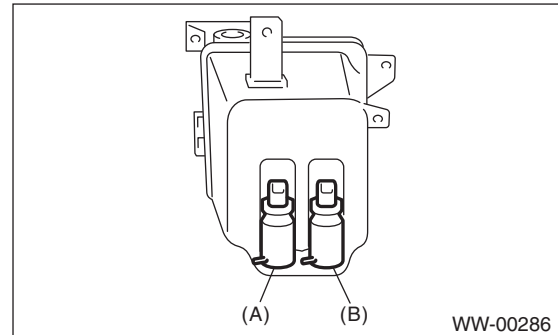

D: ASSEMBLY

- 1) Assemble in the reverse order of disassembly.
- 2) Confirm that water does not leak from installation area of motor.

E: INSPECTION

Apply battery voltage to the connector terminal of the washer motor and make sure that the motor operates.

