


6. Front Wiper Arm


A: REMOVAL

- 1) Open the front hood.
- 2) Remove the cap.
- 3) Remove the nut, and remove the arm.

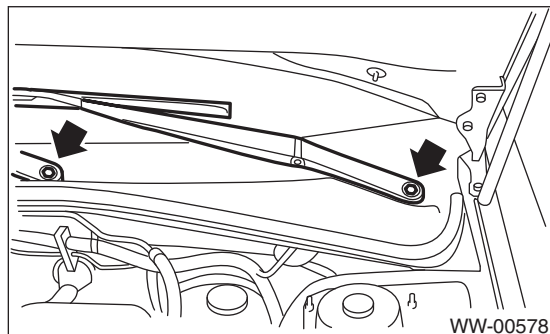

B: INSTALLATION

- 1) Install in the reverse order of removal.
- 2) Operate the wiper once.
- 3) Align the wiper blade to ceramic print point mark (A) of front window panel.

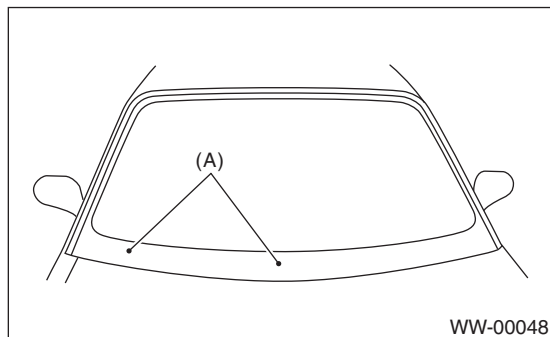

Tightening torque:

Refer to “COMPONENT” of “General Description”.

<Ref. to WW-3, FRONT WIPER, COMPONENT, General Description.>

C: ADJUSTMENT

Operate the wiper once. Align the wiper blade to ceramic print point mark (A) of front window panel.

