


8. Front Washer Nozzle

A: REMOVAL

- 1) Remove the cowl panel. <Ref. to EI-37, REMOVAL, Cowl Panel.>
- 2) Remove the washer hose from the washer nozzle.
- 3) Using a driver with a narrow tip, etc., remove the washer nozzle from the cowl panel.

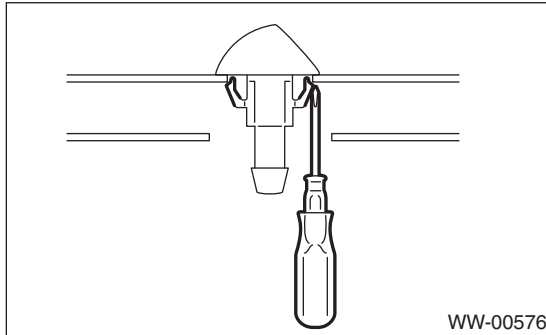

B: INSTALLATION

- 1) Install in the reverse order of removal.
- 2) Adjust the washer nozzle position. <Ref. to WW-18, ADJUSTMENT, Front Washer Nozzle.>

C: INSPECTION

- Make sure the nozzle and hose are not clogged.
- Make sure the hose is not bent.

D: ADJUSTMENT


- 1) Turn the wiper switch to OFF position.
- 2) While the vehicle is stopped, adjust the washer spray position as shown in the figure.

Spray position:

A: 250 mm (9.84 in)

B: 117 mm (4.6 in)

C: 264 mm (10.4 in)

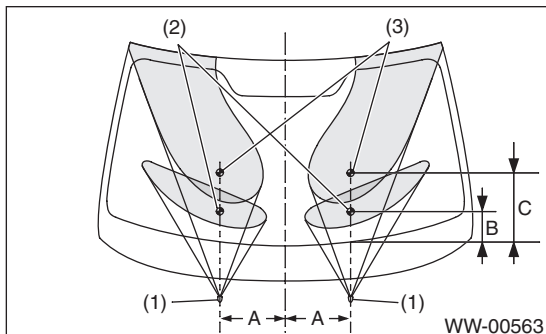

- (1) Washer nozzle
- (2) Center of upper nozzle
- (3) Center of lower nozzle