



9. Rear Wiper Arm

A: REMOVAL

- 1) Detach the wiper arm cover (A).

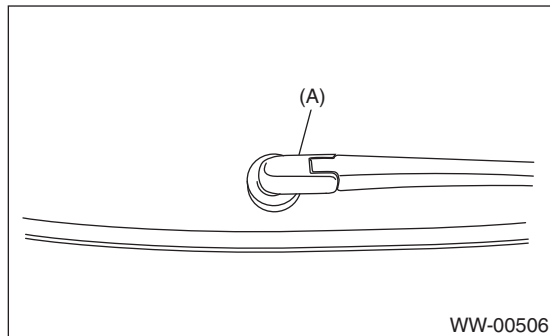


- 2) Remove the nut and remove the wiper arm.

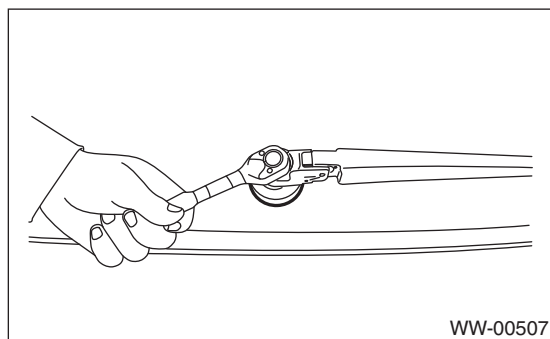


B: INSTALLATION

- 1) Install in the reverse order of removal.
- 2) Operate the rear wiper once.
- 3) Align the blade with the marking (A) of the glass.

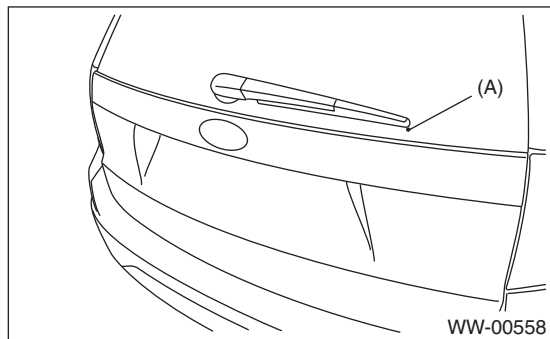

C: ADJUSTMENT

- 1) Operate the rear wiper once.
- 2) Align the blade with the marking (A) of the glass.

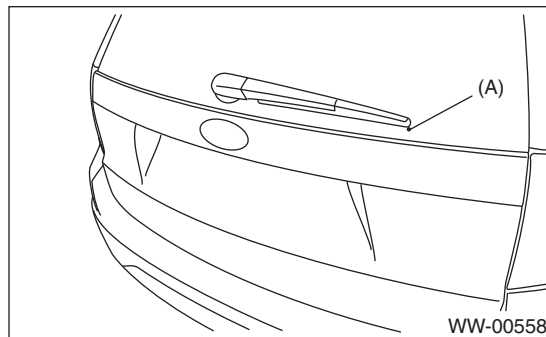

Tightening torque:

Refer to "COMPONENT" of "General Description".

<Ref. to WW-4, REAR WIPER, COMPONENT, General Description.>