


# Oldsmobile Eighty Eight 1995 fuse box diagram

## Left Side Fuse Panel

The left side fuse panel is located to the left of the steering wheel, under the instrument panel.

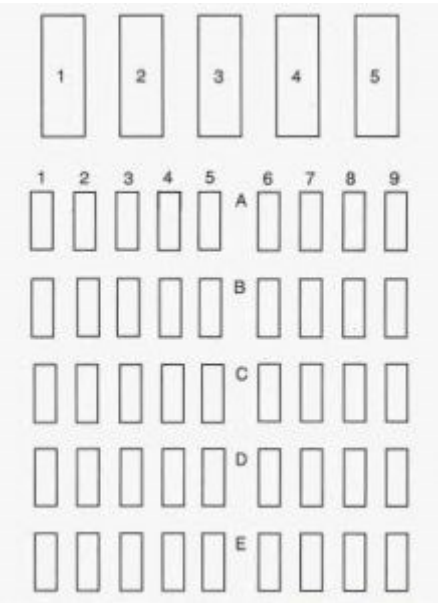

Oldsmobile Eighty Eight –

fuse box – left side fuse panel


| Position | Description                                         |
|----------|-----------------------------------------------------|
| A        | Circuit Breaker-Power Windows                       |
| B        | Not Used                                            |
| C        | Power Seats                                         |
| D        | Not Used                                            |
| E        | Not Used                                            |
| 1A       | Start-up Signal – Air Bag                           |
| 2A       | Spare                                               |
| 3A       | Not Used                                            |
| 4A       | Interior Lamps                                      |
| 5A       | Ignition (Run), Automatic A/C Control, Base Cluster |
| 6A       | Courtesy Lights, Power Mirrors                      |
| 7A       | Not Used                                            |

|    |                                                                                 |
|----|---------------------------------------------------------------------------------|
| 8A | Not Used                                                                        |
| 9A | Cigar Lighter                                                                   |
| 1B | Turn Signal, Back-up Lights, Cornering Lights, Brake- Transaxle Shift Interlock |
| 2B | Spare                                                                           |
| 3B | Not Used                                                                        |
| 4B | Not Used                                                                        |
| 5B | Anti-Lock Brake System                                                          |
| 6B | Brake and Hazard Lamps                                                          |
| 7B | Not Used                                                                        |
| 8B | Not Used                                                                        |
| 9B | Electronic Level Control                                                        |
| 1C | Air Bag                                                                         |
| 2C | Spare                                                                           |
| 3C | Not Used                                                                        |
| 4C | Not Used                                                                        |
| 5C | Cooling Fans, Transaxle                                                         |
| 6C | Parking Lamps                                                                   |
| 7C | Not Used                                                                        |
| 8C | Not Used                                                                        |
| 9C | (Battery) Chime, Radio, Cluster                                                 |
| 1D | Ignition (Run/Crank), Chime, Cluster                                            |
| 2D | Spare                                                                           |
| 3D | Heater Mirror                                                                   |
| 4D | Not Used                                                                        |
| 5D | Base A/C                                                                        |
| 6D | Fog Lamps                                                                       |
| 7D | Not Used                                                                        |

|    |                       |
|----|-----------------------|
| 8D | Radio                 |
| 9D | Not Used              |
| 1E | Auxiliary Outlet(s)   |
| 2E | Not Used              |
| 3E | Ignition (Off/Unlock) |
| 4E | Not Used              |
| 5E | Not Used              |
| 6E | Not Used              |
| 7E | Not Used              |
| 8E | Wipers, Washer        |
| 9E | Rear Defog            |

### Right Side Fuse Panel

Additional fuses are located in the relay center, on the far right side, below the instrument panel.

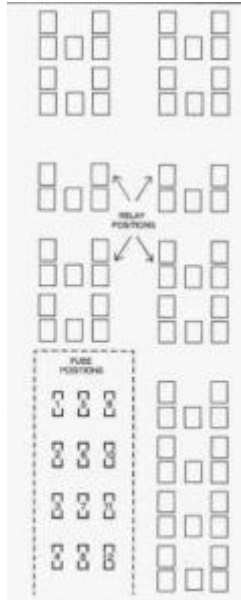

Oldsmobile Eighty Eight –  
fuse box – right side fuse panel

| Fuse | Usage                               |
|------|-------------------------------------|
| 1    | Door Locks                          |
| 2    | Antenna, Lock Switch, Trunk Release |
| 3    | Horns                               |

|    |                                        |
|----|----------------------------------------|
| 4  | Not Used                               |
| 5  | Cruise Control, Misc. Engines Controls |
| 6  | Fuel Pump                              |
| 7  | Injectors                              |
| 8  | Powertrain Control Module, PASS-Key II |
| 9  | A/C Programmer                         |
| 10 | Not Used                               |
| 11 | Not Used                               |
| 12 | Not Used                               |