


Lincoln Navigator 2018 – 2019 fuse box diagram

Engine Compartment Fuse Box

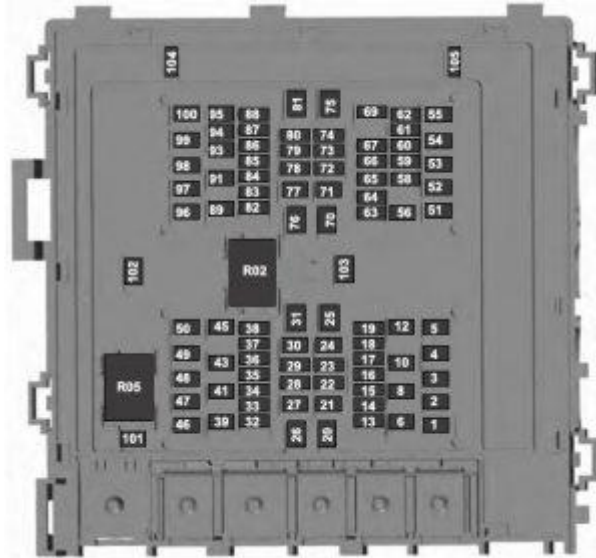

Lincoln Navigator – fuse box diagram –

engine compartment

No.	A	Circuit Protected
1	25	Horn
2	50	Fan 1
3	30	Front wiper motor
4	–	Not used
5	30	Starter relay
6	20	Power point #1
8	20	Power point #2

10	5	Rain sensor
12	–	Not used
13	10	4X4 module, Heated backlite, Heated mirror relay coil, Heated wiper park relay coil, Transmission isolation relay coil
14	15	Transmission coil module
15	15	RH-LDM, LH-LDM, Voltage quality module, Blindspot information system, Cruise control module, Tailgate applique, Image processing module B
16	10	Powertrain control module (PCM) run/start feed
17	10	Anti-lock brake system (ABS) run/start feed
18	10	Electronic power assist steering, run/start feed
19	–	Not used
20	40	Front blower
21	40	Passenger seat motors
22	20	Not used
23	10	Alternator A-line
24	30	Trailer brake control module

25	50	Body control module power 1
26	50	Electronic fan 3
27	40	Driver seat motors
28	15	Rear heated seats
29	10	4×4 integrated wheel end solenoid
30	2 5	Trailer tow class II-IV battery charge
31	50	Power folding seat module
32	10	A/C clutch
33	–	Not used
34	–	Not used
35	20	Vehicle power 4
36	10	Vehicle power 3
37	25	Vehicle power 2
38	25	Vehicle power 1
39	–	Not used

41	50	Inverter
43	20	Trailer tow light module class II-IV
45	20	Front/rear washer pump
46	7.5	Family entertainment system
47	–	Not used
48	–	Not used
49	–	Not used
50	30	Fuel pump
51	20	Power point #3
52	50	Body control module (BCM) voltage quality monitor (VQM)
53	25	Trailer tow park lamps relay
54	40	Electronic limited slip differential (ELSD) relay
55	40	Auxiliary blower
56	20	Power point #4
58	5	Front driver and passenger seats – belt tension reducer

59	–	Not used
60	5	Lincoln start lamp
61	25	Right-hand enhanced exterior lighting (EEL) module (R64)
62	25	Left-hand enhanced exterior lighting (EEL) module (R64)
63	25	4X4 module
64	–	Not used
65	–	Not used
66	–	Not used
67	–	Not used
69	–	Not used
70	40	Anti-lock brake system (ABS) / park brake module
71	25	4X4 module
72	–	Not used
73	–	Not used
74	10	Trailer tow backup lamps

75	–	Not used
76	50	Body control module (BCM) run power 2
77	30	Climate control (heated/vented) seat module
78	20	Not used
79	–	Not used
80	10	Heated wiper park
81	–	Not used
82	–	Not used
83	15	Transmission control module (TCM) power
84	–	Not used
85	–	Not used
86	5	USB smart charger #5
87	5	USB smart charger #3
88	10	Multi contour seats relay
89	40	Power running boards

91	30	Power liftgate module
93	15	Heated mirrors
94	5	USB smart charger #1
95	10	USB smart charger #2
96	30	Rear wiper motor relay
97	40	Intercooler puller fan relay
98	15	Transmission oil pump
99	40	Heated backlight
100	20	Power point #5
101	25	Electric fan 2
102	–	Not used
103	20	Not used (spare)
104	–	Not used
105	–	Not used
Relay		

R02	Electric fan 2
R05	Powertrain control module (PCM)

Passenger compartment fuse panel



Lincoln Navigator – fuse box diagram – passenger compartment

No.	A	Circuit Protected
1	–	Not used
2	7.5	Driver seat switch
3	20	Driver door unlock
4	5	Trailer brake controller (TBM)
5	20	Revel II amplifier
6	10	Not used (spare)
7	10	Not used (spare)
8	10	Not used (spare)
9	10	Rear seat entertainment module (RSEM), Automatic heads up display

10	5	Wireless accessory charger module (WACM), Hands free liftgate module, Power liftgate module Logic (PLGM)
11	5	Combined sensor module (CSM), Keypad
12	7.5	Cluster, Smart datalink connector Logic (SDLC), Electronic control panel (ECP)
13	7.5	Steering column control module (SCCM) (Logic), Gear shift module (GSM)
14	10	Extended power mode module (EPM), Brake Switch
15	10	Smart datalink connector Power (SDLC)
16	15	Liftglass release relay
17	5	Telematics control unit – modem
18	5	Push-button start switch
19	7.5	Not used (spare)
20	7.5	Headlamp control module (HCM)
21	5	In-car temperature and humidity sensor
22	5	EC mirror, 2nd row heated seat module
23	10	Moonroof (logic), Inverter (LIN logic), Power window switch, Power mirror switch, DVD player (if equipped)

24	20	Central lock relay, Central unlock relay
25	30	Left front door zone module (DZM)
26	30	Right front door zone module (DZM)
27	30	Moonroof- Tilt, Vent, Slide
28	20	Revel II Amp
29	30	Left rear door zone module (DZM)
30	30	Right rear door zone module (DZM)
31	15	Adjustable column and pedal memory module (CAPM)
32	10	Accessory protocol interface module (APIM) (Media Gateway Module or SYNC), Drive mode switch module (DMSM) (if equipped), Radio frequency transceiver module (RTM), Rear HVAC control
33	20	Audio control module (ACM), Rear audio control module (RACM), Remote CD mechanism (if equipped)
34	30	Run/start relay
35	5	Extended power mode module (EPM)
36	15	Image processing module A (IPMA), Automated Park Assist Module Continuous control damping module (CCD Module)
37	20	Heated steering wheel

38	30	Circuit Breaker: Left rear power window, Right rear power window
----	----	--