

# Vauxhall Combo D 2016 fuse box diagram

## Engine compartment fuse box

The fuse box is on the right of the engine compartment, next to the battery. To remove the protective cover and access the fuses, remove the two screws



Vauxhall Combo D – fuse box – engine


compartment

| Number | Circuit                 |
|--------|-------------------------|
| F09    | Rear door switch        |
| F10    | Horn                    |
| F14    | High beam               |
| F15    | PTCI heater             |
| F19    | Air conditioning system |
| F20    | Heated rear window      |

|     |                                  |
|-----|----------------------------------|
| F21 | Fuel pump                        |
| F30 | Fog lights                       |
| F84 | CNG system                       |
| F85 | Power outlets                    |
| F86 | Cigarette lighter / heated seats |
| F87 | Stop-start system                |
| F88 | Mirror heating                   |

#### Instrument panel fuse box

The fuse box is located behind a cover on the lower part of the instrument panel, on the driver's side.

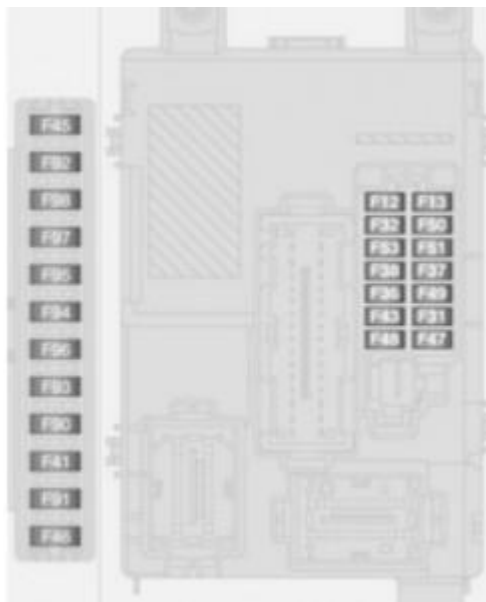

Vauxhall Combo D – fuse box – instrument panel

| Number | Circuit |
|--------|---------|
|--------|---------|

|     |                                                                                                                                   |
|-----|-----------------------------------------------------------------------------------------------------------------------------------|
| F12 | Right low beam                                                                                                                    |
| F13 | Left low beam / headlight range adjustment                                                                                        |
| F31 | Fusebox relays / body control unit relays                                                                                         |
| F32 | Courtesy lights                                                                                                                   |
| F36 | Diagnostic connector / climate control system / Infotainment system / tyre pressure monitoring system / alarm siren               |
| F37 | Instrument panel / braking system                                                                                                 |
| F38 | Centralny zamek                                                                                                                   |
| F43 | Windscreen washer system                                                                                                          |
| F47 | Power windows                                                                                                                     |
| F48 | Power windows                                                                                                                     |
| F49 | Exterior mirrors / Infotainment system / parking assist / tyre pressure monitoring system / instrument illumination / rain sensor |
| F51 | Infotainment system / braking system / clutch / interior heater                                                                   |
| F53 | Instrument panel                                                                                                                  |
| F94 | Power outlet load compartment                                                                                                     |

|     |                                  |
|-----|----------------------------------|
| F95 | Cigarette lighter / power outlet |
| F96 | Cigarette lighter / power outlet |
| F97 | Heated front seat                |
| F98 | Heated front seat                |