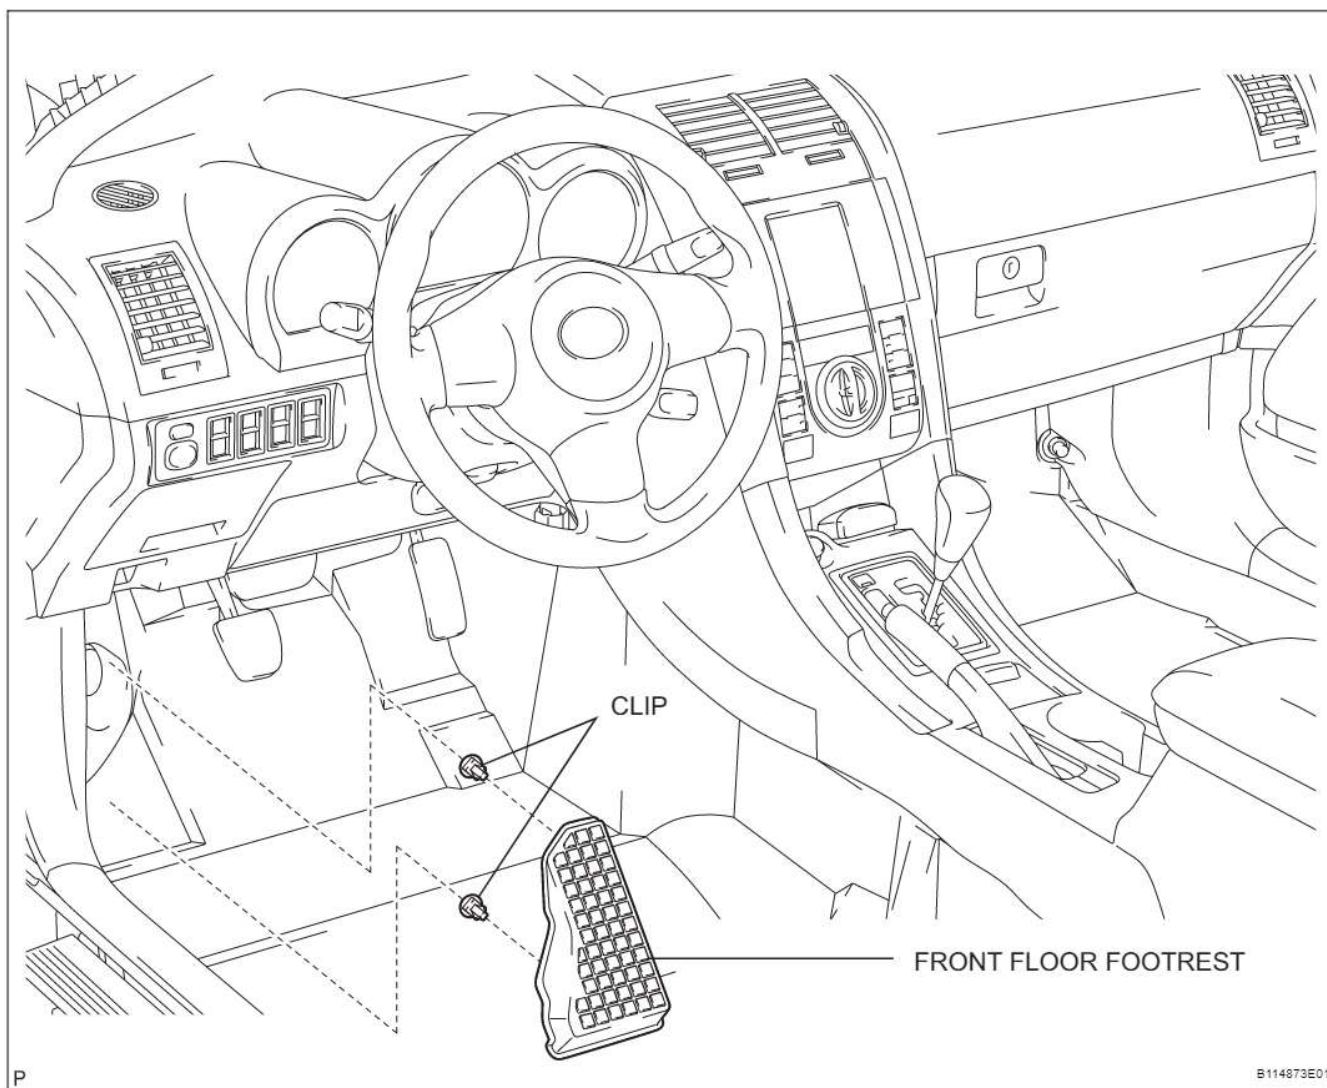


FRONT FLOOR FOOTREST

COMPONENTS



IR

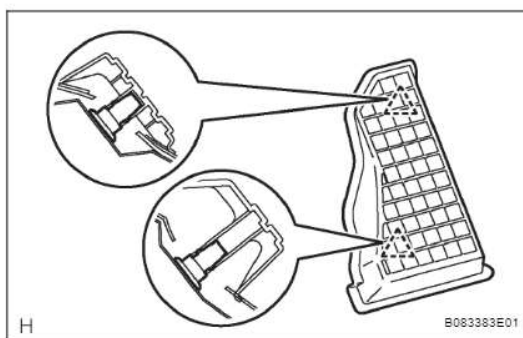
REMOVAL

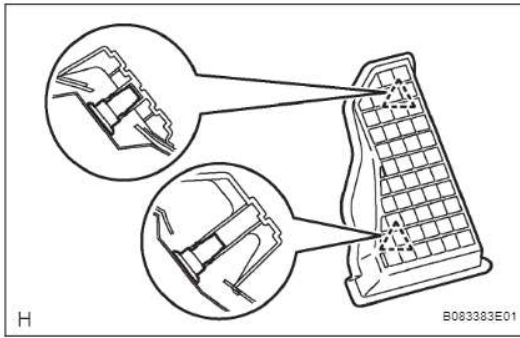
1. REMOVE FRONT FLOOR FOOTREST

- (a) Using a screwdriver, detach the 2 clips and remove the footrest.

HINT:

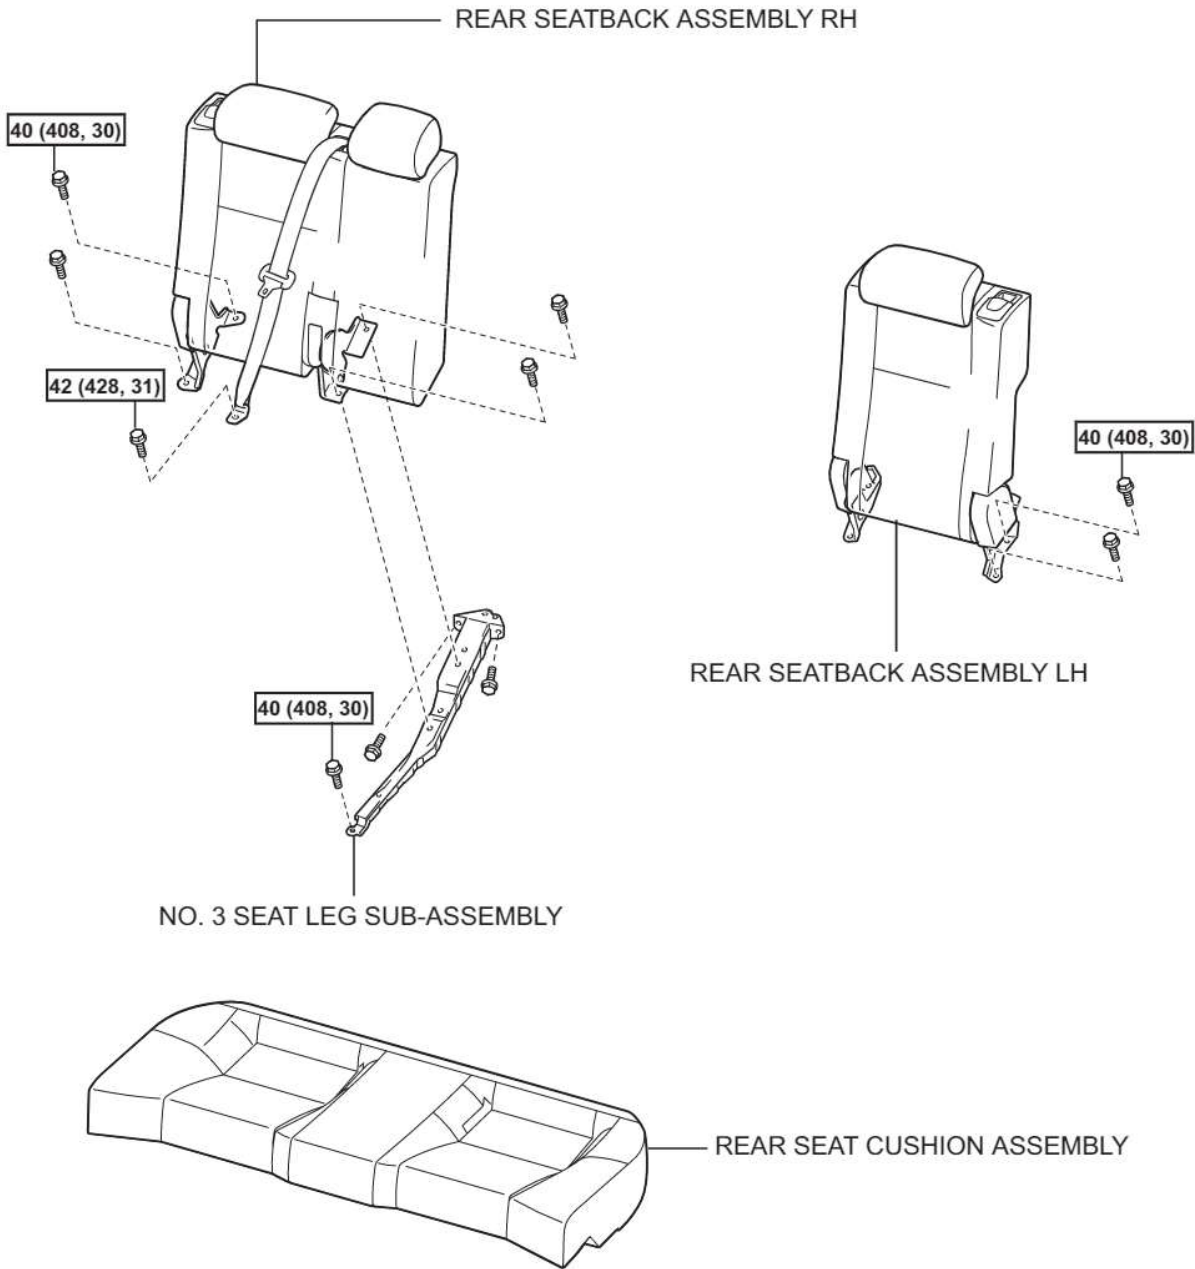
Tape the screwdriver tip before use.



IR-2**INTERIOR – FRONT FLOOR FOOTREST****INSTALLATION****1. INSTALL FRONT FLOOR FOOTREST**

- (a) Attach the 2 clips to install the footrest.

ROOF HEADLINING
COMPONENTS



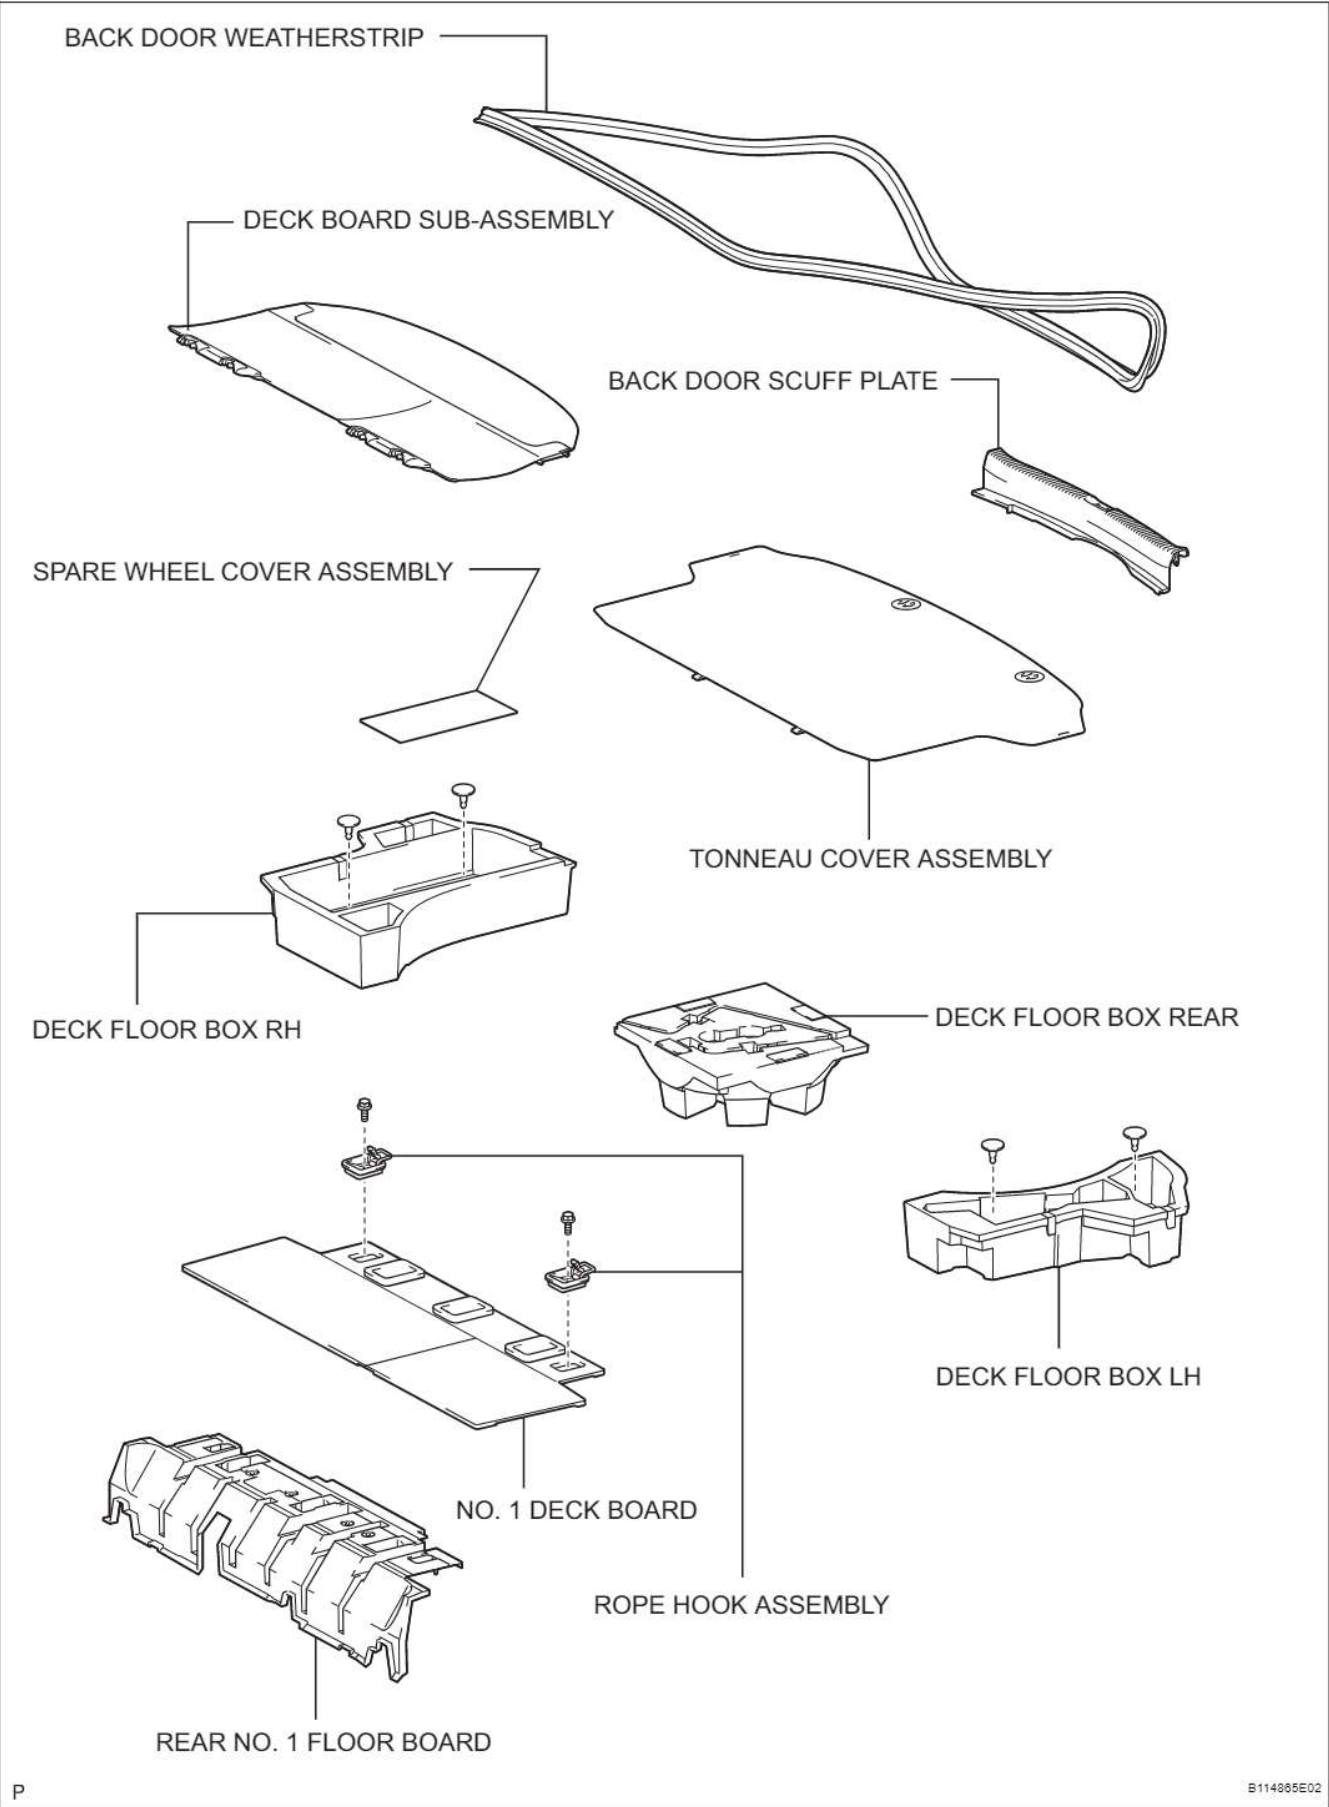
N*m (kgf*cm, ft.*lbf) : Specified torque

B117915E01

IR

IR-4

INTERIOR – ROOF HEADLINING



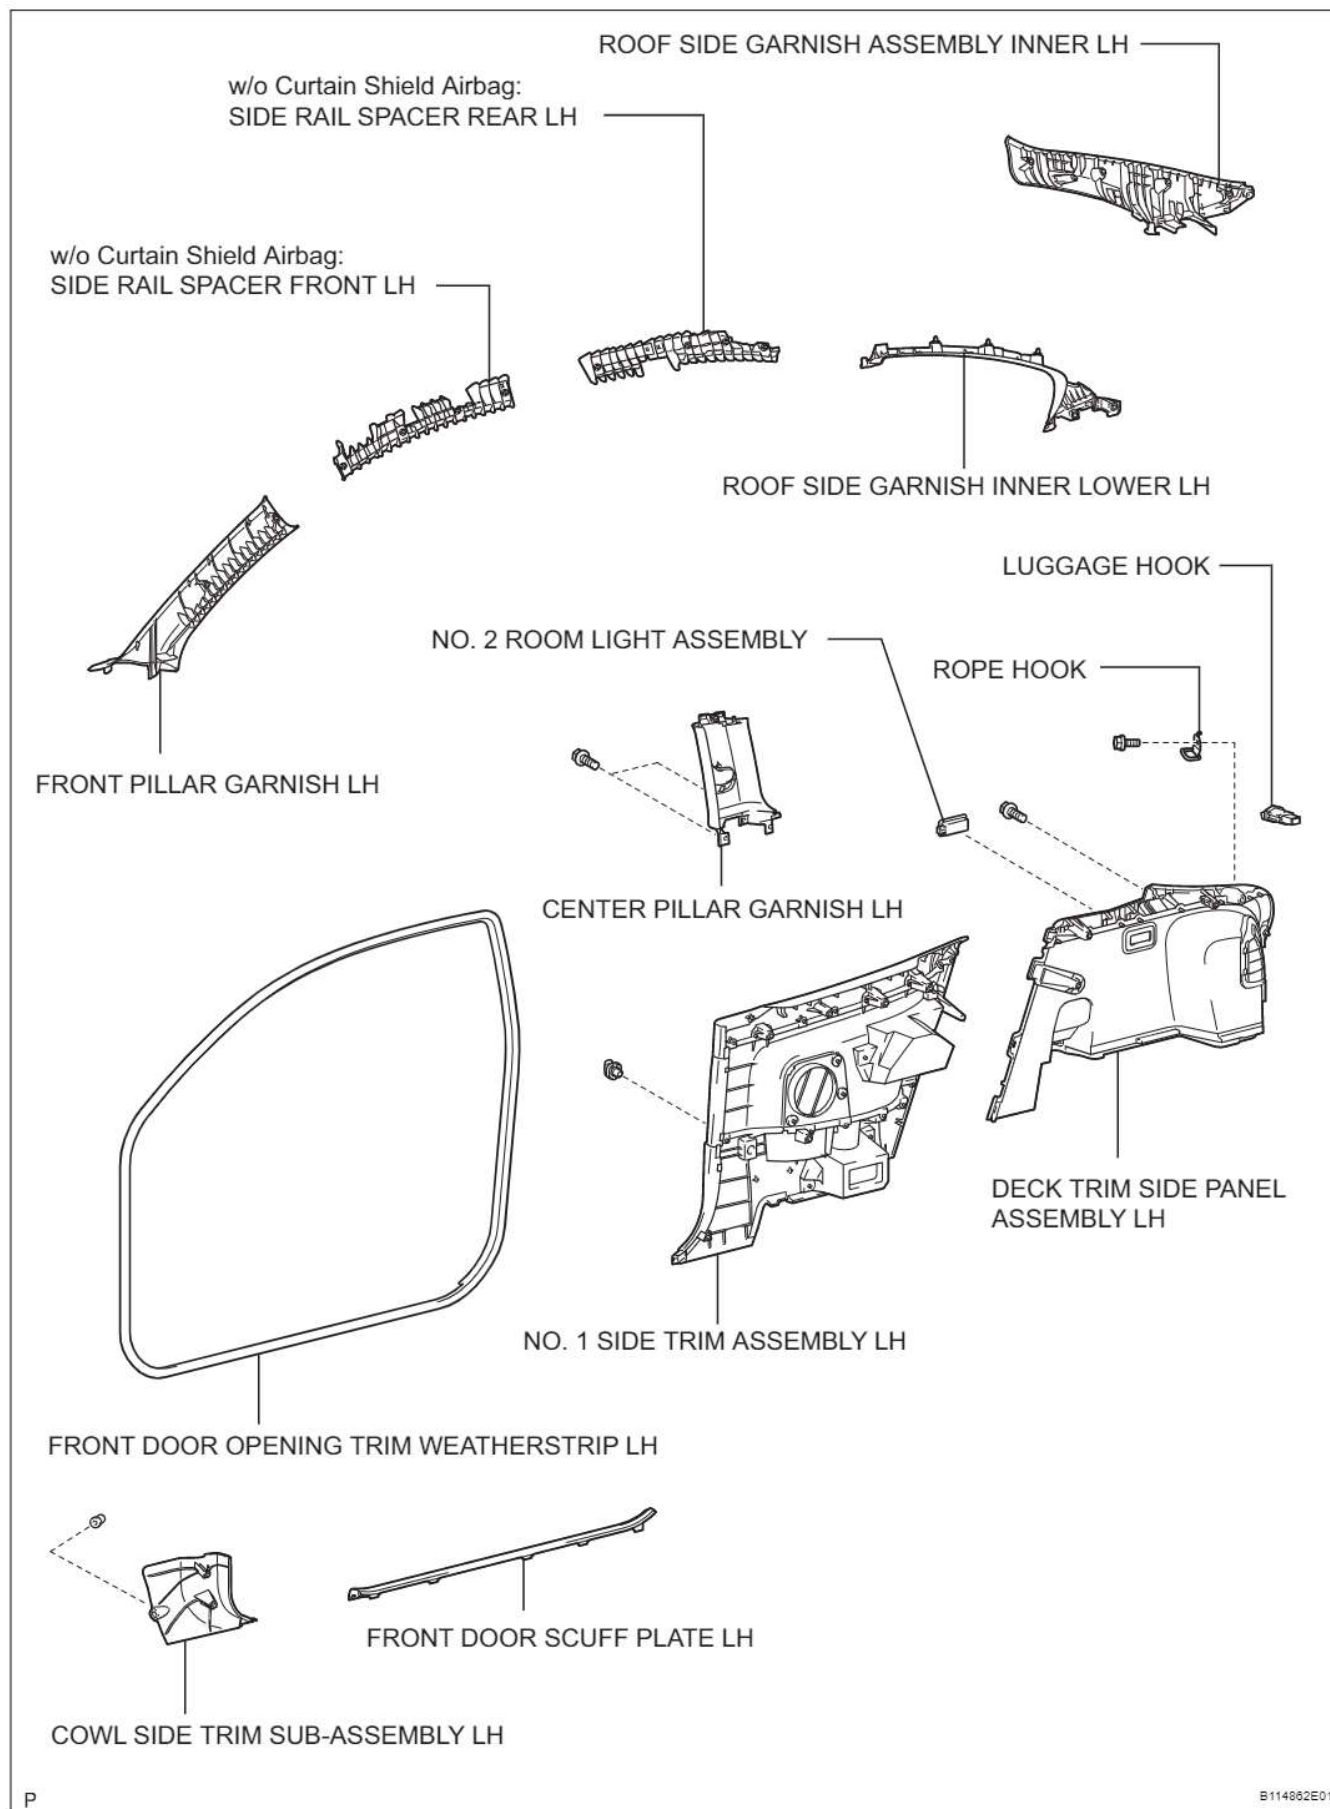
IR

P

B114065E02

INTERIOR – ROOF HEADLINING

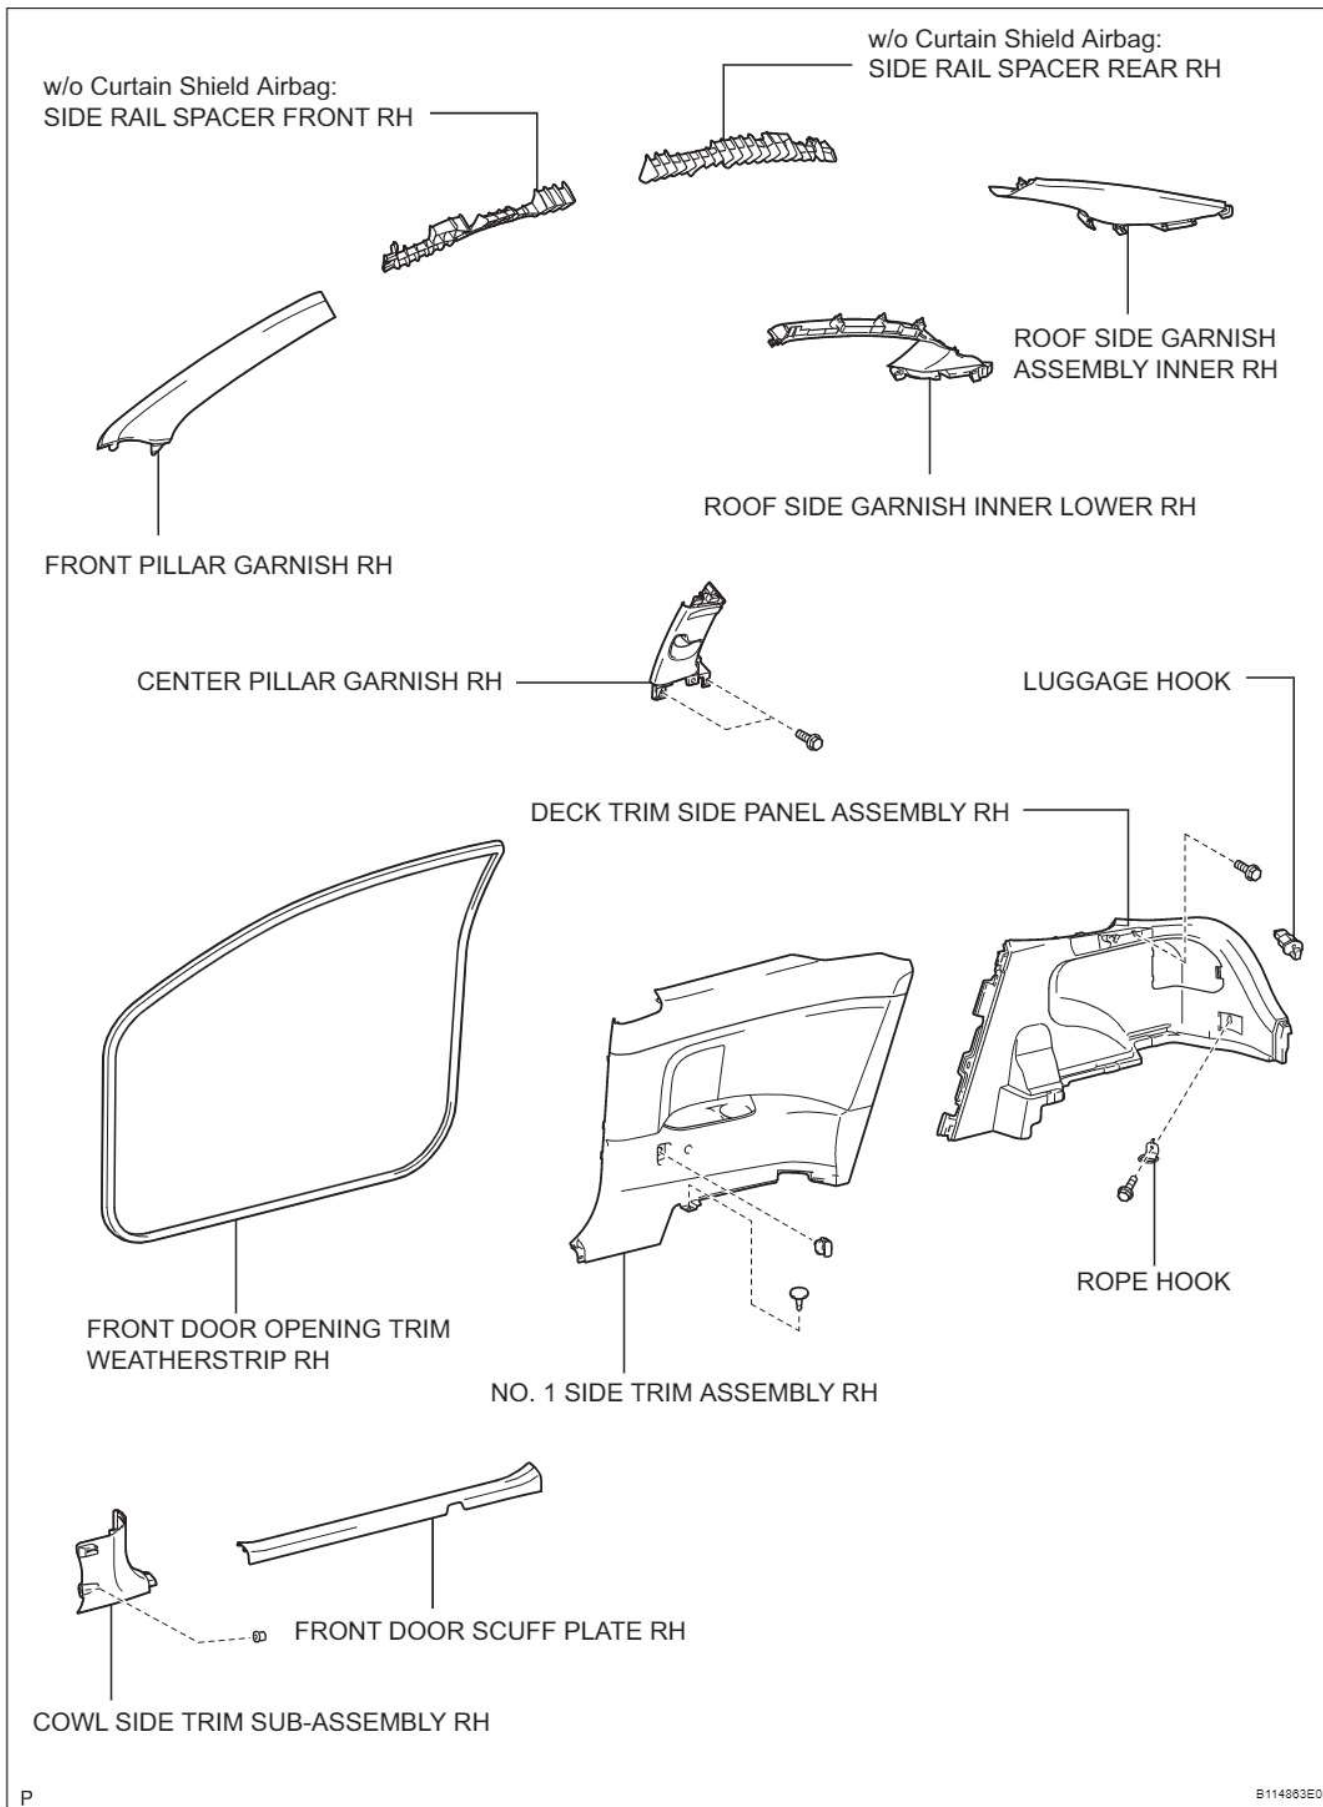
IR-5



IR

IR-6

INTERIOR – ROOF HEADLINING



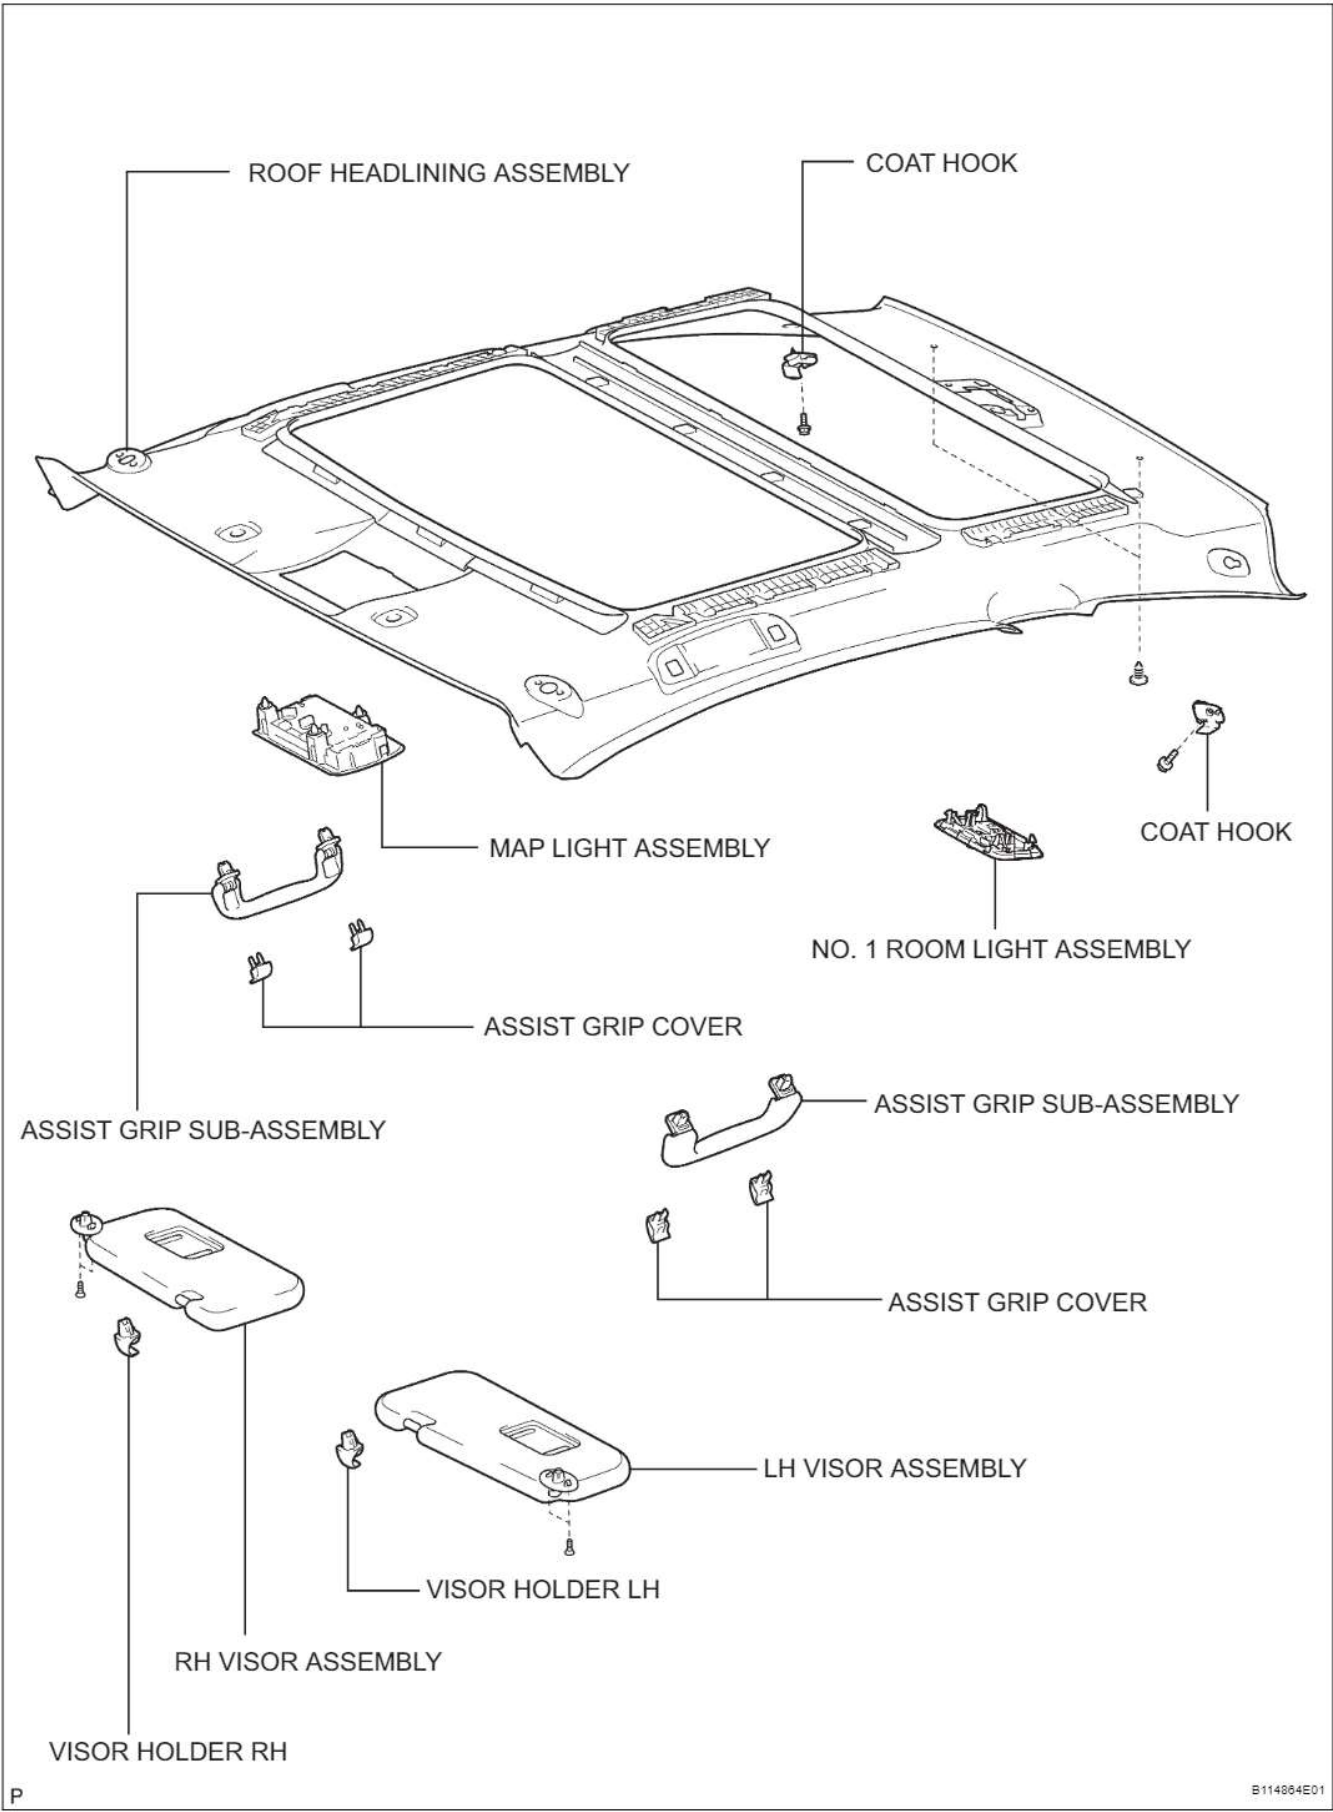
IR

P

B114863E01

INTERIOR – ROOF HEADLINING

IR-7



IR

IR-8

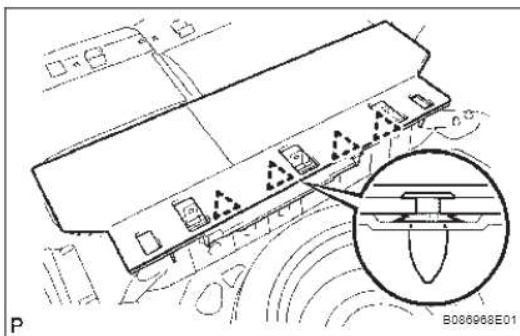
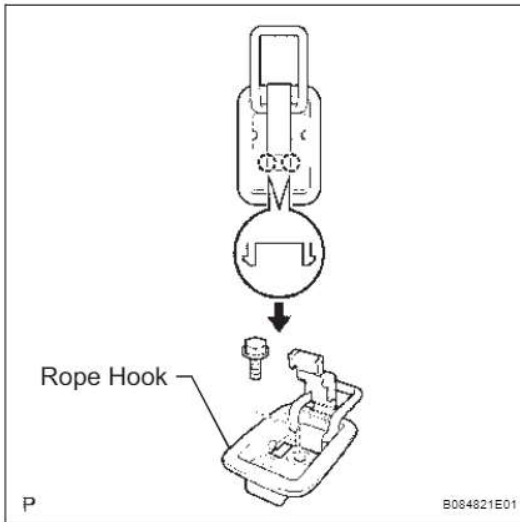
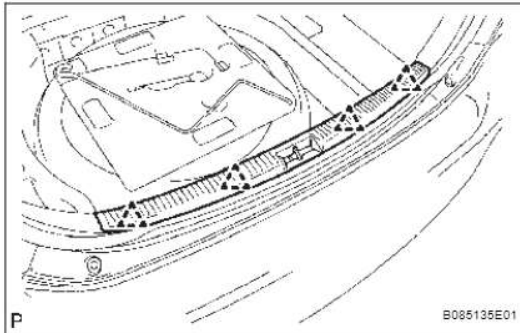
INTERIOR – ROOF HEADLINING

REMOVAL

1. **REMOVE TONNEAU COVER ASSEMBLY**
2. **REMOVE DECK BOARD SUB-ASSEMBLY**
3. **REMOVE BACK DOOR SCUFF PLATE**
 - (a) Using a clip remover, detach the 4 clips and remove the scuff plate.
4. **REMOVE BACK DOOR WEATHERSTRIP**
5. **REMOVE SPARE WHEEL COVER ASSEMBLY**
6. **REMOVE DECK FLOOR BOX LH**
 - (a) Using a clip remover, remove the 2 clips and box.
7. **REMOVE DECK FLOOR BOX RH**
 - (a) Using a clip remover, remove the 2 clips and box.
8. **REMOVE DECK FLOOR BOX REAR**
9. **REMOVE NO. 1 DECK BOARD**
 - (a) Using a screwdriver, detach the 2 claws and remove the bolt and rope hook.

HINT:

Tape the screwdriver tip before use.

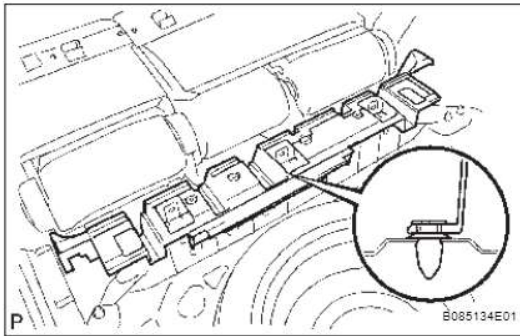


- (b) Using a clip remover, detach the 4 clips and remove the deck board.

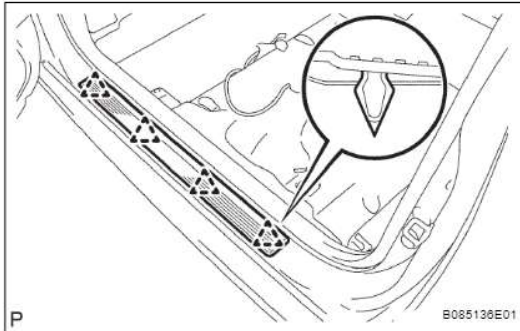
IR

INTERIOR – ROOF HEADLINING

IR-9

**10. REMOVE REAR NO. 1 FLOOR BOARD**

- (a) Using a clip remover, detach the clip and remove the board.

**11. REMOVE FRONT DOOR SCUFF PLATE OUTSIDE LH**

- (a) Using a screwdriver, detach the 4 clips and remove the scuff plate.

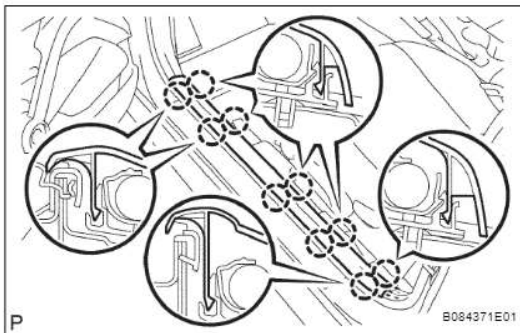
HINT:

Tape the screwdriver tip before use.

12. REMOVE FRONT DOOR SCUFF PLATE OUTSIDE RH

HINT:

Use the same procedures described for the LH side.

**13. REMOVE FRONT DOOR SCUFF PLATE LH**

- (a) Using a screwdriver, detach the 10 claws and remove the scuff plate.

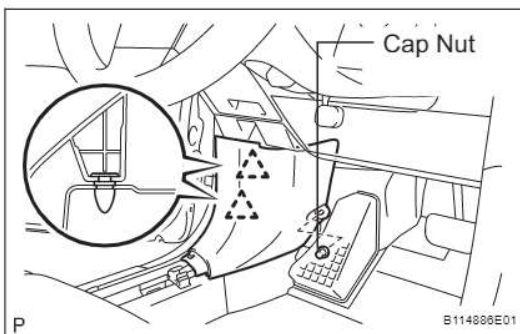
HINT:

Tape the screwdriver tip before use.

14. REMOVE FRONT DOOR SCUFF PLATE RH

HINT:

Use the same procedures described for the LH side.

**15. REMOVE COWL SIDE TRIM SUB-ASSEMBLY LH**

- (a) Remove the cap nut.

- (b) Using a clip remover, detach the 2 clips and remove the trim.

16. REMOVE COWL SIDE TRIM SUB-ASSEMBLY RH

HINT:

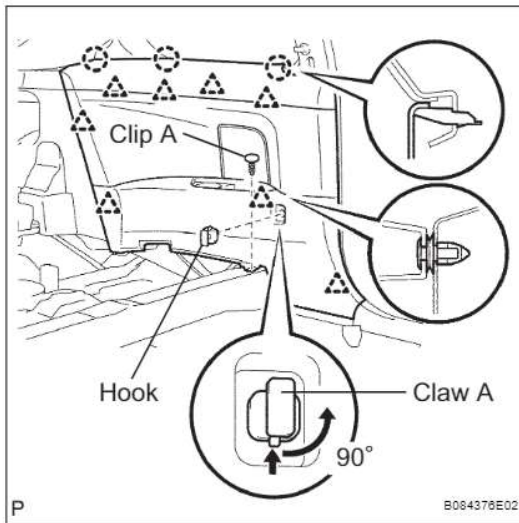
Use the same procedures described for the LH side.

17. REMOVE REAR SEAT CUSHION ASSEMBLY (See page SE-17)**18. REMOVE REAR SEATBACK ASSEMBLY LH (See page SE-17)****19. REMOVE REAR SEATBACK ASSEMBLY RH (See page SE-18)****20. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP LH****21. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP RH**

IR

IR-10

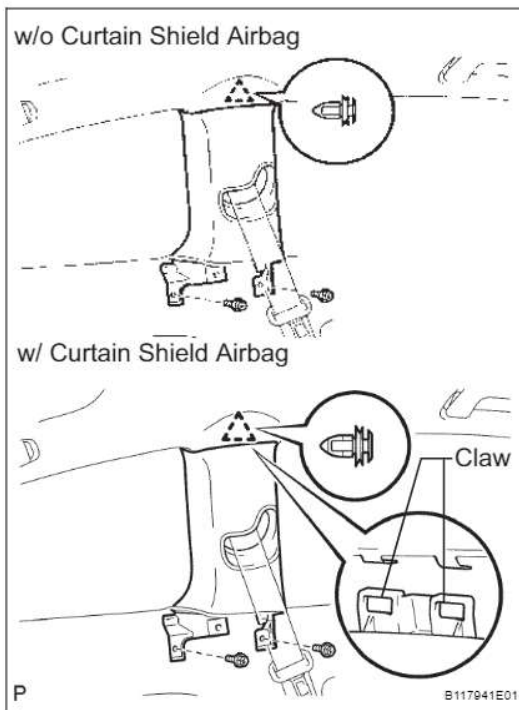
INTERIOR – ROOF HEADLINING

**22. REMOVE NO. 1 SIDE TRIM ASSEMBLY LH**

- (a) Remove the 2 floor anchor bolts (front and rear seat belt).
 - (b) Using a clip remover, remove the clip labeled A.
 - (c) Using a screwdriver, detach the claw labeled A and remove the hook of the trim by turning it counterclockwise.
- HINT:**
Tape the screwdriver tip before use.
- (d) Using a clip remover, detach the 8 clips.
 - (e) Detach the 3 claws and remove the trim.

23. REMOVE NO. 1 SIDE TRIM ASSEMBLY RH

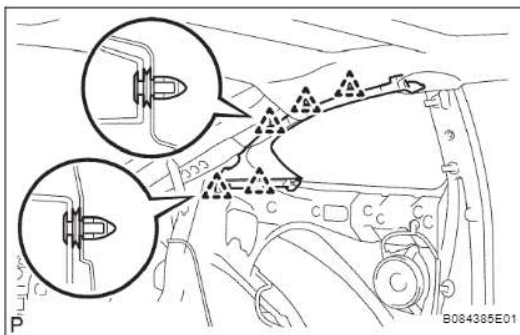
- HINT:**
Use the same procedures described for the LH side.

**24. REMOVE CENTER PILLAR GARNISH LH**

- (a) Remove the 2 screws.
 - (b) w/o Curtain shield airbag:
Using a clip remover, detach the clip and remove the garnish.
 - (c) w/ Curtain shield airbag:
Using a screwdriver, detach the 2 claws and clip, and remove the garnish.
- HINT:**
Tape the screwdriver tip before use.

25. REMOVE CENTER PILLAR GARNISH RH

- HINT:**
Use the same procedures described for the LH side.

**26. REMOVE ROOF SIDE GARNISH INNER LOWER LH**

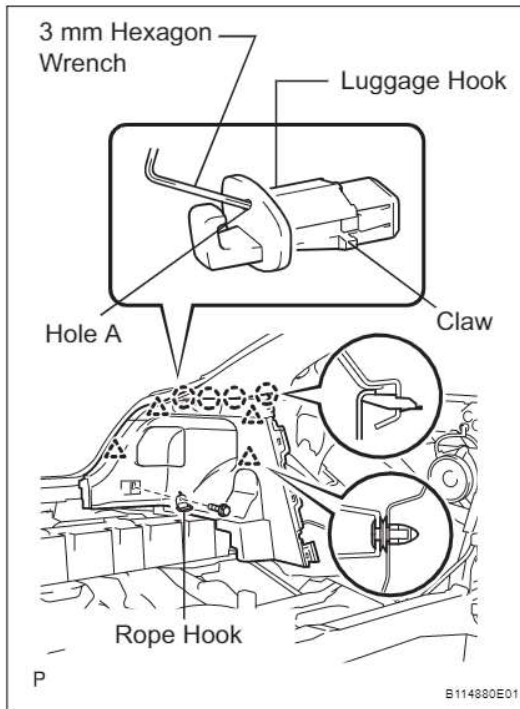
- (a) Using a clip remover, detach the 5 clips and remove the garnish.

27. REMOVE ROOF SIDE GARNISH INNER LOWER RH

- HINT:**
Use the same procedures described for the LH side.

INTERIOR – ROOF HEADLINING

IR-11

**28. REMOVE DECK TRIM SIDE PANEL ASSEMBLY LH**

- Insert a 3 mm hexagon wrench into the hole A to disengage the claw, then remove the luggage hook from the side panel.
- Remove the luggage hook, bolt and rope hook.
- Using a clip remover, detach the 4 clips.
- Using a screwdriver, detach the 4 claws and remove the side panel.

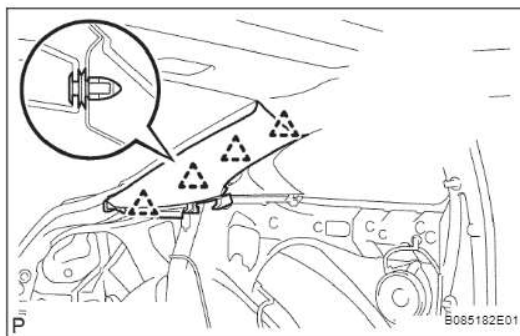
HINT:

Tape the screwdriver tip before use.

29. REMOVE DECK TRIM SIDE PANEL ASSEMBLY RH

HINT:

Use the same procedures described for the LH side.

**30. REMOVE ROOF SIDE GARNISH ASSEMBLY INNER LH**

- w/o Curtain shield airbag:
Using a clip remover, detach the 4 clips and remove the garnish.

- w/ Curtain shield airbag:
 - Using a clip remover, detach the 3 clips labeled A.
 - Using a screwdriver, firmly push the pin to disengage the clip labeled B.

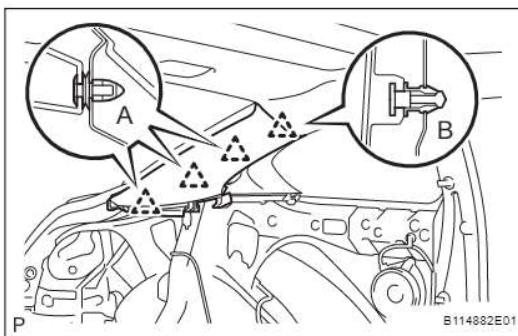
HINT:

- Clip B cannot be reused.
- Tape the screwdriver tip before use.

31. REMOVE ROOF SIDE GARNISH ASSEMBLY INNER RH

HINT:

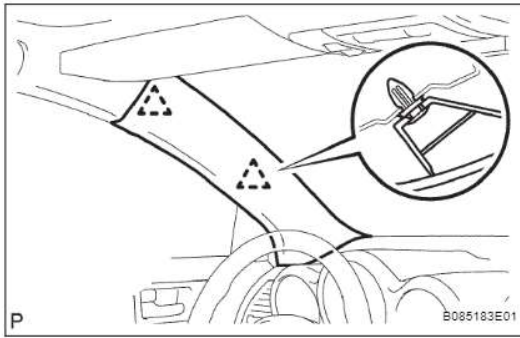
Use the same procedures described for the LH side.



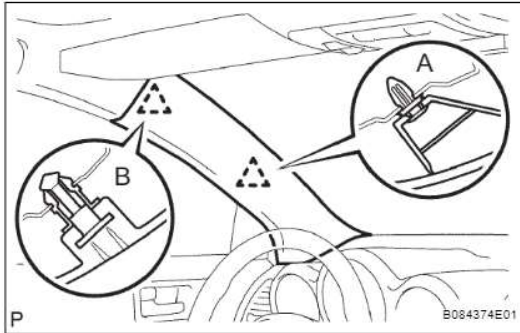
IR

IR-12

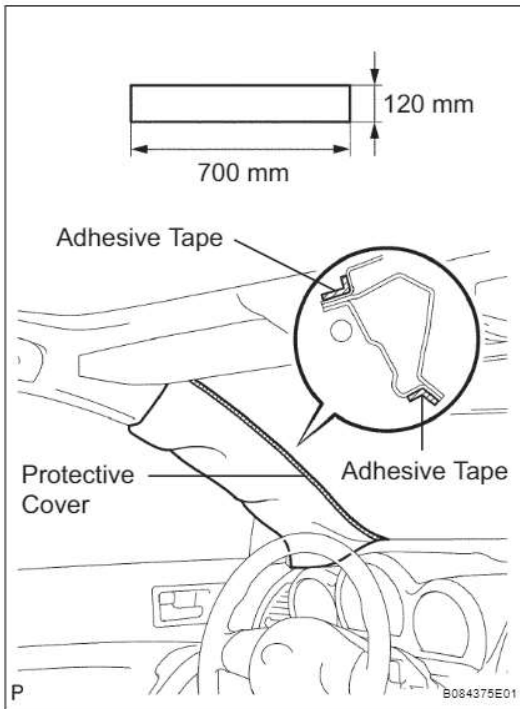
INTERIOR – ROOF HEADLINING

**32. REMOVE FRONT PILLAR GARNISH LH**

- (a) w/o Curtain shield airbag:
Using a clip remover, detach the 2 clips and remove the garnish.



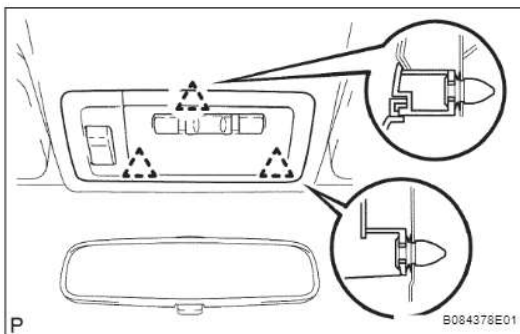
- (b) w/ Curtain shield airbag:
(1) Using a clip remover, detach the clip labeled A.
(2) Using a screwdriver, firmly push the pin to detach the clip B.
HINT:
- Clip B cannot be reused.
 - Tape the screwdriver tip before use.



- (c) w/ Curtain shield airbag:
Protect the curtain shield airbag LH.
(1) Thoroughly cover the airbag with a piece of cloth or nylon that is 700 mm (27.56 in.) x 120 mm (4.72 in.) and fix the ends of the cover with adhesive tape, as shown in the illustration.
NOTICE:
Cover the curtain shield airbag with the protective cover as soon as the pillar garnish is removed.

33. REMOVE FRONT PILLAR GARNISH RH

- HINT:**
Use the same procedures described for the LH side.

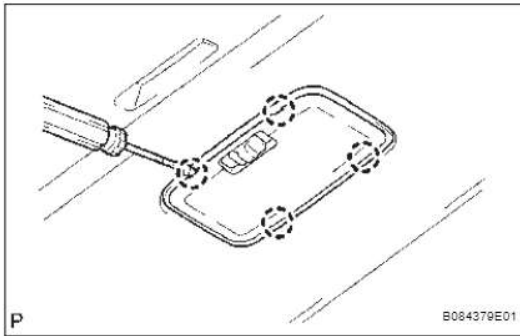
**34. REMOVE MAP LIGHT ASSEMBLY**

- (a) Using a clip remover, detach the 3 clips and remove the light.
(b) Disconnect the map light connector.

IR

INTERIOR – ROOF HEADLINING

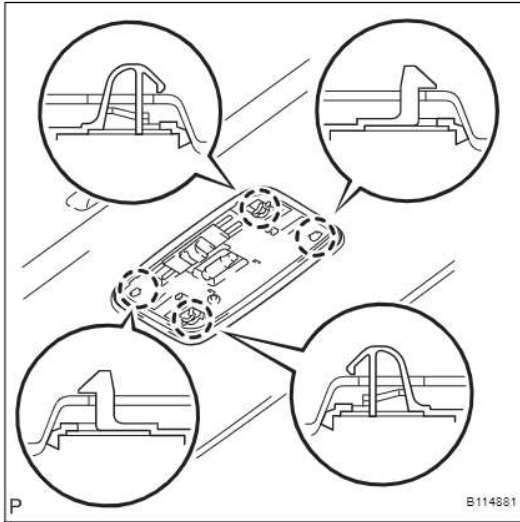
IR-13

**35. REMOVE NO. 1 ROOM LIGHT ASSEMBLY**

- (a) Using a screwdriver, detach the 4 claws and remove the lens.

HINT:

Tape the screwdriver tip before use.



- (b) Using a screwdriver, detach the 4 claws and remove the light.

HINT:

Tape the screwdriver tip before use.

- (c) Disconnect the light connector.

36. REMOVE NO. 2 ROOM LIGHT ASSEMBLY

- (a) Using a screwdriver, detach the light from the deck trim side panel LH.

HINT:

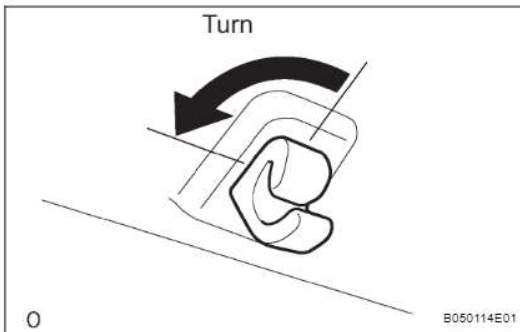
Tape the screwdriver tip before use.

37. REMOVE LH VISOR ASSEMBLY

- (a) Remove the 2 screws and visor.

38. REMOVE RH VISOR ASSEMBLY

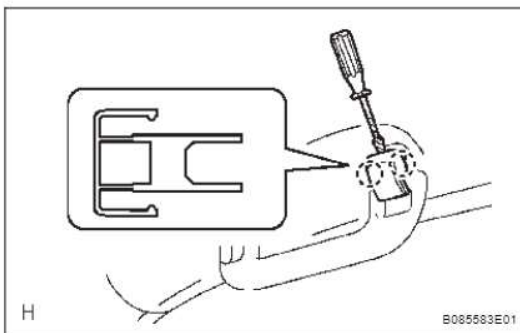
- (a) Remove the 2 screws and visor.

**39. REMOVE VISOR HOLDER LH**

- (a) Remove the visor holder by turning it counterclockwise.

40. REMOVE VISOR HOLDER RH

- (a) Remove the visor holder by turning it counterclockwise.

**41. REMOVE ASSIST GRIP COVER**

- (a) Using a screwdriver, detach the 4 claws and remove the 2 covers.

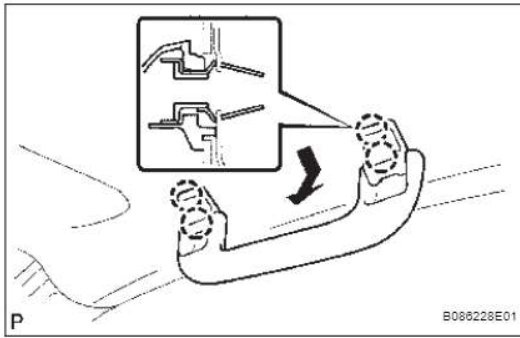
HINT:

Tape the screwdriver tip before use.

IR

IR-14

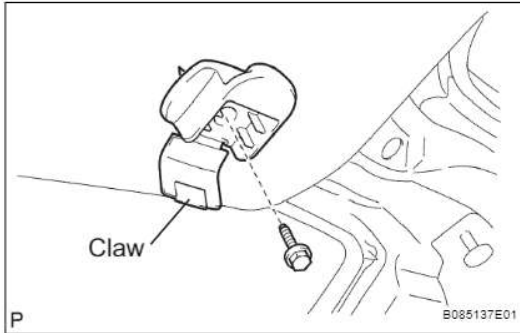
INTERIOR – ROOF HEADLINING

**42. REMOVE ASSIST GRIP SUB-ASSEMBLY**

- (a) Using a screwdriver, detach the 4 claws and remove the assist grip.

HINT:

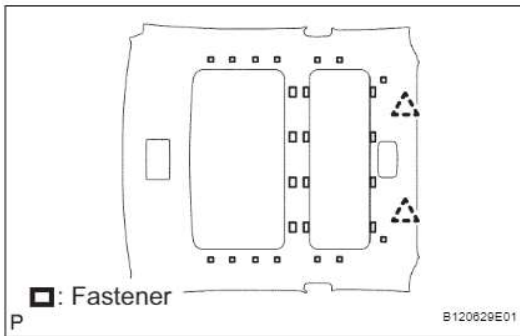
Tape the screwdriver tip before use.

**43. REMOVE COAT HOOK**

- (a) Using a screwdriver, detach the claw and remove bolt and coat hook.

HINT:

Tape the screwdriver tip before use.

**44. REMOVE ROOF HEADLINING ASSEMBLY**

- (a) Using a clip remover, remove the 2 clips.
 (b) Detach the 26 fasteners and remove the headlining.
 (c) Remove the tape and the wire harness.

45. REMOVE SIDE RAIL SPACER FRONT LH (w/o Curtain Shield Airbag)**46. REMOVE SIDE RAIL SPACER FRONT RH (w/ Curtain Shield Airbag)****47. REMOVE SIDE RAIL SPACER REAR LH (w/o Curtain Shield Airbag)****48. REMOVE SIDE RAIL SPACER REAR RH (w/o Curtain Shield Airbag)**

INSTALLATION

HINT:

A bolt without a torque specification is shown in the standard bolt chart (see page [SS-2](#)).

1. **INSTALL SIDE RAIL SPACER FRONT LH (w/o Curtain Shield Airbag)**
2. **INSTALL SIDE RAIL SPACER FRONT RH (w/o Curtain Shield Airbag)**
3. **INSTALL SIDE RAIL SPACER REAR LH (w/o Curtain Shield Airbag)**
4. **INSTALL SIDE RAIL SPACER REAR RH (w/o Curtain Shield Airbag)**
5. **INSTALL ROOF HEADLINING ASSEMBLY**

- (a) Attach the wire harness to the headlining with tape as shown in the illustration.

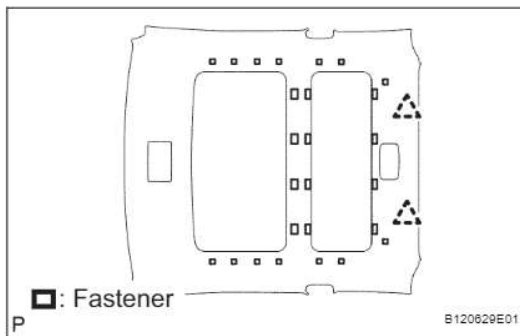
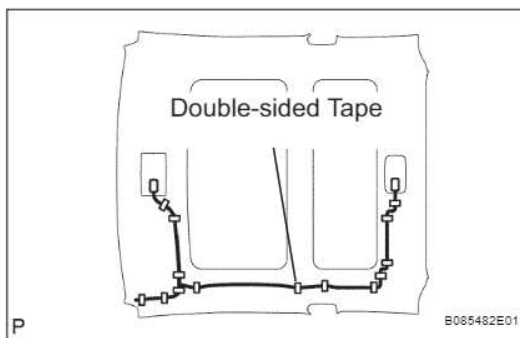
HINT:

Be careful that dirt and foreign matter do not contaminate the tape's adhesive.

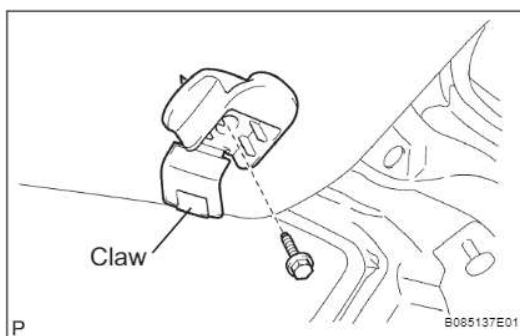
- (b) Attach the roof wire harness with tape.

NOTICE:

Attach the roof wire harness securely.



- (c) Attach the 26 fasteners to install the headlining.
- (d) Install the 2 clips.

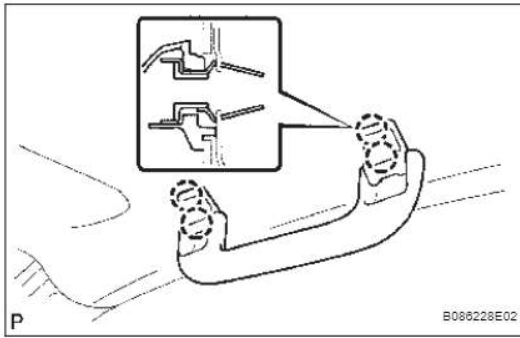


6. **INSTALL COAT HOOK**

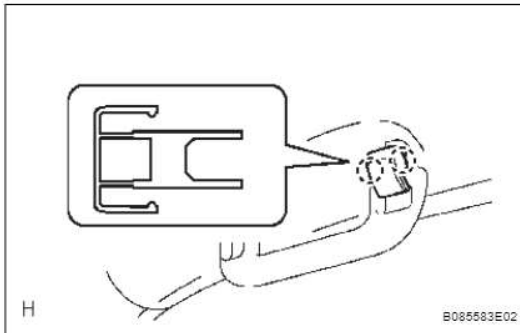
- (a) Install the coat hook with the bolt and attach the claw.

IR-16

INTERIOR – ROOF HEADLINING

**7. INSTALL ASSIST GRIP SUB-ASSEMBLY**

- (a) Attach the 4 claws to install the assist grip.

**8. INSTALL ASSIST GRIP COVER**

- (a) Attach the 4 claws to install the 2 covers.

9. INSTALL VISOR HOLDER LH

- (a) Install the visor holder by turning it clockwise.

10. INSTALL VISOR HOLDER RH

- (a) Install the visor holder by turning it clockwise.

11. INSTALL LH VISOR ASSEMBLY

- (a) Install the visor with the 2 screws.

12. INSTALL RH VISOR ASSEMBLY

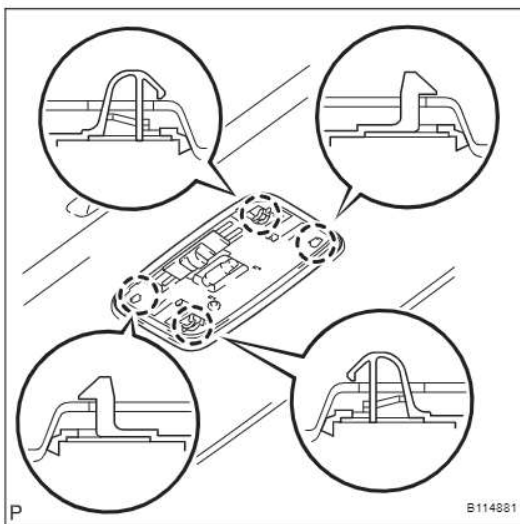
- (a) Install the visor with the 2 screws.

13. INSTALL NO. 2 ROOM LIGHT ASSEMBLY

- (a) Attach the light to the deck trim side panel LH.

14. INSTALL NO. 1 ROOM LIGHT ASSEMBLY

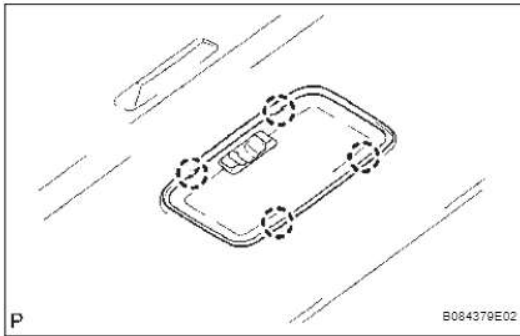
- (a) Connect the room light connector.
(b) Attach the 4 claws to install the light.



IR

INTERIOR – ROOF HEADLINING

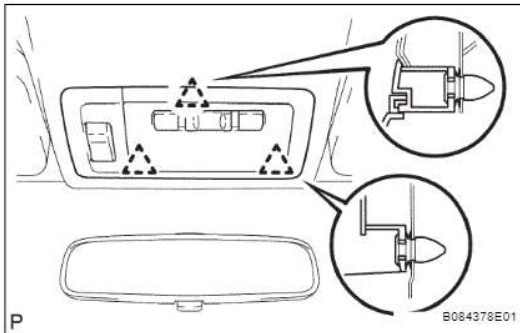
IR-17



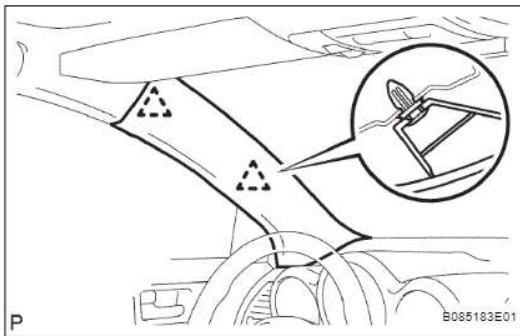
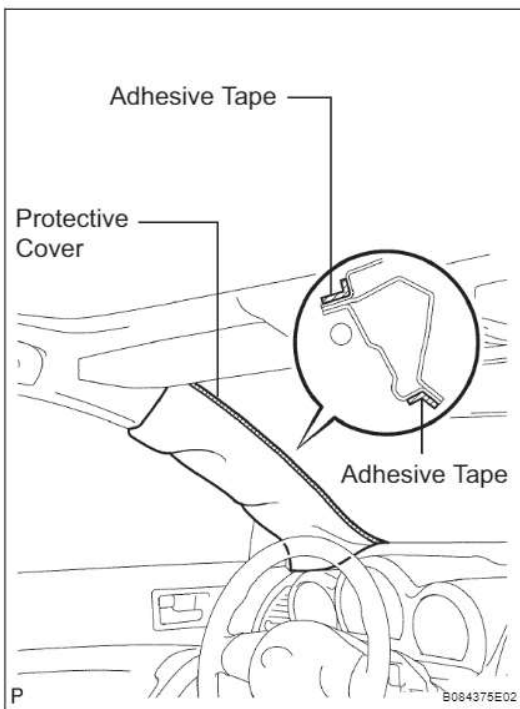
(c) Attach the 4 claws to install the lens.

15. INSTALL MAP LIGHT ASSEMBLY

(a) Connect the map light connector.



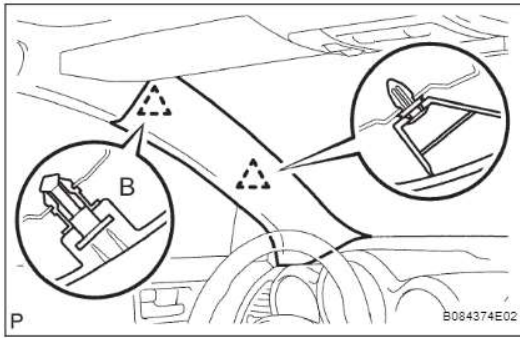
(b) Attach the 3 clips to install the light.

**16. INSTALL FRONT PILLAR GARNISH LH**(a) w/o Curtain shield airbag:
Attach the 2 clips to install the garnish.(b) w/ Curtain shield airbag:
(1) Remove the protective cover.

IR

IR-18

INTERIOR – ROOF HEADLINING



- (2) Attach the 2 clips to install the garnish.

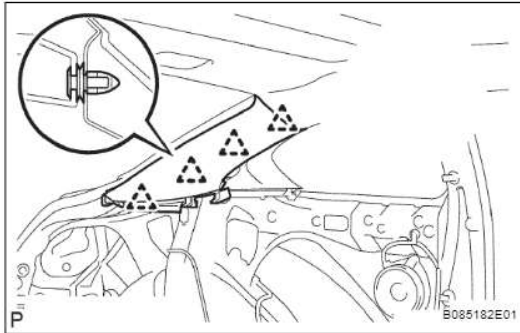
HINT:

Clip B cannot be reused.

17. INSTALL FRONT PILLAR GARNISH RH

HINT:

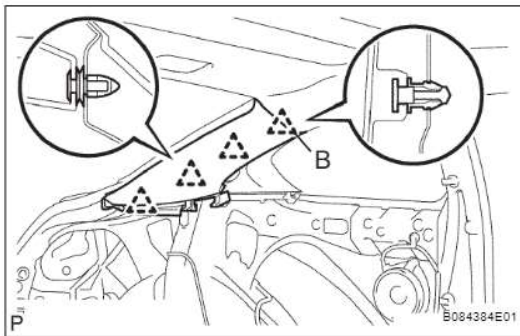
Use the same procedures described for the LH side.



18. INSTALL ROOF SIDE GARNISH ASSEMBLY INNER LH

- (a) w/o Curtain shield airbag:

Attach the 4 clips to install the garnish.



- (b) w/ Curtain shield airbag:

Attach the 4 clips to install the garnish.

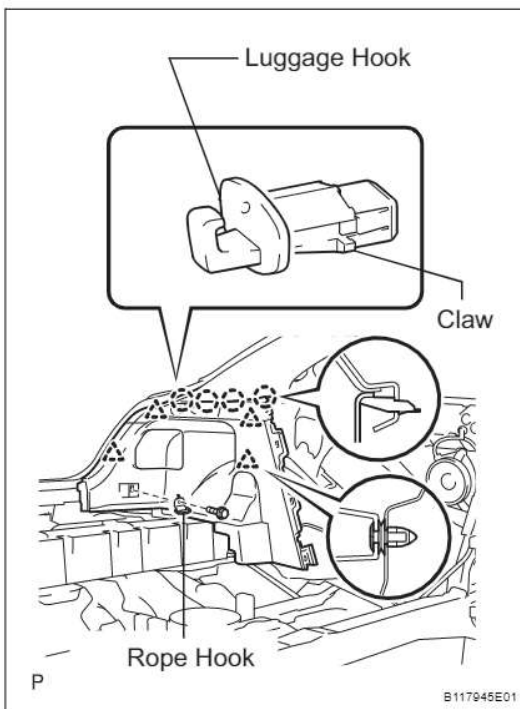
HINT:

Clip B cannot be reused.

19. INSTALL ROOF SIDE GARNISH ASSEMBLY INNER RH

HINT:

Use the same procedures described for the LH side.



20. INSTALL DECK TRIM SIDE PANEL ASSEMBLY LH

- (a) Attach the 4 claws and 4 clips to install the side panel.

- (b) Install the rope hook with the bolt.

- (c) Install the luggage hook.

21. INSTALL DECK TRIM SIDE PANEL ASSEMBLY RH

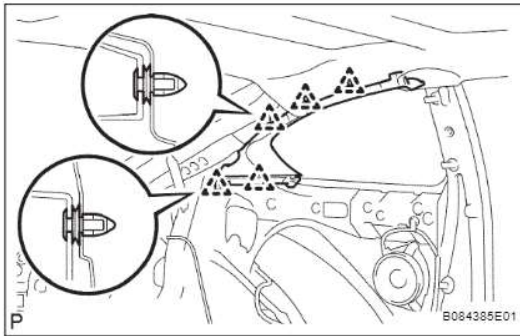
HINT:

Use the same procedures described for the LH side.

IR

INTERIOR – ROOF HEADLINING

IR-19

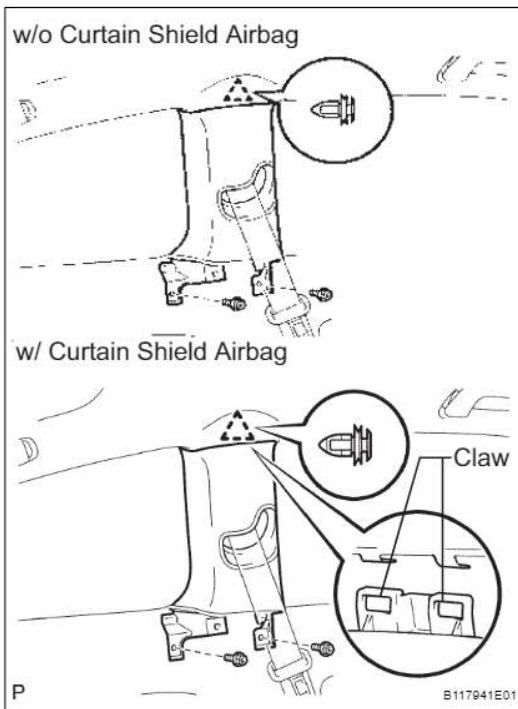
**22. INSTALL ROOF SIDE GARNISH INNER LOWER LH**

- (a) Attach the 5 clips to install the garnish.

23. INSTALL ROOF SIDE GARNISH INNER LOWER RH

HINT:

Use the same procedures described for the LH side.

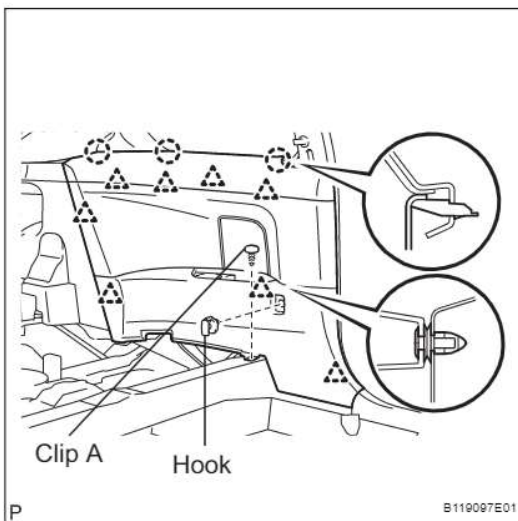
**24. INSTALL CENTER PILLAR GARNISH LH**

- (a) w/o Curtain shield airbag:
Attach the clip to install the garnish.
- (b) w/ Curtain shield airbag:
Attach the 2 claws and clip to install the garnish.
- (c) Install the 2 screws.

25. INSTALL CENTER PILLAR GARNISH RH

HINT:

Use the same procedures described for the LH side.

**26. INSTALL NO. 1 SIDE TRIM ASSEMBLY LH**

- (a) Attach the 3 claws and 8 clips to install the trim.
- (b) Attach the clip labeled A.
- (c) Install the hook.
- (d) Install the 2 floor anchor bolts (front and rear seat belt).

27. INSTALL NO. 1 SIDE TRIM ASSEMBLY RH

HINT:

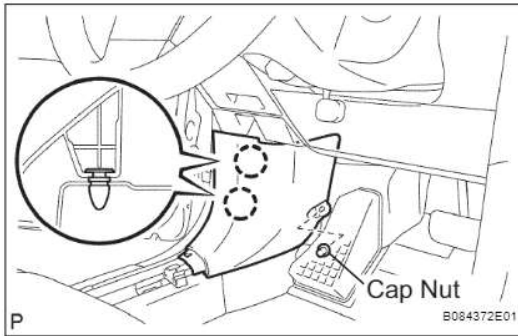
Use the same procedures described for the LH side.

28. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP LH**29. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP RH****30. INSTALL REAR SEATBACK ASSEMBLY LH (See page SE-28)****31. INSTALL REAR SEATBACK ASSEMBLY RH (See page SE-28)****32. INSTALL REAR SEAT CUSHION ASSEMBLY (See page SE-29)**

IR

IR-20

INTERIOR – ROOF HEADLINING

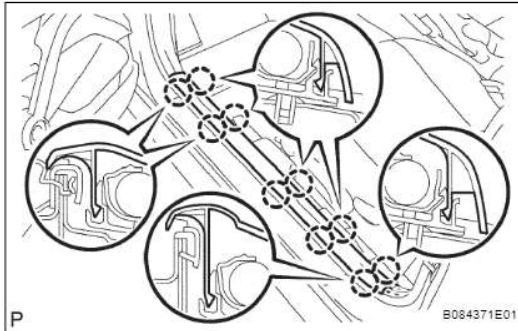
**33. INSTALL COWL SIDE TRIM SUB-ASSEMBLY LH**

- (a) Attach the 2 clips to install the trim.
- (b) Install the cap nut.

34. INSTALL COWL SIDE TRIM SUB-ASSEMBLY RH

HINT:

Use the same procedures described for the LH side.

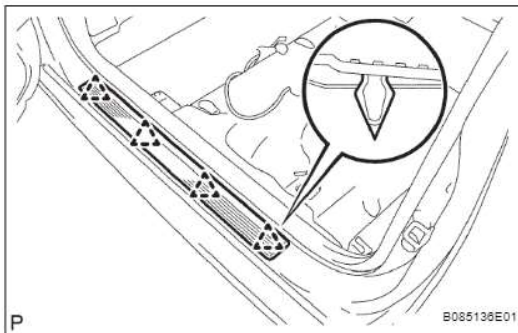
**35. INSTALL FRONT DOOR SCUFF PLATE LH**

- (a) Attach the 10 claws to install the scuff plate.

36. INSTALL FRONT DOOR SCUFF PLATE RH

HINT:

Use the same procedures described for the LH side.

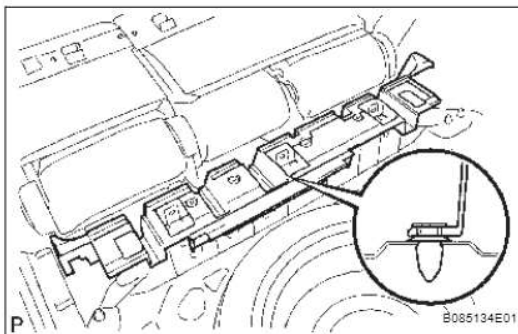
**37. INSTALL FRONT DOOR SCUFF PLATE OUTSIDE LH**

- (a) Attach the 4 clips to install the scuff plate.

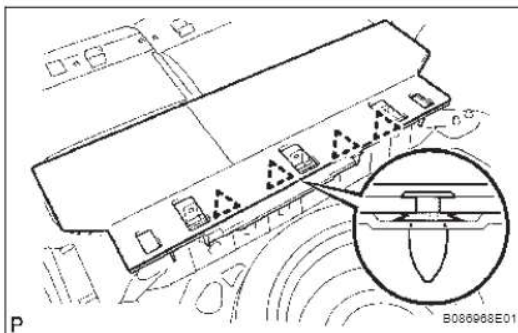
38. INSTALL FRONT DOOR SCUFF PLATE OUTSIDE RH

HINT:

Use the same procedures described for the LH side.

**39. INSTALL REAR NO. 1 FLOOR BOARD**

- (a) Attach the clip to install the board.

**40. INSTALL NO. 1 DECK BOARD**

- (a) Attach the 4 clips to install the deck board.
- (b) Install the rope hook with the bolt.

41. INSTALL DECK FLOOR BOX REAR**42. INSTALL DECK FLOOR BOX LH**

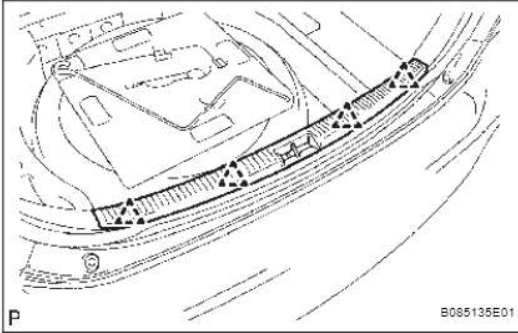
- (a) Install the box with the 2 clips.

43. INSTALL DECK FLOOR BOX RH

- (a) Install the box with the 2 clips.

44. INSTALL SPARE WHEEL COVER ASSEMBLY

IR

INTERIOR – ROOF HEADLINING**IR-21**

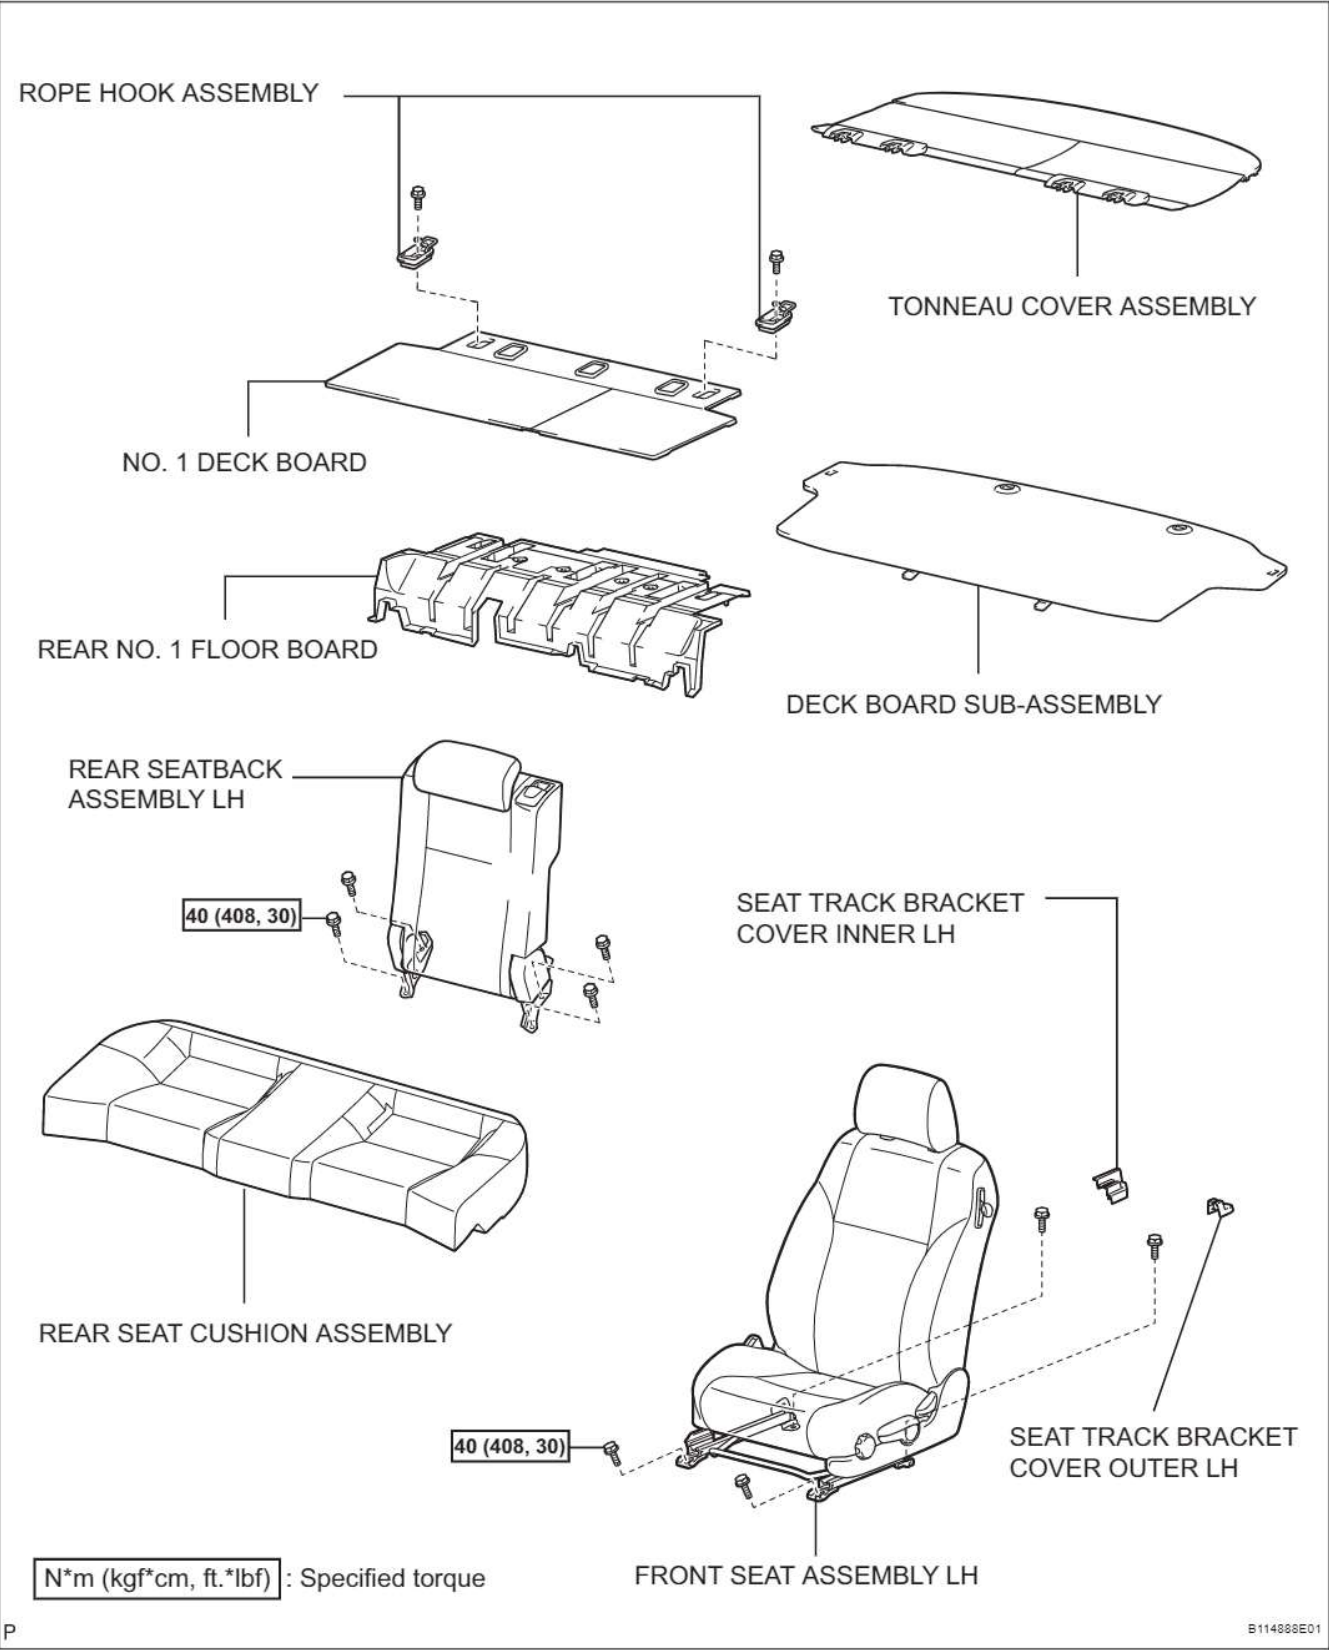
- 45. INSTALL BACK DOOR WEATHERSTRIP**
- 46. INSTALL BACK DOOR SCUFF PLATE**
 - (a) Attach the 4 clips to install the scuff plate.
- 47. INSTALL DECK BOARD SUB-ASSEMBLY**
- 48. INSTALL TONNEAU COVER ASSEMBLY**

IR

IR-22

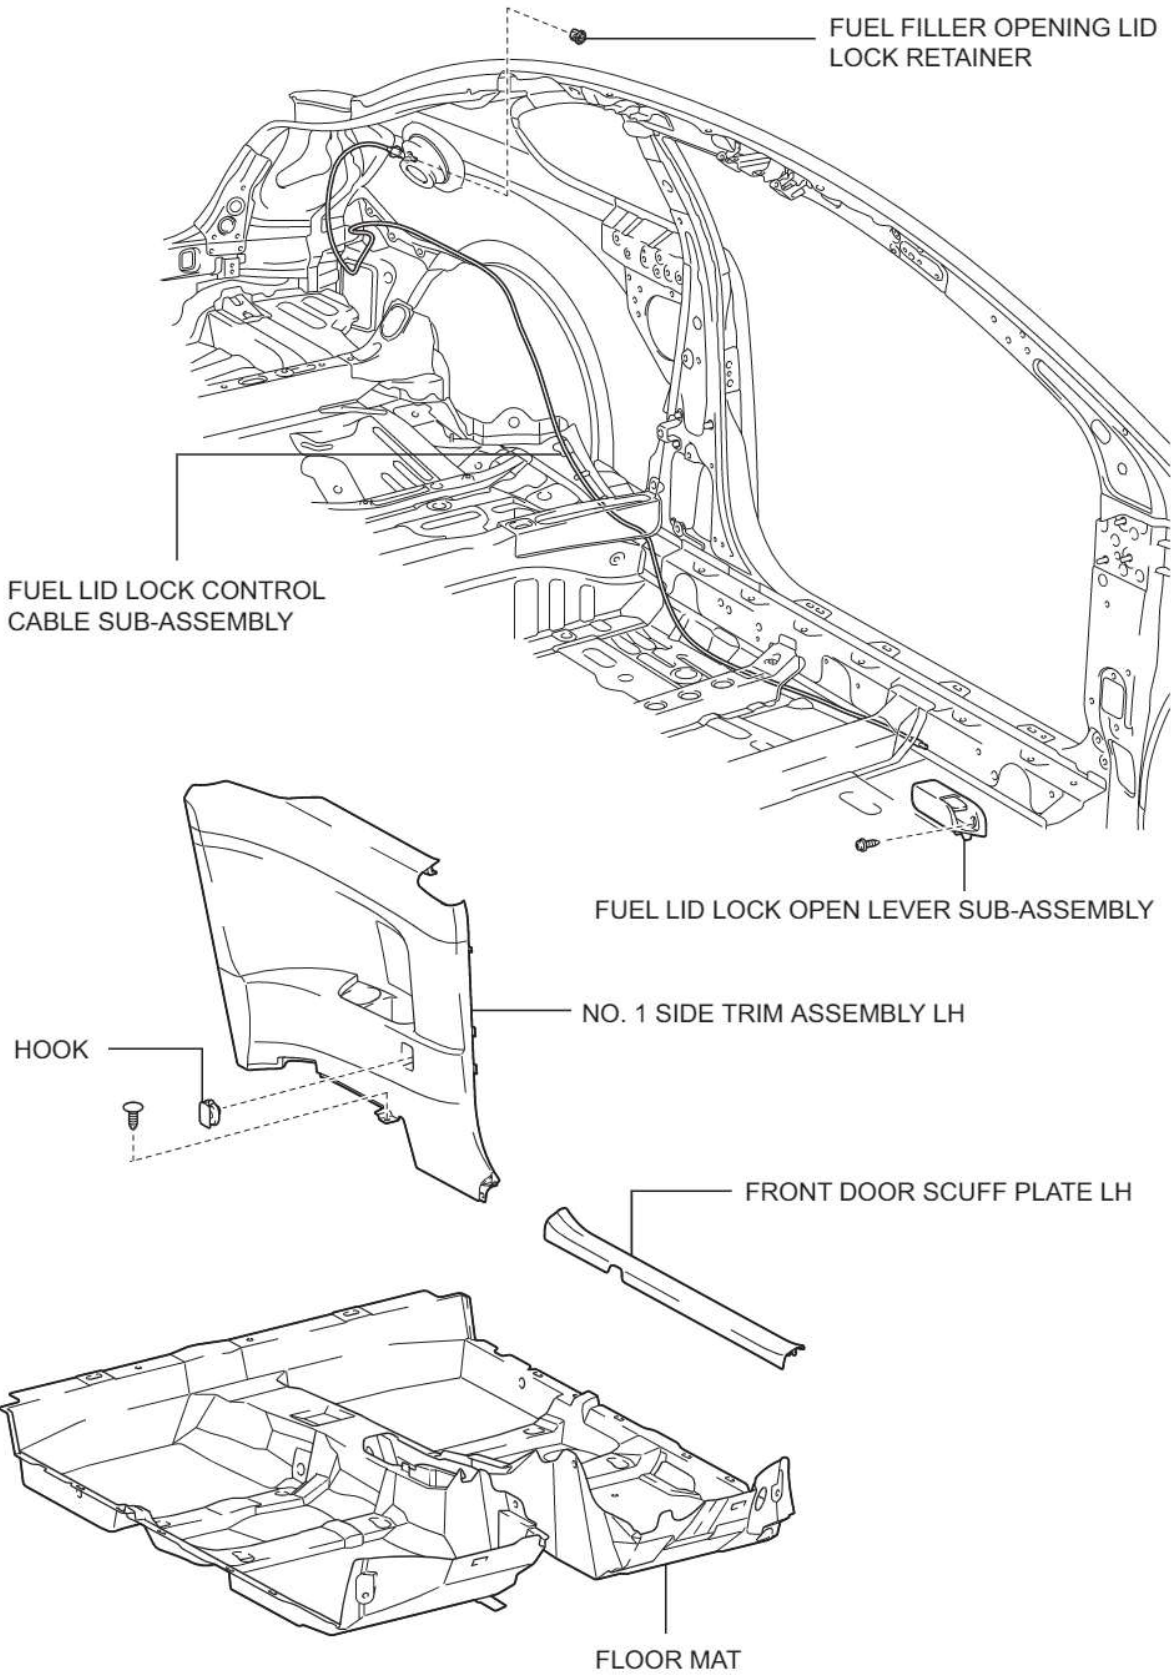
INTERIOR – FUEL LID LOCK CONTROL

FUEL LID LOCK CONTROL
COMPONENTS



INTERIOR – FUEL LID LOCK CONTROL

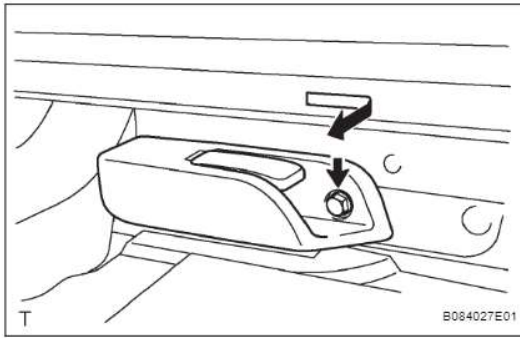
IR-23



IR

IR-24

INTERIOR – FUEL LID LOCK CONTROL

**REMOVAL****1. REMOVE FUEL LID LOCK OPEN LEVER SUB-ASSEMBLY**

- (a) Remove the screw.
- (b) Remove the cover in the direction indicated by the arrow mark in the illustration.
- (c) Remove the cable.

2. REMOVE FRONT SEAT ASSEMBLY LH

- (a) Remove the front seat (see page [SE-5](#)).

3. REMOVE TONNEAU COVER ASSEMBLY**4. REMOVE DECK BOARD SUB-ASSEMBLY****5. REMOVE NO. 1 DECK BOARD (See page [IR-8](#))****6. REMOVE REAR NO. 1 FLOOR BOARD (See page [IR-9](#))****7. REMOVE REAR SEAT CUSHION ASSEMBLY (See page [SE-17](#))****8. REMOVE REAR SEATBACK ASSEMBLY LH (See page [SE-17](#))****9. REMOVE FRONT DOOR SCUFF PLATE LH (See page [IR-9](#))****10. REMOVE NO. 1 SIDE TRIM ASSEMBLY LH (See page [IR-10](#))****11. REMOVE FUEL LID LOCK CONTROL CABLE SUB-ASSEMBLY**

- (a) Remove the floor mat.

HINT:

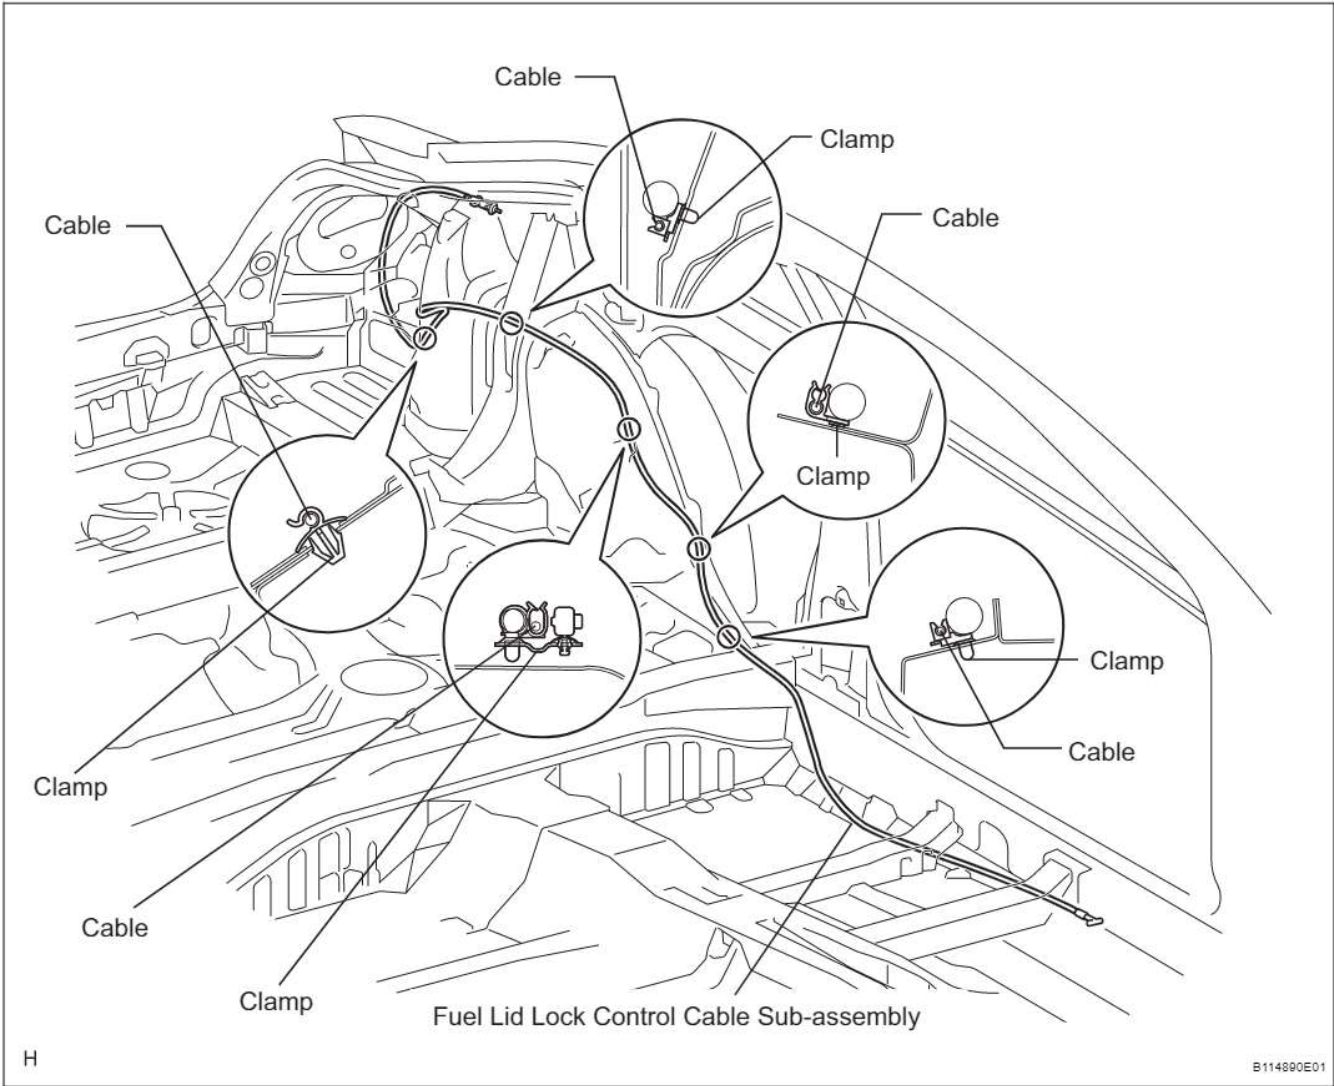
It is not necessary to fully remove the floor mat.

Partially remove it so that the cable can be removed later.

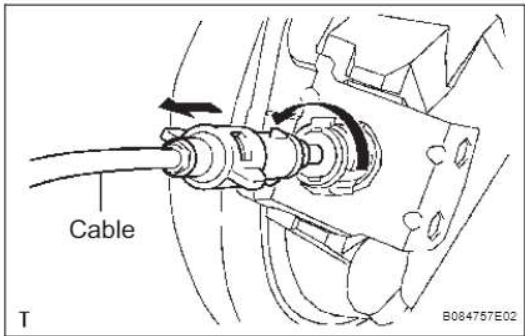
INTERIOR – FUEL LID LOCK CONTROL

IR-25

- (b) Remove the cable from the clamps as shown in the illustration.



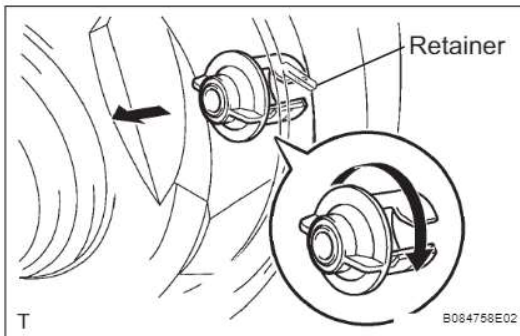
- (c) Detach the claws and remove the cable.



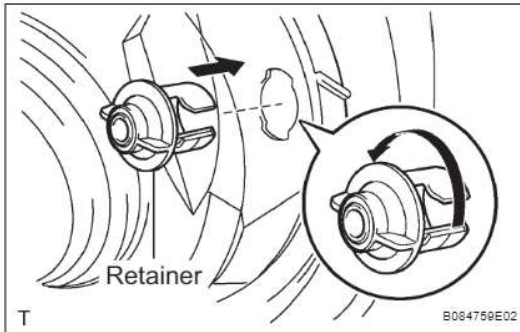
IR

IR-26

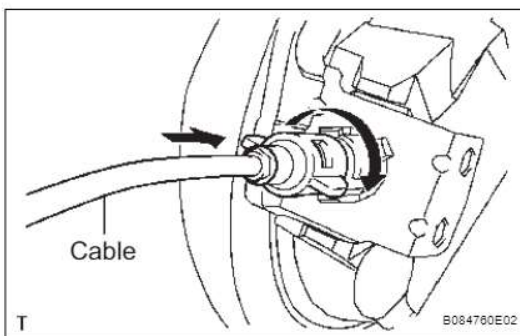
INTERIOR – FUEL LID LOCK CONTROL

**12. REMOVE FUEL FILLER OPENING LID LOCK RETAINER**

- (a) Remove the lock retainer as shown in the illustration.

**INSTALLATION****1. INSTALL FUEL FILLER OPENING LID LOCK RETAINER**

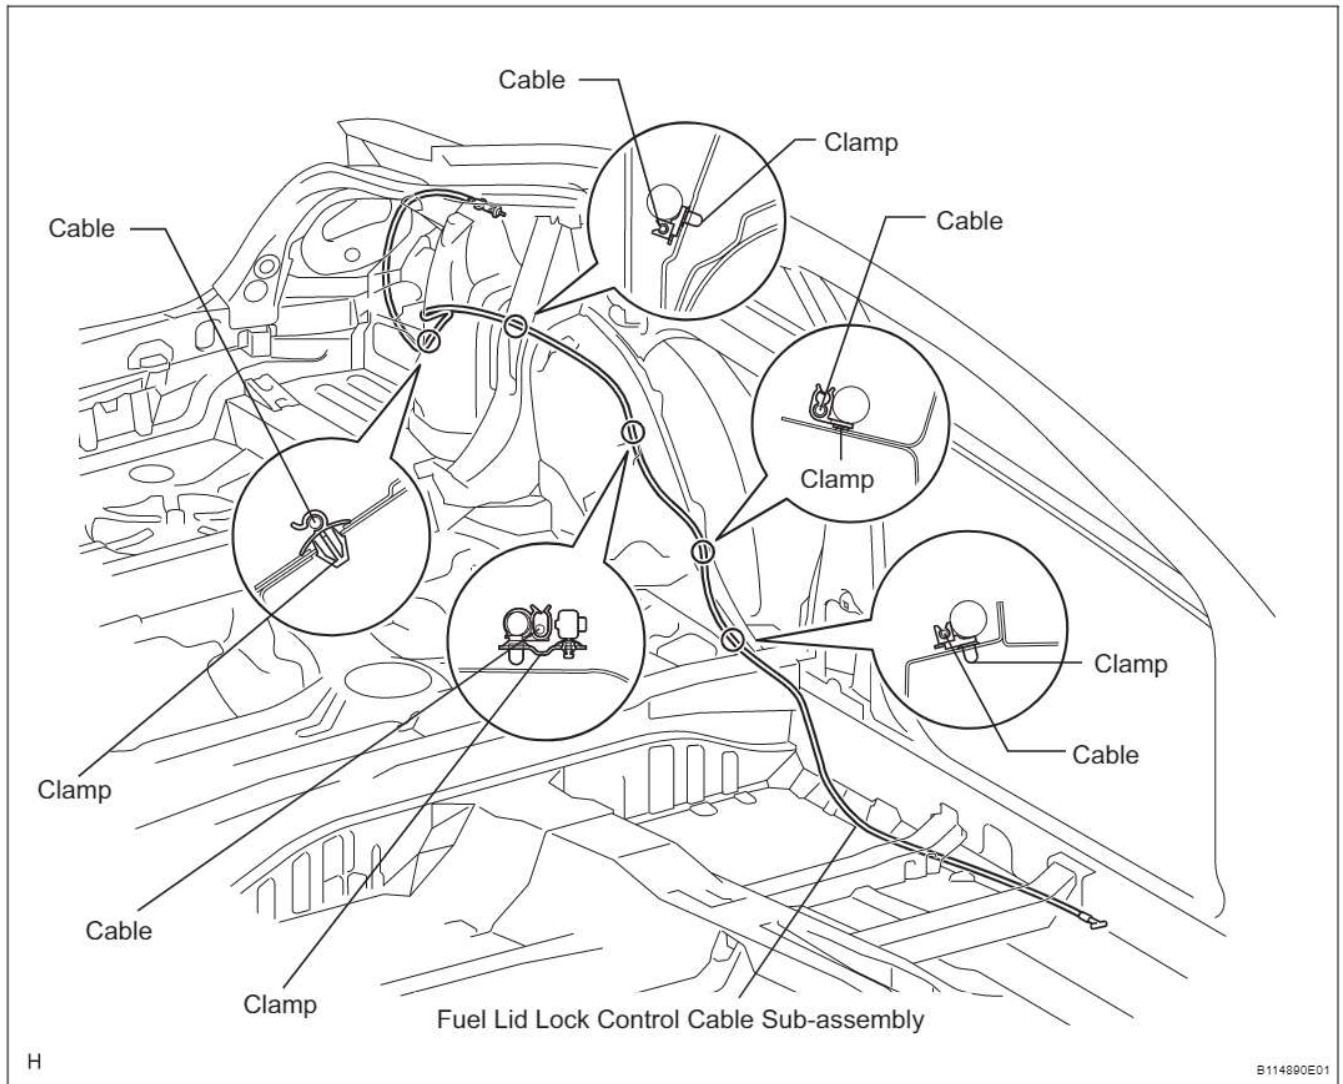
- (a) Install the lock retainer as shown in the illustration.

**2. INSTALL FUEL LID LOCK CONTROL CABLE SUB-ASSEMBLY**

- (a) Install the cable and turn it clockwise, as shown in the illustration.

INTERIOR – FUEL LID LOCK CONTROL**IR-27**

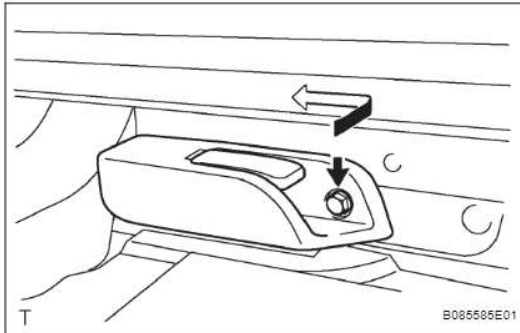
- (b) Install the cable to the clamps as shown in the illustration.



- (c) Install the floor mat.

3. **INSTALL NO. 1 SIDE TRIM ASSEMBLY LH** (See page [IR-19](#))
4. **INSTALL FRONT DOOR SCUFF PLATE LH** (See page [IR-20](#))
5. **INSTALL REAR SEATBACK ASSEMBLY LH** (See page [SE-28](#))
6. **INSTALL REAR SEAT CUSHION ASSEMBLY** (See page [SE-29](#))
7. **INSTALL REAR NO. 1 FLOOR BOARD** (See page [IR-20](#))
8. **INSTALL NO. 1 DECK BOARD** (See page [IR-20](#))
9. **INSTALL DECK BOARD SUB-ASSEMBLY**
10. **INSTALL TONNEAU COVER ASSEMBLY**

IR

IR-28**INTERIOR – FUEL LID LOCK CONTROL****11. INSTALL FRONT SEAT ASSEMBLY LH**

- (a) Install the front seat (see page [SE-11](#)).

12. INSTALL FUEL LID LOCK OPEN LEVER SUB-ASSEMBLY

- (a) Install the cable.
(b) Install the cover in the direction indicated by arrow mark.
(c) Install the screw.