


Isuzu Hombre 1998 – 2000 fuse box diagram

Fuse box diagram

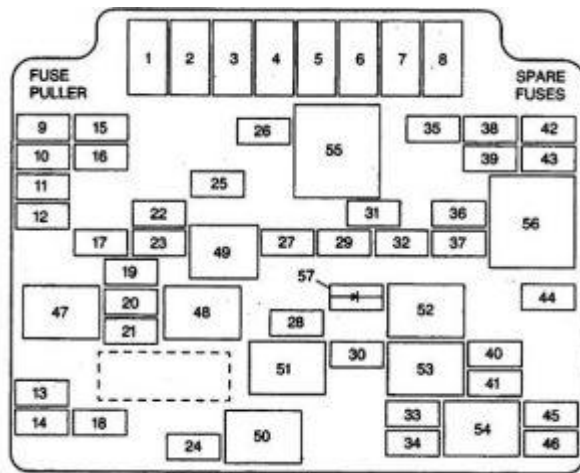

Isuzu Hombre – fuse box diagram

Fuse/Circuit Breaker	Rating	Function
MAXI FUSES		
INT BAT #1	50	HDLP SW Fuse, MIRILKS Fuse, AUX PWR Fuse, ROO BATT Fuse, CIGAR LTR fuse, CTSY LP fuse, PWR LKS fuse
ABS #2	60	Electronic Brake Control Module Assembly
Not Used #3	—	—
Not Used #4	—	—
IGN B #5	50	Ignition Switch
RAP #6	40	Retained Accessory Powor Relay



IGN A #7	40	Staner Relay, Ignition Switch
STUD #8	30	
MINI FUSES		
Not Used #9	—	—
Not Used #10	—	—
Not Used #11	—	—
VEH B/U # 12	15	Backup Lamp LH, Backup Lamp RH
RT TURN #13	10	Turn Signal Assembly, RH Front
LT TURN #14	10	Turn Signal Assembly, LH Front
LT TRN #15	10	Turn Lamp Assembly. LH Rear
RT TRN #16	10	Tail Lamp Assembly, RH Rear
RR PRK #17	10	License Lamp. RH, Marker Lamp Assembly, RH. Tail Lamp Assembly. RH
FR PRK #18	10	Turn Signal Lamp Assembly, RH. Tail Lamp Assembly. RH
TRL PRK #19	10	Trail Lamp, Trailer

LT HDLP #20	10	Headlamp, Low Beam. LH, Daytime Running Lamp Relay
RT HDLP #21	10	Headlamp, Low Beam, RH, Headlamp High Beam. RH
ENG I #22	10	Evaporative Emission Canister Purge Solenoid. Evaporative Emission Canister Vent Solenoid. Mass Air Flow Sensor (4.3L). Camshaft Position Sensor (4.3L)
ECM B #23	20	Fuel Pump Relay, Powertrain Control Module (2.2L), Vehicle Control Module (4.3L). Fuel Pump and Engine Oil Pressure Gauge Sensor
HORN #24	15	Horn, LH; Horn, RH
ECM I #25	15	Electronic Ignition Control Module, Powertrain Control Module/Vehicle Control Module, Crankshaft Position Sensor. Fuel Injectors 1-6, Ignition Coil
BTSL #26	10	Stop Lamp Switch Assembly, Transfer Case Control Module
B/U LP #27	25	Backup Lamps Switch/Transmission Range Switch
Not Used #28	—	—
IGN E #29	10	A/C Compressor Clutch Relay
FOG LP #30	15	Fog Lamp Relay, Headlamp Ground Relay

OXYGEN #31	20	Heated Oxygen Sensor, Post-Convener (2.2L), Heated Oxygen Sensor, LH Front, Heated Oxygen Sensor. Post-Converter, Heated Oxygen Sensor, RH Front, Heated Oxygen Sensor, Pre-Convener
LR PRK #32	10	Tail Lamp Assembly, LH. Marker Lamp Assembly, LH Rear, License Lamp LH
IGN C #33	15	Ignition Switch
Not Used #34	—	—
PARK LP #35	20	Park Lamp Relay, Headlamp Switch Assembly
N0t Used #36	—	—
N0t Used #37	—	—
HVAC #38	30	Blower Motor Relay
Not Used #39	—	—
Not Used #40	—	—
CRANK #41	10	Transfer Case Control Module, Manual Transmission Clutch Start Switch, Transmission Range Switch (Auto)
HAZ LP #42	20	Hazard Switch

VECHMSL #43	10	Dome and High Mounted Stop Lamp, Cruise Control Module
Not Used #44	—	—
STOP LP #45	20	High Mounted Stop Lamp Relay, Stop Lamp Switch
TBC #46	10	Truck Body Control Module (T8C). RFA Module Assembly (Remote Keyless Entry)
MICRO RELAYS		
HDLP PWR #47		Power Supply to the Headlamps
DRL #48		Power Supply to the Daytime Running Lamps
F/Pump #49		Power Supply to the fuel Pump
Hom #50	10	Power Supply 10 the Homs
Not Used #51	10	—
HDLP GND #52	10	Ground Supply t0 the Headlamps
Not Used #53	—	—
CHMSL #54		Power Supply to the Rear Brake Lamps
MINI RELAYS		

Starter #55		Power Supply to the Starter
Not Used #56	—	—
DIODE		
DRL #57		Prevent Feedback from DRL Relay

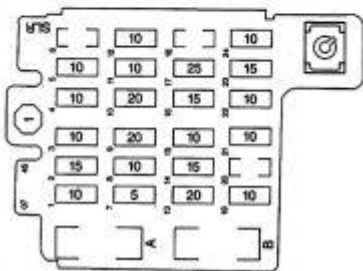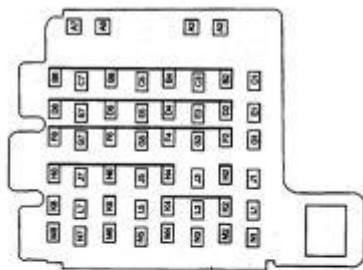

Isuzu Hombre – fuse box diagram

Fuse/Circuit Breaker	Rating	Function
MICRO RELAYS		
HDLP PWR #47		Power Supply to the Headlamps
DRL #48		Power Supply to the Daytime Running Lamps
F/Pump #49		Power Supply to the Fuel Pump

Hom #50		Power Supply to the Horns
A/C #51		A/C Compressor Relay
HDLP GND #52	10	Ground Supply to the Headlamps
FOG LP #53		Power Supply to the Fog Lamps
CHMSL #54		Power Supply to the Rear Brake Lamps
MINI RELAYS		
Starter #55		Power Supply to the Starter
Not Used #56		
DIODE		
DRL #57		Prevent feedback from DRL Relay
Power Windows/Circuit Breaker A	30	Door Lock and Side Window Switch Assembly, LH Door Lock and Side Window Switch Asscmbly RH
HDLP SW/Fuse 1	10	Headlamp Switch
CIGAR LTR/Fuse 2	15	Cigar Lighter, Data Link Connector

CRUISE/Fuse 3	10	Truck Body Control Module (TBC), Cruise Control Module, Cruise Control Switch
GAUGES/Fuse 4	10	Truck Body Control Module (TBC), Instrument Cluster
ILLUM/Fuse 5	10	Radio, Heater Controller (non-A/C), Heater and A/C Controller (w/A/C), Fog Lamp Switch, IP Module Switch, Trunk Body Control Module (TBC), Transfer Case Select Switch, Instrument Cluster
NOT USED/Fuse 6		
MIR/LKS/Fuse 7	5	Outside Rearview Mirror Switch, Door Lock and Side Window Switch Assembly, LH Door Lock and Side Window Switch Assembly RH
CTSY LP/Fuse 8	10	Console Courtesy Lamp LH, Console Courtesy Lamp RH, Transfer Case Control Module, Inadvertent Power Lamp Relay
HVAC/Fuse 9	20	Heater Controller (non-A/C), Heater and A/C Controller (A/C)
TURN/Fuse 10	20	Hazard Lamp Switch, Turn Signal Switch
CLSTR/Fuse 11	10	Instrument Cluster, Powertrain Control Module (2.2L), Vehicle Control Module (4.3L), Automatic Transmission

PARK LPS/Fuse 12	10	I/P Ashtray Lamp, Truck Body Control Module (TBC), Outside Rearview Mirror Switch, Door Lock and Side Window Switch Assambly, LH Door Lock and Side Window Switch Assembly RH
AUX PWR/Fuse 13	20	Auxiliary Power Outlet LH, Auxiliary Power Outlet RH
PWR LKS/Fuse 14	15	Door Lock Relay, Door Unlock Relay, Driver Door Lock Relay
4WO/Fuse 15	10	Vehicle Control Module, Transfer Case Select Switch, Transfer Case Control Module, Front Axle Switch
SIR/Fuse 16	15	I/P Module Switch, Supplomental Restraint Sensing and Diagnostic Module
FRT WPR/Fuse 17	25	Windshield Wiper Motor, Windshield Wiper/Washer Control Swhch
NOT USED/Fuse 18		
ROO BATT/Fuse 19	25	Radio, Instrument Cluster
NOT USED/Fuse 20		
HVACI/Fuse 21	10	Air Temperature Valve, Air Temperature Valve Electric Actuator

ABS/Fuse 22	10	Stop Lamp Switch, Electronic Brake Control Module Assembly
RR WPR/Fuse 23	15	Roar Wiper Assembly
ROO IGN/Fuse 24	10	Radio