

8. PRECAUTIONS FOR SRS AIRBAG SYSTEM

(a) HANDLING OF A VEHICLE THAT HAS BEEN DAMAGED IN A COLLISION


- (1) Refer to the TOYOTA Repair Manual for the SRS airbag system inspection procedures.
- (2) If impacts are likely to occur to the front airbag sensors, side airbag sensors or seat position sensor, remove each sensor as necessary beforehand.
- (3) Do not allow the front airbag sensors, side airbag sensors or seat position sensor to become heated to high temperatures.
- (4) Check the wire harnesses and connectors for damage and/or melting, as some areas of the airbags and seat belt pretensioners may heat up to several hundred degrees when they operate.

(b) WHEN USING ELECTRIC WELDER PRECAUTIONS

- (1) Check the Diagnostic Trouble Codes (DTCs).
 1. If one or more DTCs are displayed;
 - Disconnect the negative (-) terminal cable from the battery.
 - Disconnect all the malfunctioning circuit connectors.
 - Disconnect the center airbag sensor assembly connector.
 2. If DTCs are NOT displayed;
 - Inspect for damage to the electric wiring harnesses and connectors.
 - Disconnect the negative (-) terminal cable from the battery.


Disconnect the center airbag sensor assembly connector.

for LHD:

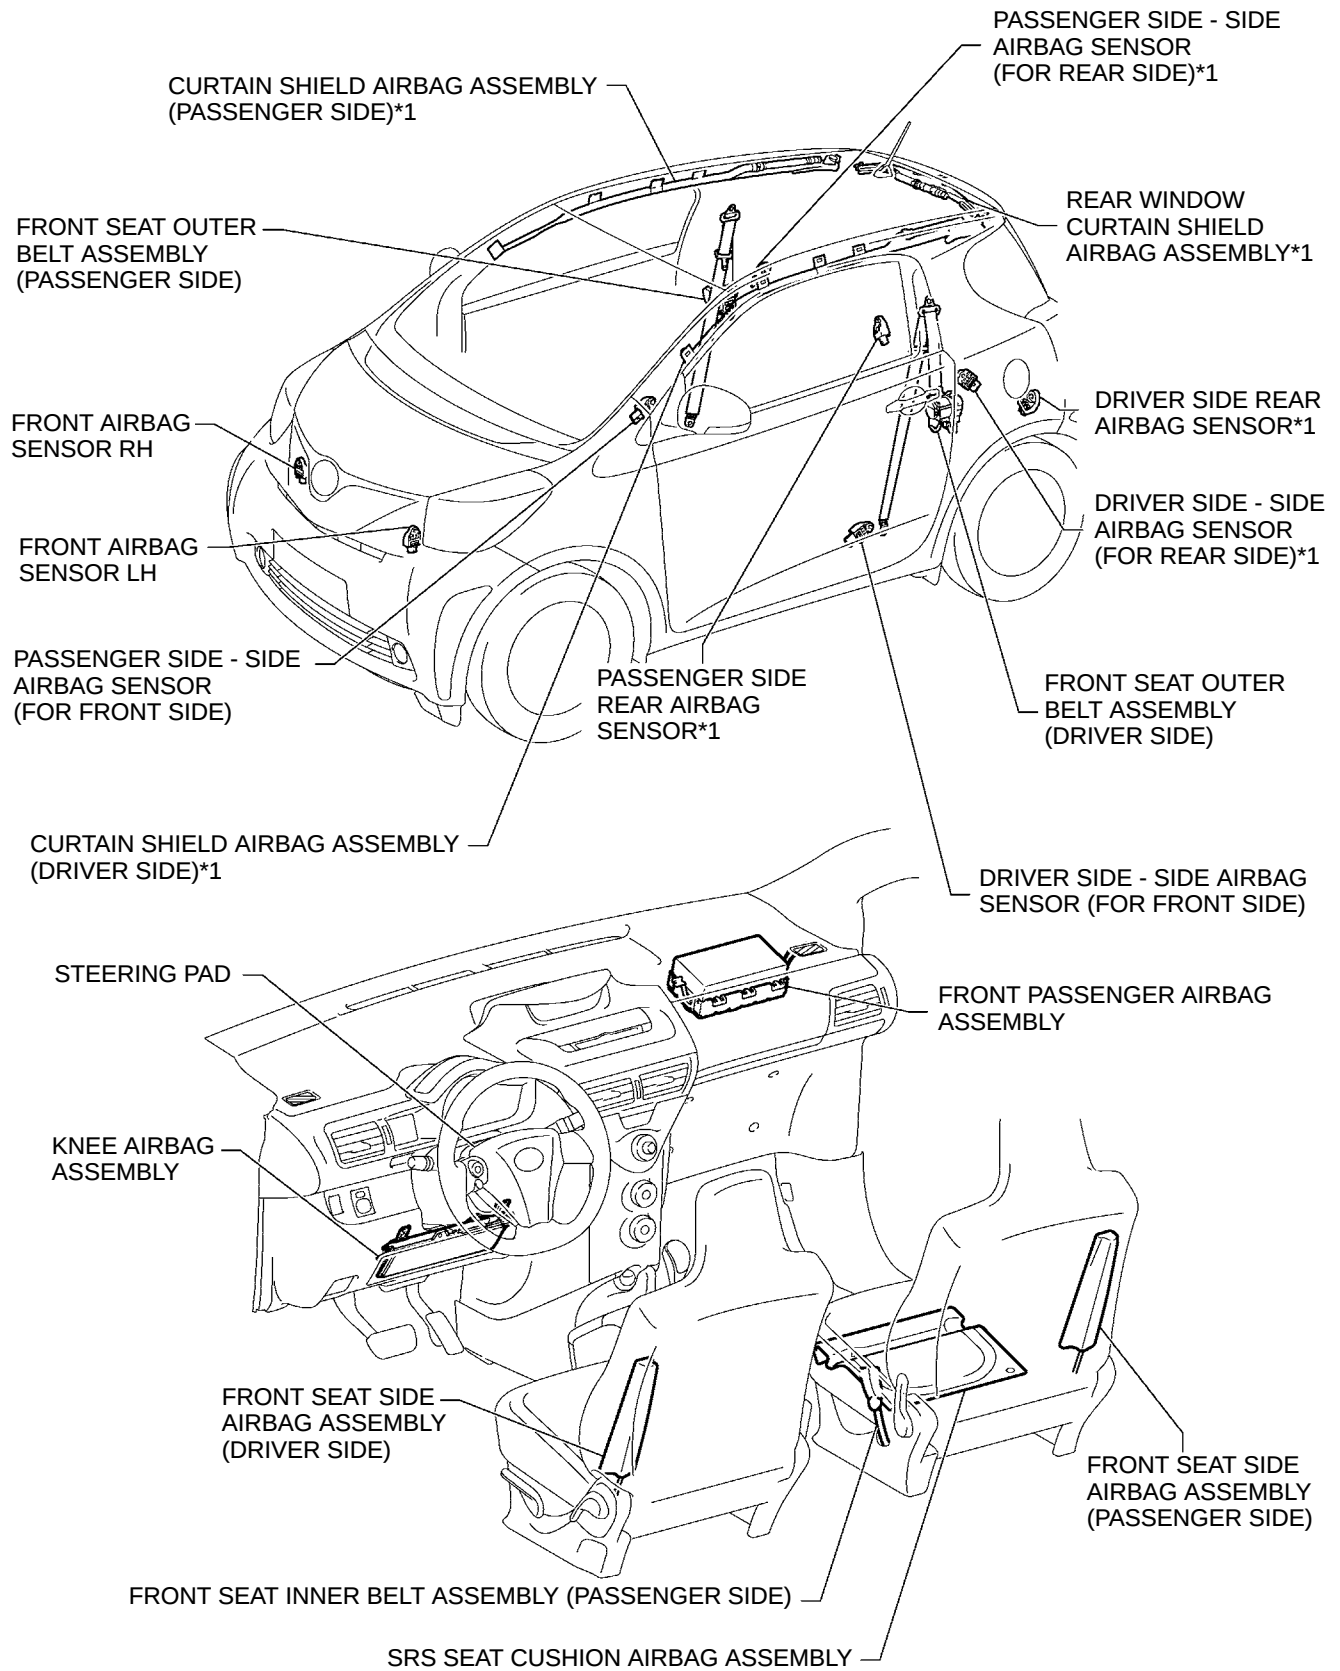

*1: w/ Curtain Shield Airbag

for LHD:

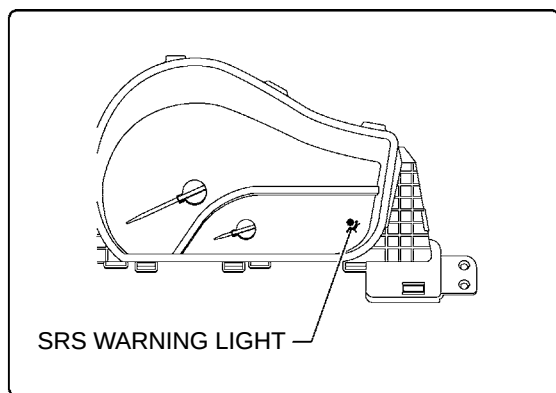


COMBINATION METER


SPIRAL CABLE

DLC3


CENTER AIRBAG SENSOR ASSEMBLY

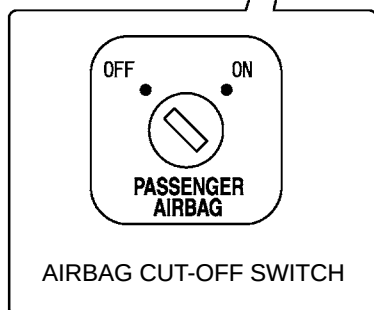


w/ Audio:

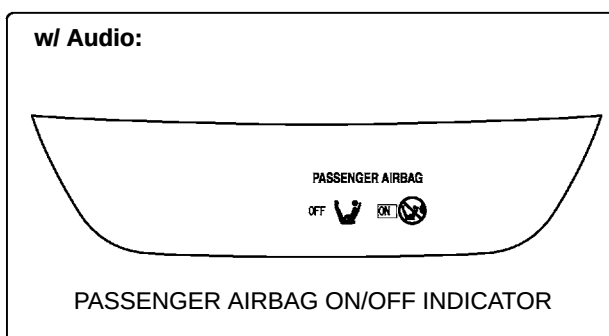

w/o Audio:

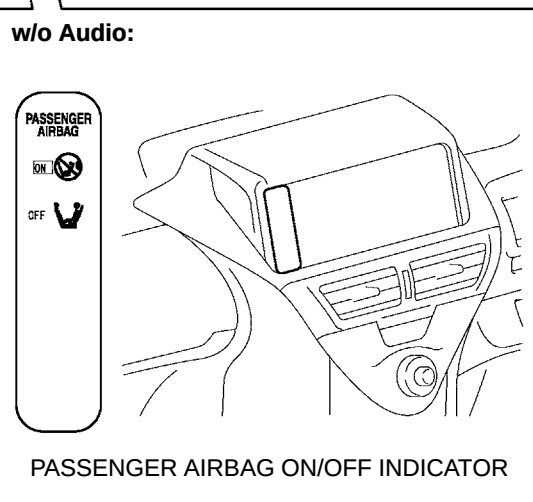


for RHD:

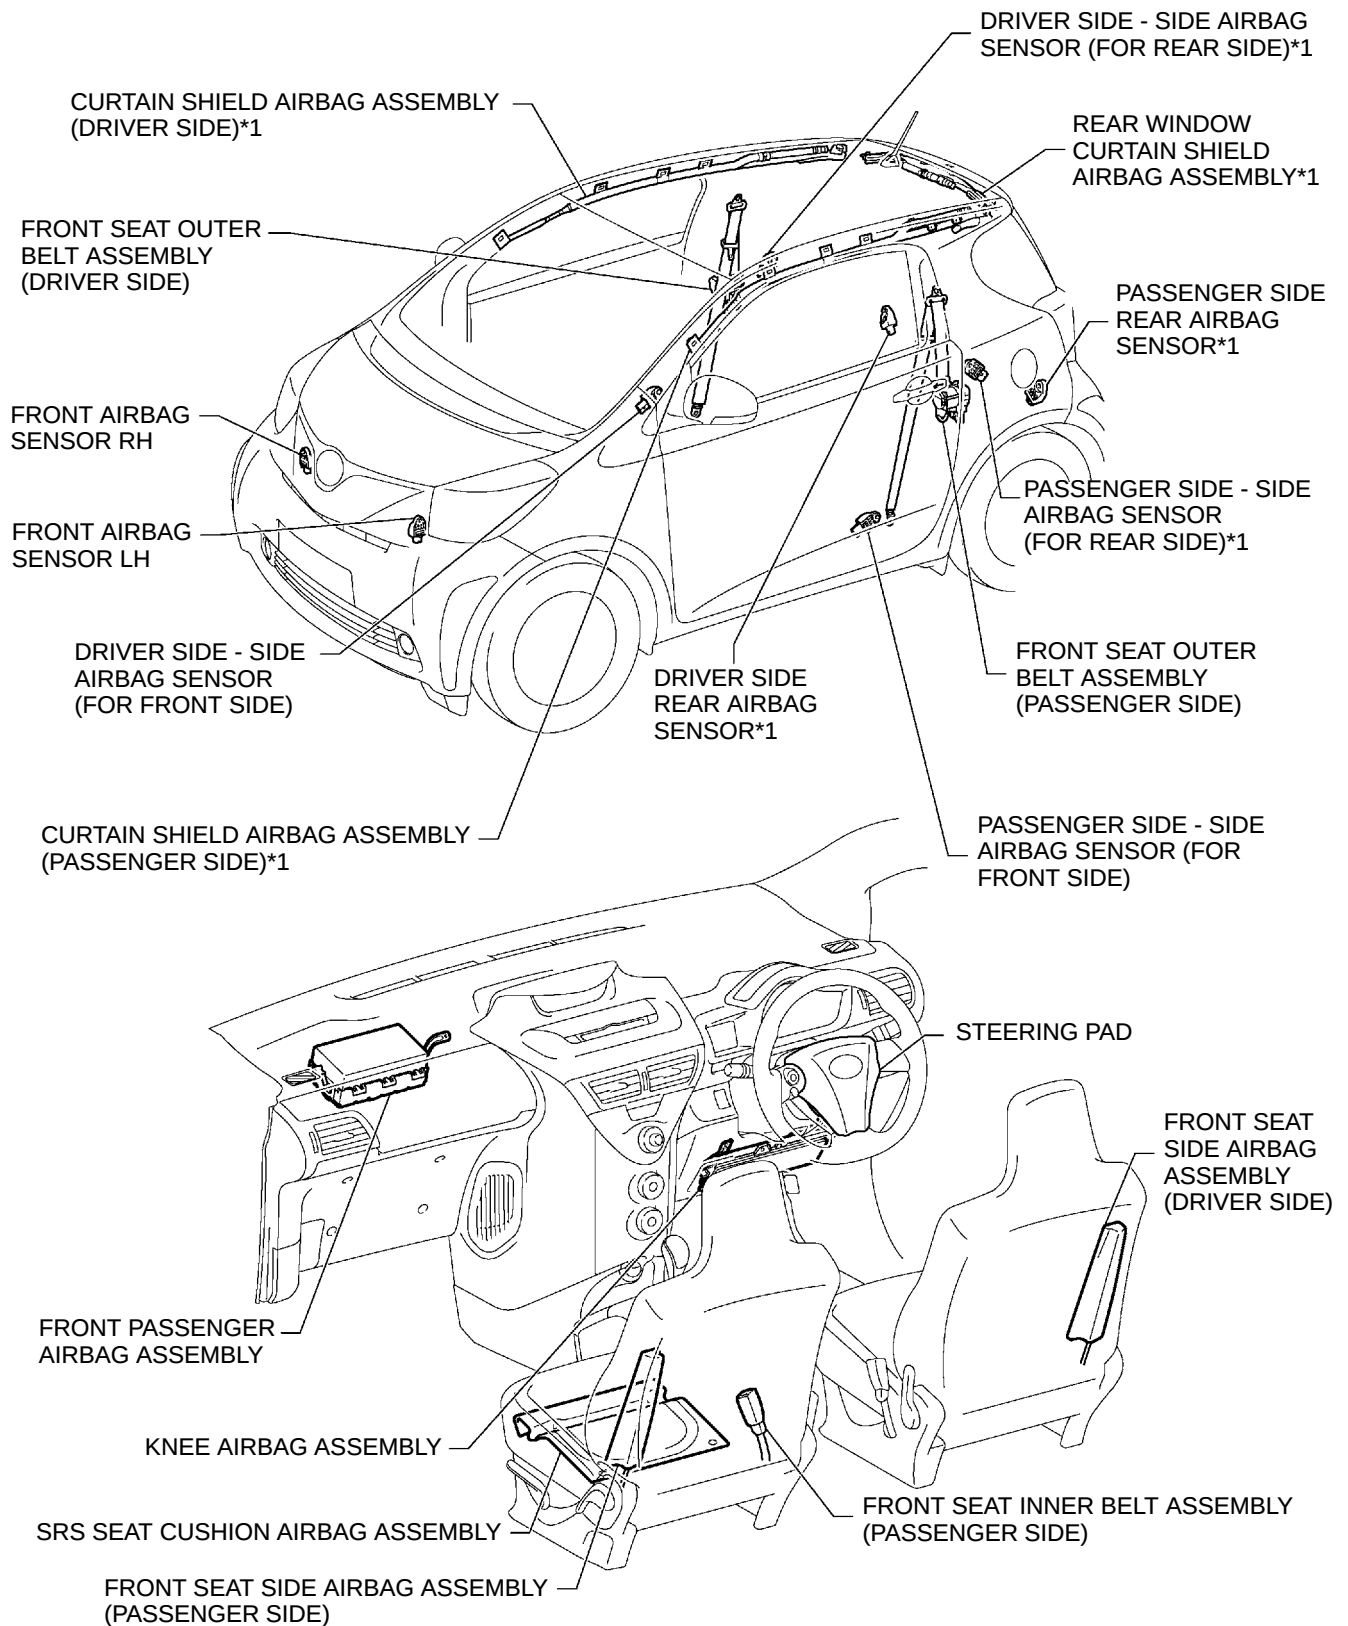


*1: w/ Curtain Shield Airbag

for RHD:

w/ Audio:

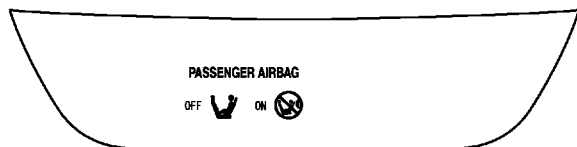

PASSENGER AIRBAG ON/OFF INDICATOR

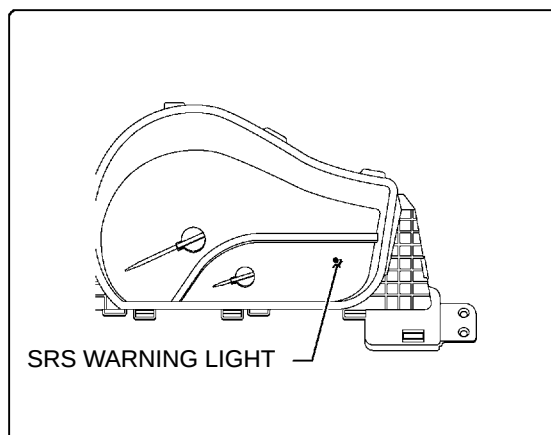

SRS WARNING LIGHT


COMBINATION METER

DLC3

SPIRAL CABLE

CENTER
AIRBAG
SENSOR
ASSEMBLY

w/o Audio:

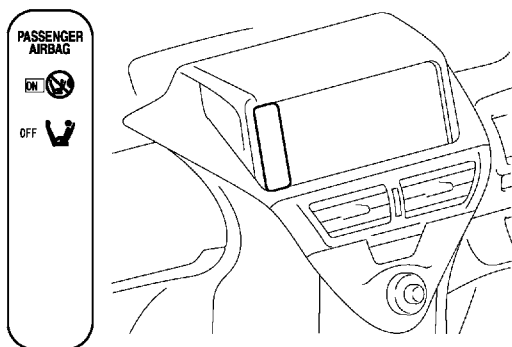

PASSENGER AIRBAG ON/OFF INDICATOR



AIRBAG CUT-OFF SWITCH