



Engine Control (1NR-FE), CVT (1NR-FE) and Shift Indicator (1NR-FE)

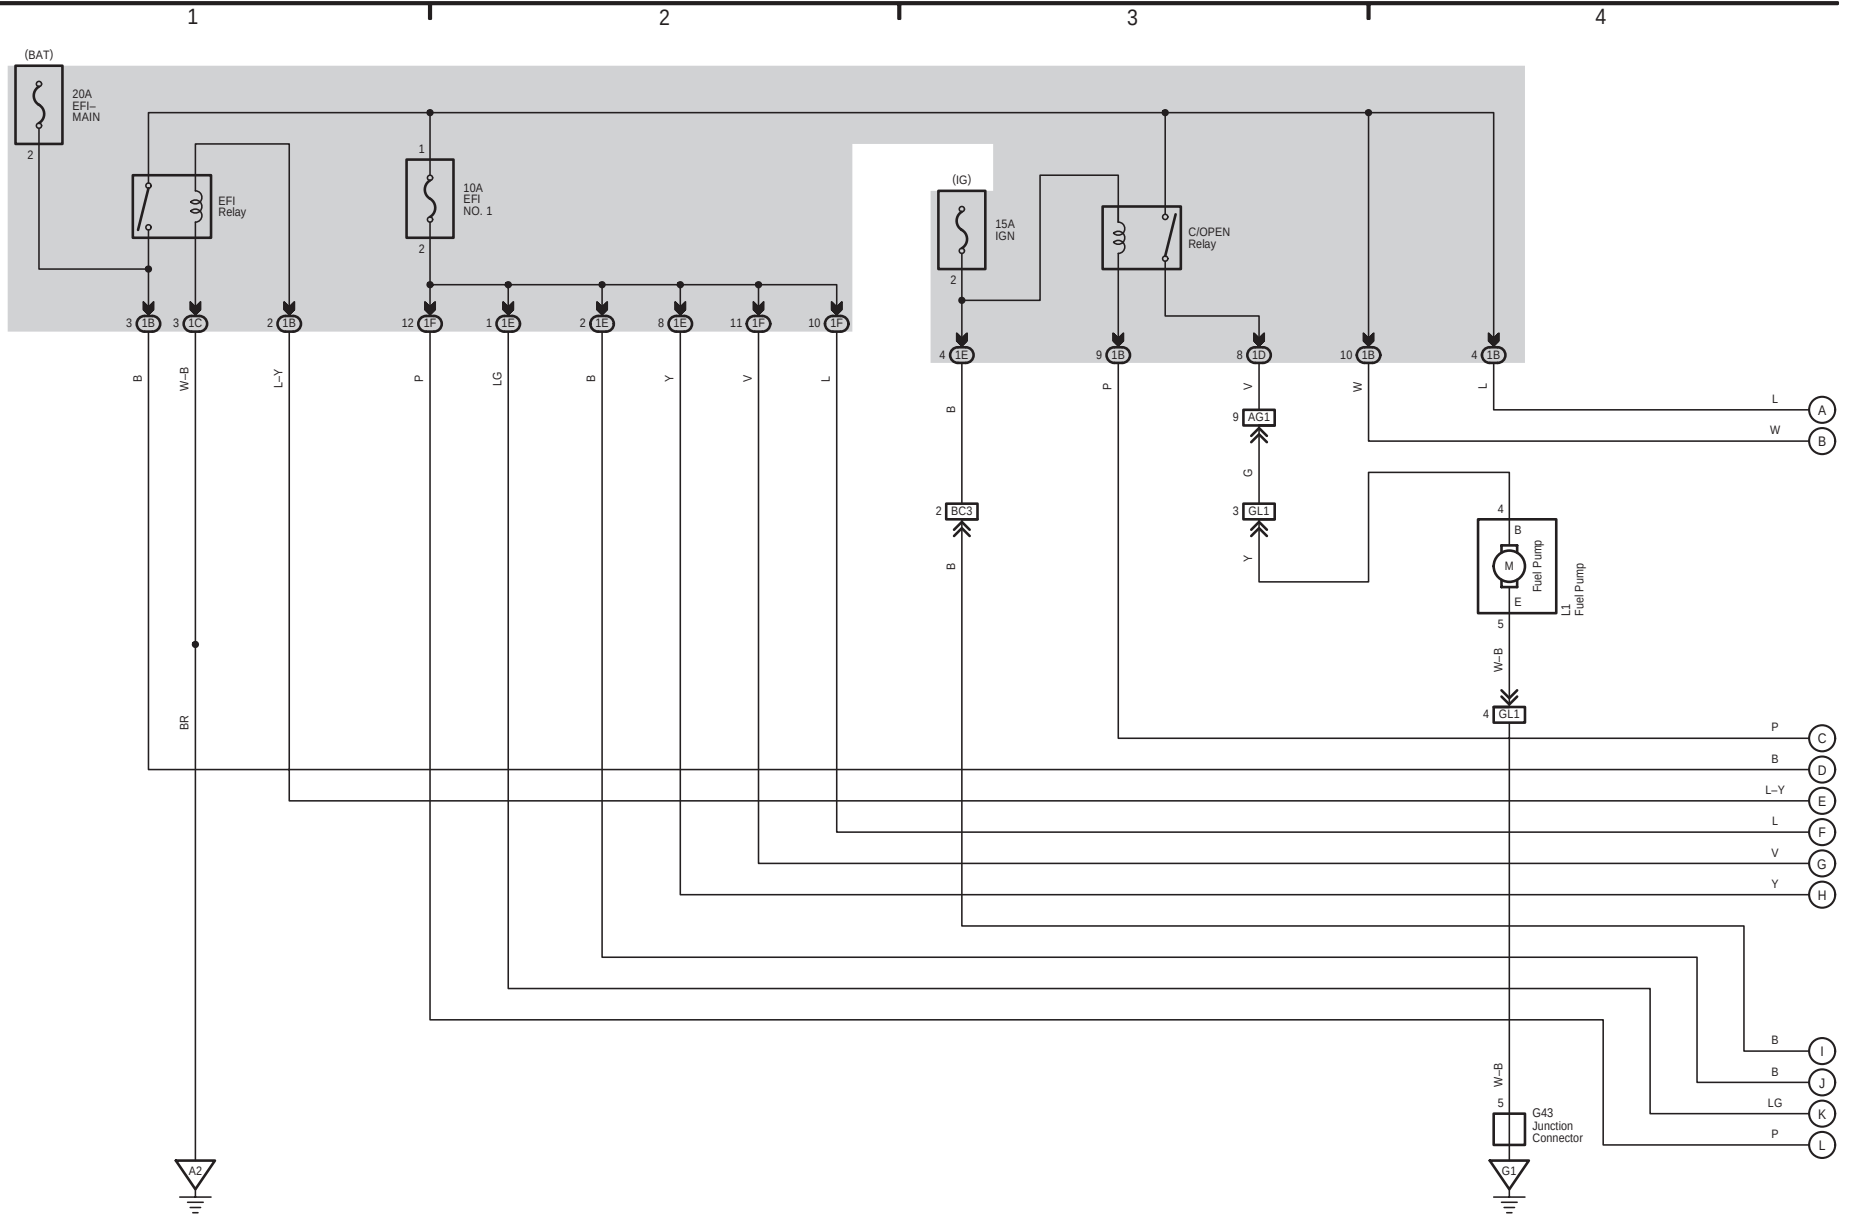

iQ (EM11T4E)


Engine Control (1NR-FE), CVT (1NR-FE) and Shift Indicator (1NR-FE)

* 3 : w/ Stop & Start System
 * 4 : w/o Stop & Start System

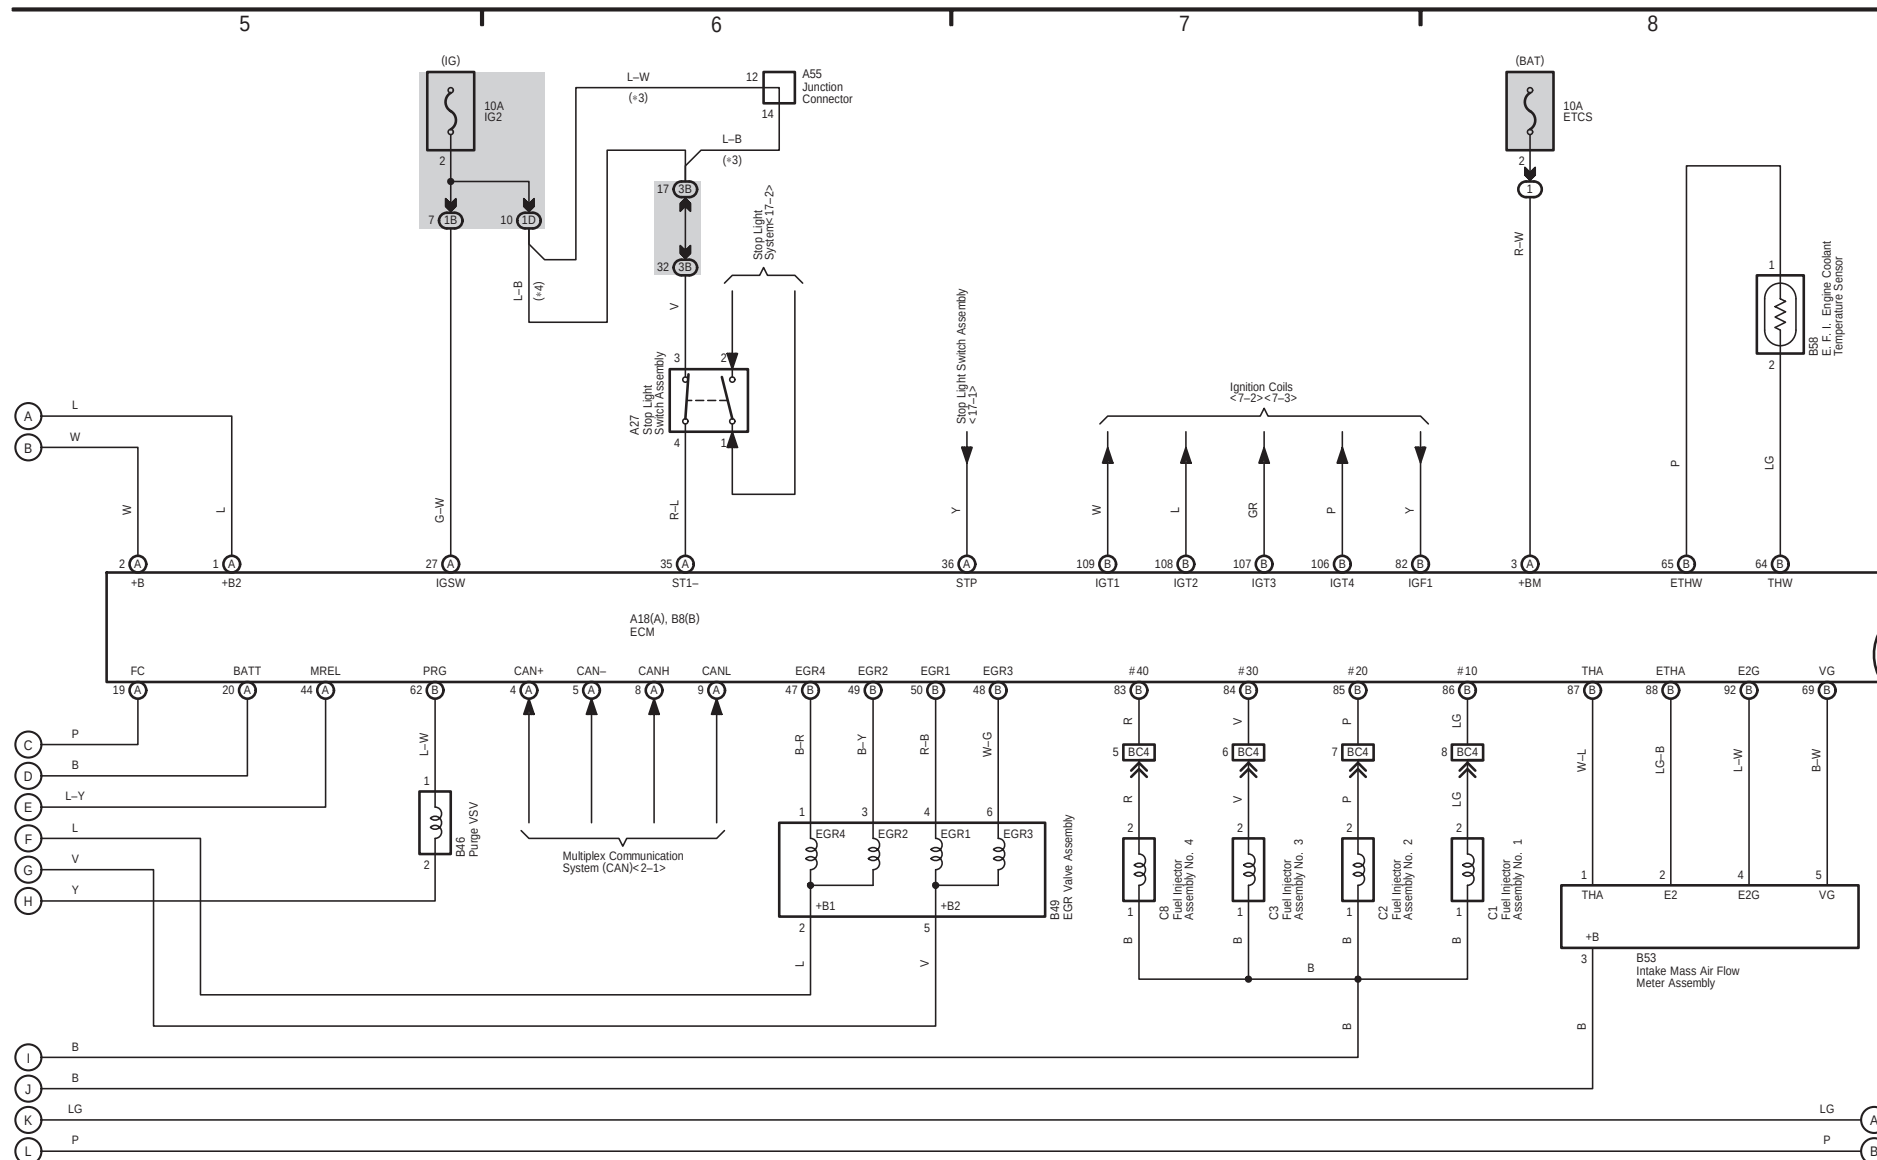

iQ (EM11T4E)

Engine Control (1NR-FE), CVT (1NR-FE) and Shift Indicator (1NR-FE)

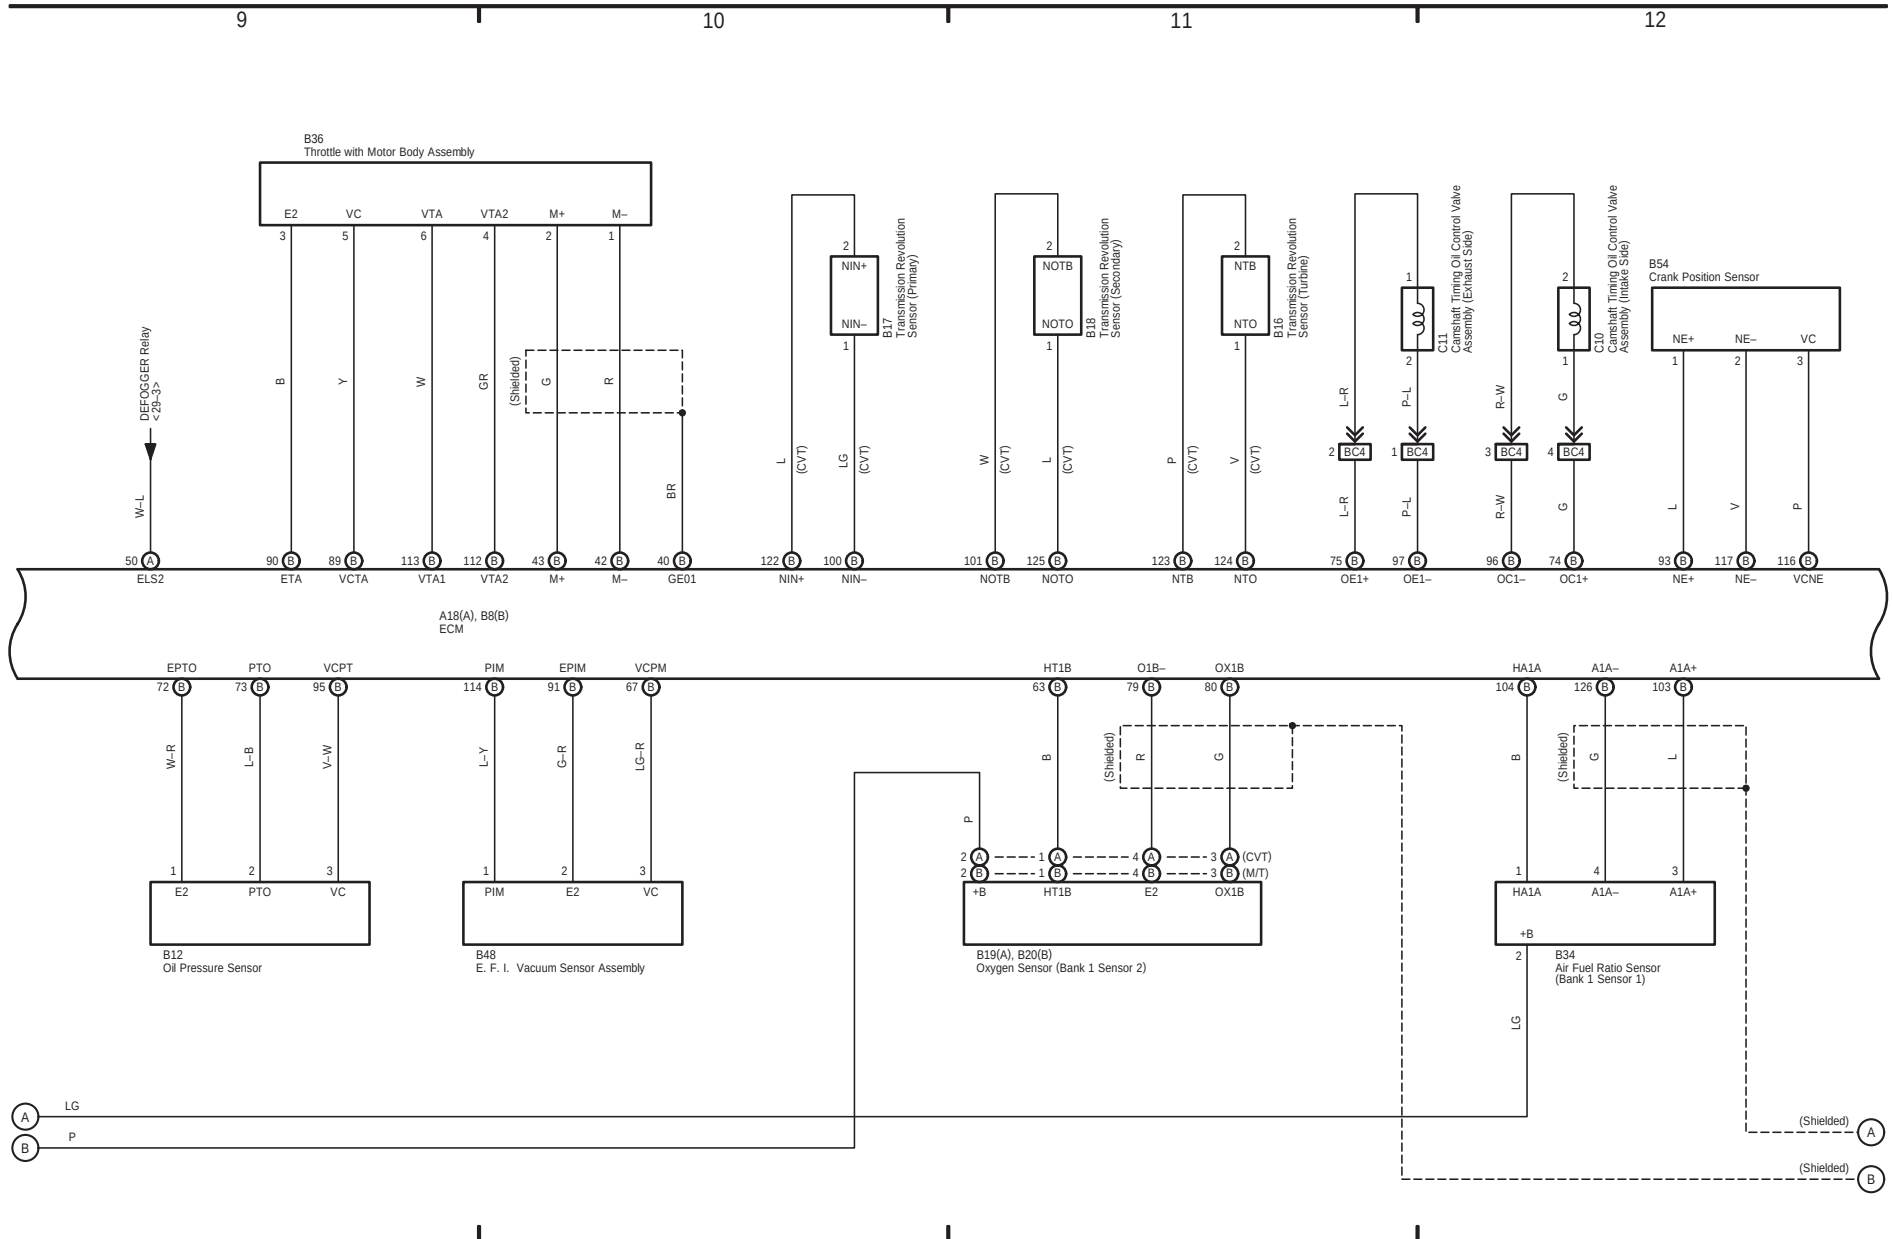

16



Engine Control (1NR-FE), CVT (1NR-FE) and Shift Indicator (1NR-FE)

iQ (EM11T4E)

