



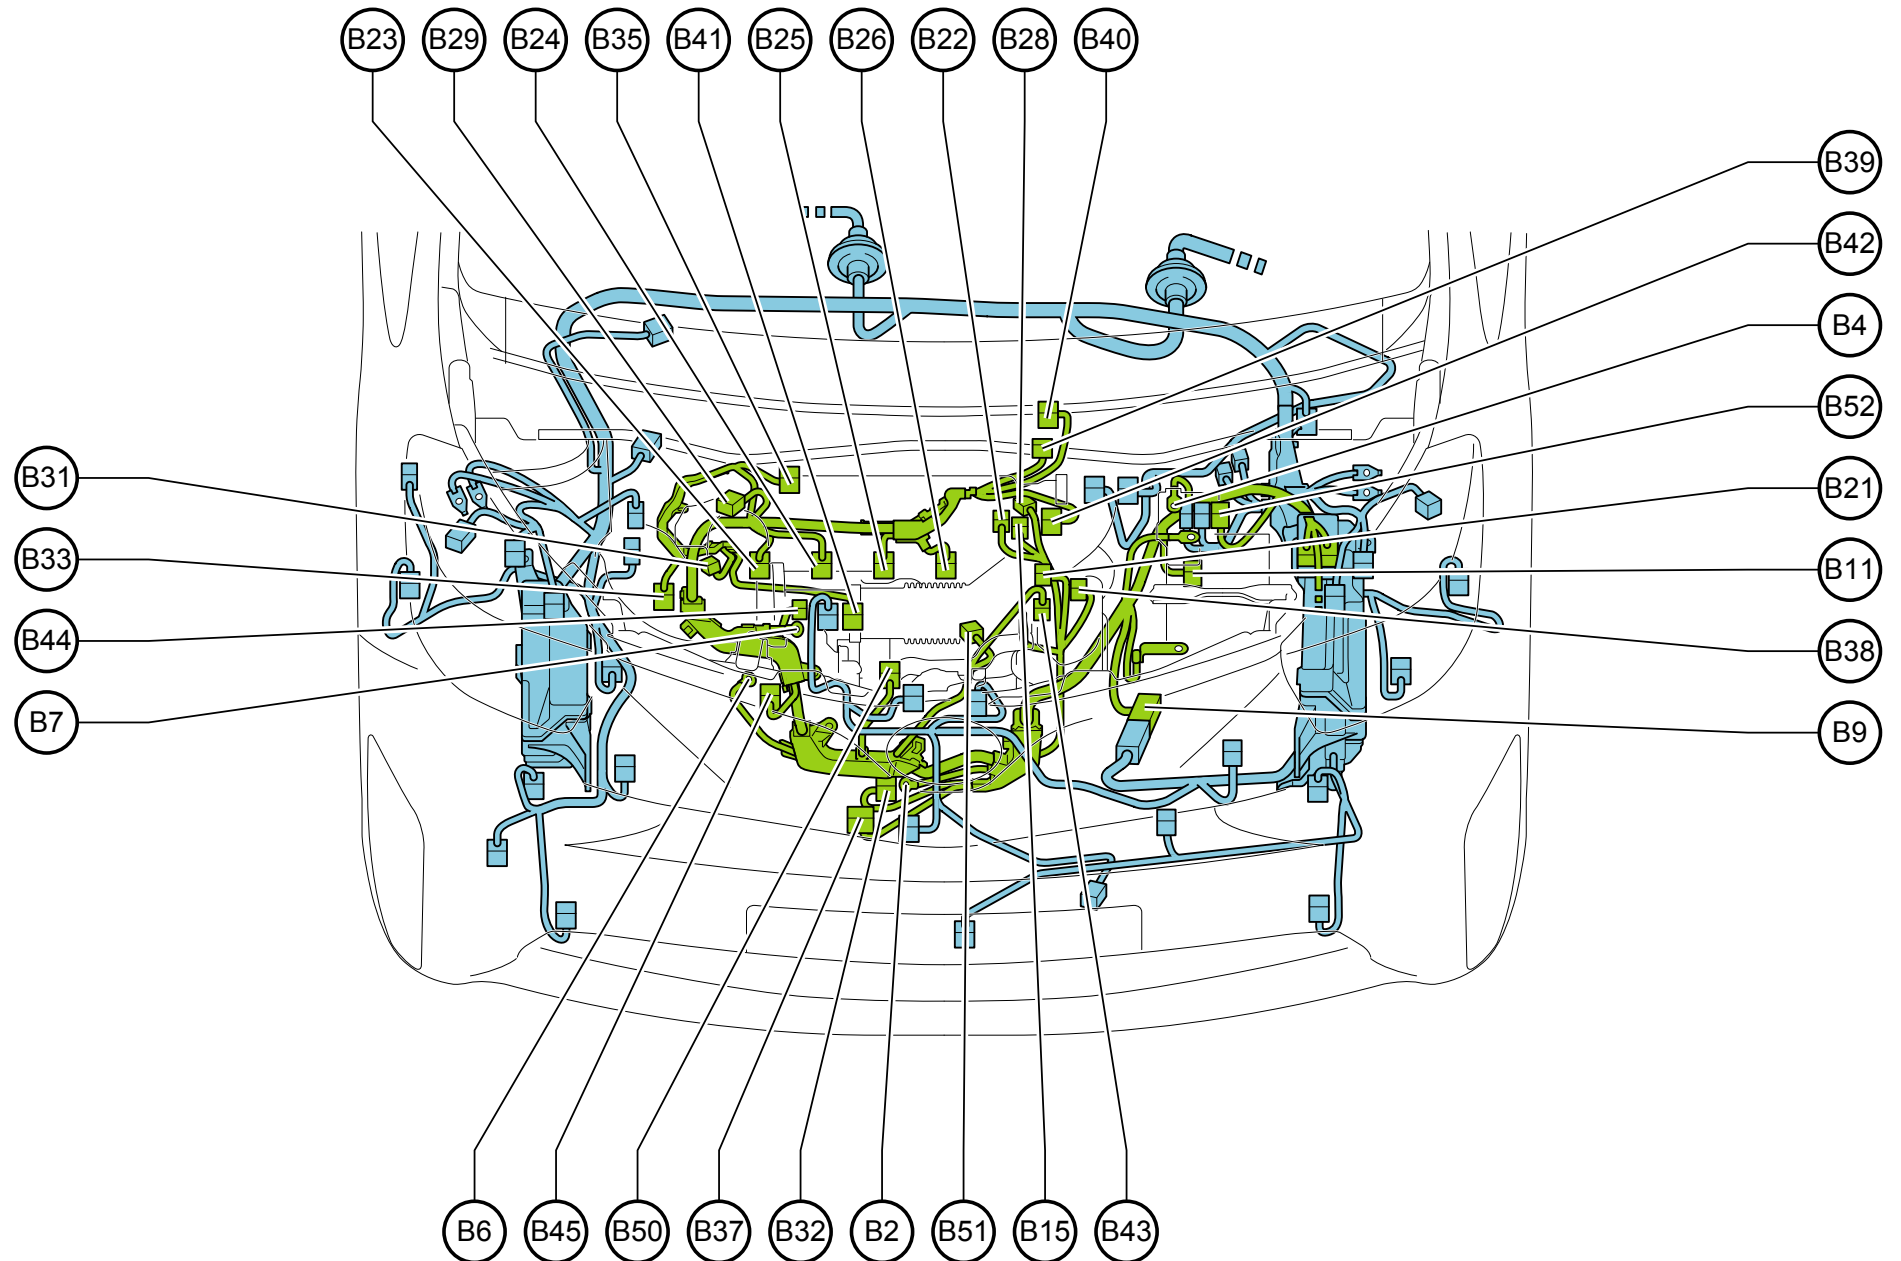


- B 2 Starter Assembly
- B 4 Fusible Link Block Assembly
- B 6 Generator Regulator Assembly
- B 7 Glow Plug Assembly
- B 9 ECM
- B 11 Glow Plug Relay Assembly
- B 15 Back-Up Light Switch Assembly
- B 21 Fuel Temperature Sensor
- B 22 Exhaust Gas Temperature Sensor
- B 23 Injector Assembly No. 1
- B 24 Injector Assembly No. 2
- B 25 Injector Assembly No. 3
- B 26 Injector Assembly No. 4
- B 28 Crank Position Sensor
- B 29 Cam Position Sensor
- B 31 Engine Oil Pressure Switch Assembly
- B 32 Starter Assembly
- B 33 Cooler Compressor Assembly
- B 35 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- B 37 Diesel Throttle Body Assembly
- B 38 E.F.I. Engine Coolant Temperature Sensor
- B 39 Turbocharger Variable Nozzle Motor
- B 40 Turbocharger Variable Nozzle Motor
- B 41 Engine Oil Level Sensor
- B 42 Fuel Metering Unit
- B 43 Pressure Control Valve
- B 44 Fuel Pressure Sensor
- B 45 Generator Regulator Assembly
- B 50 Electric EGR Control Valve Assembly
- B 51 EGR Cooler Bypass Valve VSV
- B 52 Fusible Link Block Assembly

Position of Parts in Engine Compartment <RHD 1ND-TV>

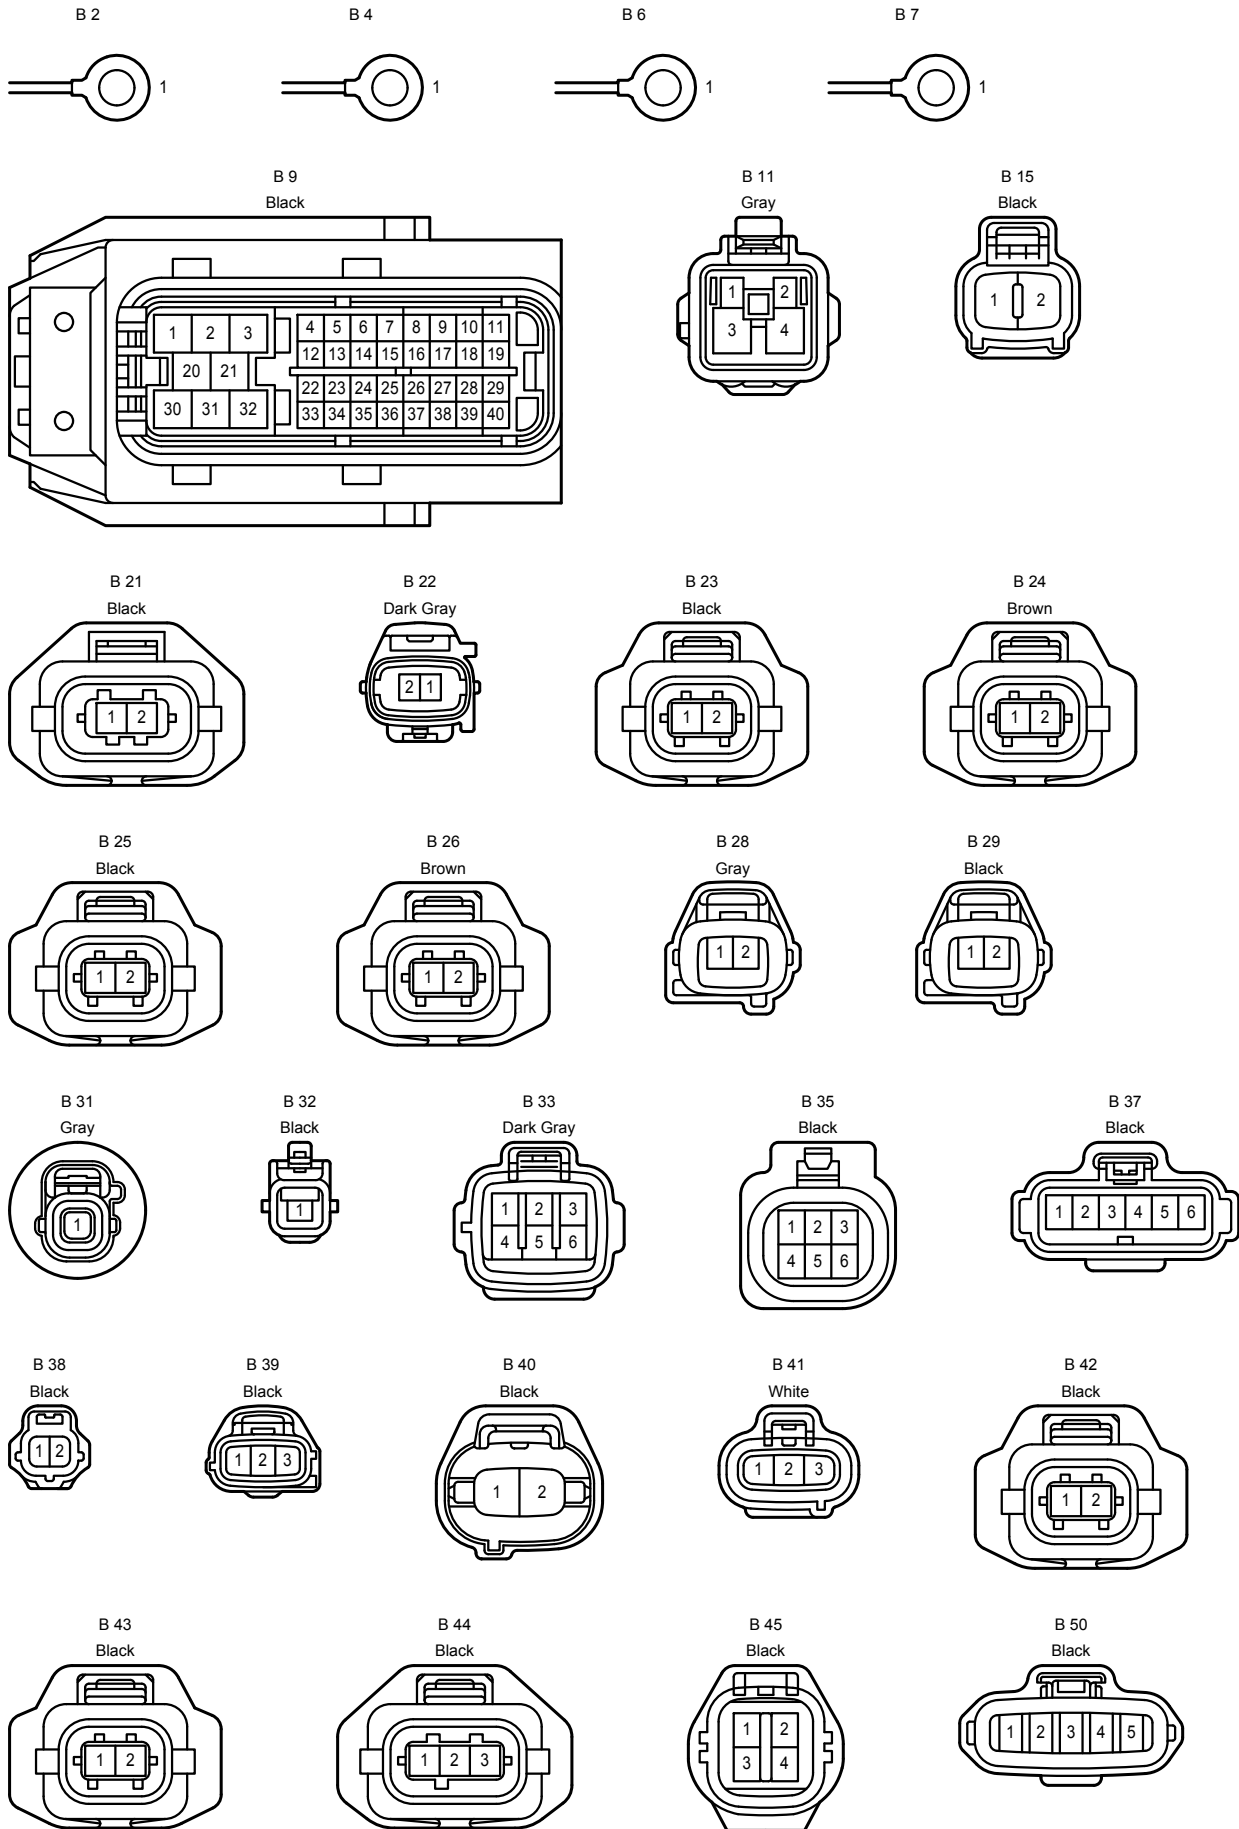

B 51
Gray

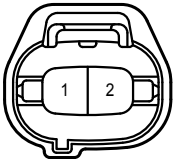

B 52
Black

