


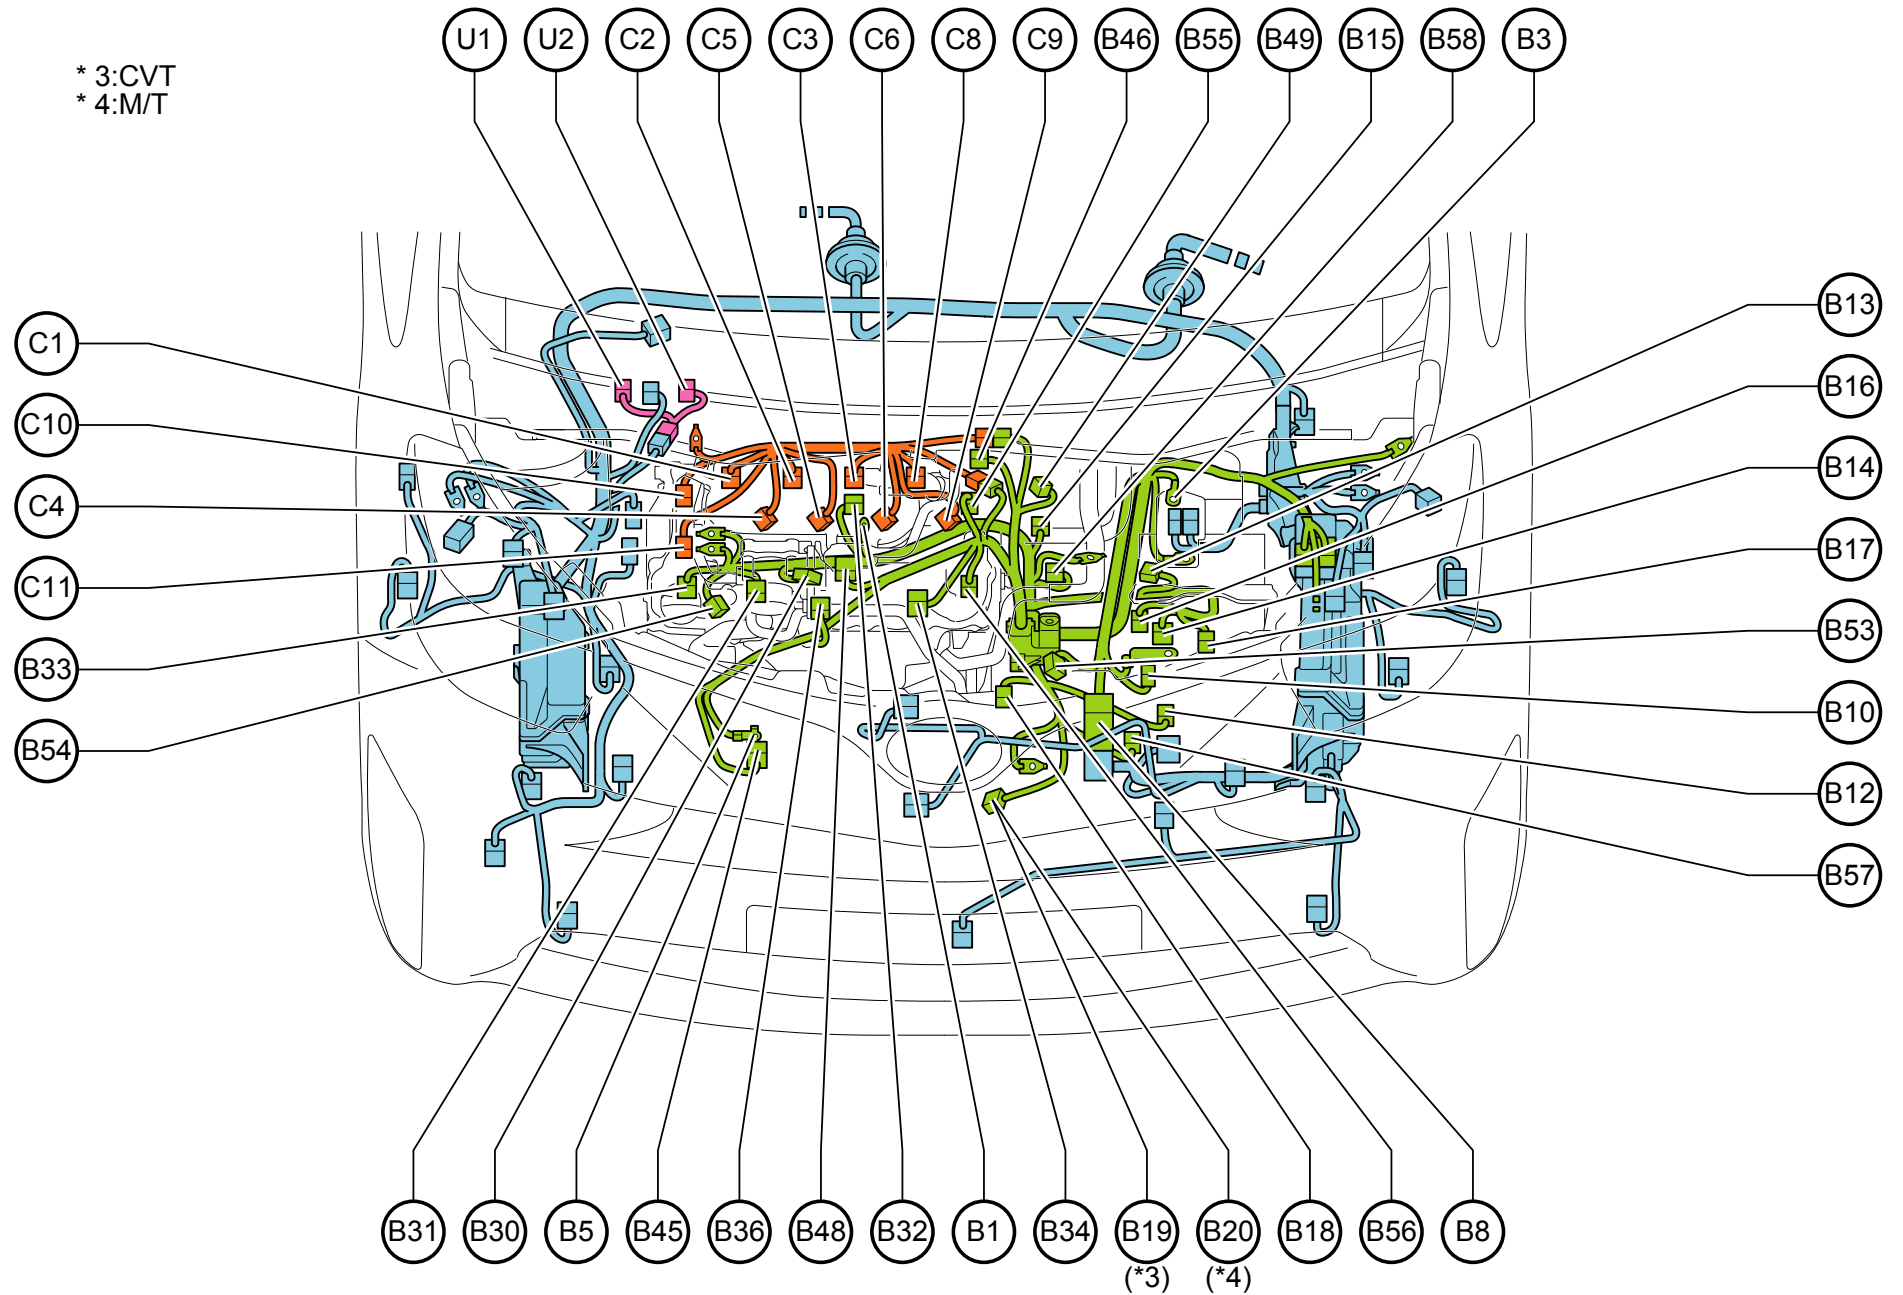

- B 1 Starter Assembly
- B 3 Fusible Link Block Assembly
- B 5 Generator Regulator Assembly
- B 8 ECM
- B 10 Battery Current Sensor Assembly
- B 12 Oil Pressure Sensor
- B 13 Park/Neutral Position Switch Assembly
- B 14 Transmission Wire
- B 15 Back-Up Light Switch Assembly
- B 16 Transmission Revolution Sensor (Turbine)
- B 17 Transmission Revolution Sensor (Primary)
- B 18 Transmission Revolution Sensor (Secondary)
- B 19 Oxygen Sensor (Bank 1 Sensor 2)
- B 20 Oxygen Sensor (Bank 1 Sensor 2)
- B 30 Knock Control Sensor (Bank 1)
- B 31 Engine Oil Pressure Switch Assembly
- B 32 Starter Assembly
- B 33 Cooler Compressor Assembly
- B 34 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- B 36 Throttle with Motor Body Assembly
- B 45 Generator Regulator Assembly
- B 46 Purge VSV
- B 48 E.F.I. Vacuum Sensor Assembly
- B 49 EGR Valve Assembly
- B 53 Intake Mass Air Flow Meter Assembly
- B 54 Crank Position Sensor
- B 55 VVT Sensor (Intake Side)
- B 56 VVT Sensor (Exhaust Side)
- B 57 Neutral Position Switch (Park/Neutral Position Switch Assembly)
- B 58 E.F.I. Engine Coolant Temperature Sensor

- C 1 Fuel Injector Assembly No. 1
- C 2 Fuel Injector Assembly No. 2
- C 3 Fuel Injector Assembly No. 3
- C 4 Ignition Coil No. 1
- C 5 Ignition Coil No. 2
- C 6 Ignition Coil No. 3
- C 8 Fuel Injector Assembly No. 4
- C 9 Ignition Coil No. 4
- C 10 Camshaft Timing Oil Control Valve Assembly (Intake Side)
- C 11 Camshaft Timing Oil Control Valve Assembly (Exhaust Side)

- U 1 Vacuum Sensor Assembly
- U 2 Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)

