


J GROUND POINT


*1 : W THEFT DETERRENT SYSTEM
 *2 : W/O THEFT DETERRENT SYSTEM
 *3 : W THEFT DETERRENT SYSTEM AND W DOOR LOCK CONTROL
 *4 : W THEFT DETERRENT SYSTEM AND W/O DOOR LOCK CONTROL

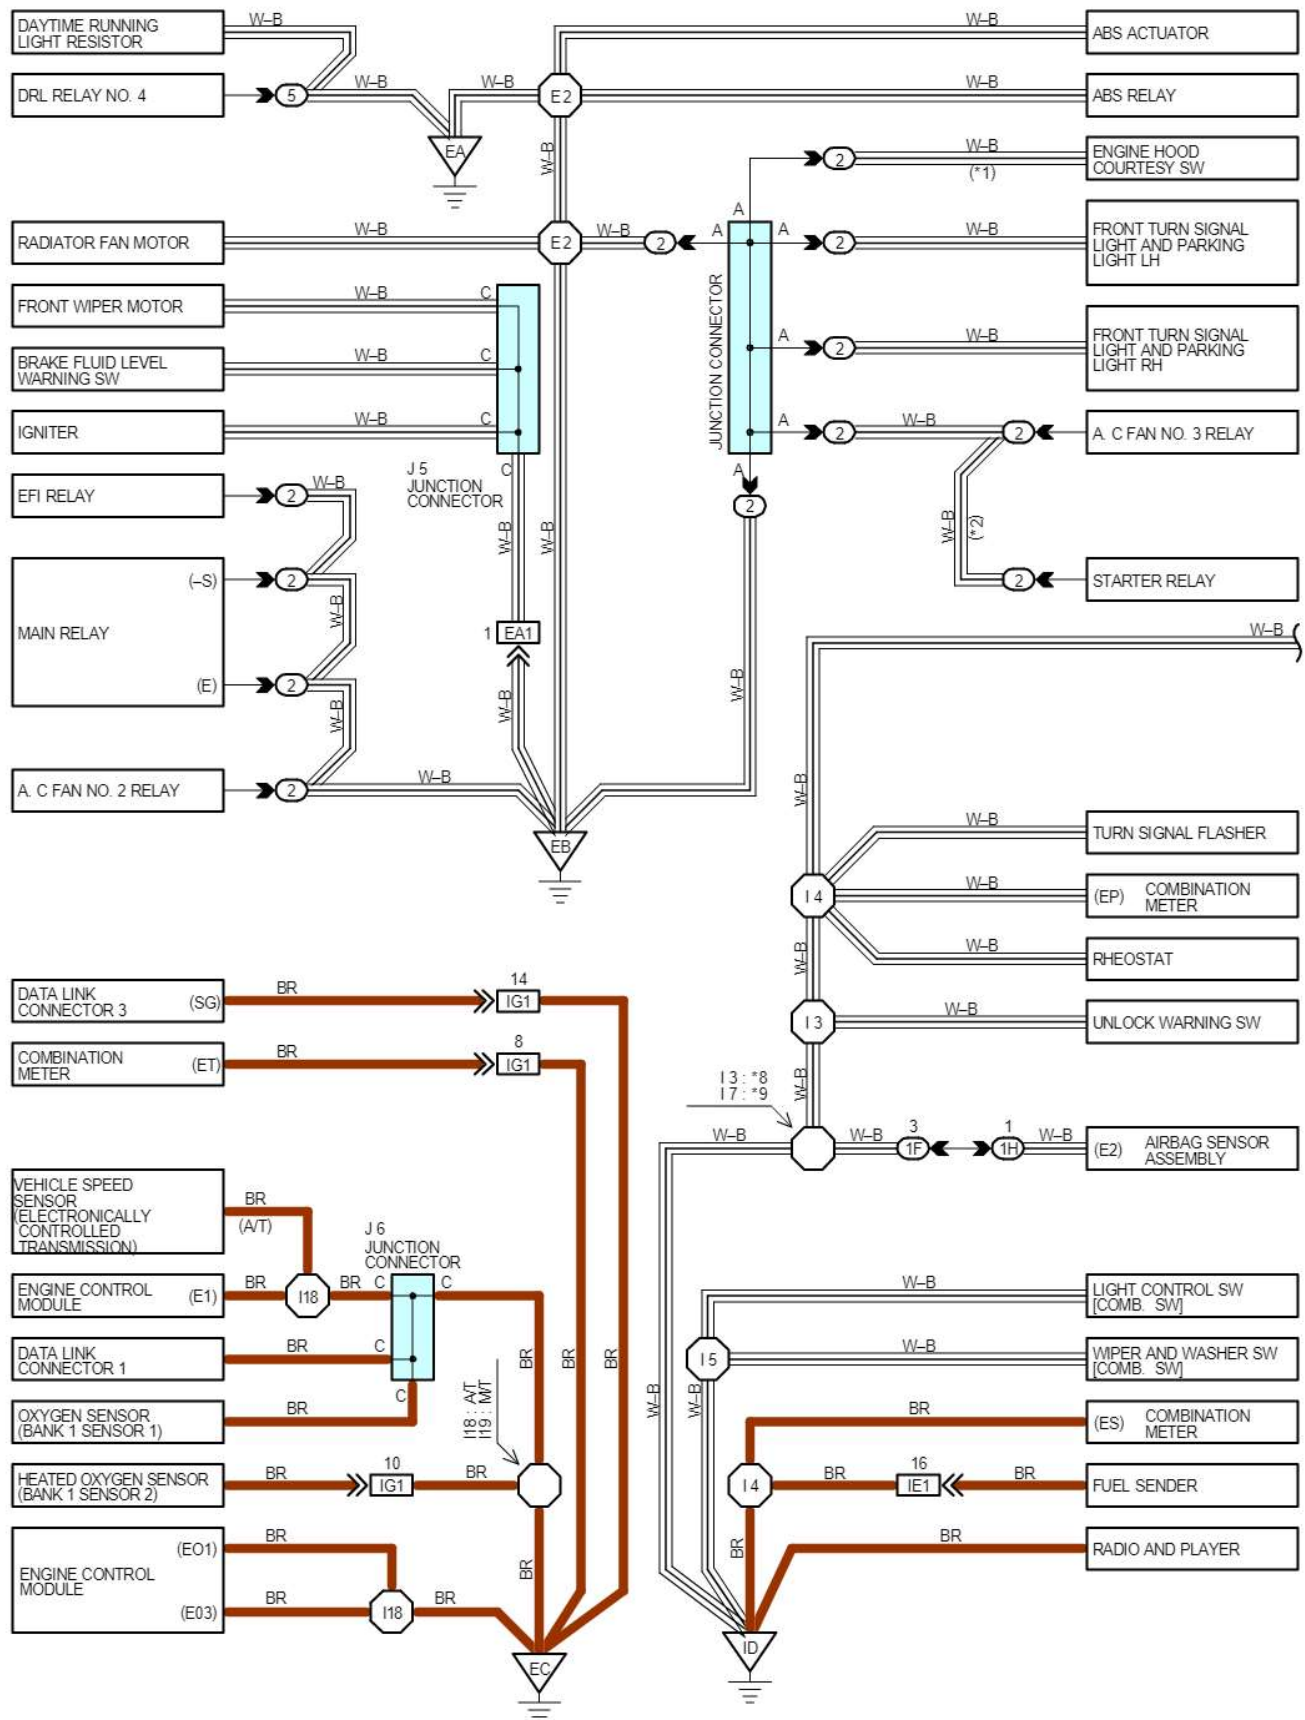

*5 : W/O THEFT DETERRENT SYSTEM AND W/ DOOR LOCK CONTROL
 *6 : PACKAGE TRAY TYPE
 *7 : REAR SPOILER TYPE
 *8 : USA, CANADA

*9 : PUERTO RICO
 *10 : USA
 *11 : PUERTO RICO, CANADA
 *12 : C/P

*13 : CONVERTIBLE

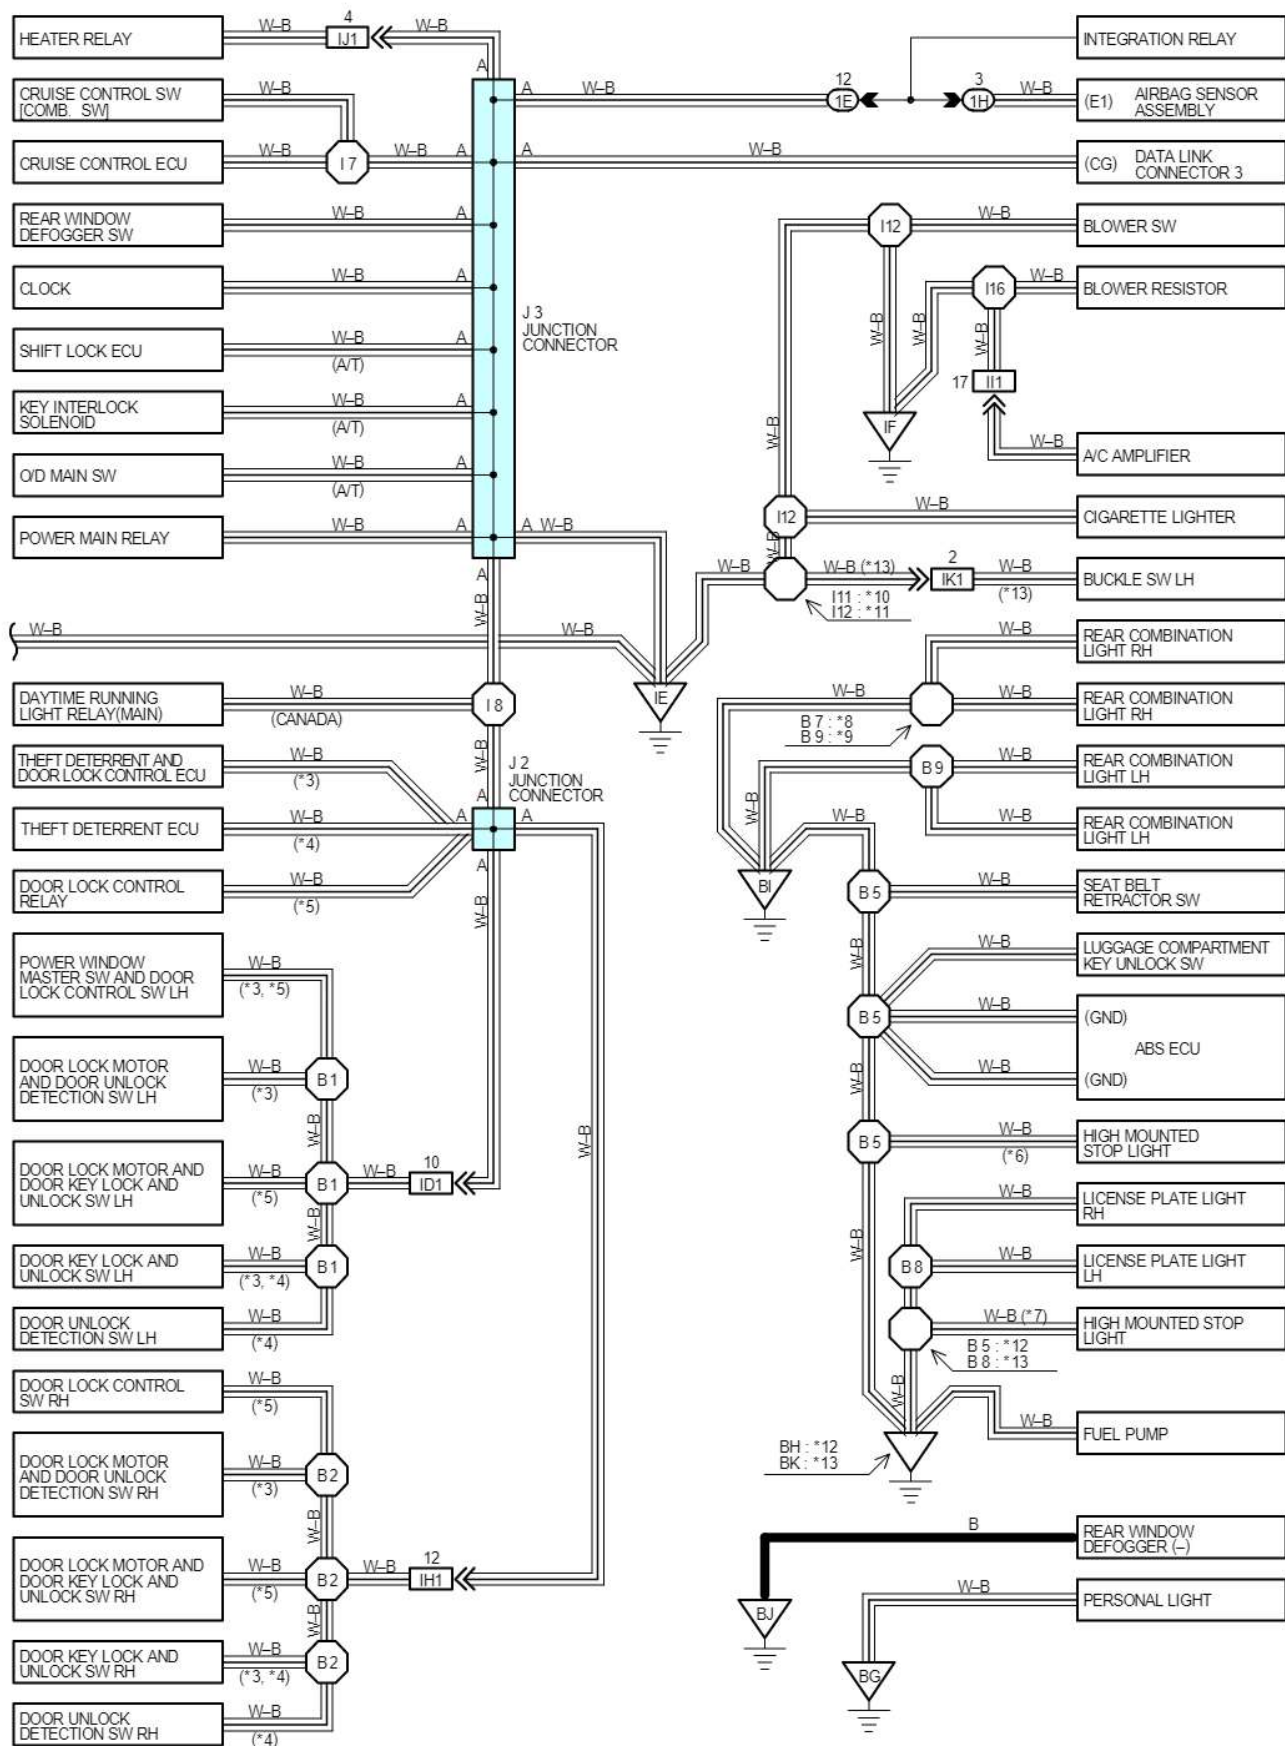

J GROUND POINT

: PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
J2	27	J5	27		
J3	27	J6	27		

: RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	22	ENGINE ROOM R/B (ENGINE COMPARTMENT LEFT)
5	23	ENGINE ROOM R/B NO. 5 (ENGINE COMPARTMENT LEFT)

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1E	20	INSTRUMENT PANEL WIRE AND DRIVER SIDE J/B (LEFT KICK PANEL)
1F		
1H		

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	30	ENGINE WIRE AND ENGINE ROOM MAIN WIRE (INSIDE OF THE ENGINE ROOM R/B)
ID1	32	FRONT DOOR LH WIRE AND INSTRUMENT PANEL WIRE (LEFT KICK PANEL)
IE1	32	INSTRUMENT PANEL WIRE AND FLOOR WIRE (LEFT KICK PANEL)
IG1	34	ENGINE WIRE AND INSTRUMENT PANEL WIRE (NEAR THE BLOWER UNIT)
IH1	34	FRONT DOOR RH WIRE AND INSTRUMENT PANEL WIRE (RIGHT KICK PANEL)
II1	34	INSTRUMENT PANEL WIRE AND A/C SUB WIRE (NEAR THE BLOWER UNIT)
IJ1	34	INSTRUMENT PANEL NO. 2 WIRE AND INSTRUMENT PANEL WIRE (RIGHT KICK PANEL)
IK1	34	FLOOR NO. 3 WIRE AND INSTRUMENT PANEL WIRE (UNDER THE DRIVER'S SEAT)


: GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EA	30	FRONT SIDE OF THE RIGHT FENDER
EB	30	FRONT SIDE OF THE LEFT FENDER
EC	30	RIGHT SIDE OF THE SURGE TANK
ID	32	LEFT KICK PANEL
IE	32	INSTRUMENT PANEL BRACE LH
IF	32	RIGHT KICK PANEL
BG	36 (C/P)	RIGHT SIDE OF PERSONAL LIGHT
	37 (CONVERTIBLE)	
BH	36 (C/P)	LEFT SIDE OF THE UPPER BACK PANEL
BI	36 (C/P)	LOWER BACK PANEL CENTER
	37 (CONVERTIBLE)	
BJ	36 (C/P)	RIGHT SIDE OF THE UPPER BACK PANEL
	37 (CONVERTIBLE)	
BK	37 (CONVERTIBLE)	UPPER THE REAR WHEEL HOUSE LH

 : SPLICE POINTS


CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E2	30	ENGINE ROOM MAIN WIRE	I19	34	ENGINE WIRE
I3	34	INSTRUMENT PANEL WIRE	B1	36	FRONT DOOR LH WIRE
I4			B2	36	FRONT DOOR RH WIRE
I5			B5	36	FLOOR WIRE
I7			B7		
I8			B8	36 (C/P)	
I11				37 (CONVERTIBLE)	
I12			B9	36 (C/P)	
I16				37 (CONVERTIBLE)	
I18	34	ENGINE WIRE			

 J2 GRAY




(HINT : SEE PAGE 7)

 J3 BLUE




(HINT : SEE PAGE 7)

 J5 GRAY



(HINT : SEE PAGE 7)

 J6 GRAY



(HINT : SEE PAGE 7)