


Pontiac G5 2008 fuse box diagram

Floor Console Fuse Block

The floor console fuse block is located on the passenger side of the floor console behind the forward panel.

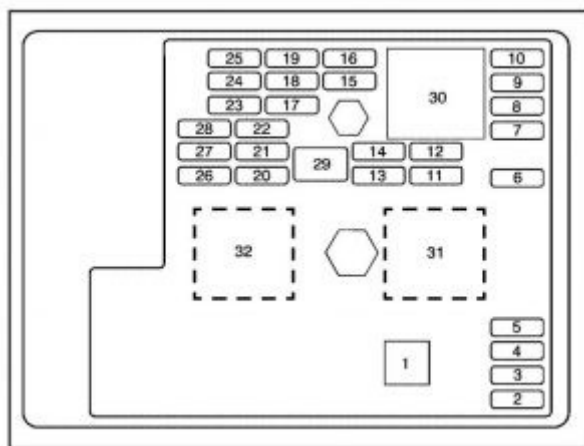

Pontiac G5 – fuse box – instrument panel


Fuses	Usage
1	Fuse Puller
2	Empty
3	Empty
4	Empty
5	Empty
6	Amplifier
7	Cluster
8	Ignition Switch, PASS-Key® III+
9	Stoplamp
10	Heating, Ventilation, Air Conditioning, PASS-Key® III+
11	Empty
12	Spare
13	Airbag
14	Spare
15	Windshield Wiper
16	Climate Control System, Ignition
17	Window Retained Accessory Power
18	Empty
19	Electric Power Steering, Steering Wheel Control
20	Sunroof
21	Spare
22	Empty
23	Audio System

24	XM Radio™, OnStar™
25	Engine Control Module, Transmission Control Module
26	Door Locks
27	Interior Lights
28	Steering Wheel Control Illumination
29	Power Windows

Relays	Usage
30	Climate Control System
31	Empty
32	Retained Accessory Power (RAP)

Engine Compartment Fuse Block

The engine compartment fuse block is located on the driver side of the vehicle.

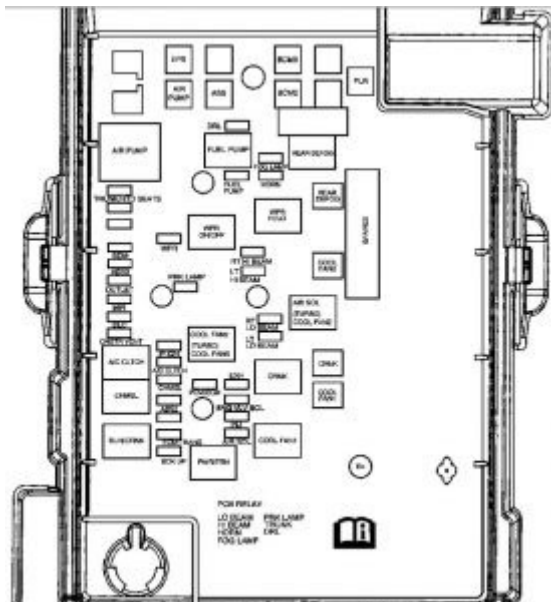

Pontiac G5 – fuse box – engine compartment

Fuses	Usage
SPARES	Spares
Blank	Blank
Blank	Blank
REAR DEFOG	Rear Defogger
COOL FAN2	Engine Cooling Fan High Speed
CRNK	Starter
COOL FAN 1	Engine Cooling Fan Low Speed
BCM3	Body Control Module 3
BCM2	Body Control Module 2
FOG LAMP	Fog Lamps
HORN	Horn

RT HI BEAM	Passenger Side High Beam Lamp
LT HI BEAM	Driver Side High Beam Lamp
RT LO BEAM	Passenger Side Low Beam Lamp
LT LO BEAM	Driver Side Low Beam Lamp
DRL	Daytime Running Lamps
FUEL PUMP	Fuel Pump
EXH	Exhaust Emissions
ENG VLV SOL	Engine Valve Solenoid
INJ	Injectors
AIR SOL	AIR Solenoid
Blank	Blank
PCM/ECM	Powertrain Control Module/ Engine Control Module
EPS	Electric Power Steering
AIR PUMP	AIR Pump
PRK LAMP	Parking Lamps
WPR	Windshield Wiper
IP IGN	Ignition
A/C CLTCH	Air Conditioning Clutch
CHMSL	Center High Mount Stop Lamp
ABS2	Antilock Brake System 2
Blank	Blank
ECM/TRANS	Engine Control Module, Transmission
BCK UP	Back-Up Lamps
TRUNK/ HTD SEATS	Trunk, Heated Seats
Blank	Blank
Blank	Blank
SDM	Sensing Diagnostic Module (Airbags)
ABS3	Antilock Brake System 3
OUTLET	Auxiliary Power Outlet
MIR	Mirrors
DLC	Data Link Connector
CNSTR VENT	Canister Vent

Relays

REAR DEFOG

AIR SOL (TURBO: COOL FAN 2)

WPR HI/LO

CRNK

Usage

Rear Defogger

AIR Solenoid (L61)/Engine Cooling Fan 2 (LNF)

Windshield Wiper High/Low Speed

Starter

COOL FAN 2 (TURBO: COOL
FANS)
FUEL PUMP
WPR ON/OFF
COOL FAN 1
PWR/TRN
AIR PUMP
A/C CLTCH
CHMSL
RUN/CRNK

Engine Cooling Fan(L61, LE5)/ Engine Cooling Fans
(LNF)
Fuel Pump
Windshield Wiper On/Off
Engine Cooling Fan 1
Powertrain
AIR Pump
Air Conditioning Clutch
Center High Mount Stop Lamp
Run, Crank

Misc. Usage

PLR Fuse Puller

WARNING: Terminal and harness assignments for individual connectors will vary depending on vehicle equipment level, model, and market.