


Pontiac G8 2009 fuse box diagram

Instrument Panel Fuse Block

The instrument panel fuse block is located on the end of the instrument panel, on the driver side of the vehicle.

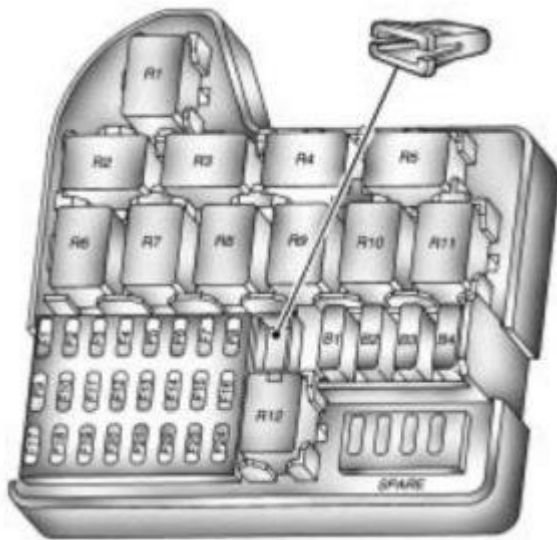

Pontiac G8 – fuse box – instrument panel

Fuses	Usage
F1	Airbag
F2	Trunk Release
F3	Door Locks
F4	Inadvertent Power LED
F5	Courtesy/Turn Signal Lamps/Front Passenger Turn Signal
F6	Rear and Side Passenger Side Turn Signal

F7	Spare
F8	Driver Side Turn Signal
F9	Body Control Module
F10	Stoplamps
F11	Interior Lamps
F12	Discrete Logic Ignition Sensor/Theft Deterrent System
F13	Rear Cigarette Lighter
F14	Auxiliary Power
F15	Outside Rearview Mirrors
F16	Sunroof/Automatic Transmission Shift Lock
F17	Sunroof
F18	Automatic Occupant Sensor
F19	Driver Side Heated Seat
F20	Passenger Side Heated Seat
F21	Daytime Running Lamps

F22	Front Cigarette Lighter
F23	Steering Wheel Controls Backlighting
F24	Power Window
FUSE PULLER	Fuse Puller


Circuit Breakers	Usage
B1	Spare
B2	Power Windows
B3	Power Seats
B4	Spare

Relayss	Usage
R1	Retain Accessory Power 1
R2	Door Locks
R3	Passenger Side Door Lock
R4	Spare

R5	Trunk Release
R6	Driver Side Lock
R7	Retain Accessory Power 2
R8	Accessory
R9	Blower
R10	Spare
R11	Daytime Running Lamps
R12	Fuel Pump

Engine Compartment Fuse Block

To open the fuse block cover, remove the clip on cover.

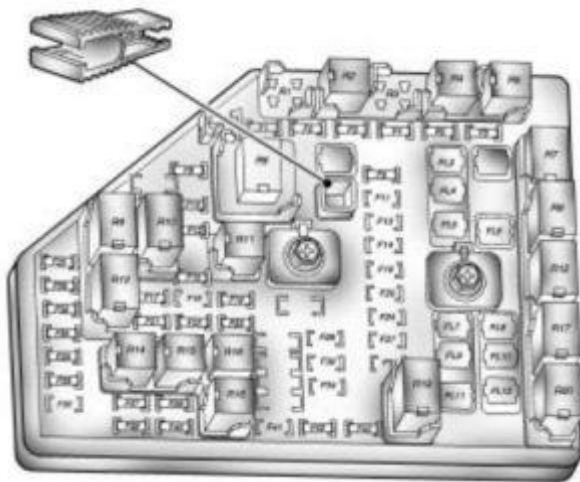

Pontiac G8 – fuse box – engine

compartment

Fuses	Usage
-------	-------

FL1	Spare
FL2	Rear Defog
FL3	ABS Motor
FL4	Battery Main 3
FL5	Battery Main 1
FL6	Spare
FL7	Battery Main 2
FL8	Starter
FL9	HVAC Blower Motor
FL10	Fan 1 Engine Cooling (Right)
FL11	Spare
F12	Fan 2 Engine Cooling (Left)
F1	Comm Enable
F2	HVAC Battery
F3	Back-up Lamp

F4	Fog Lamps (Front)
F5	ABS Valves
F6	Spare
F8	Horn
F9	Transmission Control Module
F10	Driver Side Low-Beam Headlamp
F11	Spare
F12	Passenger Side Low-Beam Headlamp
F13	Spare
F14	Spare
F15	Front Wiper
F16	Spare
F17	Theft Horn
F18	Spare
F19	Passenger Side High-Beam Headlamp

F20	Spare
F21	Windshield Washer
F22	Canister Vent Solenoid
F23	Driver Side High-Beam Headlamp
F24	Spare
F25	Reverse Lockout
F26	Spare
F27	Spare
F28	Engine Control Module 1
F29	Even Coils/Injectors
F30	Spare
F31	Spare
F32	Emission 2
F33	Emission 1
F34	Spare

F35	Odd Coils/Injectors
F36	Spare
F37	HVAC Ignition
F38	Heated Seats/ OnStar® Ignition
F39	Engine Ignition
F40	Airbags
F41	Spare
F42	Passenger Side Park Lamp
F43	Driver Side Park Lamp
FUSE PULLER	Fuse Puller


Relays	Usage
R1	Spare
R2	Comm Enable
R3	Spare

R4	Back-up Lamps
R5	Fog Lamp
R6	Low-Beam Headlamps
R7	Spare
R8	Defogger
R9	Windshield Wiper High
R10	Windshield Wiper Low
R11	High-Beam Headlamps
R12	Crank
R13	Powertrain
R14	Ignition Main
R15	Windshield Wiper
R16	Horn
R17	Fan 1 (Engine Cooling)
R18	Parking Lamps

R19	Fan 2 (Engine Cooling)
R20	Fan 3 (Engine Cooling)

Rear Compartment Fuse Block

The rear compartment fuse block is located on the left side of the trunk behind a cover.

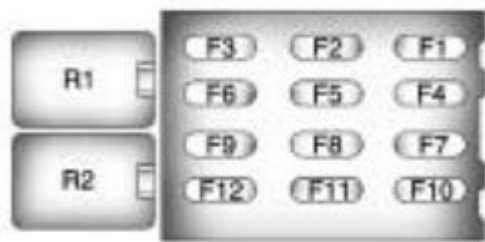

Pontiac G8 – fuse box – rear compartment

Fuses	Usage
F1	Spare
F2	Amplifier
F3	XM Radio™
F4	Radio
F5	Instrument/Display/ Remote Function Actuator/Data Link Connection
F6	Spare
F7	Trailer
F8	OnStar™

F9	Spare
F10	ECM Battery
F11	Regulated Voltage Control Sensor
F12	Fuel Pump

Relays	Usage
R1	Spare
R2	Spare