


Oldsmobile Bravada 1996 fuse box diagram

Instrument panel Fuse Block

The fuse block is under the instrument panel on the driver's side.

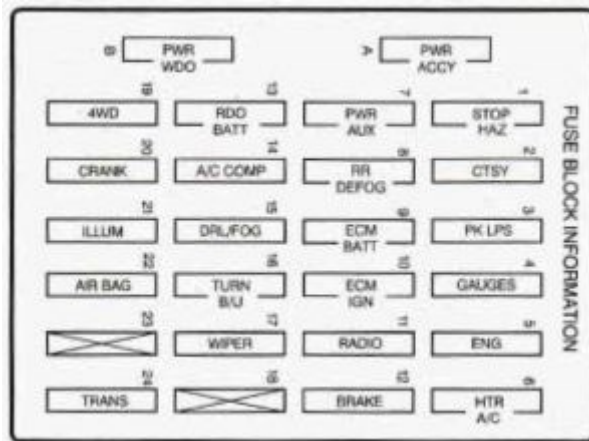

Oldsmobile Bravada – fuse box – instrument

panel

Fuse/Circuit Breaker	Usage
A	Power Door Locks, Power Seat, Power Seat Lumbar, Remote Keyless Entry
B	Power Windows
1	Stoplamps, Hazard Lamps, Chime, Center High-Mounted Stoplamp Relay, Center High-Mounted Stoplamp
2	Dome Lamps, Cargo Lamps, Visor Vanity Mirror, Cigarette Lighter, Inside Rearview Mirror Lamp, Overhead Console Lamps, Glove Box Lamp, Horns, Horn Relay, IP Courtesy Lamps, Power Outside Rearview Mirror, Liftglass Release Motor, Illuminated Entry Modul
3	Parking Lamps, License Plate Lamps, Underhood Lamp, Rear Wiper, Ashtray Lamp, Door Switch Lamp
4	Alternator Field, Compressor Relay, Cluster Chime Module, DRL Relay, Coil, DRL Module, Rear Defog Timer, Transfer Case Control Module Ignition, SIR Redundant Ignition, RKE Ignition
5	Oxygen Sensor Heater, Exhaust Gas Recirculation, Cam Sensor, CANN Purge, MAS
6	Blower Motor, Temperature Door Motor, HI Blower Relay Coil
7	Power Auxiliary Outlets, Assembly Line Diagnostic Link
8	Rear Window Defogger
9	PCM/VCM Battery, ABS Battery
10	PCM/VCM Ignition, Injectors, Crank Sensor, Coil Driver Module
11	Radio, Inside Rearview Mirror Map Lamp, Overhead Console Reading Lamps, Rear Wiper, Rear Washer, Overhead Console Display
12	DRAC, Anti-Lock Braking System, VCM IGN-3

13	Clock, Radio, Battery, CD Player
14	A/C Compressor Battery Feed
15	Daytime Running Lamps, Fog Lamps, Fog Lamp Relay
16	Turn Signal and Back-Up Lamps, Brake-Transmission Shift Interlock Solenoid
17	Windshield Washer, Windshield Wiper Motor
19	Not Used
20	Crank Signal, Air Bag System
21	Cluster illumination, Radio Illumination, Heater Lamp, Chime Module, Fog Lamp Illumination, Rear Wiper, Switch, Rear Defog Switch Illumination, Liftglass Release Switch Illumination, Overhead Console Illumination
22	Air Bag System
24	PRNDL Power, 4L60E Automatic Transmission