


Chevrolet Lumina 1996 fuse box diagram

Instrument Panel Fuse Block

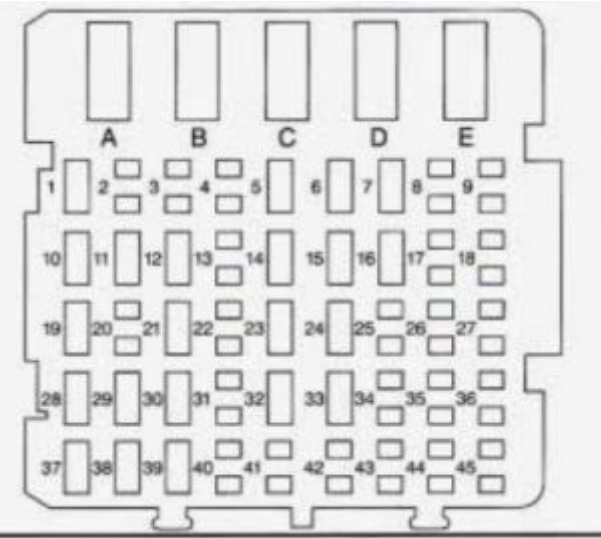


Chevrolet Lumina – fuse box – instrument panel

Circuit Breaker		Usage
C		Power Windows
D		Power Seats
Fuse	Description	
1	CIGAR LIGHTER — Instrument Panel and Console Cigar Lighter	
3	DRL MDL	
4	HVAC #2 — HVAC Control Assembly, Solenoid Box	
5	HAZARD FLASHER	
6	POWER ACCESSORY #2 — Sunroof Control Unit	
10	I/P ELECTRONICS BATTERY FEED — Chime Module, Electronic Brake Control Module (EBCM), Theft Deterrent Module, Radio	
11	STARTER RELAY	
12	ANTI-THEFT — Theft Deterrent Module	
13	ABS — Electronic Brake Control Module (EBCM), ABS Relay	
14	HVAC BLOWER MOTOR — Blower Motor Relay	
15	HVAC #1 — Air Temperature Valve Motor, Daytime Running Lamps Module (with DRL), HVAC Control Assembly, Multifunction Lever Cruise Control Switch	
16	REAR DEFOG — HVAC Control Assembly Rear Window Defogger Switch	
19	POWER ACCESSORY #1— Trunk Courtesy Lamp, Door Lock Switches, Power Mirror Switch	
21	AIR BAG — Air Bag System	
23	STOPLAMPS — TCC/Brake Switch	
24	CRUISE CONTROL	
28	CTSY LAMPS — Vanity Mirrors, Defogger Relay, I/P Compartment Lamp, Header Courtesy and Reading Lamp, I/S Lighted Rearview Mirror, Dome Lamp	
29	WIPER — Wiper Switch	
30	TURN SIGNAL — Turn Signal Flasher	
32	POWER LOCKS — Door Lock Relay, Keyless Entry Receiver	

38	RADIO — Radio, Steering Wheel Radio Switches
39	I/P ELECTRONICS IGNITION FEED — Headlamp Switch, Cruise Control Cut-Out Switch, Sensing and Diagnostic Module (SDM), TCC/Brake Switch, Instrument Cluster, Chime Module, Keyless Entry Receiver

Underhood Electrical Center – Passenger Side

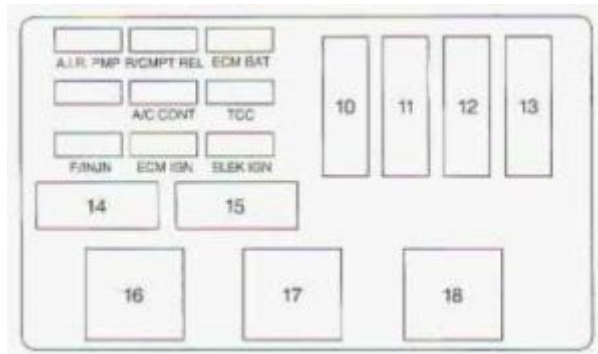


Chevrolet Lumina – fuse box – passenger side

underhood electrical center

Fuse	Description
A.I.R. PMP	A.I.R. Relay
R/CMPT REL	Remote Trunk Release, Back-Up Lamps
ECM BAT	Powertrain Control Module (PCM), Fuel Pump, Fuel Pump Relay, Fan Cont #1 Relay
A/C CONT	A/C CMPR Relay (VIN M only)
TCC	Automatic Transaxle, Transaxle Range Switch (VIN M only)
F/INJN	Fuel Injectors
ECM IGN	Powertrain Control Module (PCM), Mass Air Flow (MAF) Sensor (VIN X only), EGR, CCP, Oxygen Sensor, VAC CAN SW, Fan #2 Relay
ELEK IGN	Electronic Ignition (EI) Control Module
10	I/P Fuse Block
11	FAN CONT #1 Relay
12	Passenger Side Underhood Electrical Center and I/P Fuse Blocks: Fuses 5, 14, 23 and 32
13	FAN CONT #2 Relay and I/P Fuse Block: Fuse 16, Power Seat Circuit Breaker “D”
Relay	Description
14	FUEL PUMP
15	A/C CMPR
16	FAN CONT #2 — Secondary Cooling Fan (Passenger Side)

17	FAN CONT #1– Primary Cooling Fan (Driver Side)
18	Ignition Relay

Underhood Electrical Center — Driver Side

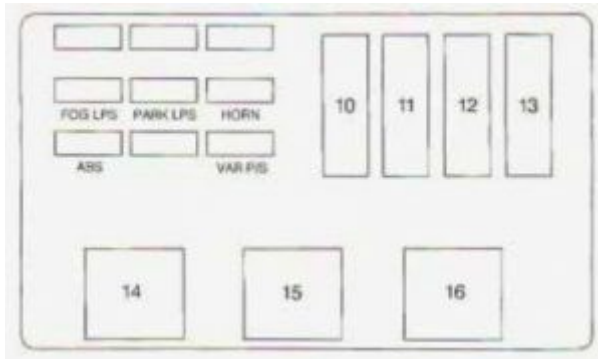

Chevrolet Lumina – fuse box – driver side

underhood electrical

Fuse	Usage
FOG LPS	Fog Lamps
PARK LPS	Headlamp Switch
HORN	Horn Relay, Underhood Lam
VAR P/S	Steering
ABS	Anti-Lock Brake System
10	IGN SW2 — VP Fuse Block: PWR WDO and Circuit Breaker “D”; Passenger Side Underhood Electrical Center: TCC and ENG EMIS Fuses
11	IGN SW1 — VP Fuse Block: Radio, Wiper, HVAC, ABS and Turn Signal Fuses; Passenger Side Underhood Electrical Center: F/IJN, ECM IGN and ELEK IGN Fuses
12	HD LPS — Circuit Breaker to Headlamp Switch
13	ABS — ABS Relay
Relay	Description
14	ABS — Anti-Lock Brake System
16	HORN