


Rear Window Defogger

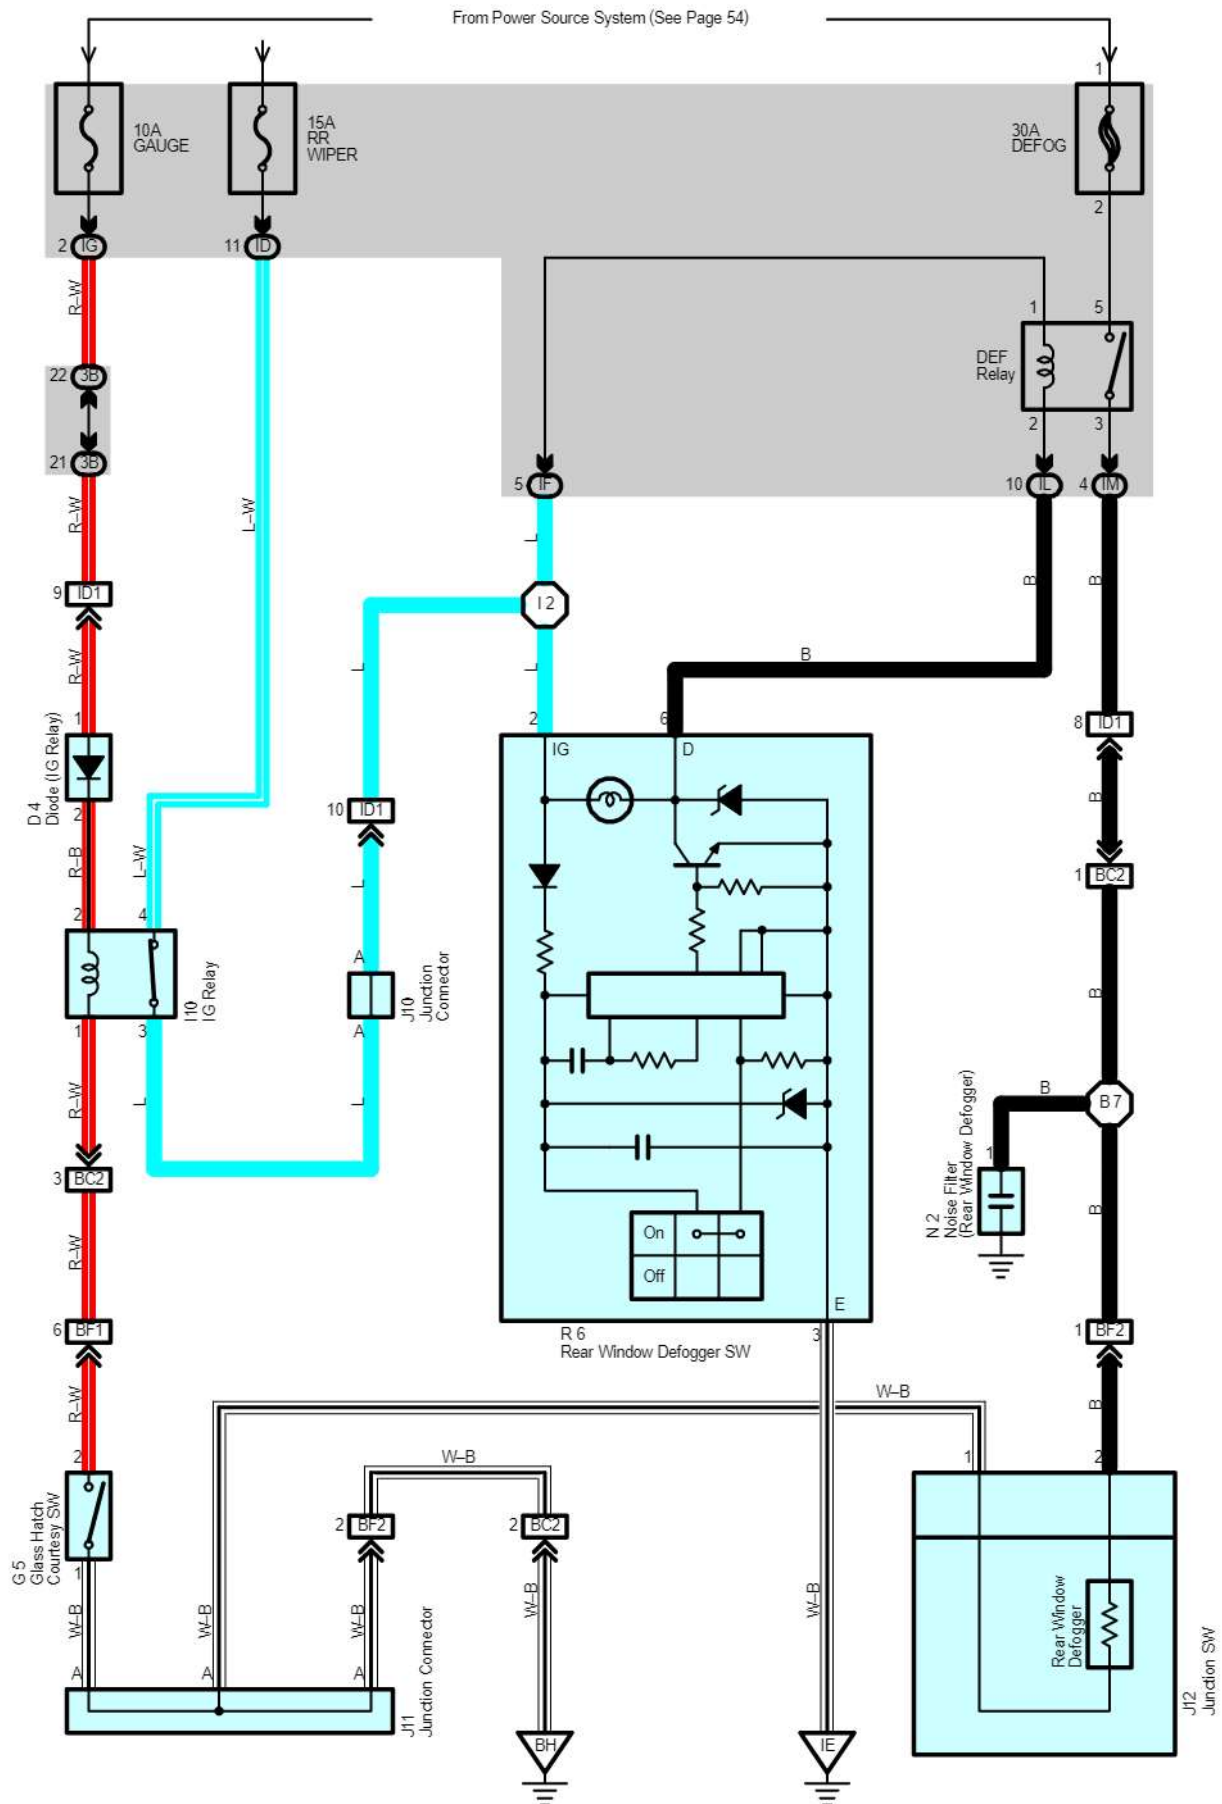

Service Hints

DEF Relay

5-3 : Closed with the ignition SW at ON position, glass hatch closed and the rear window defogger SW on

: Parts Location

Code	See Page	Code	See Page	Code	See Page
D4	38	J10	40	N2	41
G5	40	J11	40	R6	39
I10	39	J12	40		

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
ID	25	Floor Wire and Instrument Panel J/B (Lower Finish Panel)
IF	25	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
IG		
IL		
IM	24	
3B	29	Instrument Panel Wire and RH J/B (Right Side of the Instrument Panel Reinforcement)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ID1	46	Instrument Panel Wire and Floor Wire (Left Kick Panel)
BC2	50	Back Door No.1 Wire and Floor Wire (Left Quarter Panel)
BF1	50	Back Door No.1 Wire and Back Door No.2 Wire (Back Panel LH)
BF2		

: Ground Points

Code	See Page	Ground Points Location
IE	46	Behind Combination Meter
BH	50	Left Quarter Panel

: Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I2	48	Instrument Panel Wire	B7	50	Back Door No.1 Wire