


Pontiac Firebird 1995 fuse box diagram

Instrument Panel Fuse Block

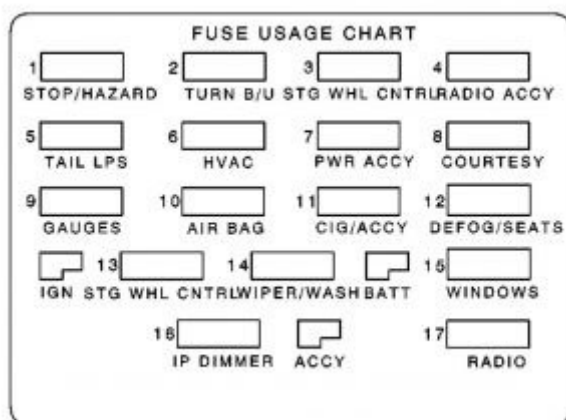


Pontiac Firebird – fuse box – instrument panel

Fuses	Usage
1 AIR BAG	SIR Components
2 TURN B-U	Backup Lamps; Daytime Running Lamps Module (Canada); Turn Flasher; Transmission Range Switch; Traction Control Switch
3 HVAC	Heat Control Selector Switch (Heated Air Conditioner); Rear Defogger
4 RADIO ACCY	Power Antenna; Disc Changer
5 PCM IGN	Powertrain Control Module; Fuel Pump Relay; Theft Deterrent Module; Engine Mass Air Flow Sensor (V8 Engine)
6 STOP/HAZARD	Brake Light/Cruise Release Switch; Hazard Flasher
7 PWR ACCY	Power Door Locks; Power Mirrors; Hatch Release Switch; Auxiliary Accessory Wire
8 COURTESY	Audio Alarm Module; Courtesy Lamps: Console Compartment, Glove Box, Dome, Trunk, Rear Courtesy, Rearview Mirror; Radio; Theft Deterrent Module; SECURITY Indicator; Hatch Release Relay; Keyless Entry Receiver
9 GAGES	Audio Alarm Module; Daytime Running Lamps Module (Canada); Diagnostic Energy Reserve Module; Instrument Cluster; Keyless Entry Receiver; Brake Switch Assembly; Auxiliary Accessory Wire
10 TAIL LTS	Exterior Lighting
11 CIGAR/HORN	Cigarette Lighter; Horn Relay; Data Link Connector
12 DEFOG/BEATS	Power Seats; Rear Defogger
13 IP DIMMER	Brightness Control
14 WIPEWASH	Windshield Wiper/Masher
15 WINDOWS	Power Windows, Convertible Top Switch (Circuit Breaker); Cooling Level Latching Module

16	CRANK	Diagnostic Energy Reserve Module
17	RADIO	Radio Amplifier; Steering Wheel Controls

Underhood Electrical Center

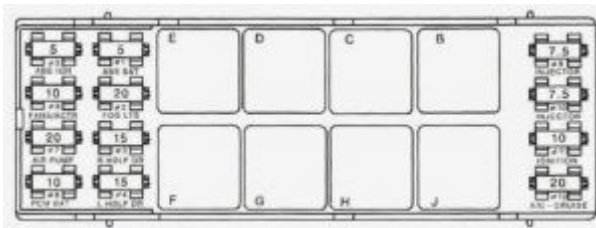

Pontiac Firebird – fuse box – engine compartment

Fuse	Ampere rating [A]	Usage
1 ABS BAT	5	Electronic Brake Control Module
2 FOG LTS	20	Fog Lamps
3 R HDLP DR	15	Headlamp Doors Module
4 L HDLP DR	15	Headlamp Doors Module
5 ABS IGN	5	Anti-Lock Brake System
6 FANS/ACTR	10	Coolant Fan Relays; EVAP Canister Purge Solenoid; Exhaust Gas Recirculation; Reverse Lockout Solenoid; Skip Shift Solenoid; Heated Oxygen Sensors (V8 Engine)
7 AIR PUMP	20	Air Pump Relay
8 PCM	10	Powertrain Control Modul
9 INJECTOR	7,5	Fuel Injectors
10 INJECTOR	7,5	Fuel Injectors
11 IGNITION	10	VIN Engine Code S: Camshaft Position Sensor; Crankshaft Position Sensor; Ignition Control Module; Automatic Transmission; Ignition Coil (V-8 Engine); Ignition Coil Module (V-8 Engine)
12 A/C-CRUISE	20	Air Conditioning Compressor Relay; Cruise Control Switches and Module

Relay	Usage
B	Air Conditioning Compressor
C	Anti-Lock Brake System
D	Coolant Fan Number 1
E	AIR Pump
F	Coolant Fan Number 2
G	Traction Control System
H	Fog Lamps
J	Cooling Fan Number 3

