


Chevrolet Suburban 2002 fuse box diagram

Instrument panel fuse block

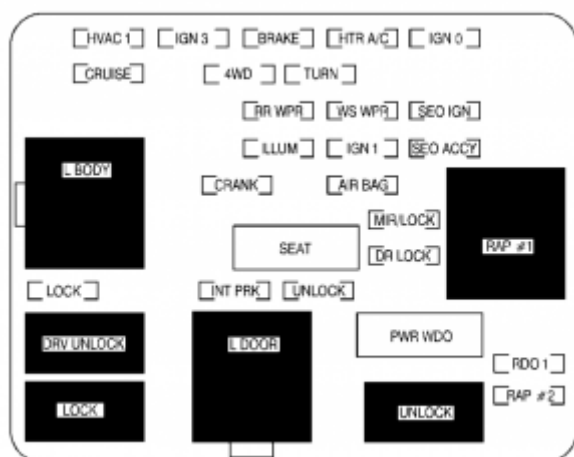


Chevrolet Suburban – fuse box – instrument panel

Name	Circuit protected
HVAC 1	Climate Control System
IGN 3	Ignition, Power Seats
BRAKE	Anti-Lock Brake System
HTR A/C	Climate Control System
IGN 0	PRND321 Display, Odometer, PCM
CRUISE	Cruise Control, Instrument Cluster
4WD	Four-Wheel Drive System, Auxiliary Battery
TURN	Exterior Lamps, Turn Signals, Hazard Lamps
RR WIPER	Rear Window Wiper
WS WPR	Windshield Wipers
SEO IGN	Special Equipment Option, Ignition, OnStar
ILLUM	Interior Lamps
IGN 1	Ignition, Instrument Panel
SEO ACCY	Special Equipment Option Accessory, Cellular Telephone
L BODY	Retained Accessory Power Relay
CRANK	Starting System
AIR BAG	Air Bag
MIR/LOCK	Power Mirrors, Power Door Locks
SEAT	Power Seat Circuit Breaker
DR LOCK	Power Door Locks
RAP #1	Retained Accessory Power Relay
LOCK	Power Door Locks
INT PRK	Interior Lamps
UNLOCK	Power Door Locks
DRV UNLOCK	Power Door Lock Relay

L DOOR	Power Door Lock Relay
PRW WDO	Power Window Circuit Breaker
RDO 1	Audio System, OnStar
RAP #2	Rear Power Windows, Sunroof, Radio, OnStar
LOCK	Power Door Lock Relay
UNLOCK	Power Door Lock Relay

Center Instrument Panel Utility Block

The center instrument panel utility block is located underneath the instrument panel, to the left of the steering column.

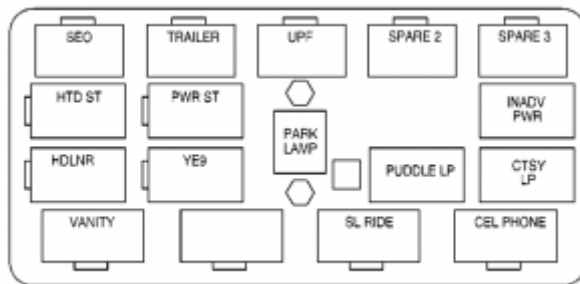


Chevrolet Suburban – fuse box – center

instrument panel utility

Relay Name	Circuit protected
SEO	Special Equipment Option
HTD ST	Heated Seats
SPARE	Not Used
VANITY	Headliner Wiring
TRAILER	Trailer Brake Wiring
PWR ST	Power Seats
SPARE	Not Used
UPF	Upfitter
PARK LAMP	Parking Lamps (Relay)
FRT PRK EXPT*	Not Used
SPARE 2	Not Used
PUDDLE LP	Puddle Lamps
SL RIDE	Not Used
SPARE 3	Not Used
INADAV PWR	Interior Lights Feed (Relay)
CTSY LP	Courtesy Lamps (Relay)
CEL PHONE	Cellular Telephone Wiring

Underhood Electrical Center

The underhood electrical center is located on the driver's side of the engine compartment near the battery.

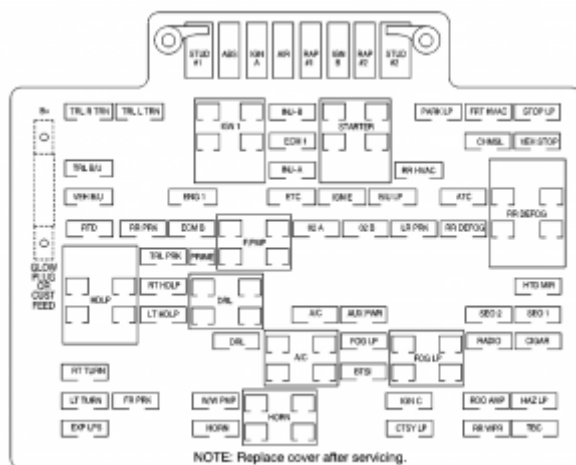

Chevrolet Suburban – fuse box – underhood

electrical center

Name	Circuit protected
STUD #1	Accessory Power/Trailer Wiring Feed/Load Leveling
ABS	Anti-Lock Brakes
IGN A	Ignition Switch
AIR	A.I.R. System
RAP #1	Retained Accessory Power, Power Mirrors, Power Door Locks, Power Seat(s)
IGN B	Ignition Switch
RAP #2	Retained Accessory Power/Rear Power Windows, Sunroof, Radio
STUD #2	Accessory Power/Trailer Wiring Brake Feed
TRL R TRN	Right Turn Signal Trailer Wiring
TRL L TRN	Left Turn Signal Trailer Wiring
IGN 1	Ignition, Fuel Controls
INJ B	Ignition, Fuel Controls (Relay)
STARTER	Starter (Relay)
PARK LP	Parking Lamps
FRT HVAC	Climate Control System
STOP LP	Exterior Lamps, Stoplamps
ECM 1	PCM
CHMSL	Center High Mounted Stoplamp
VEH STOP	Stoplamps, Cruise Control
TRL B/U	Backup Lamps Trailer Wiring
INJ A	Fuel Controls, Ignition
RR HVAC	Rear HVAC
VEH B/U	Vehicle Backup Lamps
ENG 1	Engine Controls, Canister Purge, Fuel System
ETC	Electronic Throttle Control
IGN E	A/C Compressor Relay, Rear Window Defogger, Daytime Running Lamps, A.I.R. System
B/U LP	Backup Lamps, Automatic Transmission Shift Lock Control System
ATC	Automatic Transfer Case

RR DEFOG	Rear Window Defogger, Heated Mirrors (Relay)
RTD	Autoride (Real Time Damping)
RR PRK	Right Rear Parking Lamps
ECM B	PCM
F/PMP	Fuel Pump (Relay)
O2 A	Oxygen Sensors
O2 B	Oxygen Sensors
LR PRK	Left Rear Parking Lamps
RR DEFOG	Rear Window Defogger, Heated Mirrors
HDLP	Headlamps (Relay)
TRL PRK	Parking Lamps Trailer Wiring
PRIME	Not Used
RT HDLP	Right Headlamps
DRL	Daytime Running Lamps (Relay)
HTD MIR	Heated Mirrors
LT HDLP	Left Headlamps
A/C	Air Conditioning
AUX PWR	Cigarette Lighter, Auxiliary Power Outlets
SEO 2	Special Equipment Option Power, Power Seats, Aux Roof Mnt Lamp
SEO 1	Special Equipment Option Power, Aux Roof Mnt Lamp, Cell Phone, Onstar
DRL	Daytime Running Lamps
A/C	A/C (Relay)
FOG LP	Fog Lamps
FOG LP	Fog Lamps (Relay)
RADIO	Audio System, Instrument Cluster, Climate Control System
CIGAR	Cigarette Lighter, Auxiliary Power Outlets
RT TURN	Right Turn Signals
BTSI	Automatic Transmission Shift Lock Control System
LT TURN	Left Turn Signals
FR PRK	Front Parking Lamps, Sidemarker Lamps
W/W PMP	Windshield Washer Pump
HORN	Horn (Relay)
IGN C	Ignition Switch, Fuel Pump, PRND321 Display, Crank
RDO AMP	Radio Amplifier
HAZ LP	Exterior Lamps, Hazard Lamps
EXP LPS	Not Used
HORN	Horn
CTSY LP	Interior Lamps
RR WPR	Rear Wipers
TBC	Body Control Module, Remote Keyless Entry, Headlamps