
ALPHABETICAL INDEX



A		Page
ABBREVIATIONS USED IN THIS MANUAL (TERMS)		IN-25
ACCELERATOR PEDAL		ED-17
AIR FILTER		EM-1
AIR FLOW METER		ED-7
ALTERNATOR		CH-5
C		
CAMSHAFT POSITION SENSOR		ED-15
CATALYTIC CONVERTER FOR OXIDATION (CCo) SYSTEM		EC-9
CHARGING (PREPARATION)		PP-30
CHARGING (SERVICE SPECIFICATIONS)		SS-22
CHARGING SYSTEM		CH-1
CIRCUIT INSPECTION (ENGINE) (DIAGNOSTICS)		DI-22
COMMON RAIL		FU-21
COMPRESSION		EM-2
COOLANT		CO-1
COOLING (PREPARATION)		PP-18
COOLING (SERVICE SPECIFICATIONS)		SS-16
COOLING FAN RELAY		CO-25
CRANKSHAFT POSITION SENSOR		ED-16
CUSTOMER PROBLEM ANALYSIS CHECK (ENGINE) (DIAGNOSTICS)		DI-3
CYLINDER BLOCK		EM-53
CYLINDER HEAD		EM-24
D		
DIAGNOSTIC TROUBLE CODE CHART (ENGINE) (DIAGNOSTICS)		DI-14
DIESEL THROTTLE		ED-3
E		
ECD MAIN RELAY		ED-9
ECD SYSTEM		ED-1
EFI MAIN RELAY		ED-8
ELECTRIC COOLING FAN		CO-20
ELECTRONIC CONTROL DIESEL (PREPARATION)		PP-13
ELECTRONIC CONTROL DIESEL (SERVICE SPECIFICATIONS)		SS-12
ELECTRONIC DRIVING UNIT (EDU)		ED-18
EMISSION CONTROL (PREPARATION)		PP-11
EMISSION CONTROL (SERVICE SPECIFICATIONS)		SS-10
ENGINE (DIAGNOSTICS)		DI-1
ENGINE ECU		ED-19
ENGINE FUEL (PREPARATION)		PP-15
ENGINE FUEL (SERVICE SPECIFICATIONS)		SS-14
ENGINE MECHANICAL (PREPARATION)		PP-1
ENGINE MECHANICAL (SERVICE SPECIFICATIONS)		SS-4
ENGINE SERIAL NUMBER (IDENTIFICATION INFORMATION)		IN-3
EXHAUST GAS RECIRCULATION (EGR) SYSTEM		EC-4
F		
FOR ALL OF VEHICLES		IN-8
FUEL FILTER		FU-1
FUEL HEATER		FU-3
FUEL PRESSURE LIMITER		FU-24
FUEL PRESSURE SENSOR		ED-13
FUEL TEMPERATURE SENSOR		ED-11
G		
GENERAL INFORMATION (HOW TO TROUBLESHOOT ECU CONTROLLED SYSTEMS)		IN-9
GENERAL INFORMATION (HOW TO USE THIS MANUAL)		IN-1
GENERAL INFORMATION (REPAIR INSTRUCTIONS)		IN-4
H		
HOW TO PROCEED WITH TROUBLESHOOTING (ENGINE) (DIAGNOSTICS)		DI-1
HOW TO PROCEED WITH TROUBLESHOOTING (HOW TO TROUBLESHOOT ECU CONTROLLED SYSTEMS)		IN-10
HOW TO TROUBLESHOOT ECU CONTROLLED SYSTEMS		IN-9
HOW TO USE THE DIAGNOSTIC CHART AND INSPECTION PROCEDURE (HOW TO TROUBLESHOOT ECU CONTROLLED SYSTEMS)		IN-20
HOW TO USE THIS MANUAL		IN-1
I		
IDENTIFICATION INFORMATION		IN-3
IDLE SPEED AND MAXIMUM SPEED		EM-10
INJECTOR		FU-4
INTAKE AIR TEMPERATURE SENSOR		ED-12
INTERCOOLER		TC-20
L		
LUBRICATION (PREPARATION)		PP-22
LUBRICATION (SERVICE SPECIFICATIONS)		SS-18
O		
OIL AND FILTER		LU-1
OIL COOLER		LU-18
OIL NOZZLE AND OIL JET PRESSURE VALVE		LU-22
OIL PUMP		LU-4
P		
PARTS LAYOUT AND SCHEMATIC DRAWING		EC-1
PARTS LOCATION (ENGINE) (DIAGNOSTICS)		DI-16
POSITIVE CRANKCASE VENTILATION (PCV) SYSTEM		EC-3
PRE-CHECK (ENGINE) (DIAGNOSTICS)		DI-4
PRE-HEATING SYSTEM		ST-1
PRECAUTION (FOR ALL OF VEHICLES)		IN-8
PROBLEM SYMPTOMS TABLE (ENGINE) (DIAGNOSTICS)		DI-19

ALPHABETICAL INDEX (R – W)

R

	Page
RADIATOR	CO-13
REPAIR INSTRUCTIONS	IN-4

S

STANDARD BOLT (SERVICE SPECIFICATIONS)	SS-1
STARTER	ST-3
STARTER RELAY	ST-14
STARTING (PREPARATION)	PP-27
STARTING (SERVICE SPECIFICATIONS)	SS-20
SUPPLY PUMP	FU-13

T

TERMINALS OF ECU (ENGINE)	
(DIAGNOSTICS)	DI-17
TERMS	IN-25
THERMOSTAT	CO-9
TIMING BELT	EM-11
TROUBLESHOOTING	TC-1
TURBO PRESSURE SENSOR	ED-14
TURBO PRESSURE SENSOR	TC-21
TURBOCHARGER	TC-2
TURBOCHARGING (PREPARATION)	PP-8
TURBOCHARGING (SERVICE SPECIFICATIONS) ...	SS-8

V

VALVE CLEARANCE	EM-4
VSV FOR TURBOCHARGING PRESSURE	
CONTROL	TC-23

W

WATER PUMP	CO-4
WATER TEMPERATURE SENSOR	ED-10
WATER TEMPERATURE SWITCH	CO-24