

Citroen C-ZERO (from 2010) – fuse box diagram

Year of production: 2010, 2011, 2012, 2013, 2014, 2015, 2016

Fuse box under dashboard

The fusebox is place in the lower dashboard (right-hand side).

Fuse	Ampere rating [A]	Functions
1	7,5	Left hand front and rear sidelamps
2	15	Accessory socket
3	—	Not used
4	7,5	Starter motor
5	20	Audio system
6	—	Not used
7	7,5	Vehicle equipment, right hand front and rear sidelamps
8	7,5	Electric door morrors
9	7,5	Supervisor controller
10	7,5	Air conditioning
11	10	Rear foglamp
12	15	Door locking
13	10	Courtesy lamp
14	15	Rear wiper
15	7,5	Instrument panel
16	7,5	Heating
17	20	Heated seat
18	10	Option
19	7,5	Door mirror heating
20	20	Windscreen wiper
21	7,5	Airbags
22	30	Heated rear screen
23	30	Heating
24	—	Not used
25	10	Radio
26	15	Passenger compartment fuse

Front compartment fuse

The fusebox is placed in the front compartment under the heating system reservoir.
Only these fuses can be replaced.

Fuse	Ampere rating [A]	Functions
------	-------------------	-----------

1	—	Not used
2	30	Internal fuse
3	40	Electric motor
4	40	Radiator fan
5	40	Electric windows
6	30	Vacuum pump
7	15	Main battery ECU
8	15	Third brake lamp
9	15	Front foglamps
10	15	Water pump
11	10	On-board charger
12	10	Direction indicator
13	10	Horn
14	10	Daytime running lamps
15	15	Battery fan
16	10	Air conditioning compressor
17	20	Right hand dipped beam
18	20	Left hand dipped beam, headlamp adjusters
19	10	Right hand main beam
20	10	Left hand main beam

WARNING: Terminal and harness assignments for individual connectors will vary depending on vehicle equipment level, model, and market.