


Mercury Villager 1999 – 2002 fuse box diagram

Passenger Compartment Fuse Box

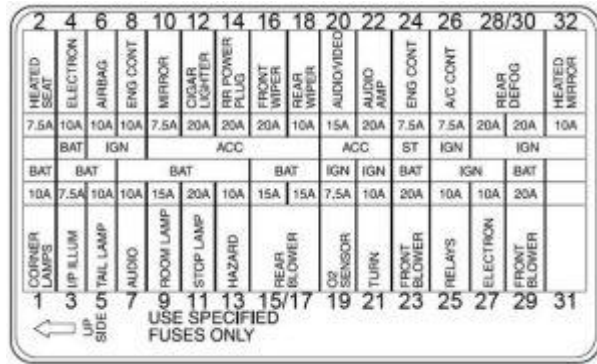

Mercury Villager – fuse box diagram – passenger compartment

Nº	Fuse	A	Description
1	Corner Lamps	10	Front Exterior Lamps
2	Heated Seat	7.5	Heated Seats
3	I/P Illum	7.5	Interior Panel Illumination Lamps


4	Electron	10	Transaxle Control Module (TCM), Electronic Automatic Temperature Control (EATC) Module, Instrument Cluster, Rear Wiper Motor Assembly
5	Tail Lamp	10	Rear Exterior Lamps
6	Air Bag	10	Airbag Diagnostic Monitor
7	Audio	10	Radio, Rear Radio Control, CD Changer
8	Eng Cont	10	Powertrain Control Module, Oxygen Sensors
9	Room Lamp	15	Interior Lamps
10	Mirror	7.5	Smart Entry Control (SEC), Power Mirror Switch
11	Stop Lamp	20	Brake Pedal Position (BPP) Switch, Trailer Tow Control Unit

12	Cigar Lighter	20	Cigar Lighter
13	Hazard	10	Hazard Warning Flasher Switch, Anti-Theft Indicator
14	RR Pwr Plug	20	Rear Powerpoint
15	Rear Blower	15	Rear Blower Motor Relay, Rear Blower Motor
16	Wiper	20	Front Wiper/Washer Assembly
17	Rear Blower	15	Rear Blower Motor Relay, Rear Blower Motor
18	Rear Wiper	10	Rear Wiper/Washer Assembly
19	O2 Sensor	7.5	Oxygen Sensor
20	Audio	7.5	'99-'00: Radio

	Audio/Video	15	'01-'02: Radio/Video System
21	Turn	10	Hazard Warning Flasher Switch
22	Audio Amp	20	Subwoofer Amplifier
23	Front Blower	20	Front Blower Motor, Front Blower Motor/Speed Controller
24	Eng Cont	7.5	Powertrain Control Module, Lighting Control Module
25	Relays	10	Speed Control, Instrument Cluster, Rear Blower Motor, Data Link Connector #2, Cooling Fans
26	A/C Cont	7.5	Electronic Automatic Temperature Control (EATC) Module, A/C Relay, Front Climate Control Panel
27	Electron	10	Transmission Control, Lighting Control Module, ABS Control Module, Smart Entry Control (SEC)/Timer Module

28	Rear Defog	20	Rear Window Defrost
29	Front Blower	20	Front Blower Motor, Front Blower Motor/Speed Controller
30	Rear Defog	20	Rear Window Defrost
31	—	—	Not Used
32	Heated Mirror	10	Rear Window Defrost Switch, Power/Heated Mirrors

Engine compartment main fuse panel

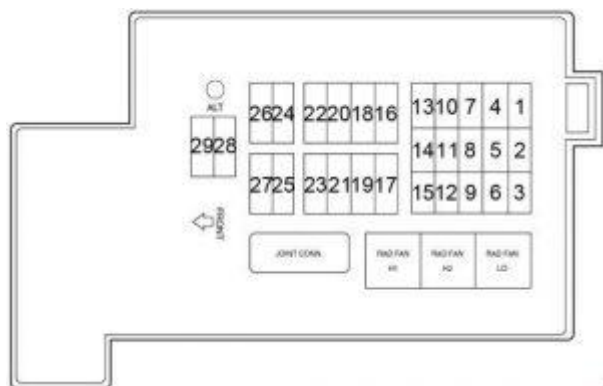

Mercury Villager – fuse box diagram – engine compartment

Nº	Fuse	A	Description
1	FOG LAMP	7.5	'01-'02: Fog Lamps
2	FUEL PUMP	15	Fuel Pump Relay
3	INJ	10	Powertrain Control Module (PCM), Injectors
4	SEC	7.5	Anti-Theft Relay, Smart Entry Control (SEC)/Timer Module
5	RAD	7.5	Radiator Fan Sensing
6	ECCS	10	Data Link Connector (DLC) #1, PCM Power Relay
7	—	—	Not Used
8	—	—	Not Used

9	ALT	10	Generator
10	ABS	20	ABS Control Module
11	—	—	Not Used
12	H/L RH	15	Lighting Control Module
13	HORN	15	Horn Relay
14	—	—	Not Used
15	H/L LH	15	Lighting Control Module
16	—	—	Not Used
17	—	—	Not Used

18	ABS	40	ABS Control Module
19	—	—	Not Used
20	PWR WND	30	Power Window Relay, Smart Entry Control (SEC)/Timer Module, Power Seats
21	RAD FAN LO	20	Low Speed Fan Control Relay
22	—	—	Not Used
23	IGN SW	30	Ignition Switch
24	—	—	Not Used
25	RAD FAN	75	High Speed Fan Control Relay
26	FR BLW	65	Front Blower Motor Relays

27	RR DEF	45	Rear Window Defroster Relay
28	ALT	140	Accessory Relay, Ignition Relay, Tail Lamp Relay, Fuse Junction Panel
29	MAIN	100	Generator

Additional Relay Box

1	2	3	4		
			5	6	7

Mercury Villager – fuse box diagram – additional relay box

Nº	Relay
1	Start Inhibit
2	Fuel Pump
3	Bulb Check

4	'99-'00: Speed Control Hold
	'01-'02: Fog Lamp
5	Anti-theft
6	Horn
7	A/C