



F RELAY LOCATIONS

[Engine Compartment] (LHD)

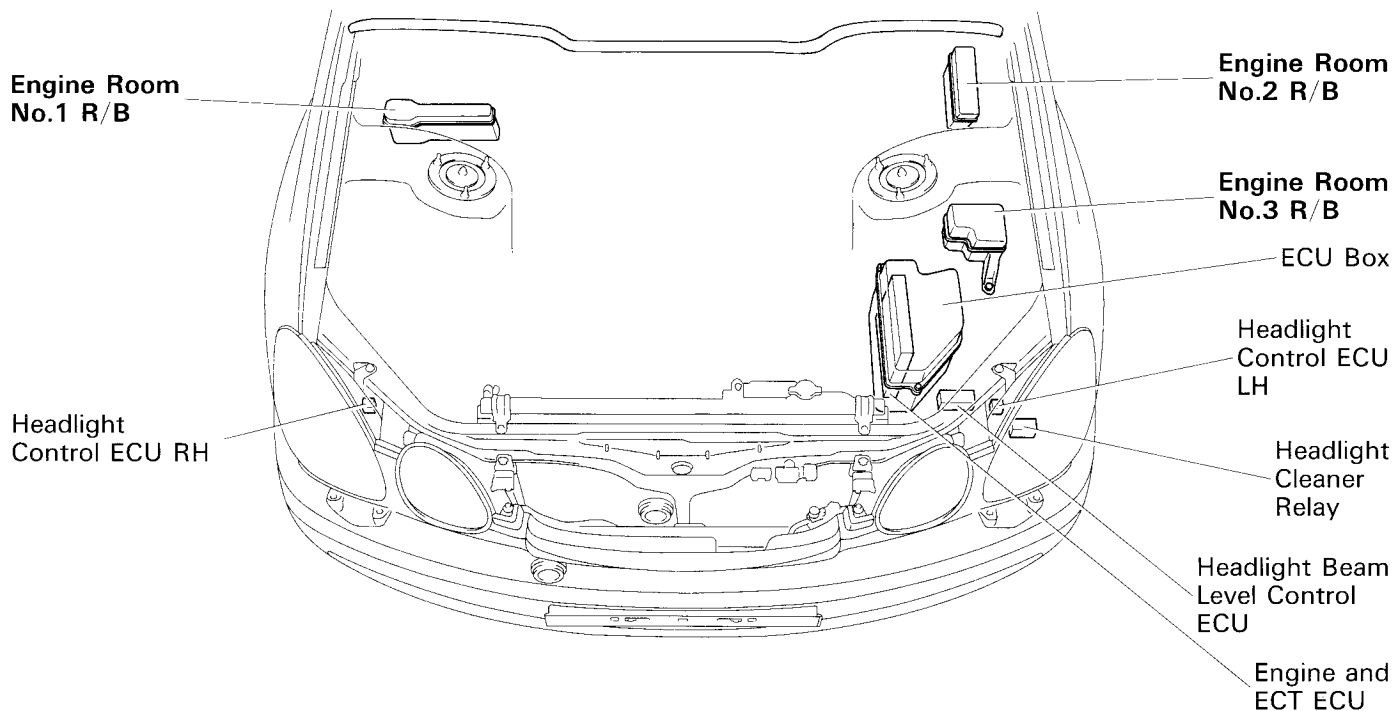


(RHD)

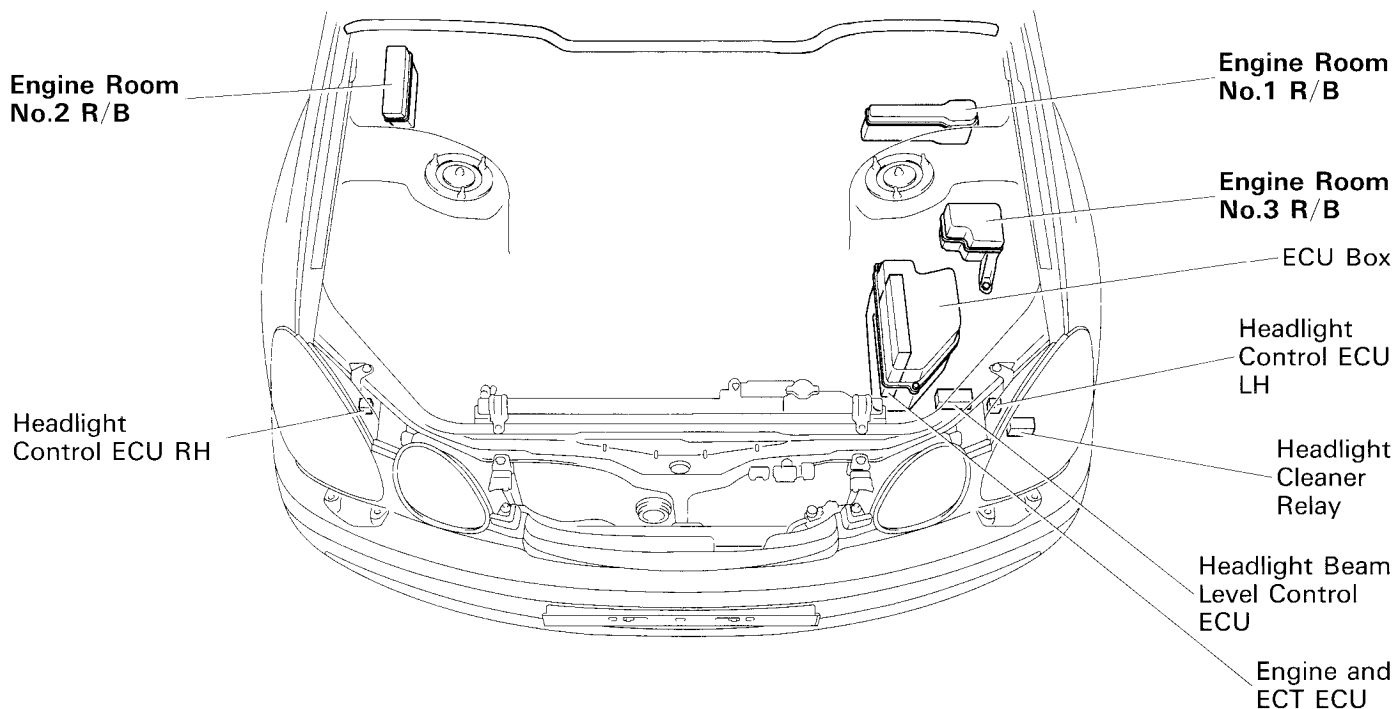


[Instrument Panel]

(LHD)

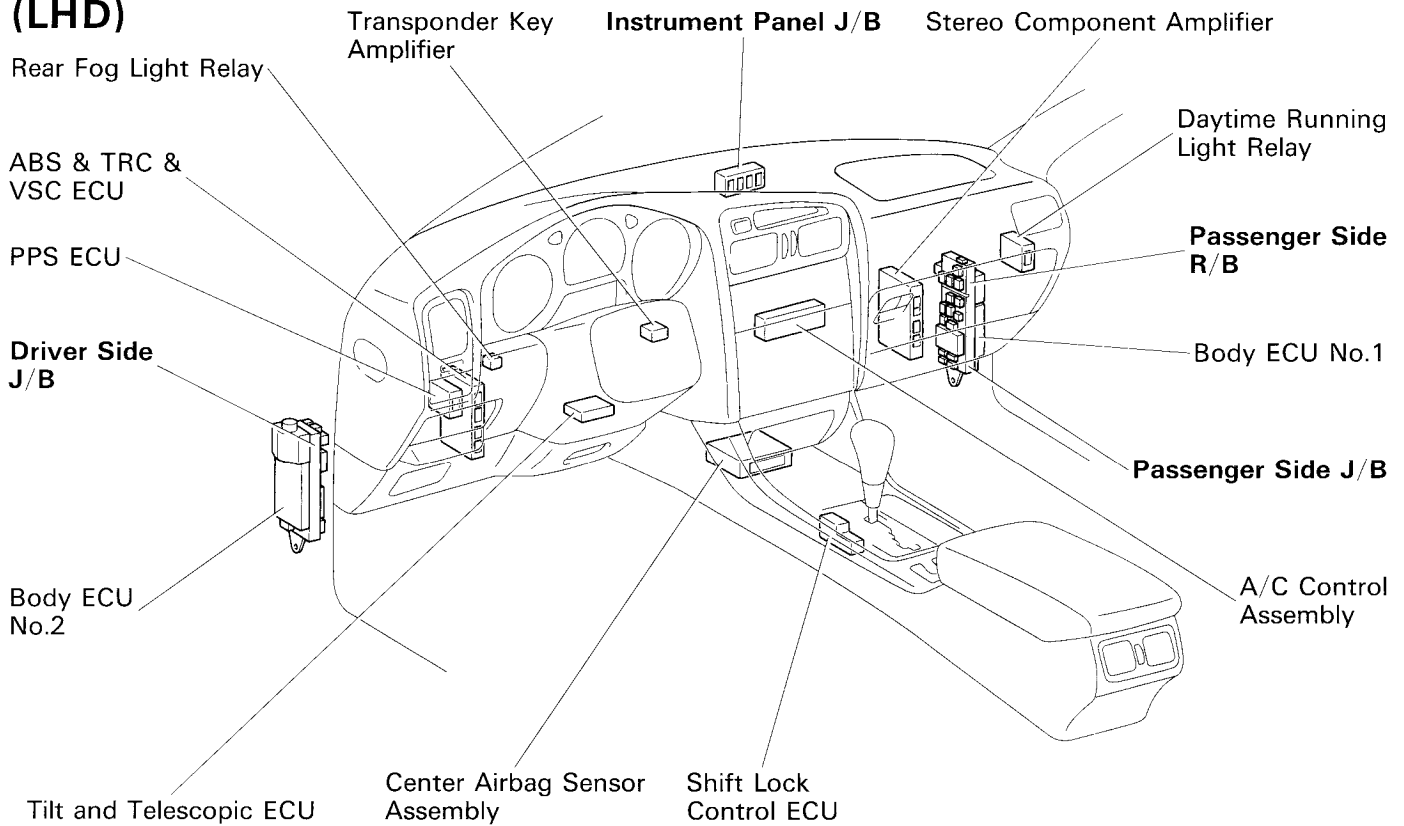


English


(RHD)

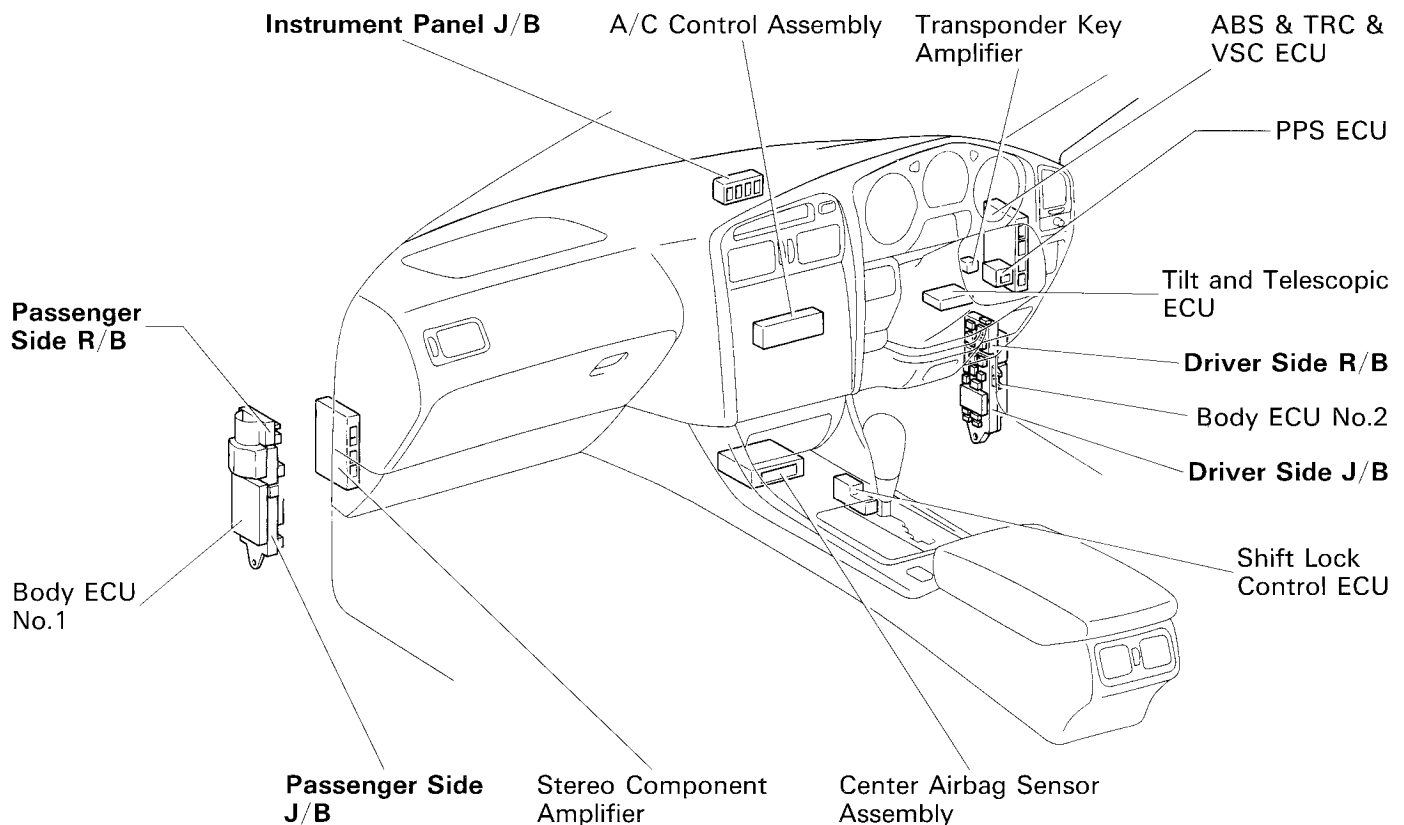

F RELAY LOCATIONS

[Body]

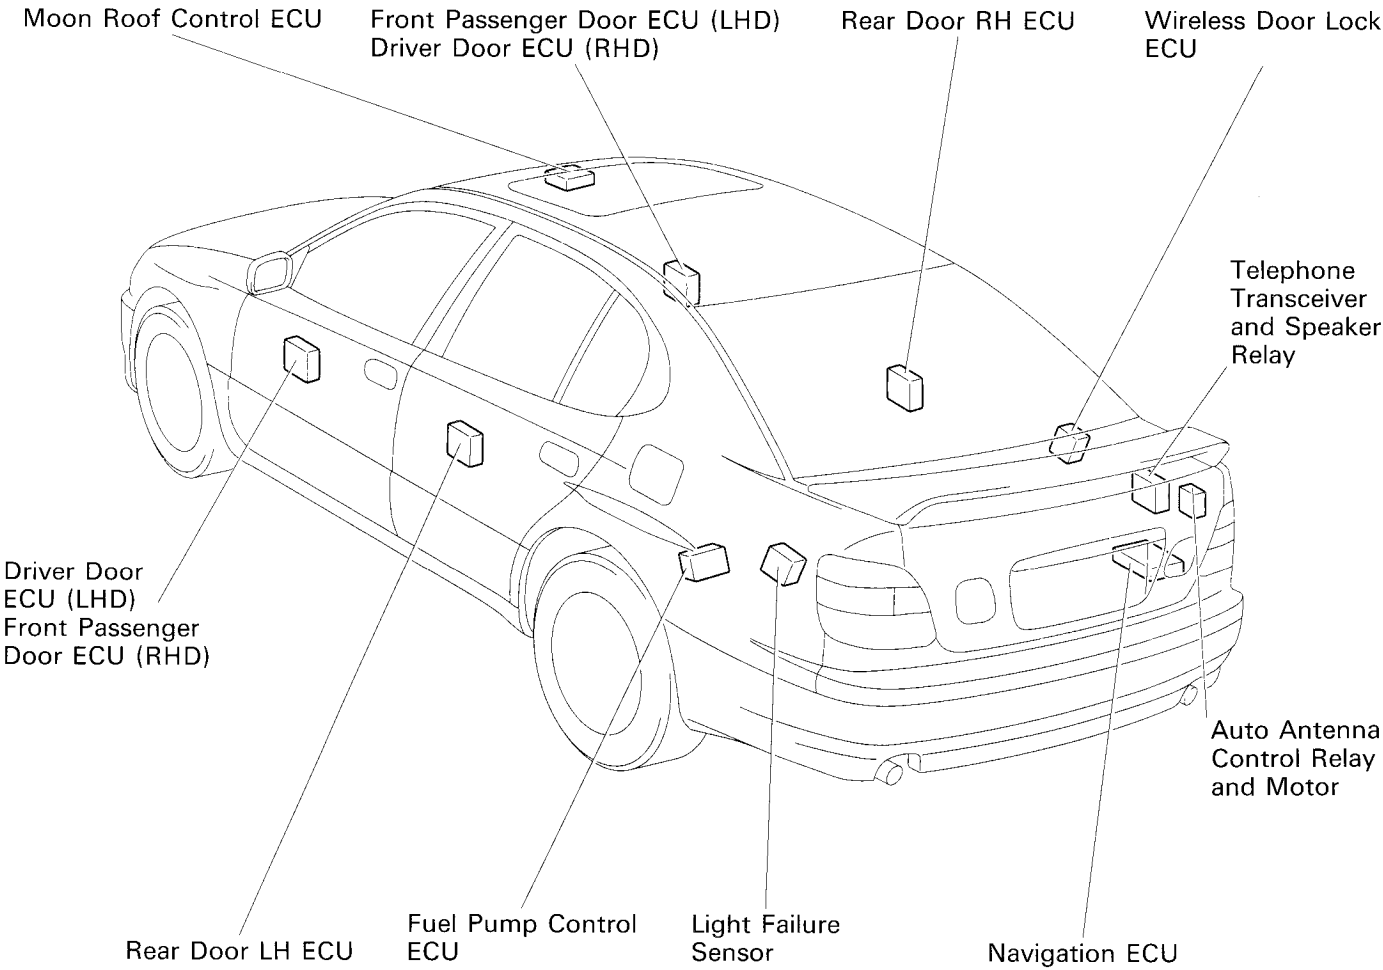


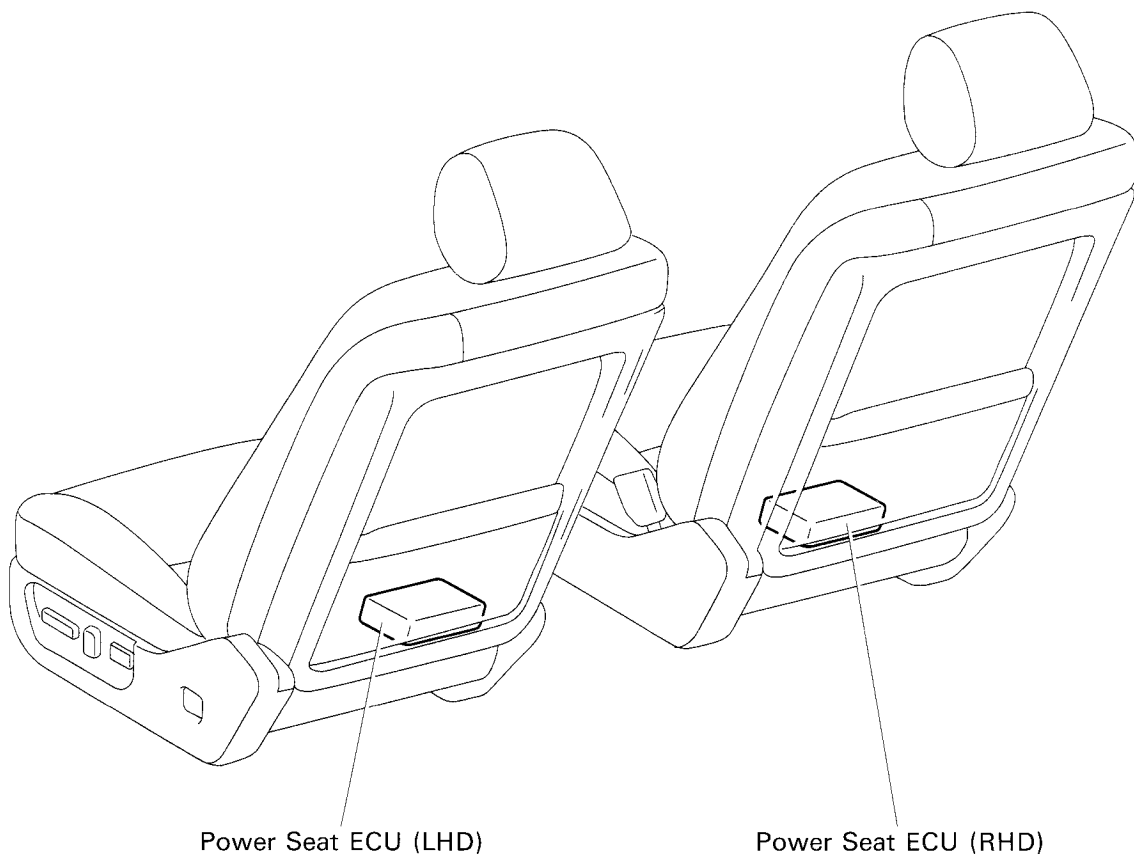[Seat]

F RELAY LOCATIONS

① : Engine Room No.1 R/B	LHD : Engine Compartment Right (See Page 50) RHD : Engine Compartment Left (See Page 50)
--------------------------	---


* 1 : w/o Daytime Running Light
 * 2 : w/ Daytime Running Light
 * 3 : 10A H-LP R UPR(* 1), 30A DRL NO. 1(* 2)

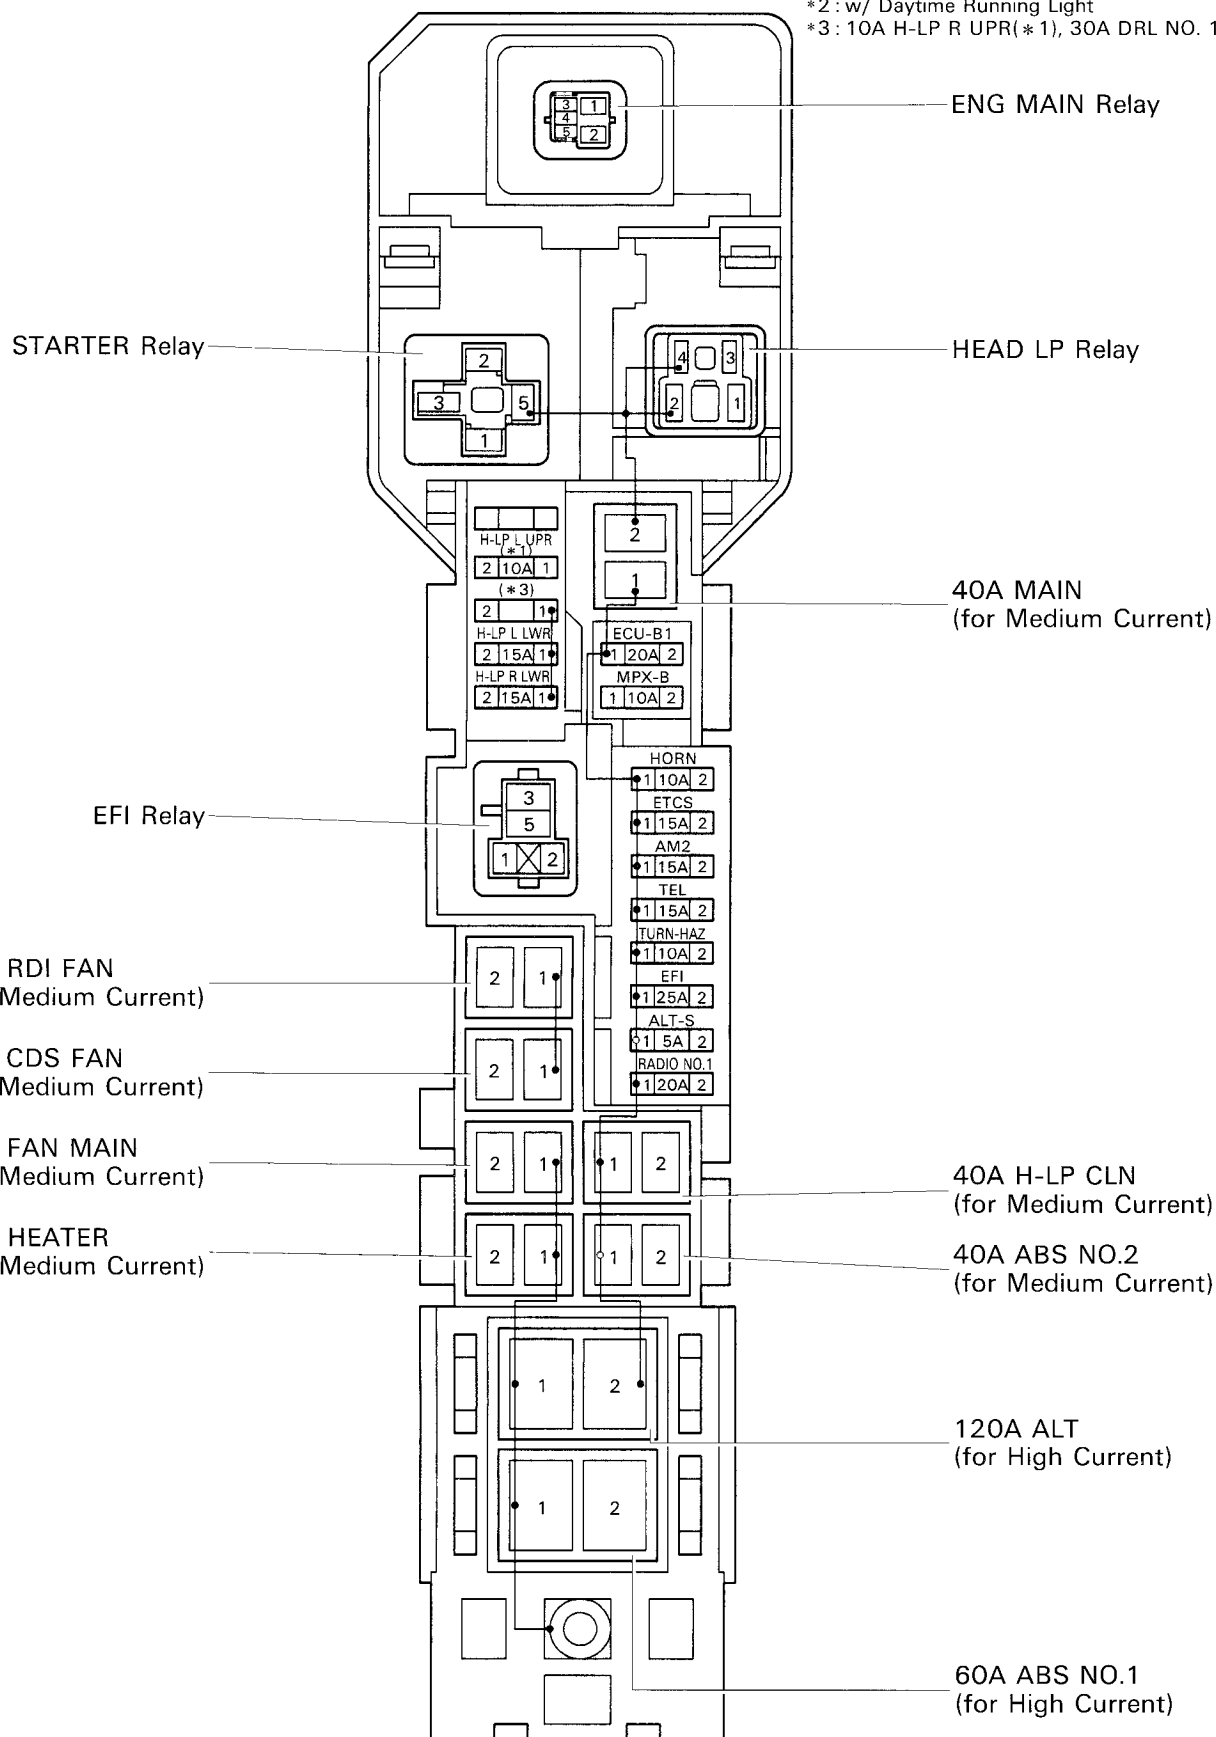

② : Engine Room No.2 R/B


LHD : Engine Compartment Left (See Page 50)

RHD : Engine Compartment Right (See Page 50)

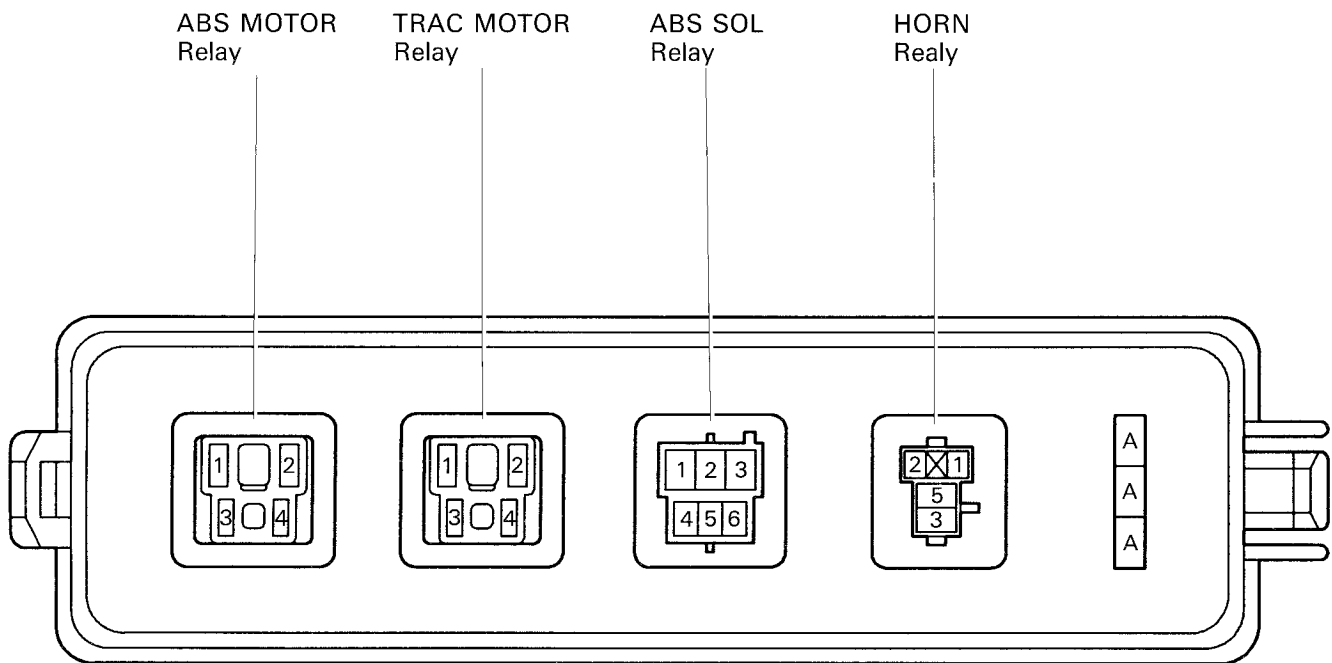

F RELAY LOCATIONS


③ : Engine Room No.3 R/B Engine Compartment Left (See Page 50)

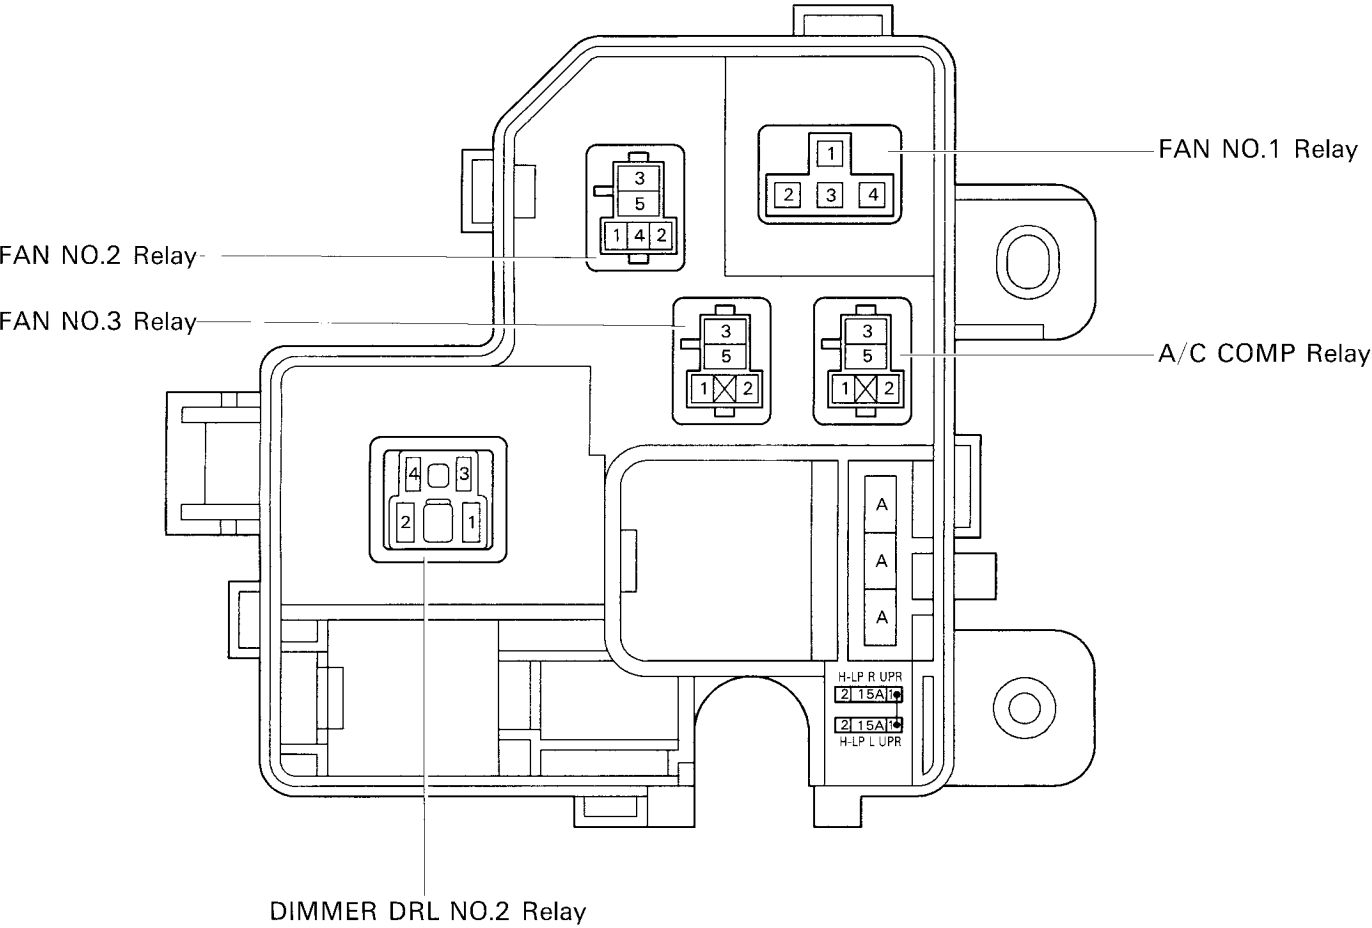

④ : Passenger Side R/B

LHD : Right Kick Panel (See Page 51)


RHD : Left Kick Panel (See Page 51)

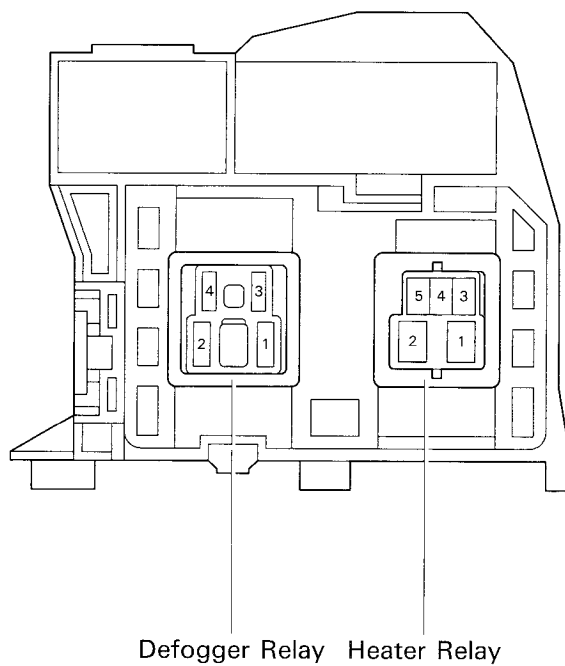

⑤ : Driver Side R/B

Right Kick Panel (See Page 51)

(RHD)

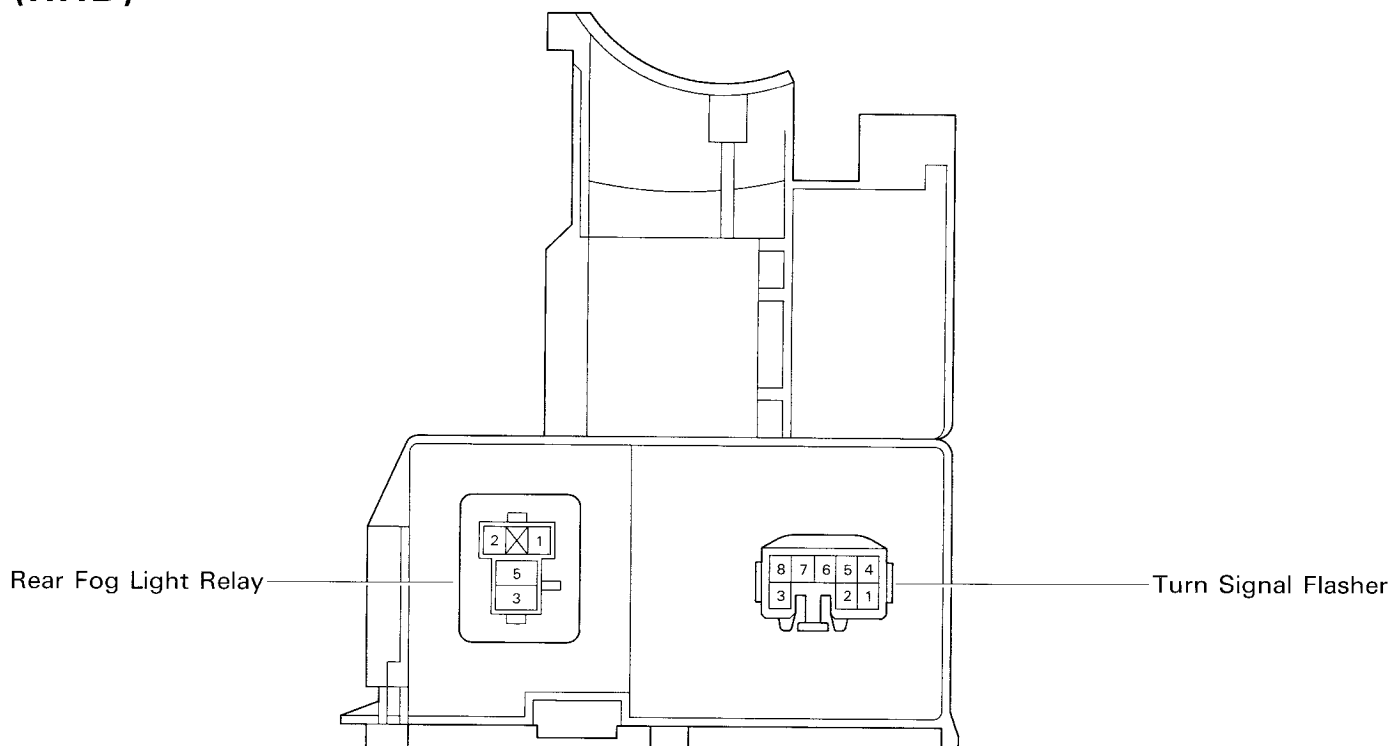



F RELAY LOCATIONS

○ : Driver Side J/B

LHD : Left Kick Panel (See Page 51)


RHD : Right Kick Panel (See Page 51)

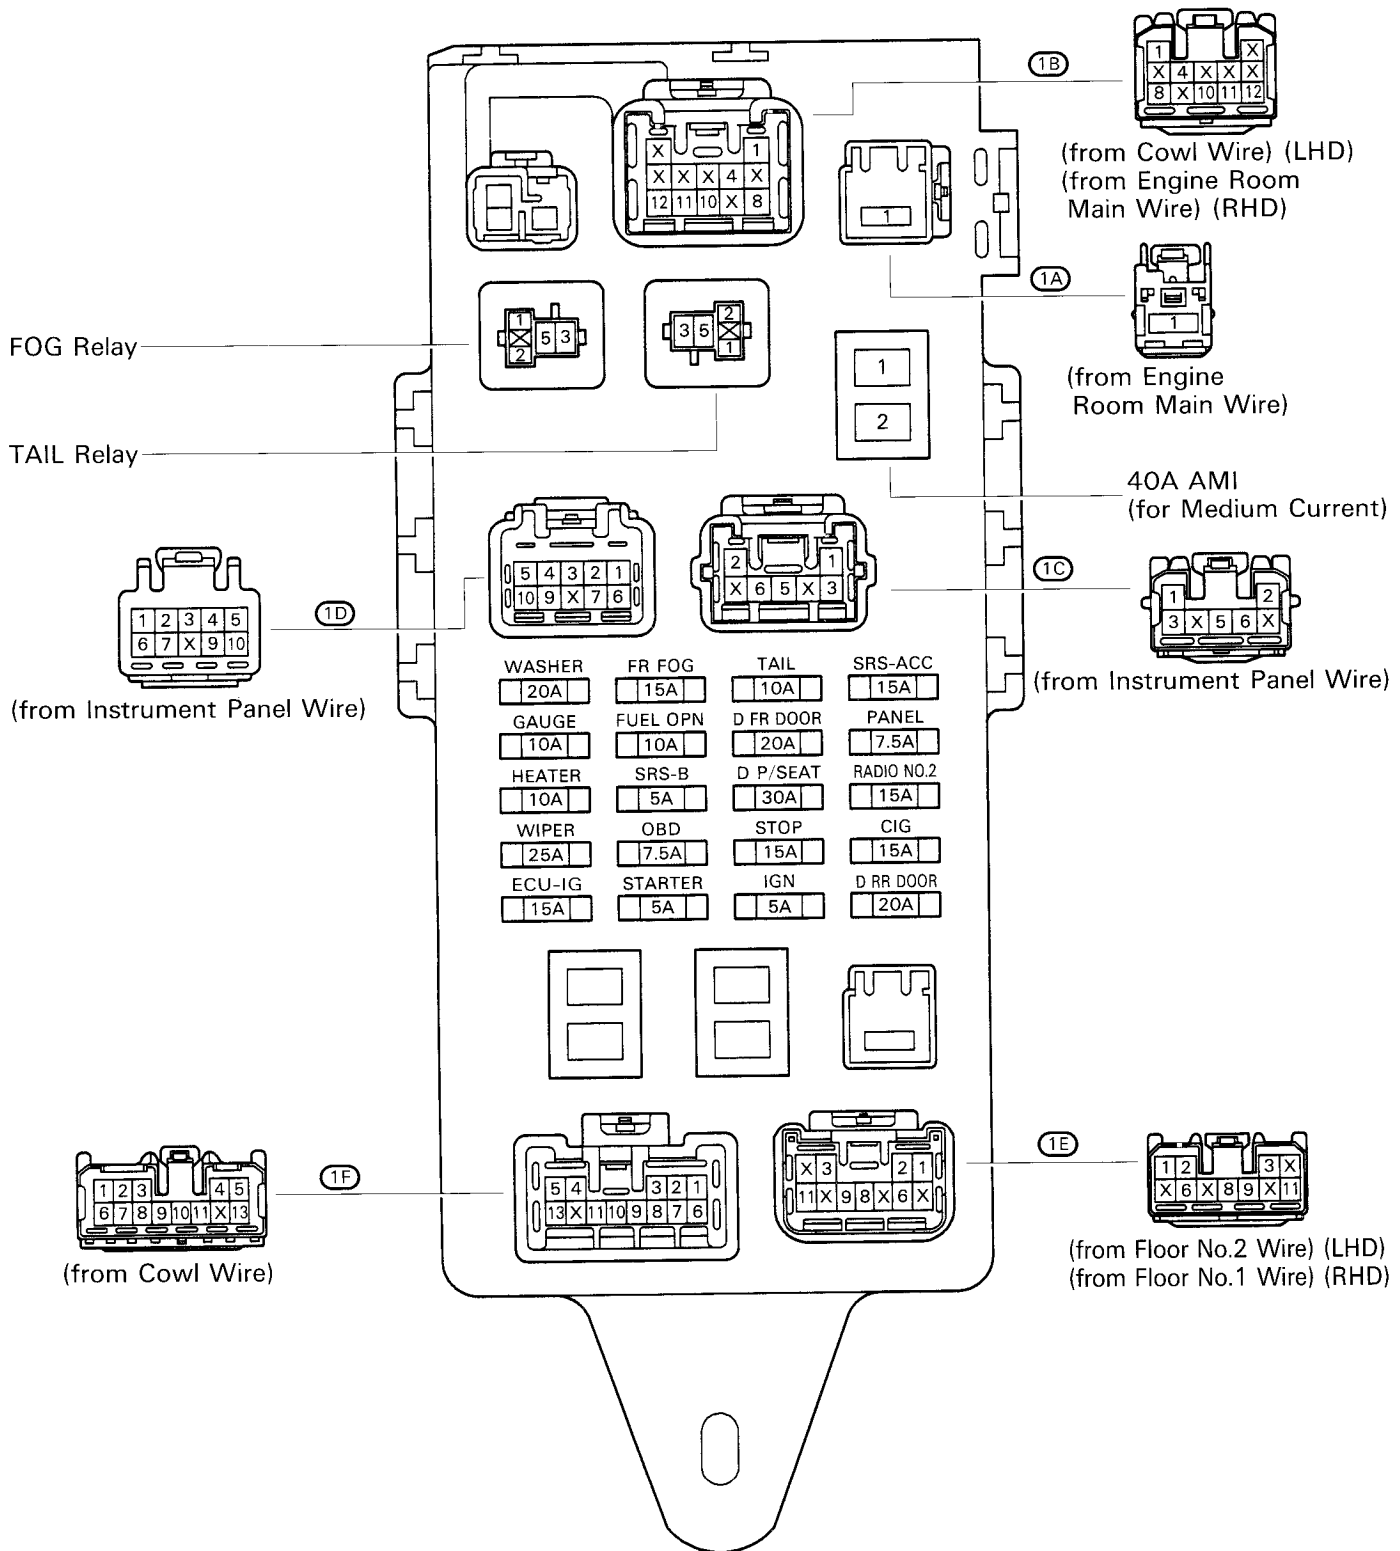


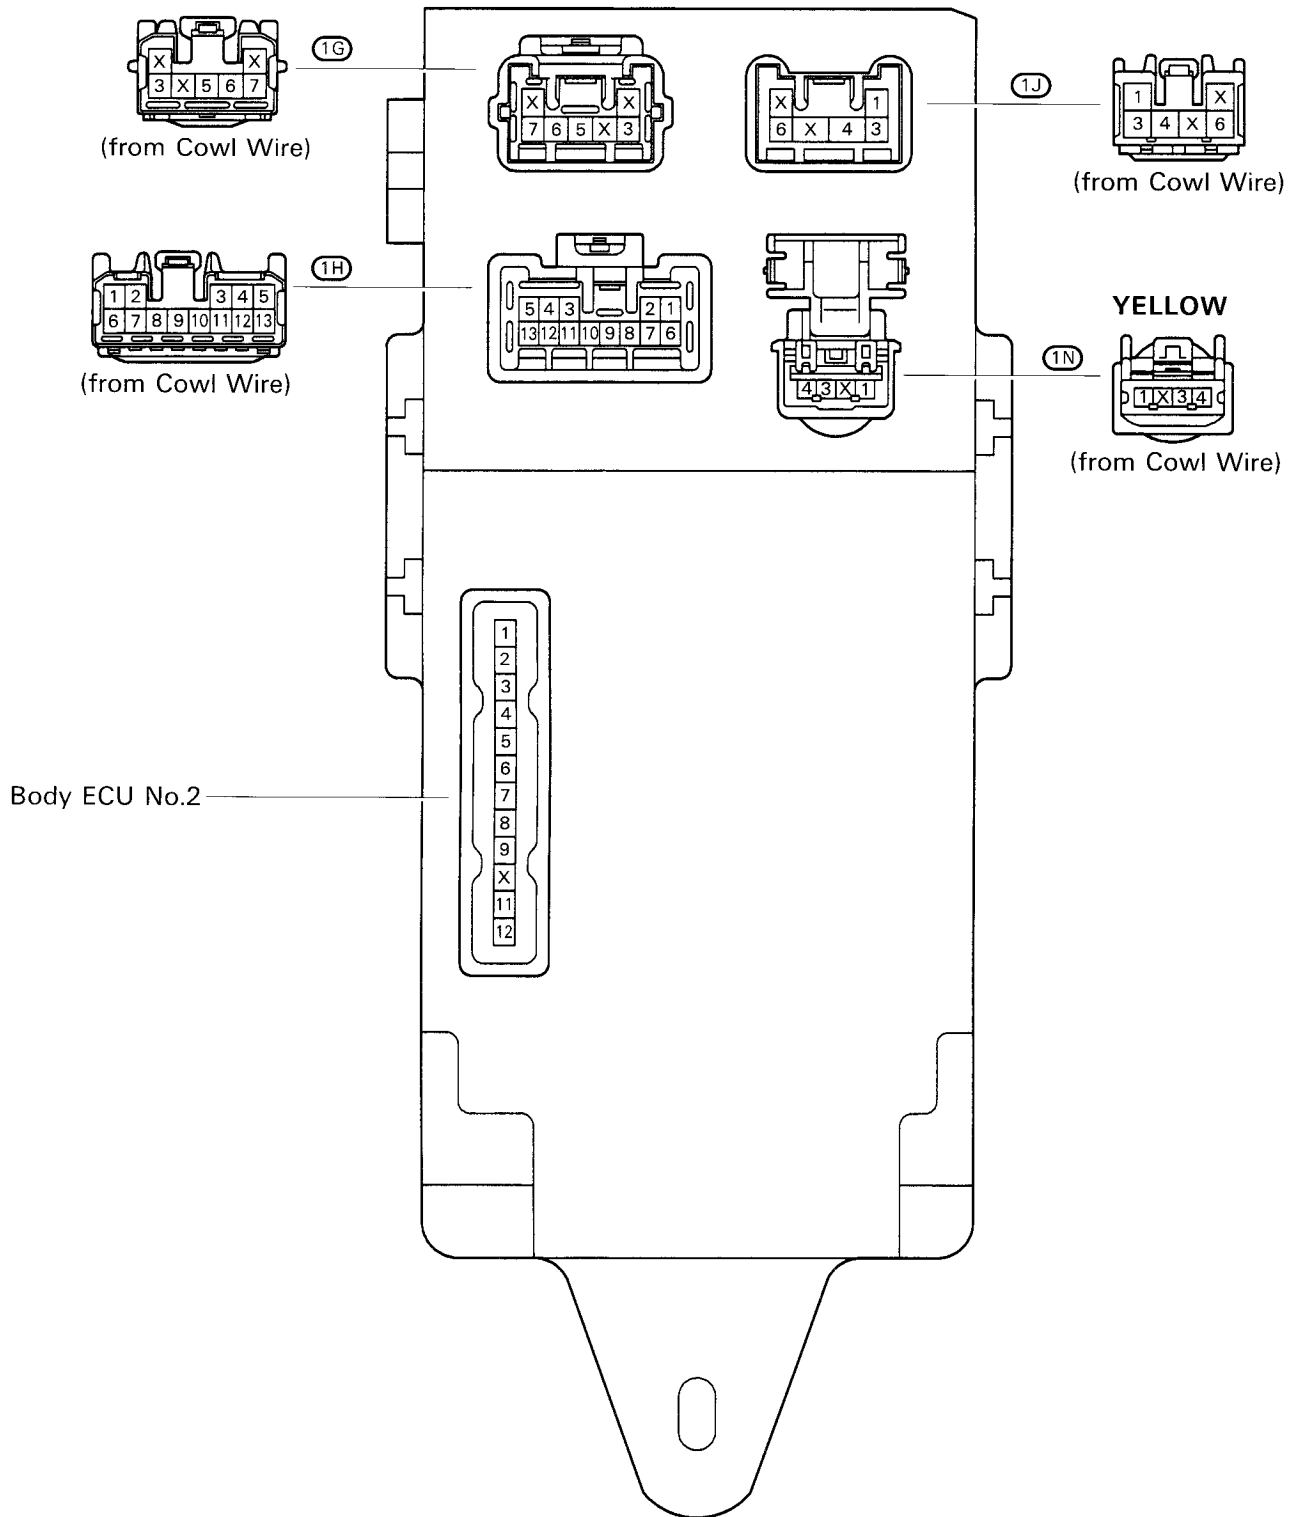

F RELAY LOCATIONS


○ : Passenger Side J/B	LHD : Right Kick Panel (See Page 51)
	RHD : Left Kick Panel (See Page 51)

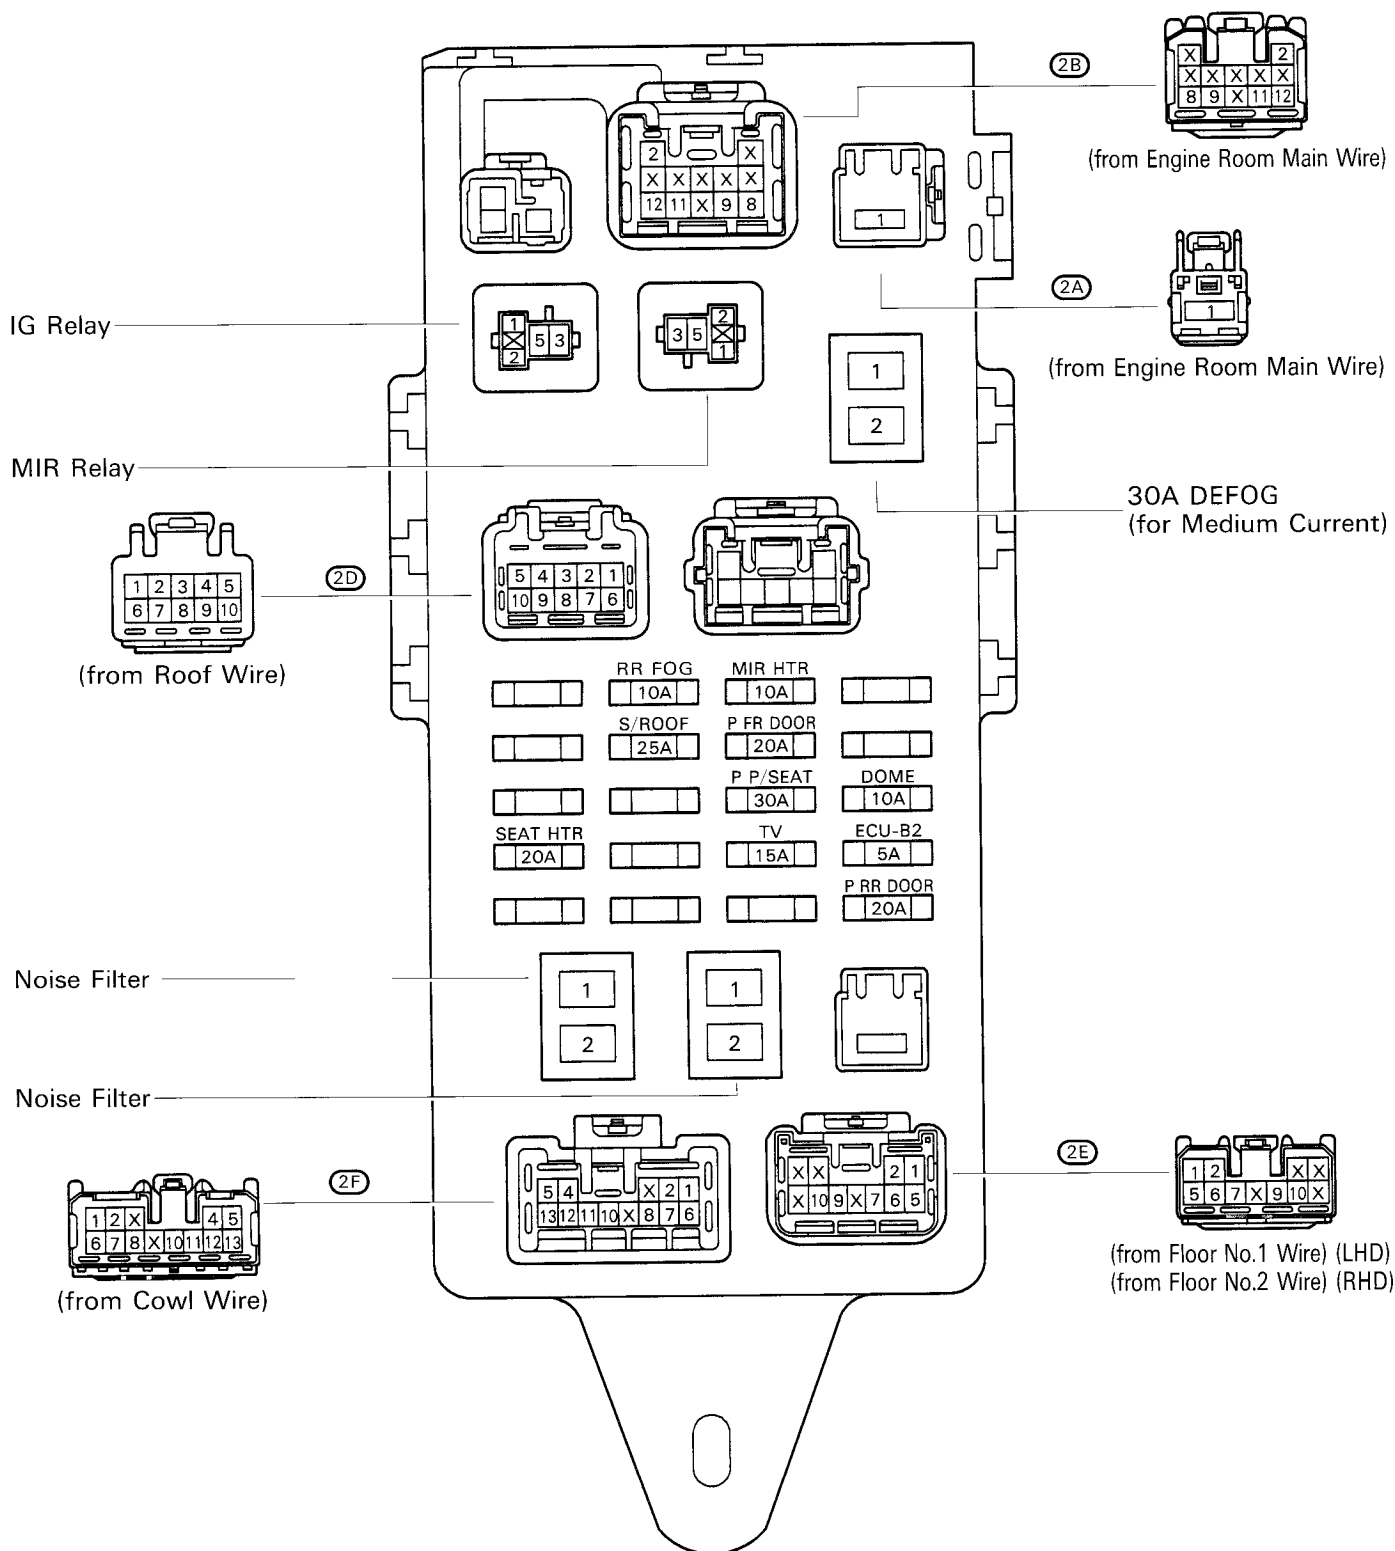


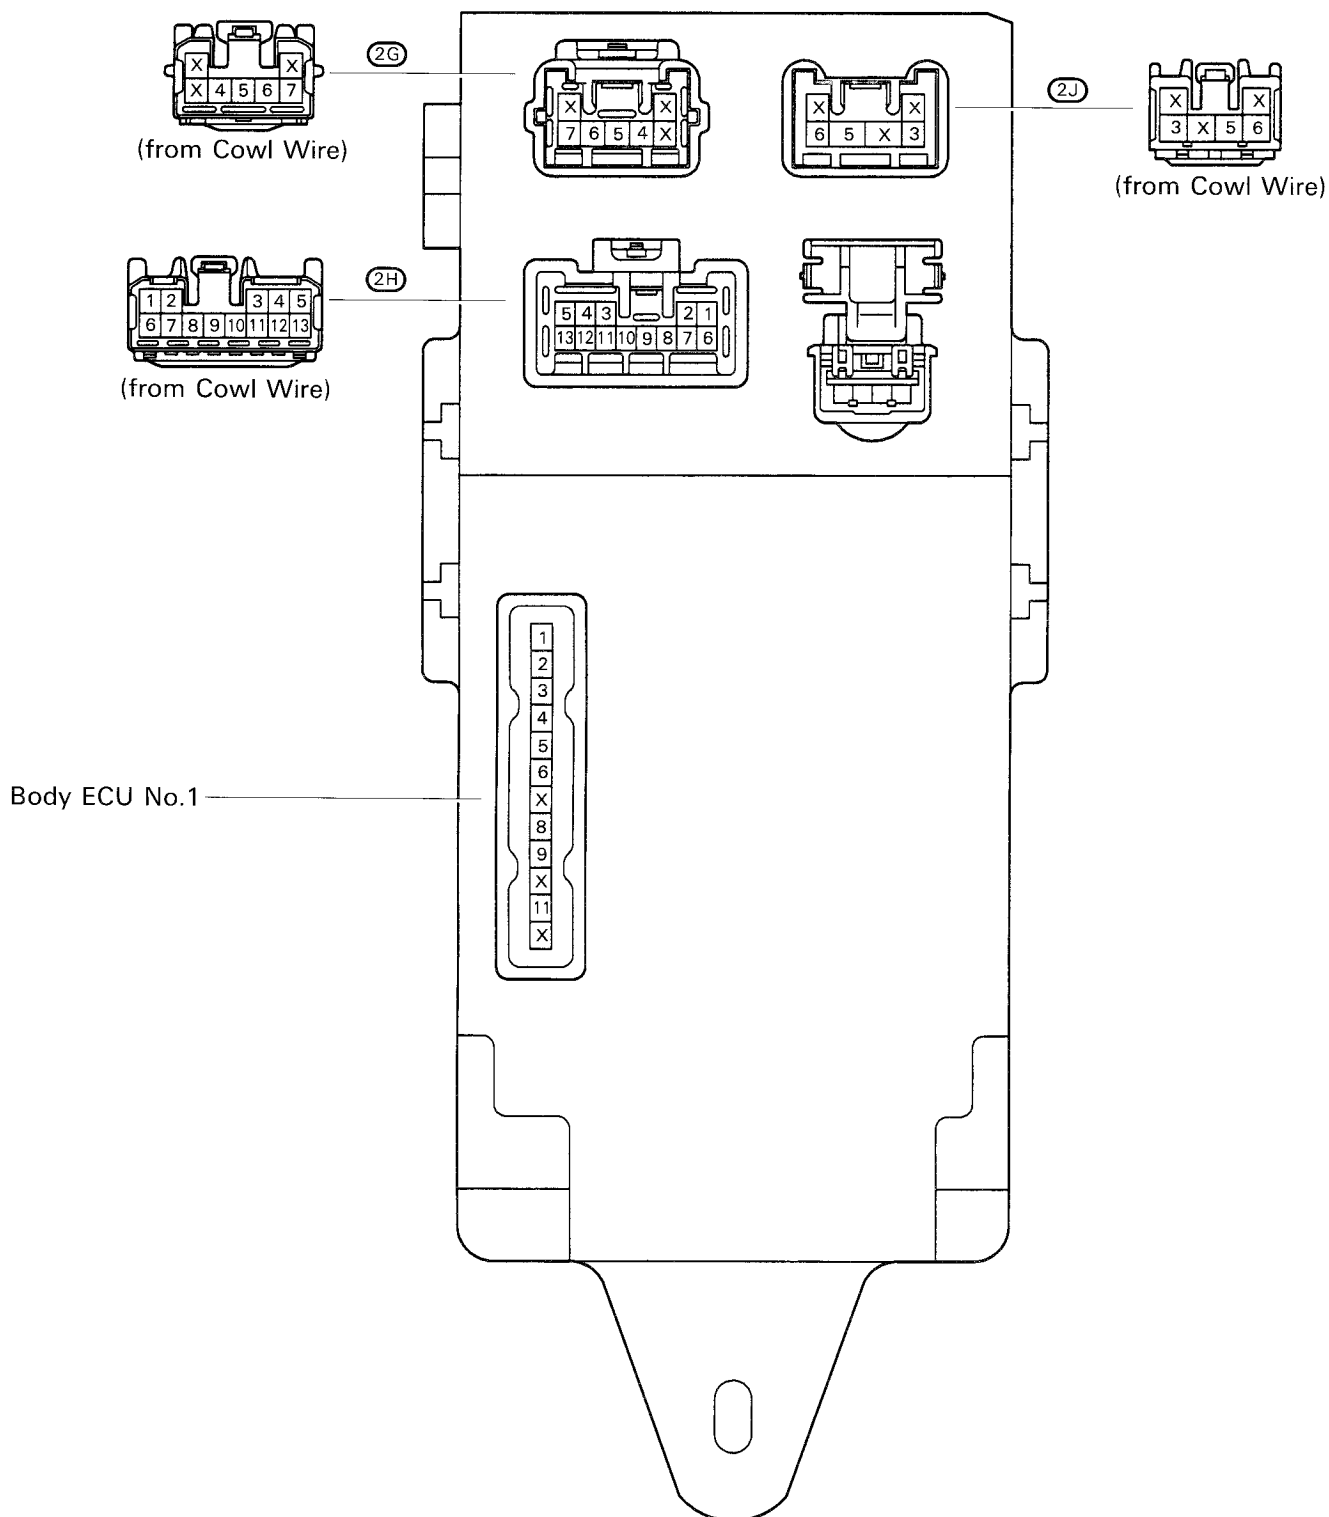

F RELAY LOCATIONS


○ : Instrument Panel J/B Instrument Panel Reinforcement Center (See Page 51)

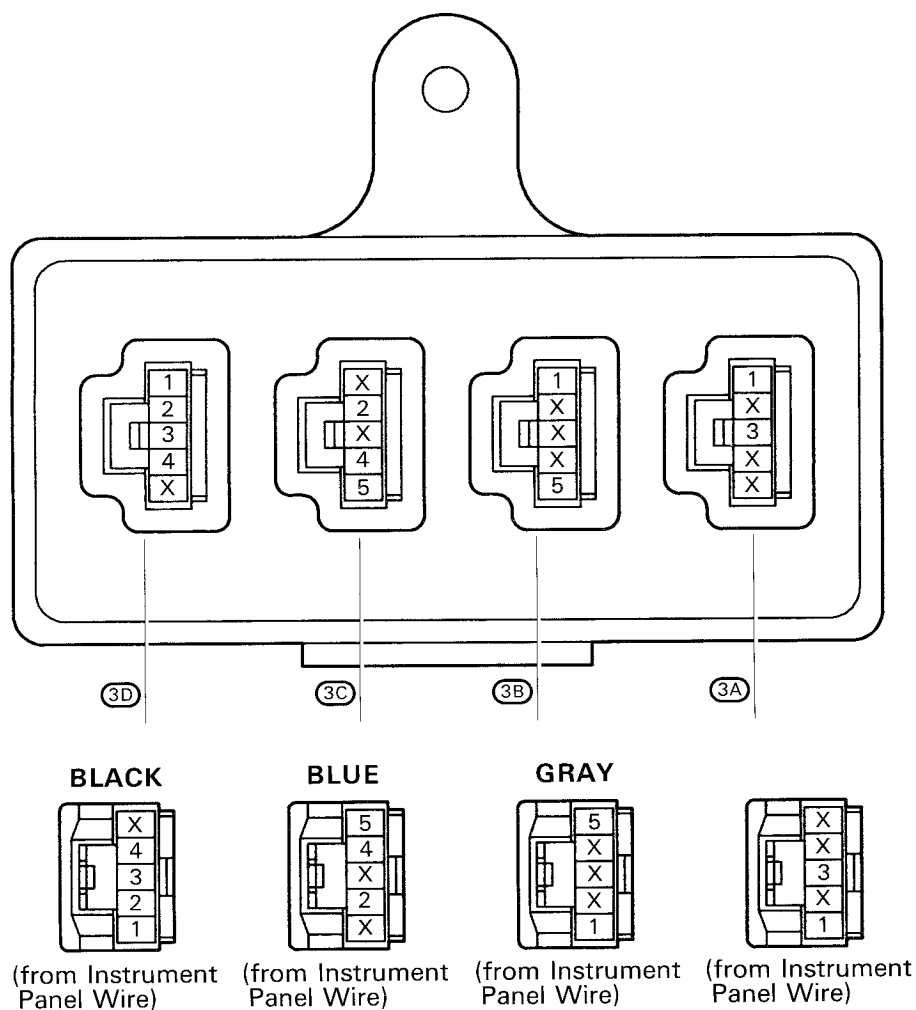

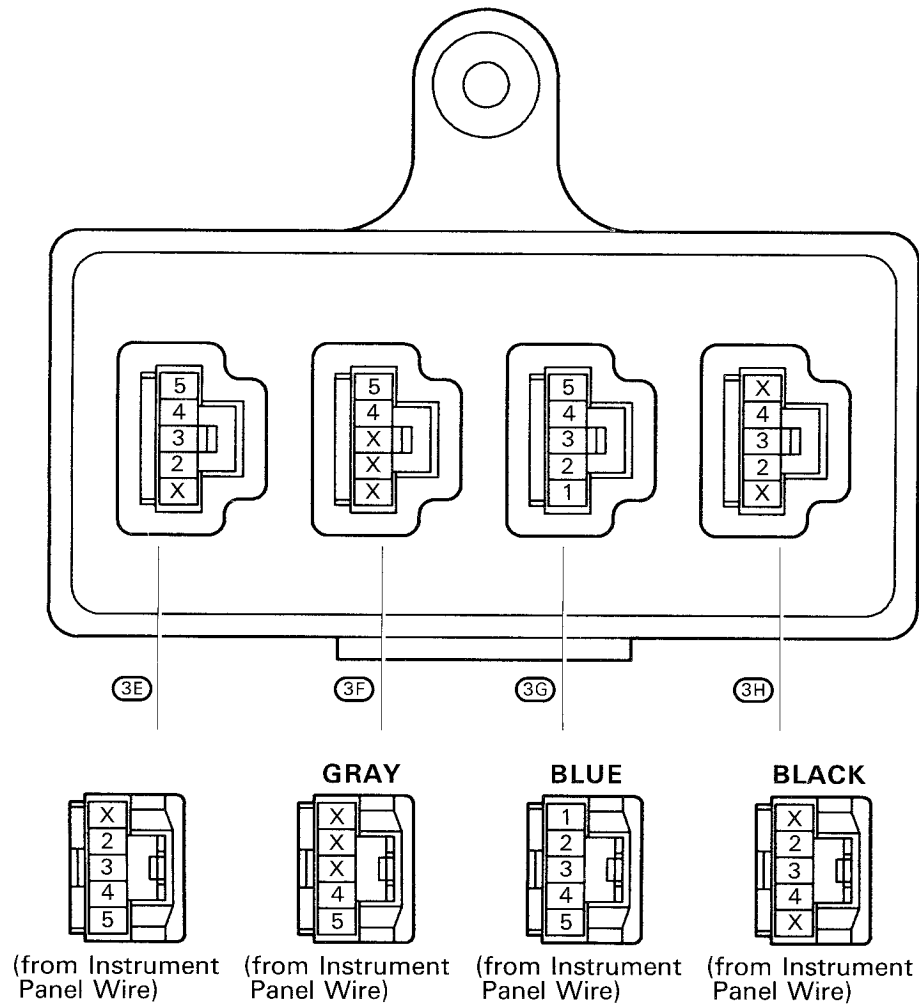


F RELAY LOCATIONS

[Driver Side J/B Inner Circuit]

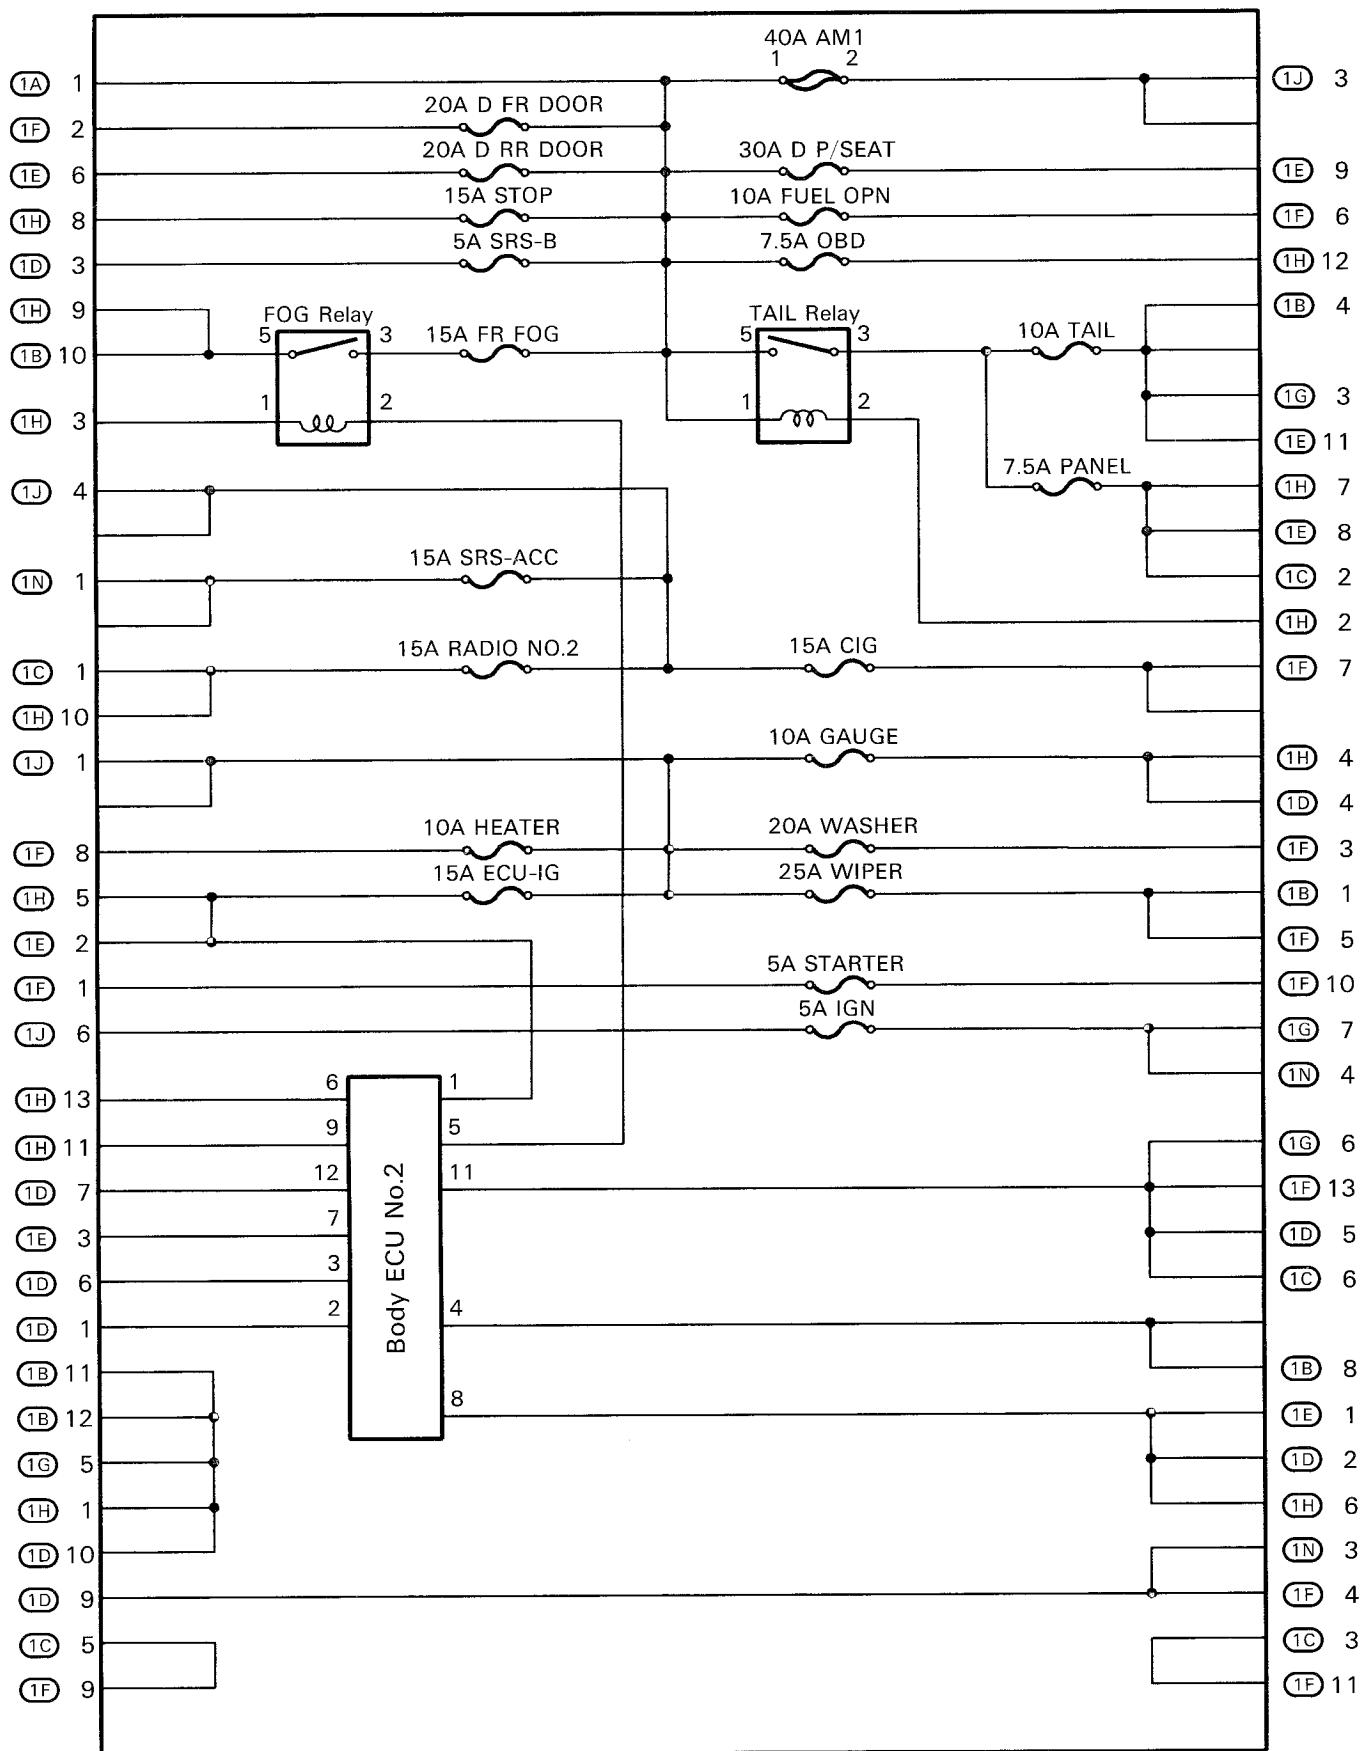

[Passenger Side J/B Inner Circuit]

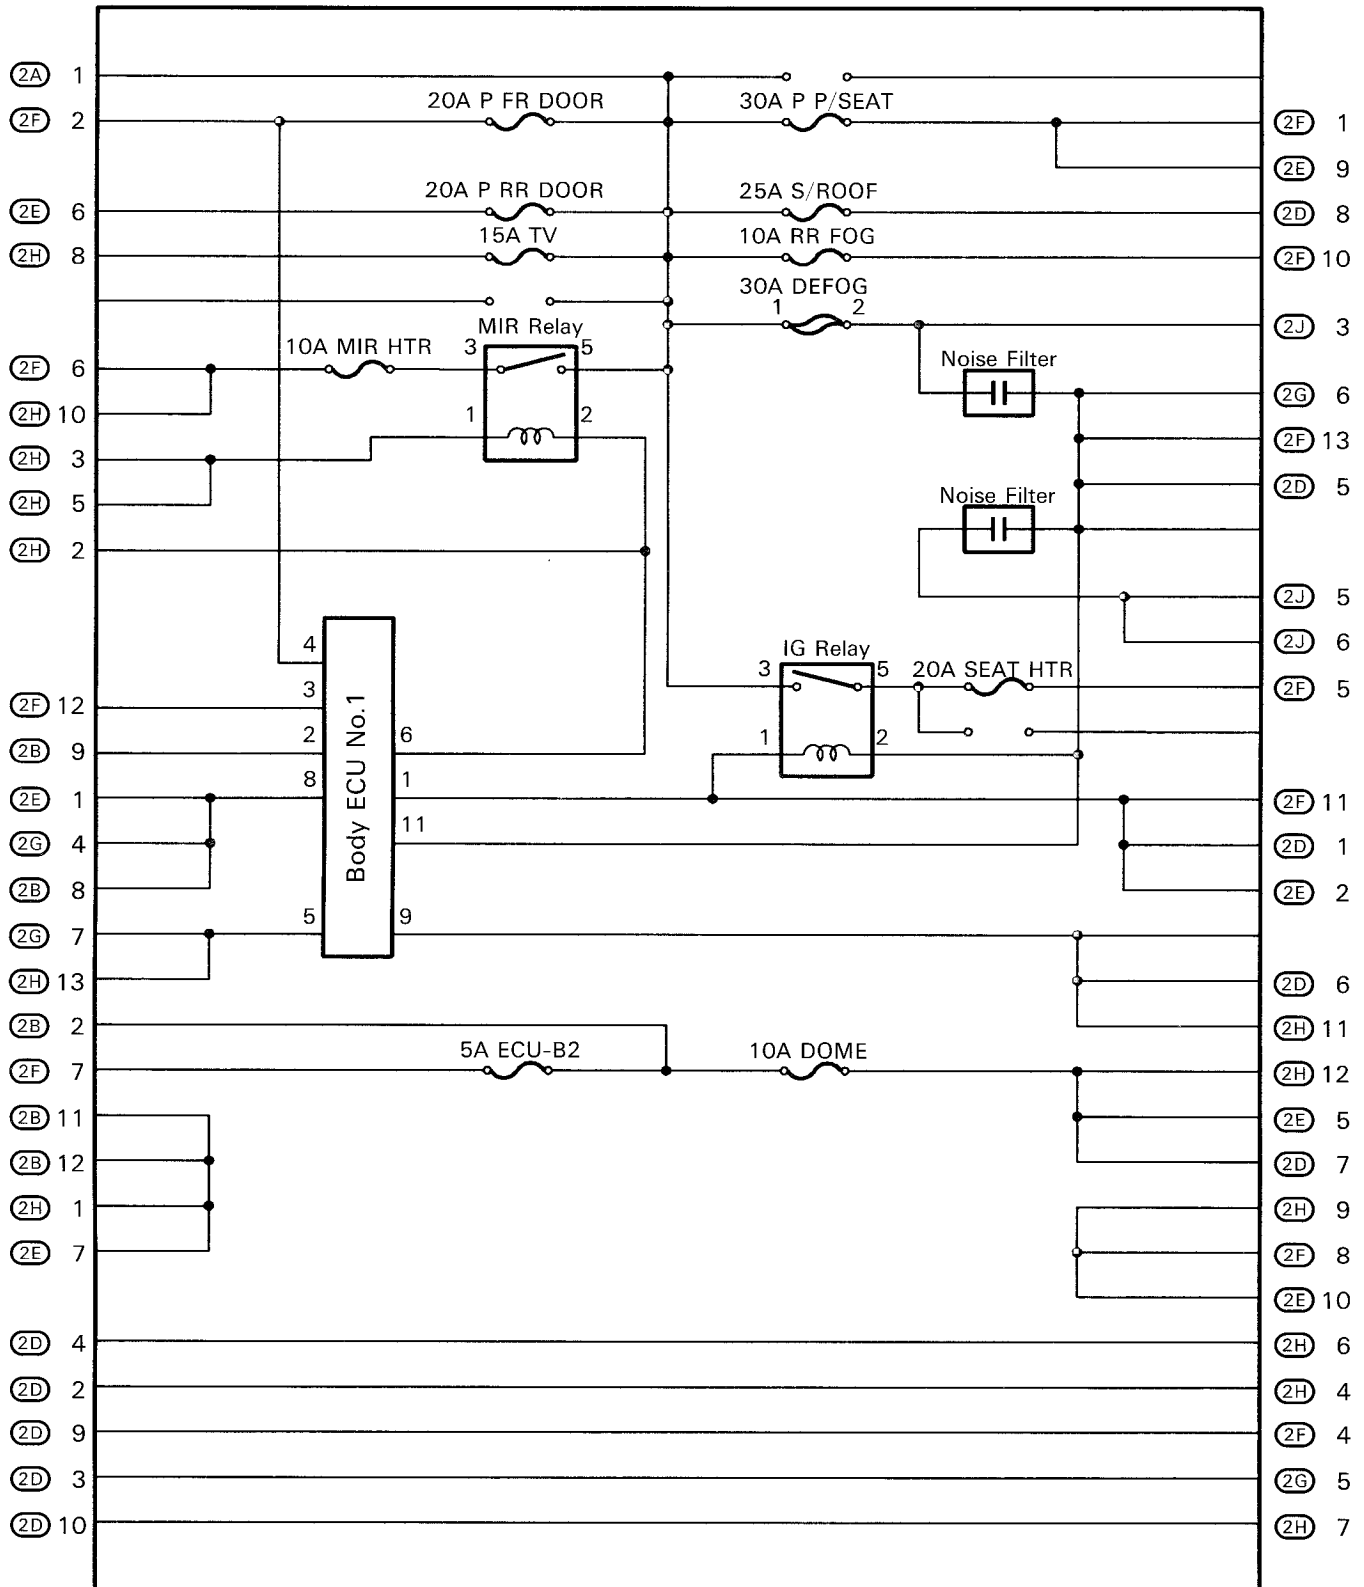

F RELAY LOCATIONS

[Instrument Panel J/B Inner Circuit]

English

