


Chevrolet Express 1995 – 1996 fuse box diagram

Instrument Panel Fuse Block

The fuse block access door is on the driver's side of the instrument panel below the hood release lever.

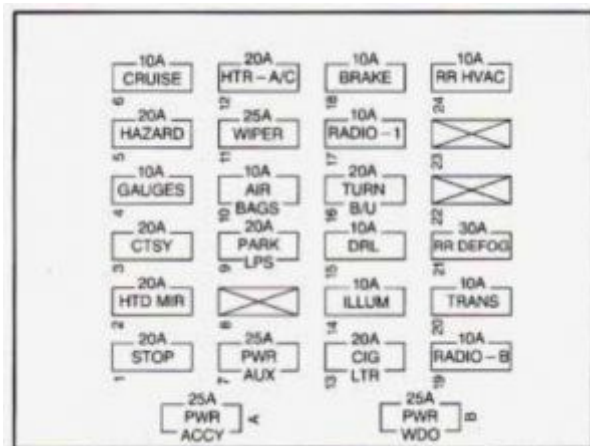

Chevrolet Express – fuse box – instrument panel

Fuse position	Fuse name	Circuit protected
1	STOP	Stop/CHMSL, Stoplamps
2	HTD MIR	Electric Heated Mirrors
3	CTSY	Courtesy Lamps, Dome/RDG Lamps, Vanity Mirrors, Power Mirrors
4	GAUGES	IP Cluster, DRL Relay, DRL Module, HDLP Switch, Keyless Entry Illumination, Low Coolant Module, CHIME Module, DRAB Module
5	Hazard	Hazard LampsKHIME Module
6	CRUISE	Cruise Control
7	PWR AUX	Auxiliary Power Outlet, ALDL
8	Crank	—
9	PARK LPS	License Plate Lamp, Parking Lamps, Taillamps, Front Sidemarkers, Glove Box Ashtray
10	AIR BAGS	SDM
11	WIPER	Wiper Motor, Washer Pump
12	HTR-A/C	NC, A/C Blower, High Blower Relay, HTD Mirror
13	CIG LTR	Power Amp, Cigarette Lighter, Door Lock Relay
14	ILLUM	LP Cluster, HVAC Controls, RR HVAC Controls, IP Switches, Radio Illumination, Door Switch Illumination
15	DRL	DRL Relay
16	TURN B/U	Front Turn, RR Turn, Back-up Lamps, BTSI Solenoid

17	RADIO- 1	Radio (Ign, Accy)
18	BRAKE	4WAL PCM, ABS, Cruise Control
19	RADIO-B	Radio (Battery), Power Antenna
20	TRANS	PRNDL, Automatic Transmission
21	RR FOG	Rear Window Defog
22	Not Used	—
23	Not Used	—
24	RR HVAC	RR HVAC Controls, HIGH, MED, LOW Relays
A*	PWR ACCY	Power Door Lock, Six-Way Power Seat, Keyless Entry Illumination Module
B*	PWR WDO	Power Windows
* Circuit Breaker		