


Engine Electrical System

WIRING SYSTEM

5. Engine Electrical System


A: WIRING DIAGRAM

1. NON-TURBO MODEL

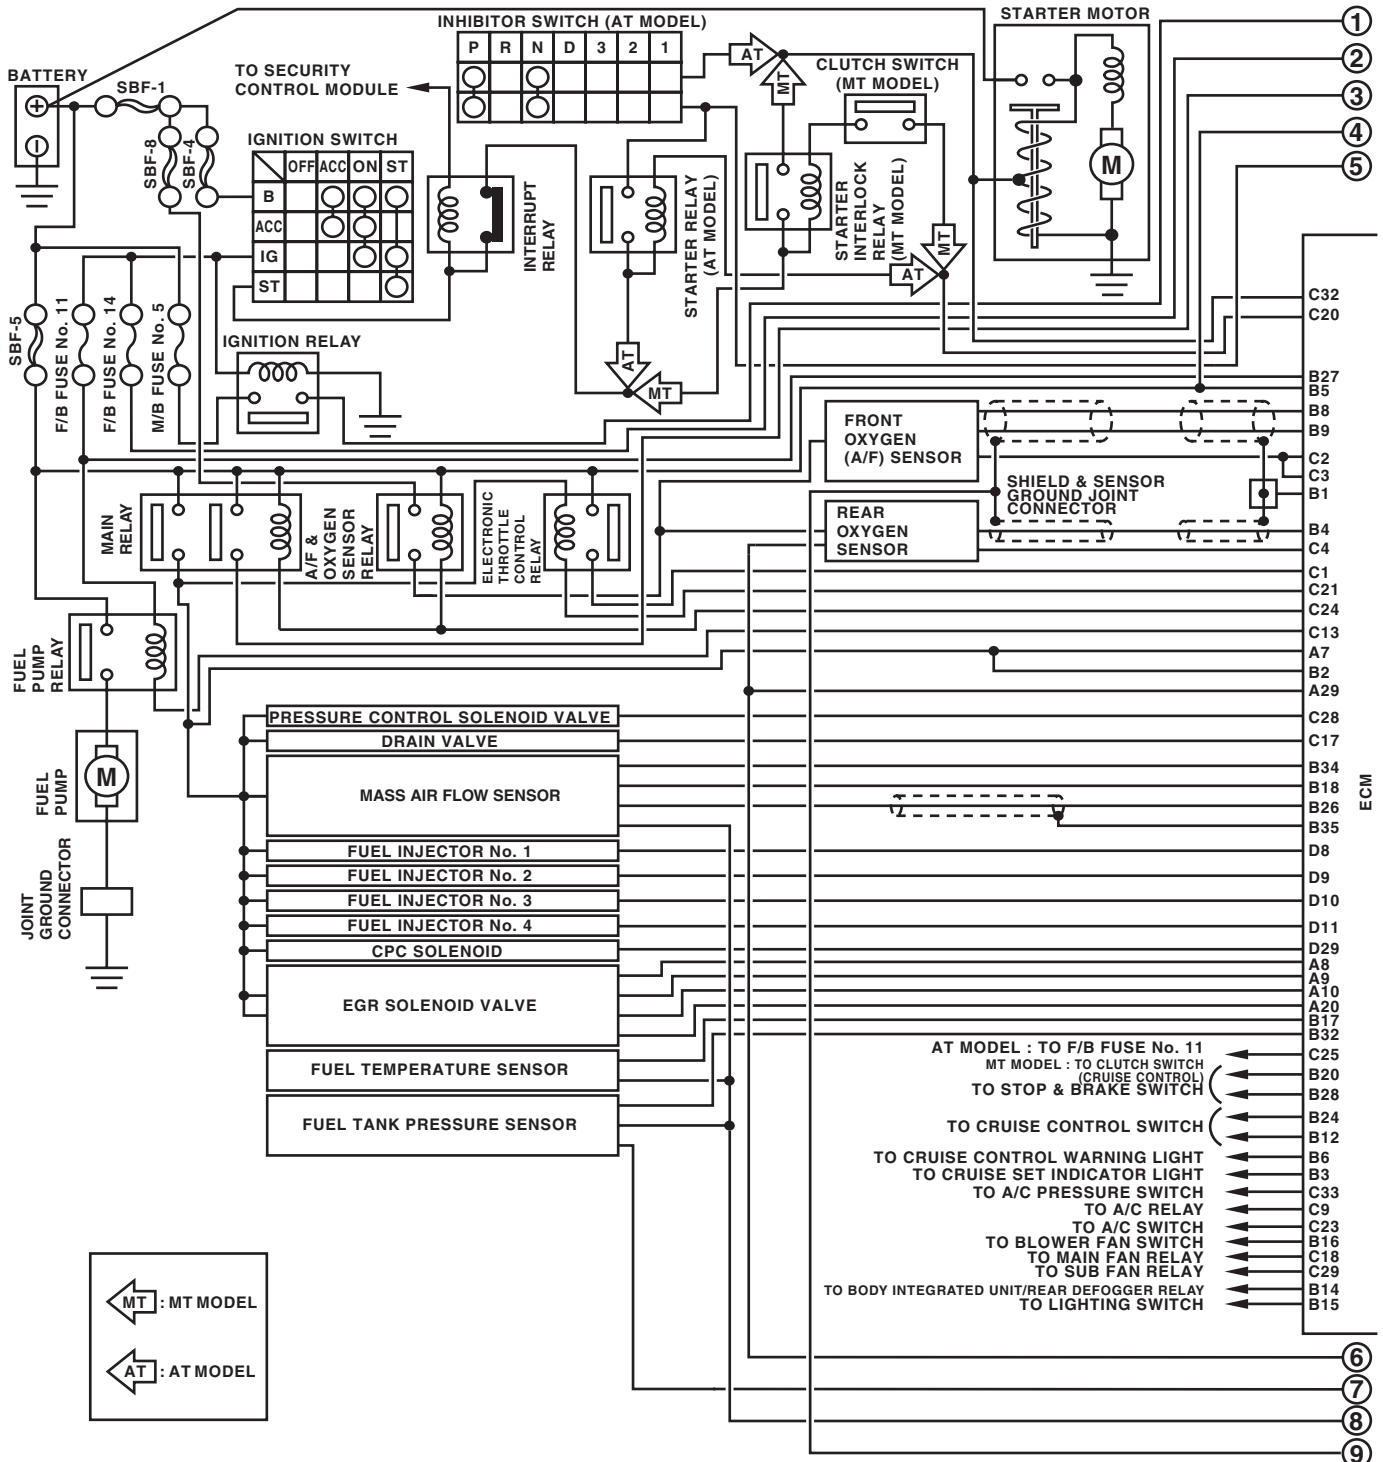

WI-12206


Download Complete manual for FREE @ <https://www.heydownloads.com>

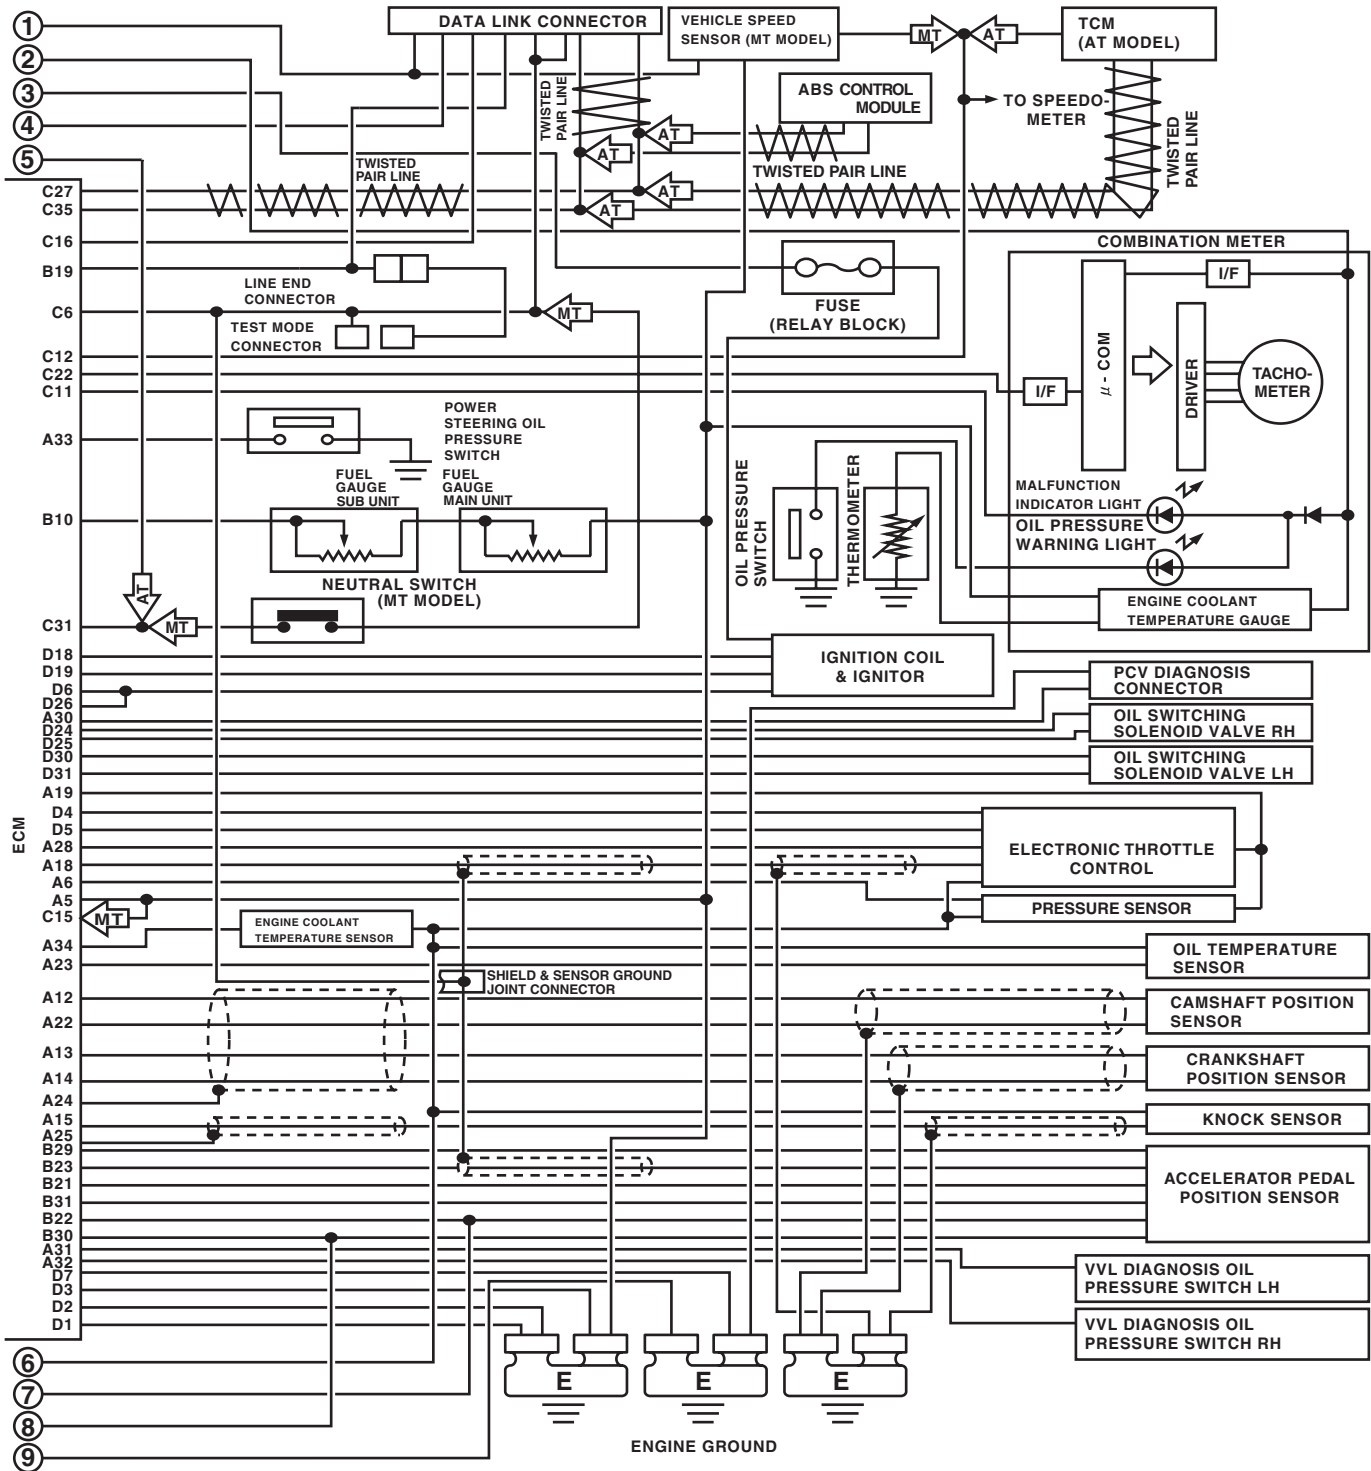

WI-12207

Engine Electrical System


WIRING SYSTEM

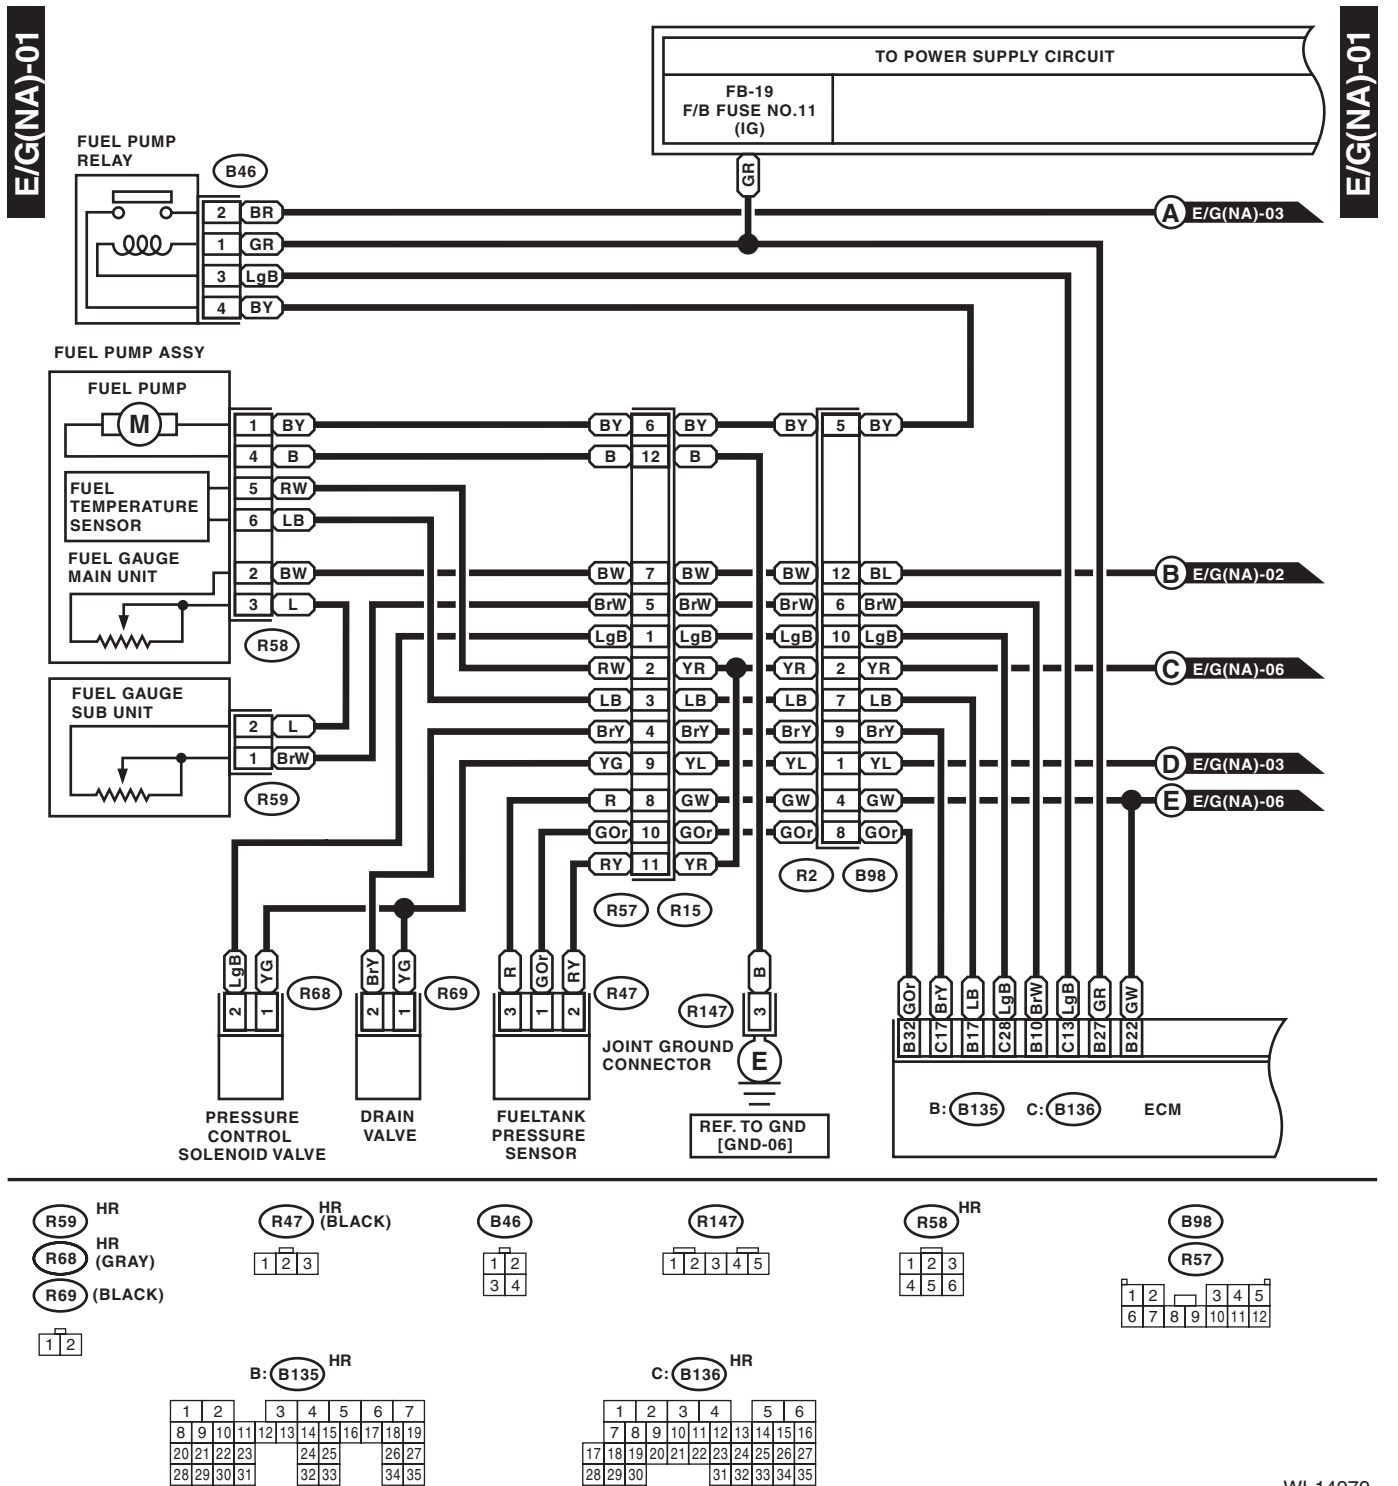

Download Complete manual for FREE @ <https://www.heydownloads.com>

Engine Electrical System

WIRING SYSTEM

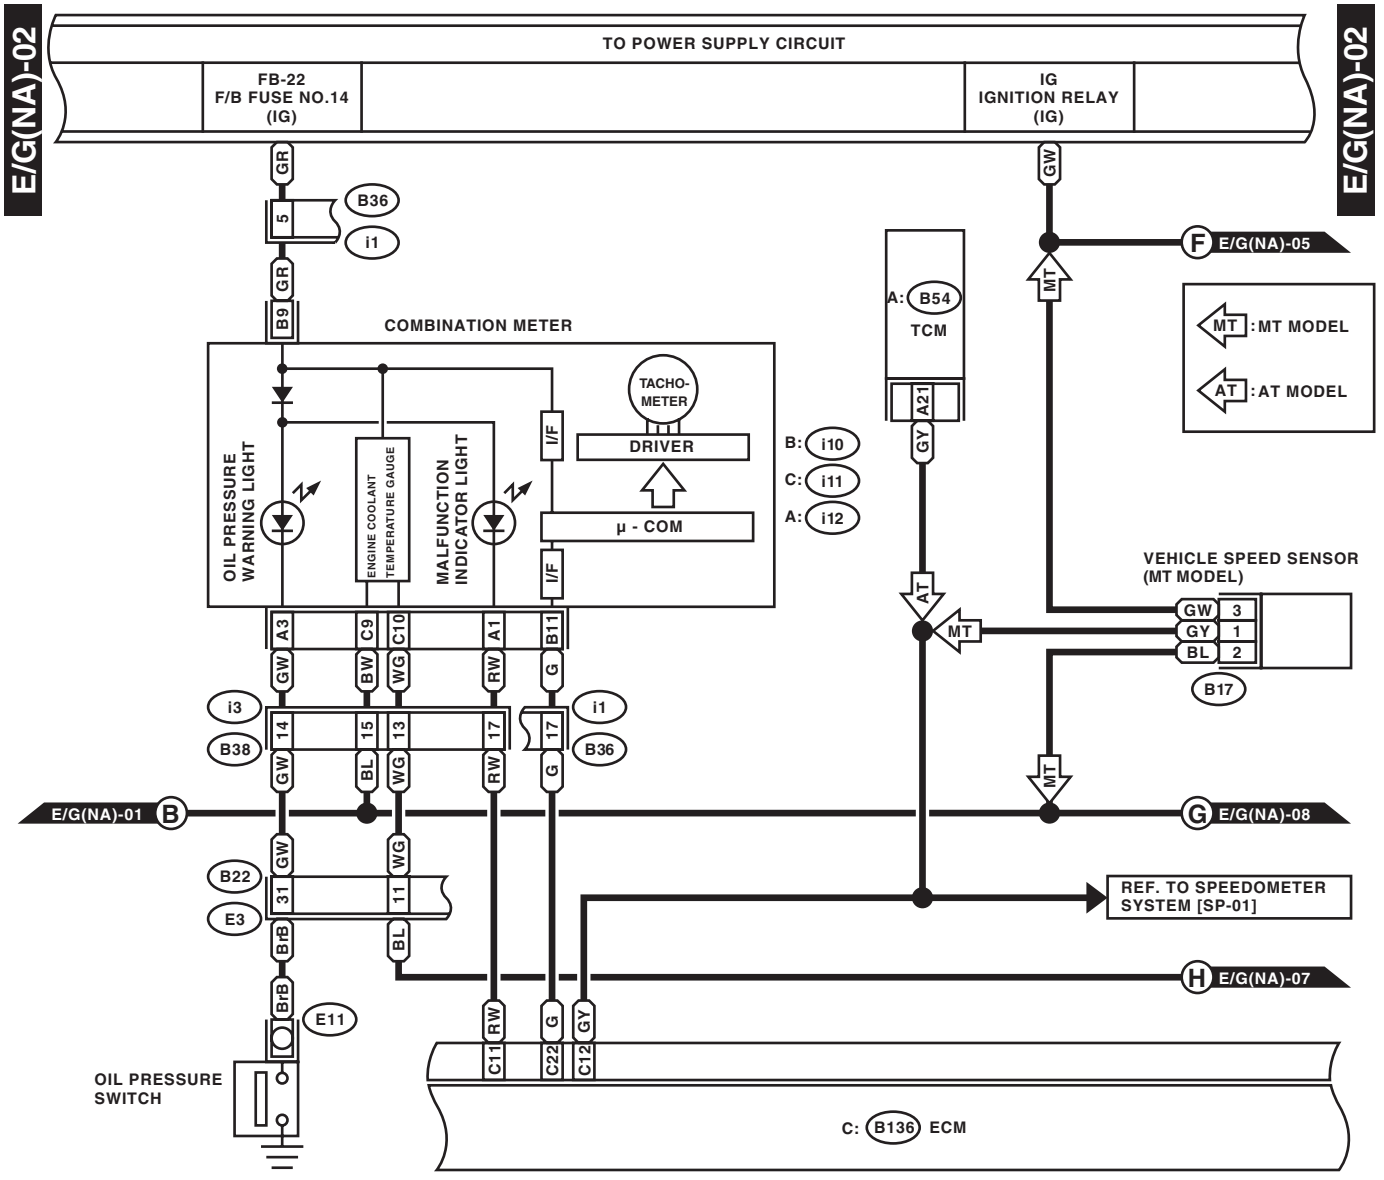

B17 HR (BLACK)

1	2	3
---	---	---

C: i11 (GREEN)

1	2	3	4	5	6	7	8	9	10
---	---	---	---	---	---	---	---	---	----

A: i12 (GREEN)

1	2	3	4	5	6
7	8	9	10	11	12
13	14	15	16	17	18

B36

1	2	3	4	5	6	7	8	9	10	11
12	13	14	15	16	17	18	19	20	21	22
23	24	25	26	27	28	29	30	31	32	33

B: i10 (GREEN)

1	2	3	4	5	6	7	8	9	10	11	12	13	14
15	16	17	18	19	20	21	22	23	24	25	26	27	28
29	30	31	32	33	34	35	36	37	38	39	40	41	42

B38

1	2	3	4	5	6	7	8	9
10	11	12	13	14	15	16	17	18
19	20	21	22	23	24	25	26	27
28	29	30	31	32	33	34	35	36

A: B54 HR **C: B136** HR

1	2	3	4	5	6
7	8	9	10	11	12
13	14	15	16	17	18
19	20	21	22	23	24
25	26	27	28	29	30
31	32	33	34	35	36


B22 (BLACK)

1	2	3	4	5	6	7	8	9	10	11
12	13	14	15	16	17	18	19	20	21	22
23	24	25	26	27	28	29	30	31	32	33
34	35	36	37	38	39	40	41	42	43	44
45	46	47	48	49	50	51	52	53	54	55

WI-14980

Engine Electrical System


WIRING SYSTEM

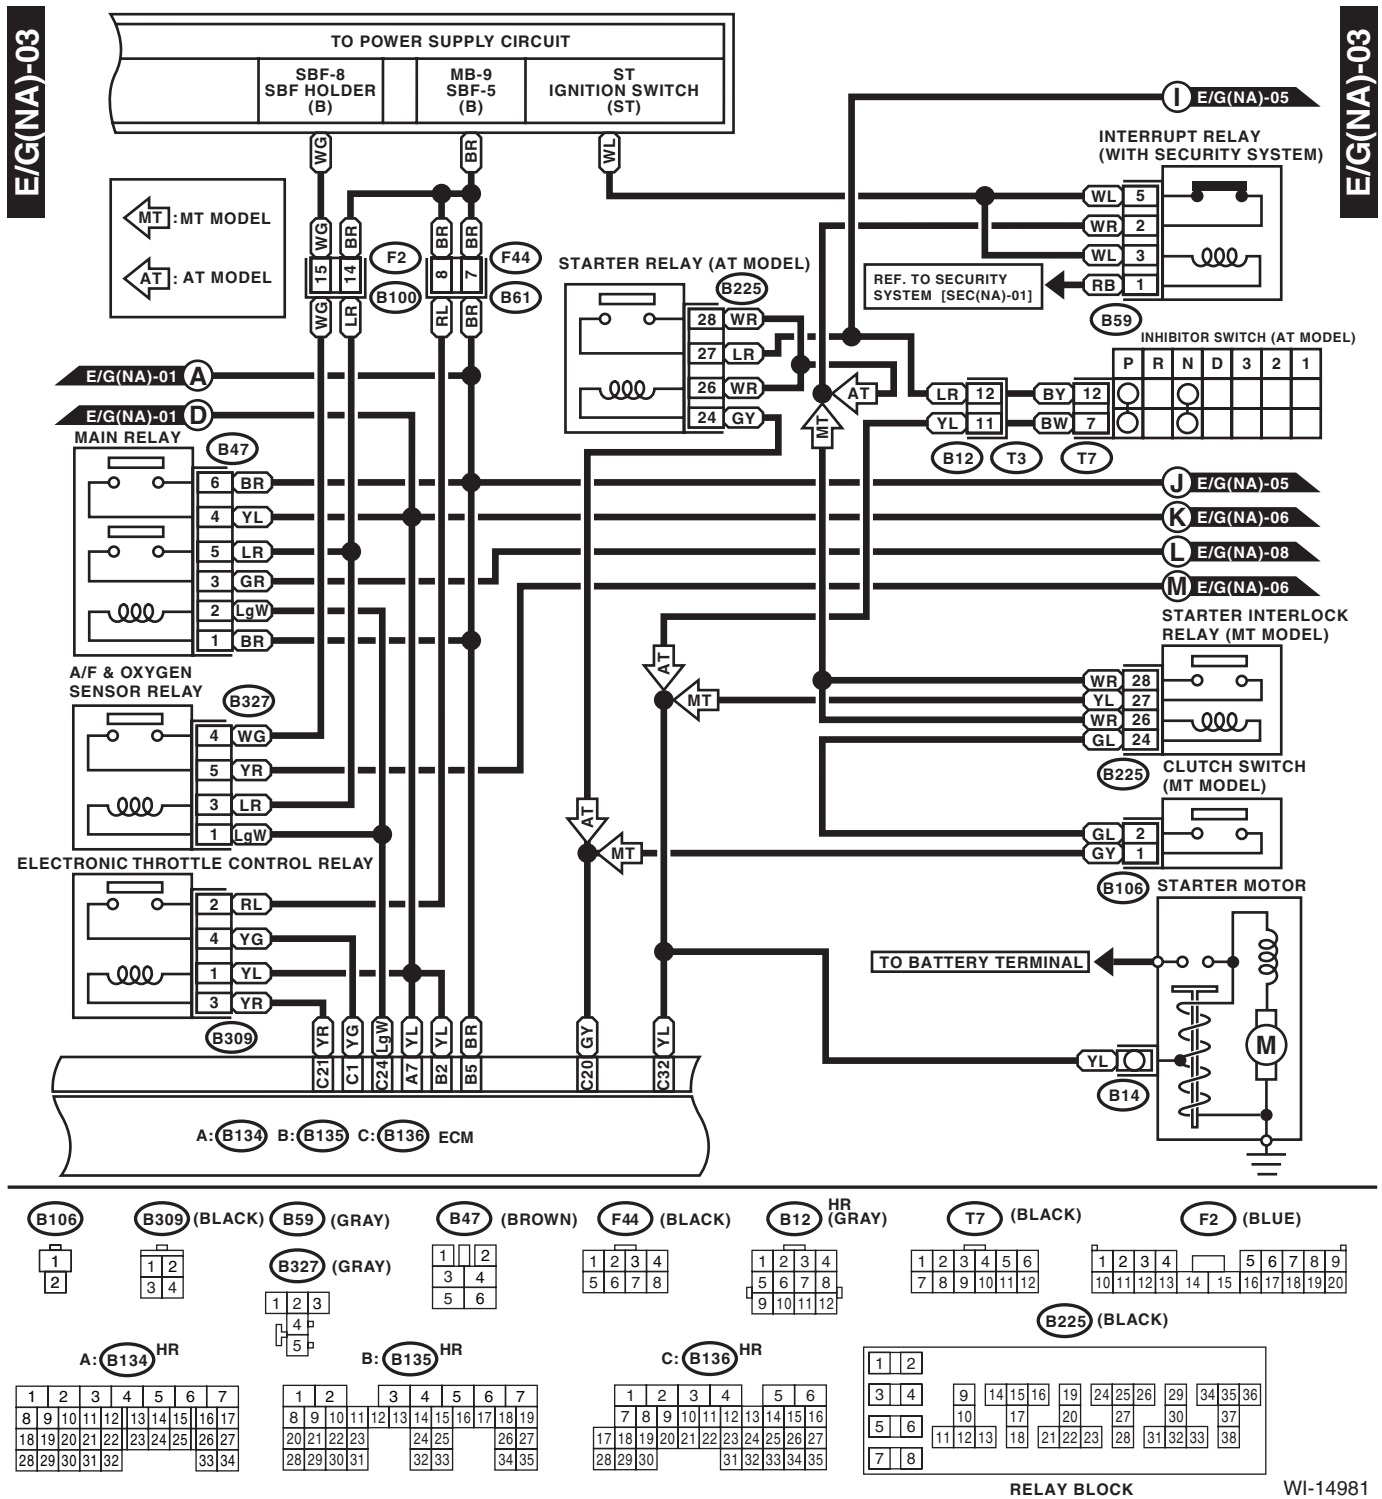

Download Complete manual for FREE @ <https://www.heydownloads.com>

E/G(NA)-04

E/G(NA)-04

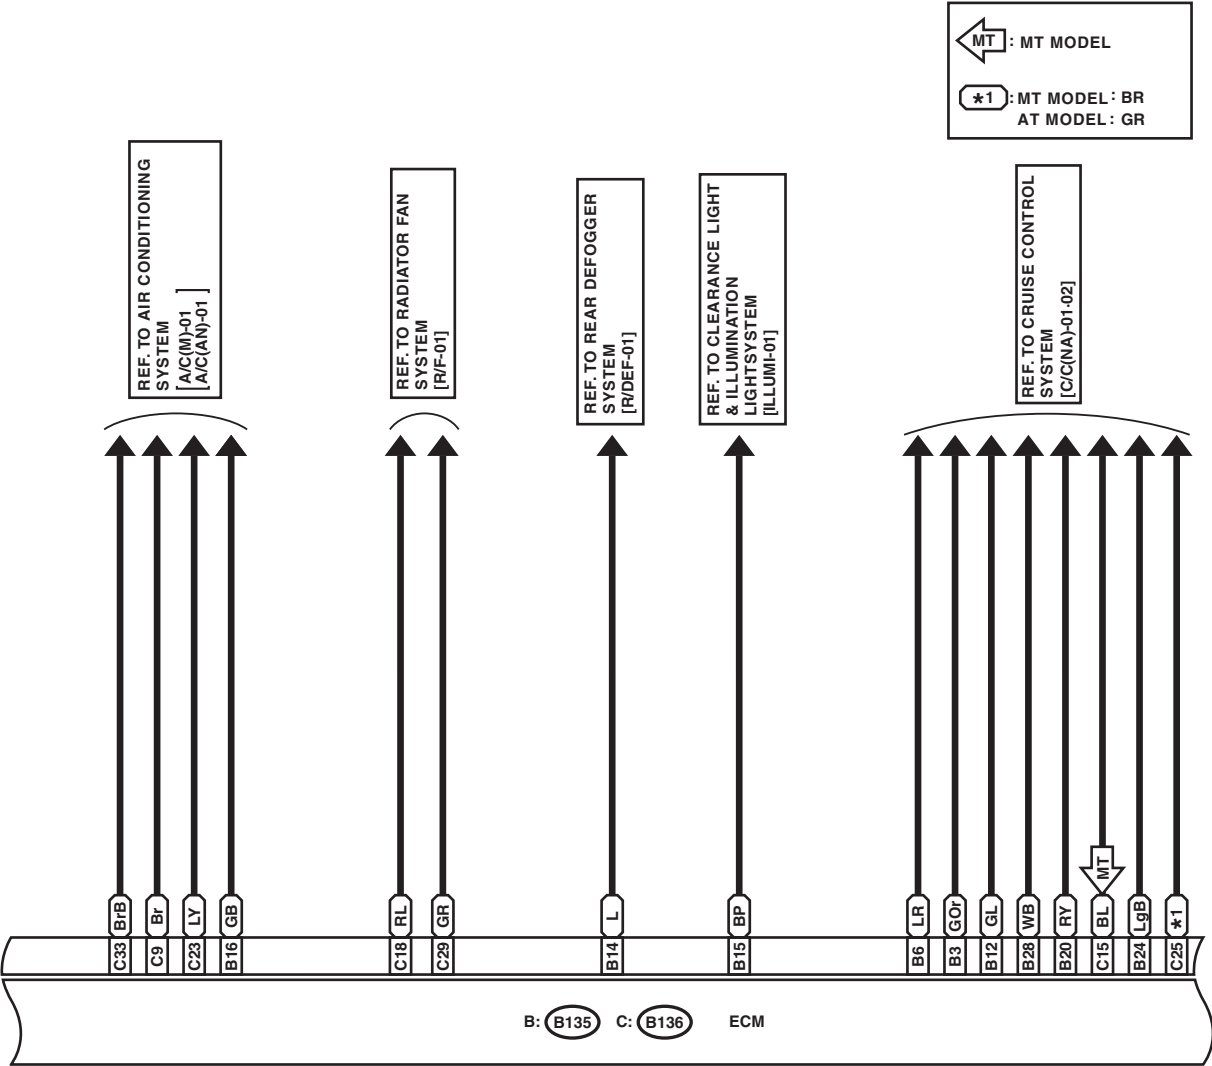

B: B135 HR


1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16	17	18	19	20	21
22	23	24	25	26	27	28
29	30	31	32	33	34	35

C: B136 HR

1	2	3	4	5	6
7	8	9	10	11	12
13	14	15	16	17	18
19	20	21	22	23	24
25	26	27	28	29	30
31	32	33	34	35	

Engine Electrical System

WIRING SYSTEM

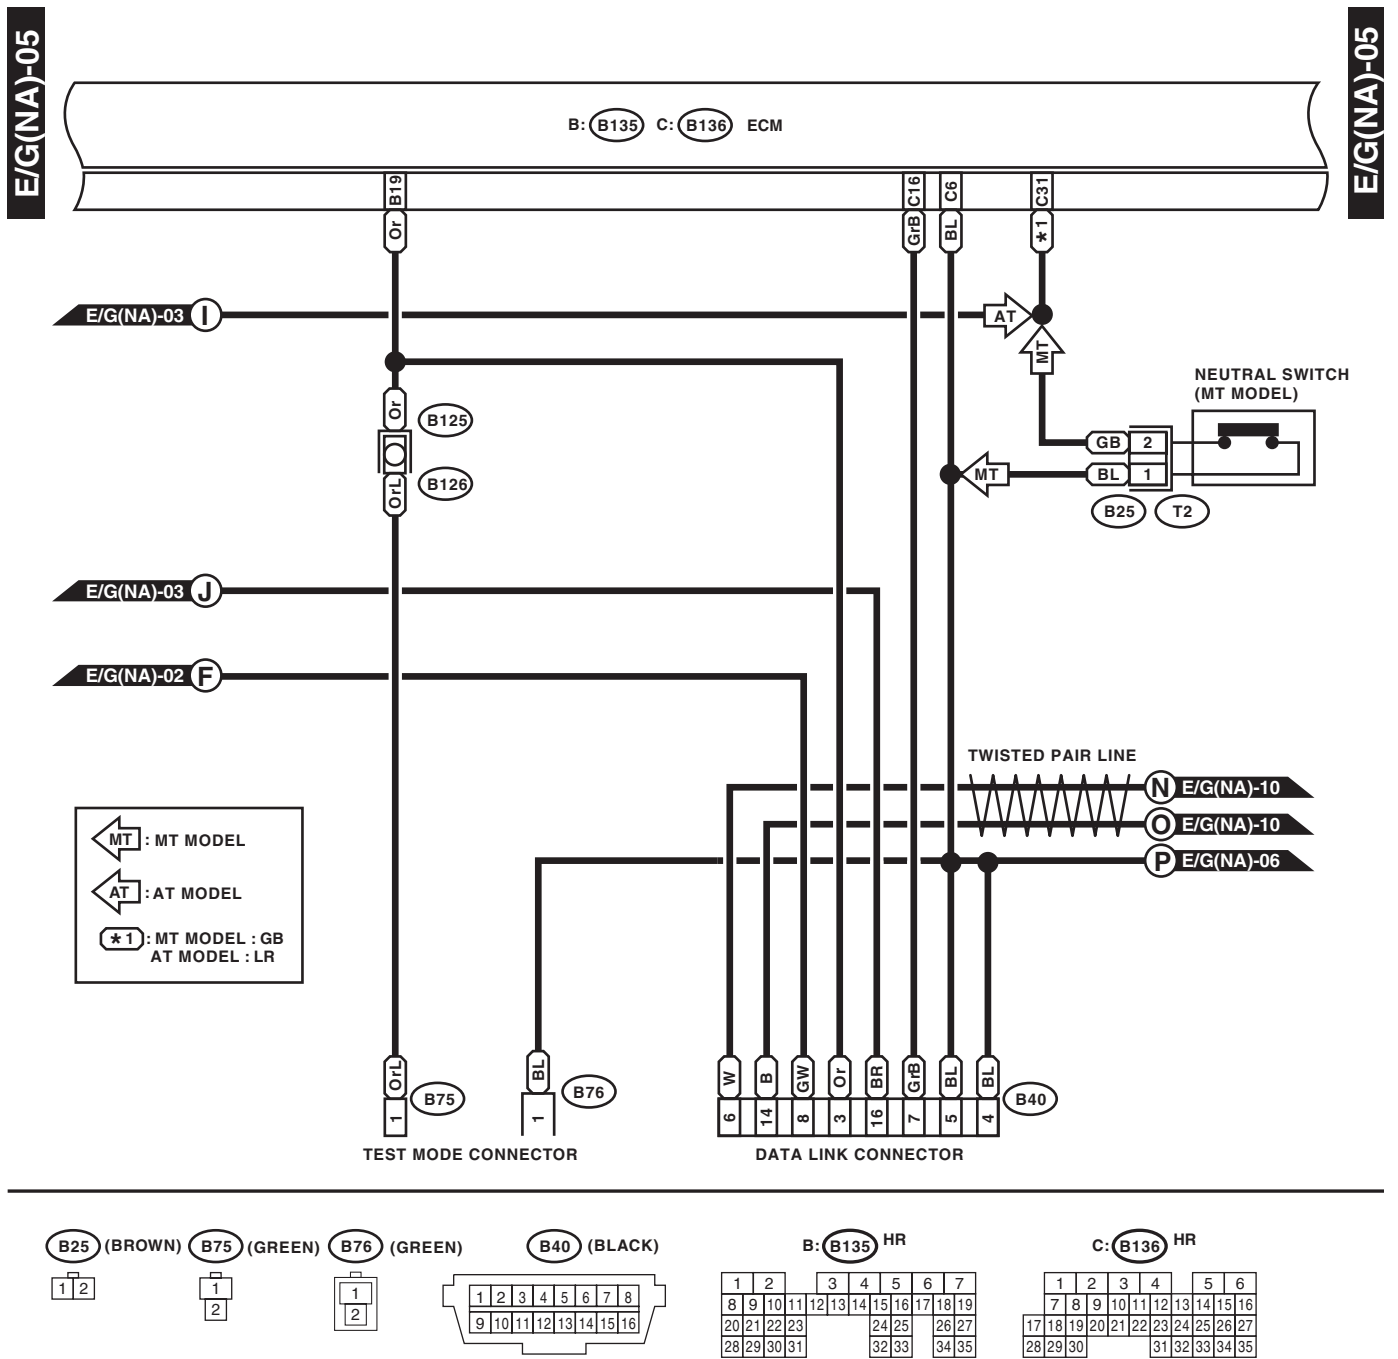


WI-14983

Download Complete manual for FREE @ <https://www.heydownloads.com>

Engine Electrical System

WIRING SYSTEM

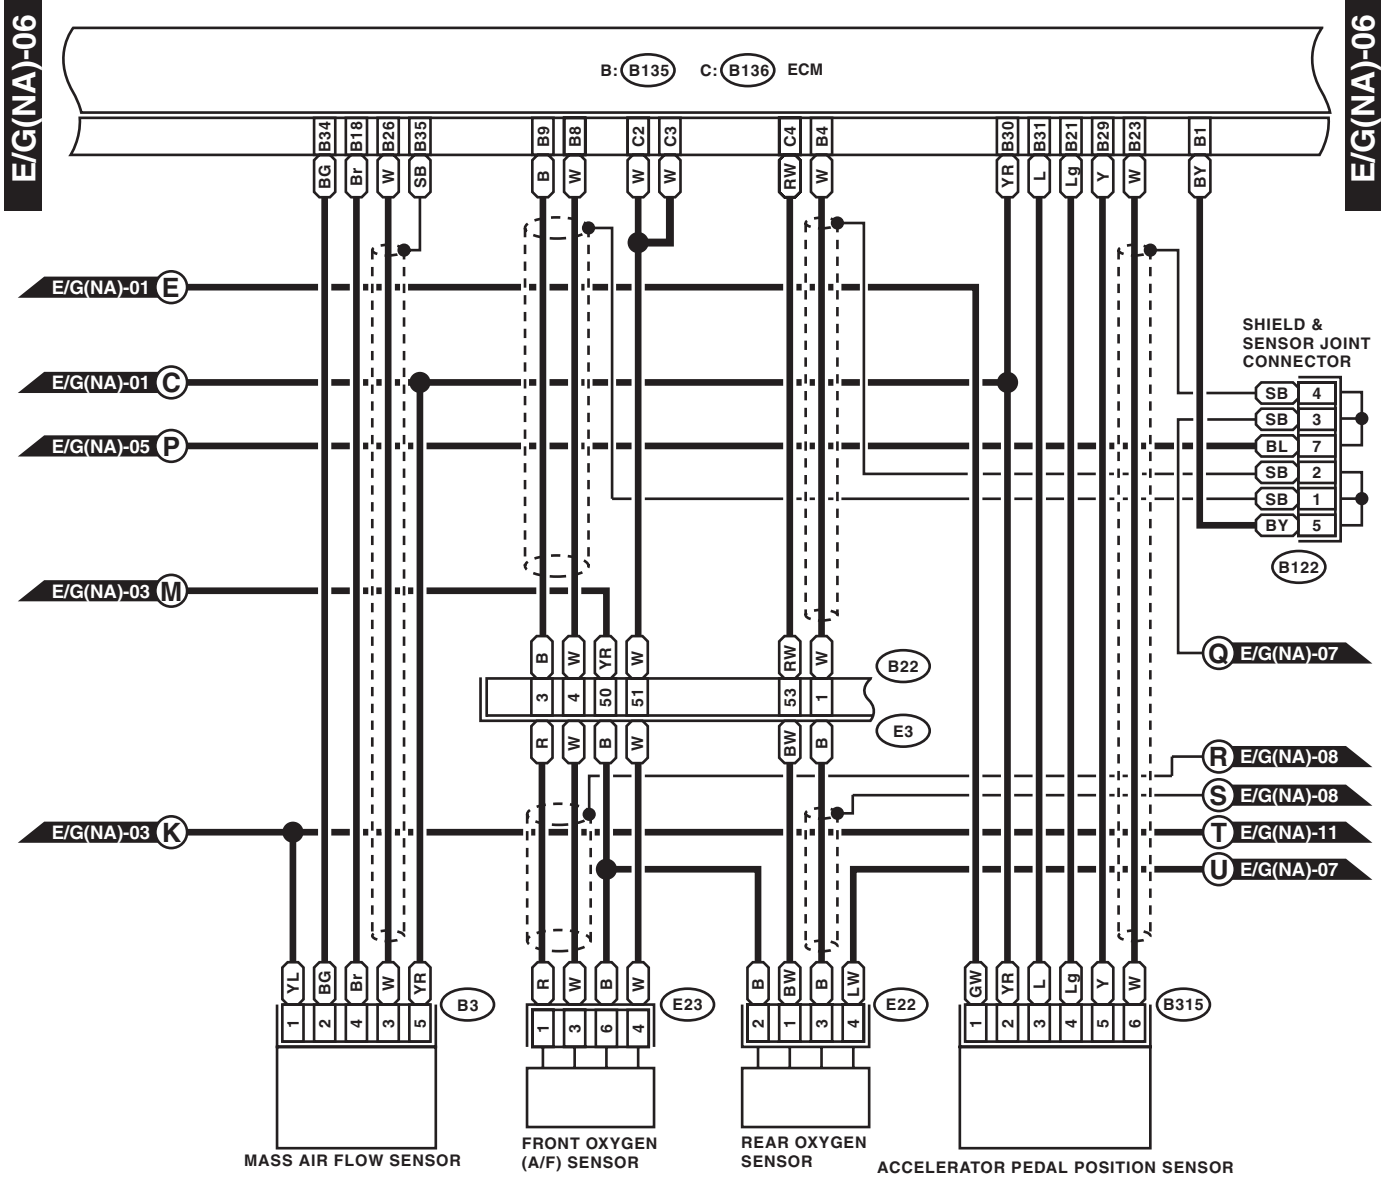

E22 (DARK GRAY)

1	2
3	4

B3 (BLACK)

1	2	3	4	5
---	---	---	---	---

B315 (BLACK)

1	2	3	4	5	6
---	---	---	---	---	---

E23 (BLACK)

3	2	1
6	5	4

B22 (BLACK)

1	2	3	4	5	6	7	8	9	10	11
12	13	14	15	16	17	18	19	20	21	22
23	24	25	26	27	28	29	30	31	32	33
34	35	36	37	38	39	40	41			
42	43	44	45	46	47					
48	49	50	51	52	53	54				

B122

1	2	3	4
5	6	7	8

B: B135 HR

1	2		3	4	5	6	7
8	9	10	11	12	13	14	15
16	17	18	19	20	21	22	23
24	25	26	27	28	29	30	31
32	33	34	35				


C: B136 HR

1	2	3	4	5	6
7	8	9	10	11	12
13	14	15	16	17	18
19	20	21	22	23	24
25	26	27	28	29	30
31	32	33	34	35	

WI-14984

Engine Electrical System

WIRING SYSTEM


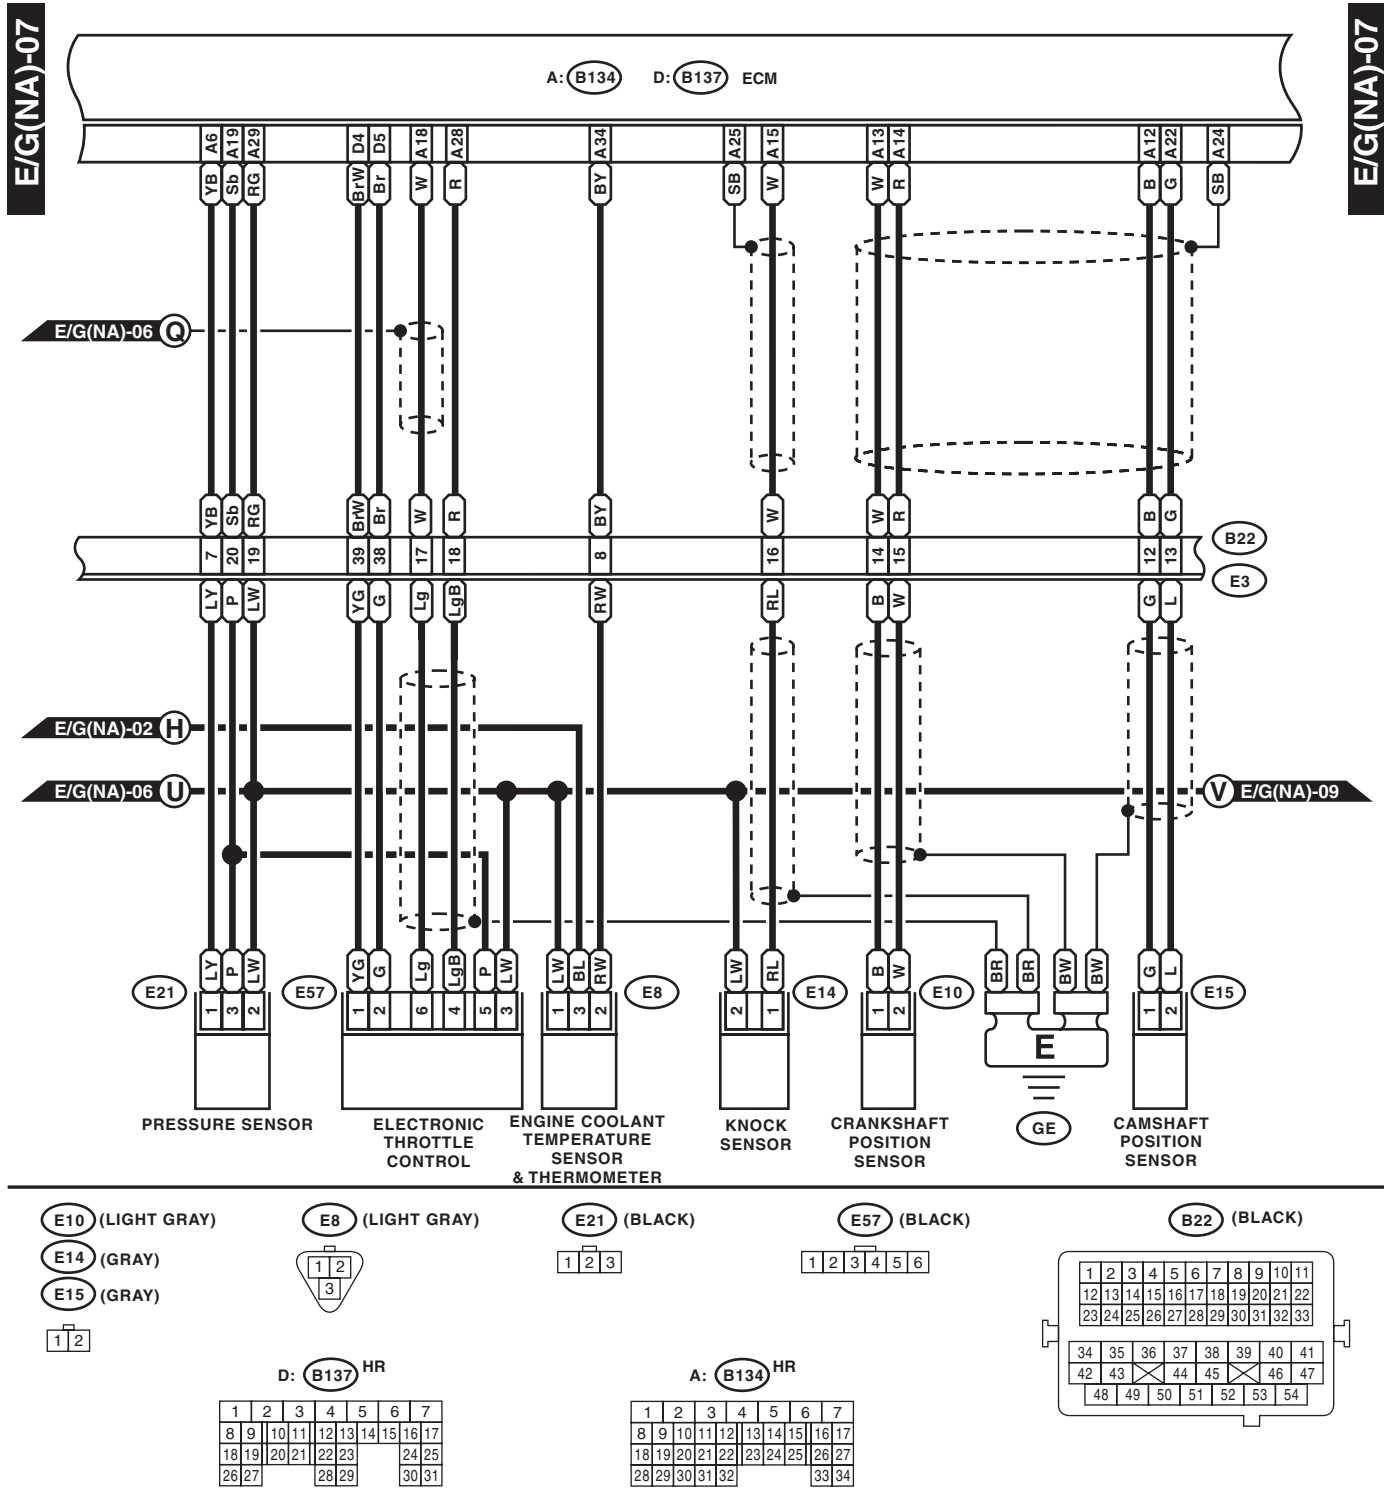


WI-14985






Download Complete manual for FREE @ <https://www.heydownloads.com>

Engine Electrical System

WIRING SYSTEM

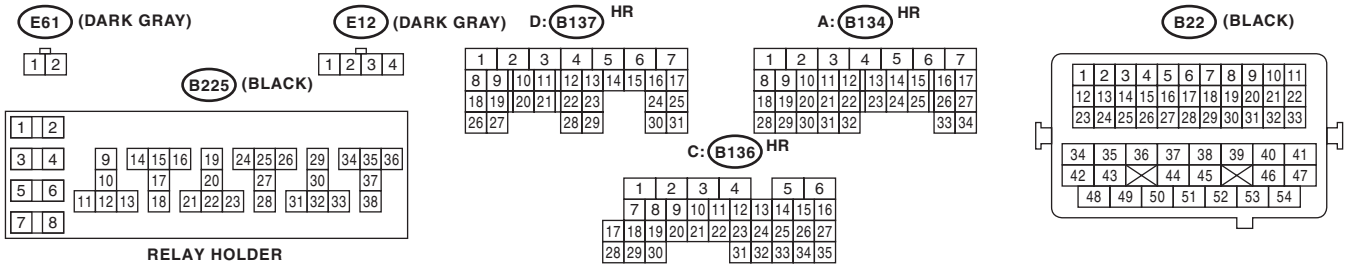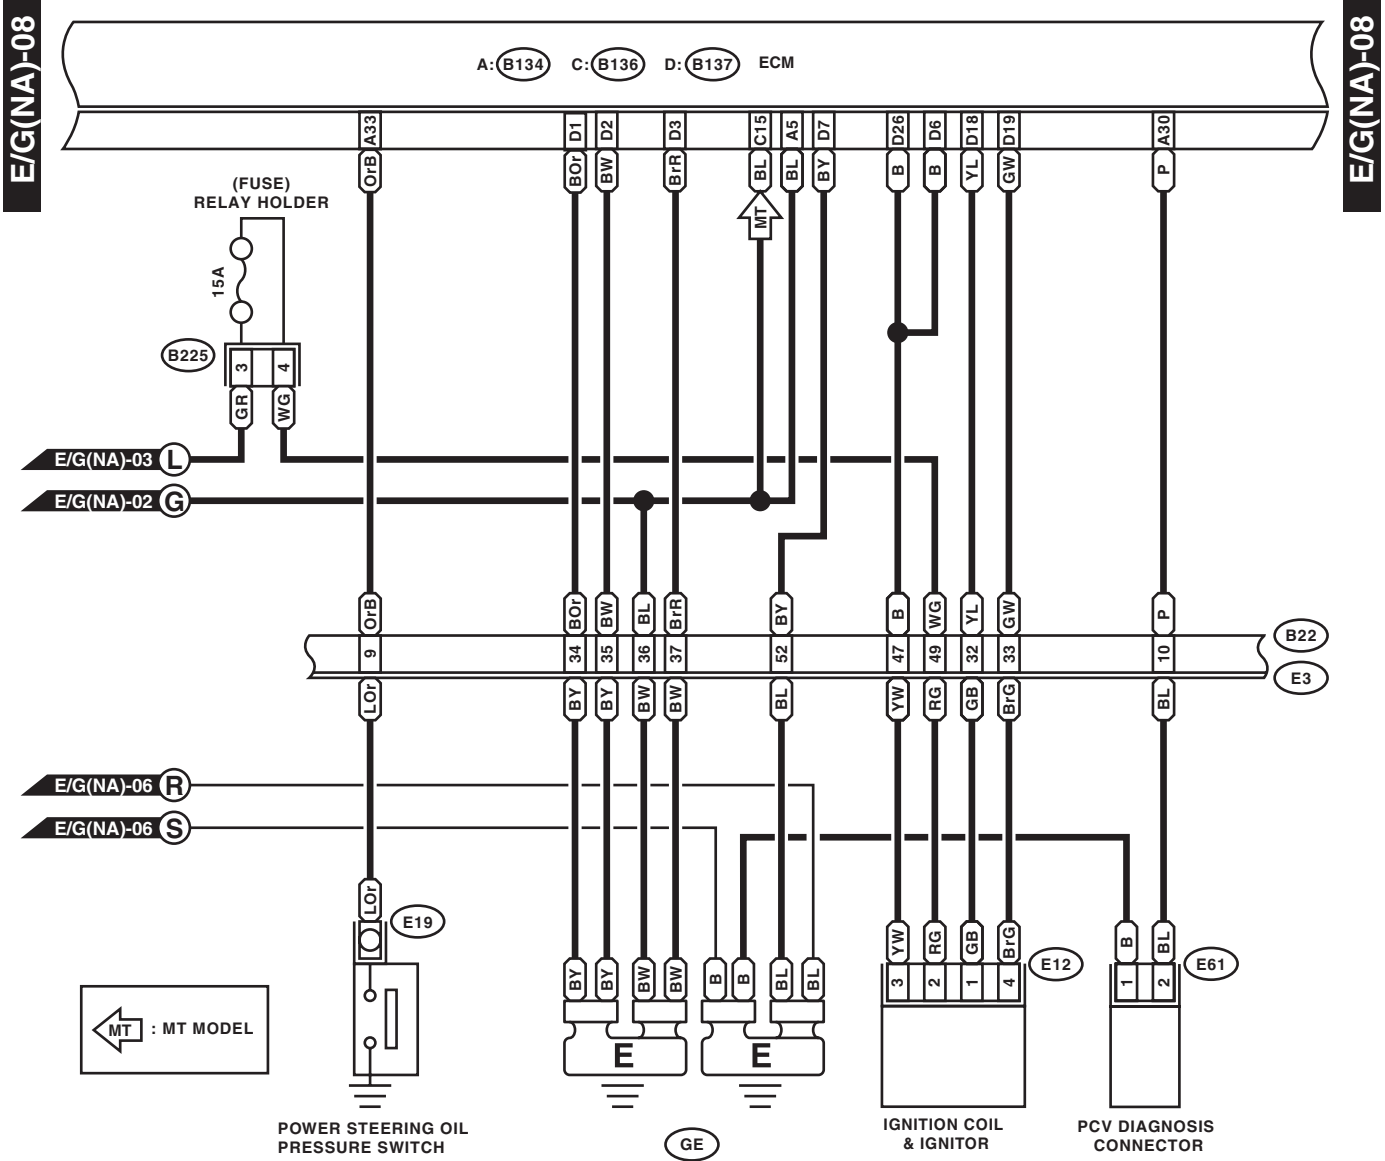


WI-14986

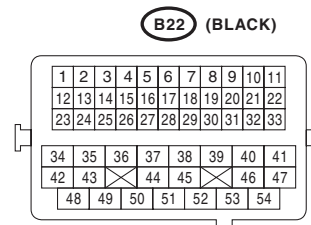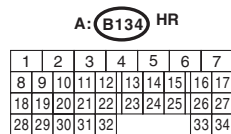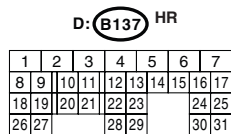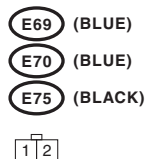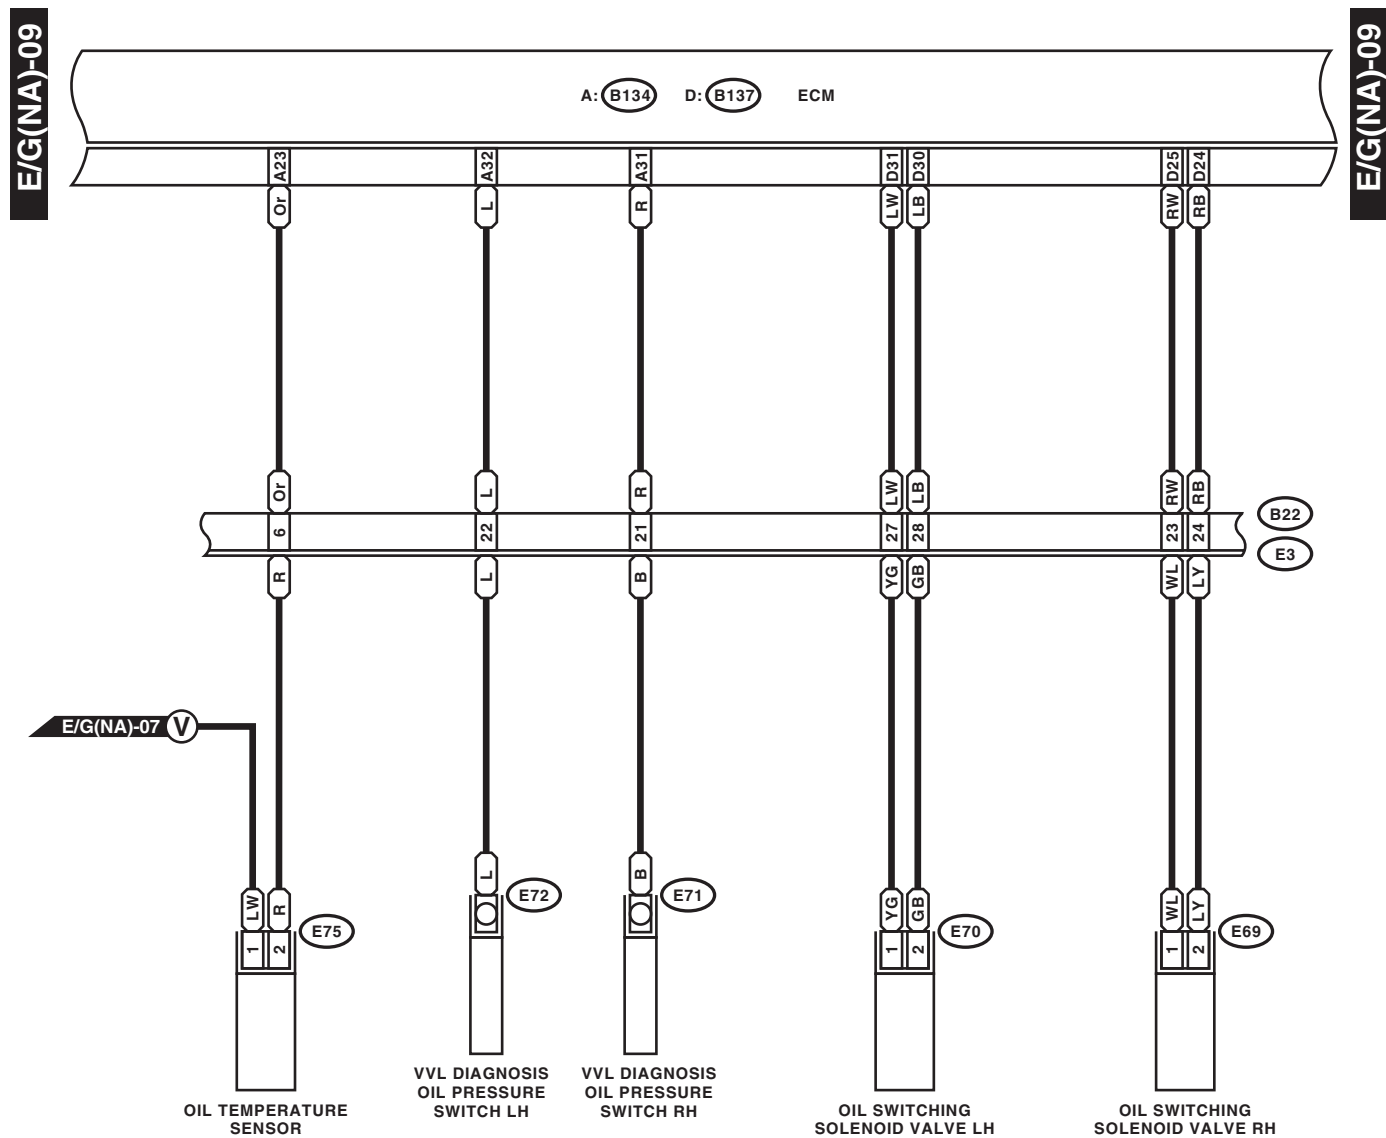

WI-14987

E/G(NA)-10

E/G(NA)-10

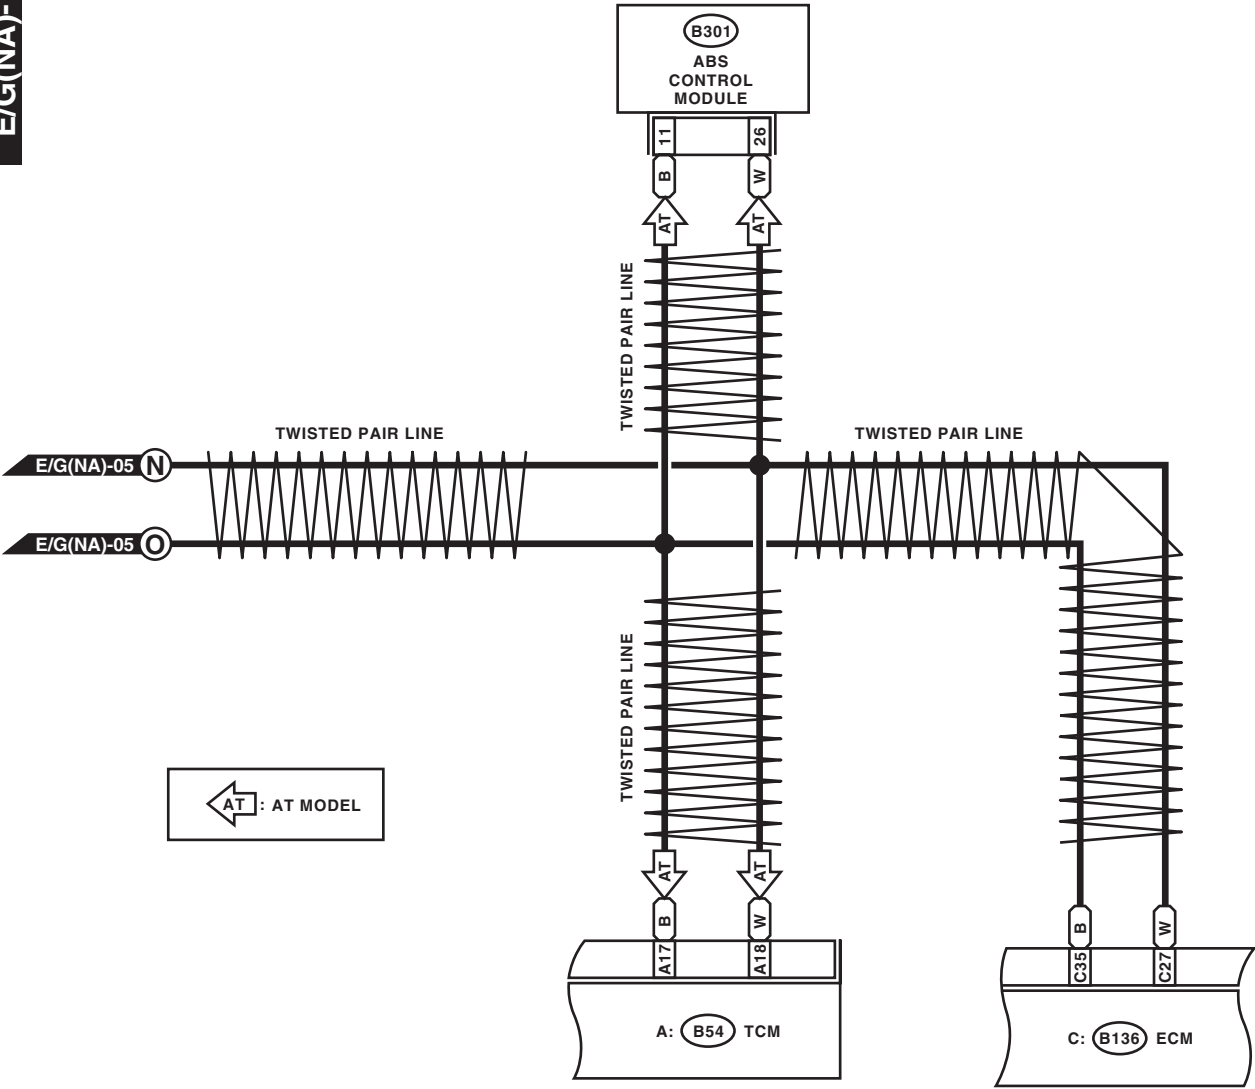

(B301) (BLACK)

12	13	14	15	1	2	3	4	5	6	7	8	9	10	11
16	17	18	19	20	21	22	23	24	25	26				


A: (B54) HR

C: (B136) HR

1	2	3	4	5	6
7	8	9	10	11	12
13	14	15	16		
17	18	19	20	21	22
23	24	25	26	27	
28	29	30	31	32	33
34	35				

Engine Electrical System

WIRING SYSTEM

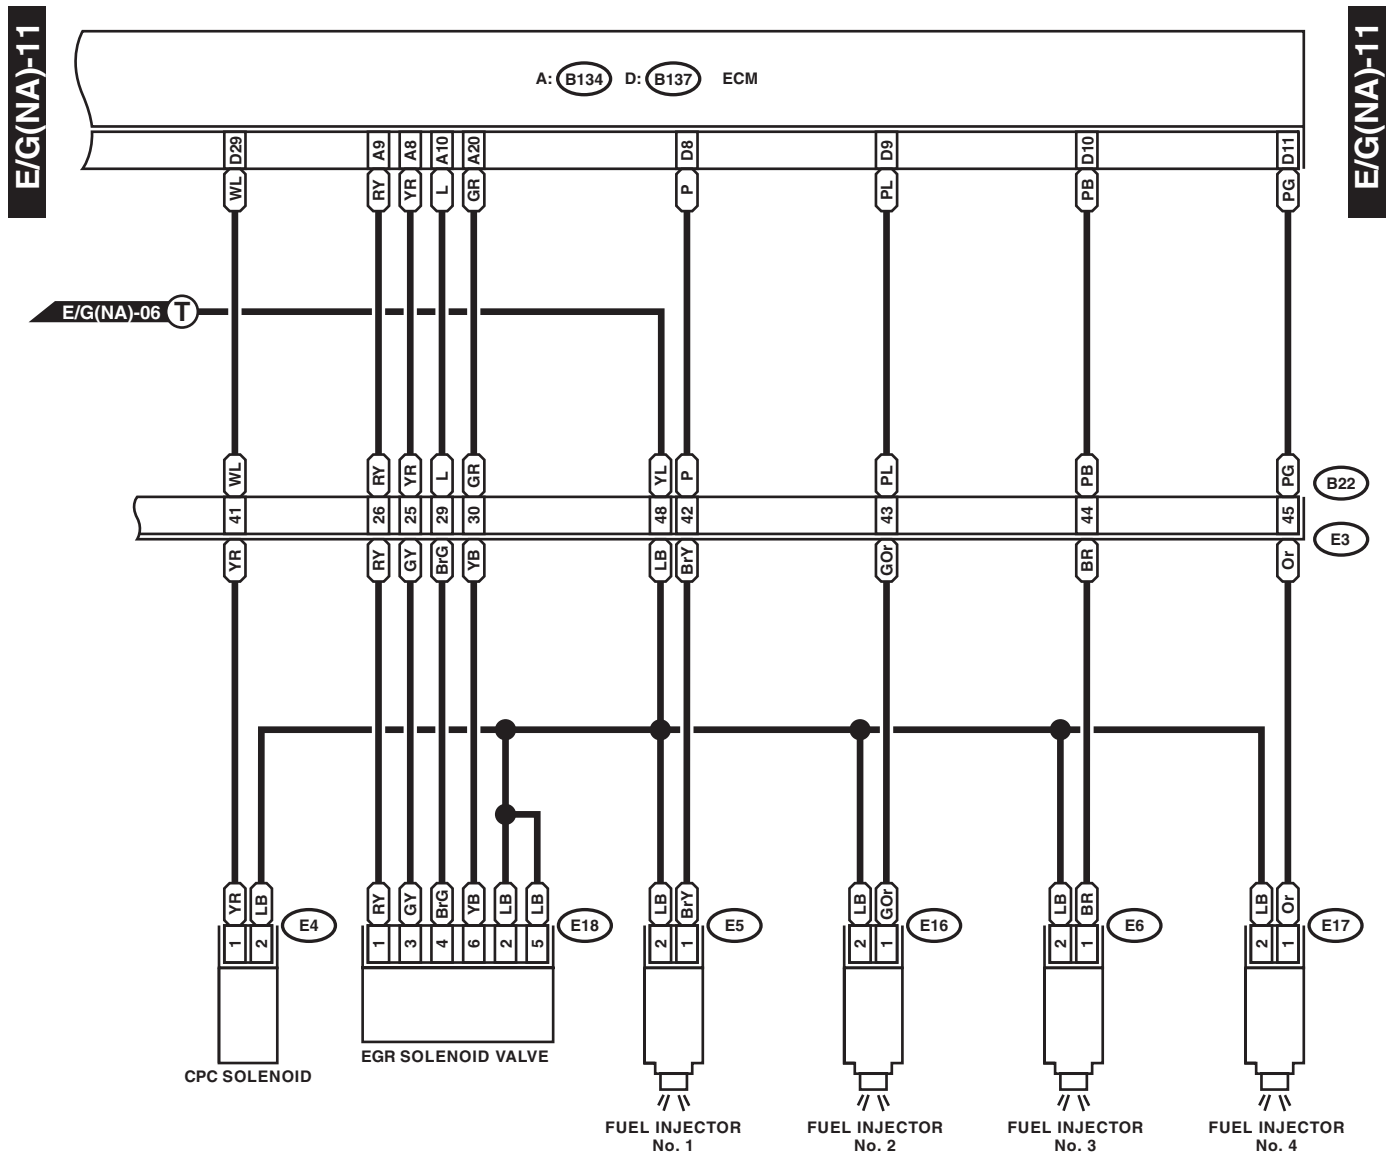

E4 (BLACK) E18 (DARK GRAY)

E5 (DARK GRAY) E6 (DARK GRAY)

E16 (DARK GRAY)

E17 (DARK GRAY)

1 2

D: B137 HR

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16	17	18	19	20	21
22	23	24	25	26	27	28
29	30	31	32	33	34	35

A: B134 HR

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16	17	18	19	20	21
22	23	24	25	26	27	28
29	30	31	32	33	34	35

B22 (BLACK)

1	2	3	4	5	6	7	8	9	10	11
12	13	14	15	16	17	18	19	20	21	22
23	24	25	26	27	28	29	30	31	32	33
34	35	36	37	38	39	40	41	42	43	44
45	46	47	48	49	50	51	52	53	54	55


WI-14989

Download Complete manual for FREE @ <https://www.heydownloads.com>

Engine Electrical System

WIRING SYSTEM


2. TURBO MODEL

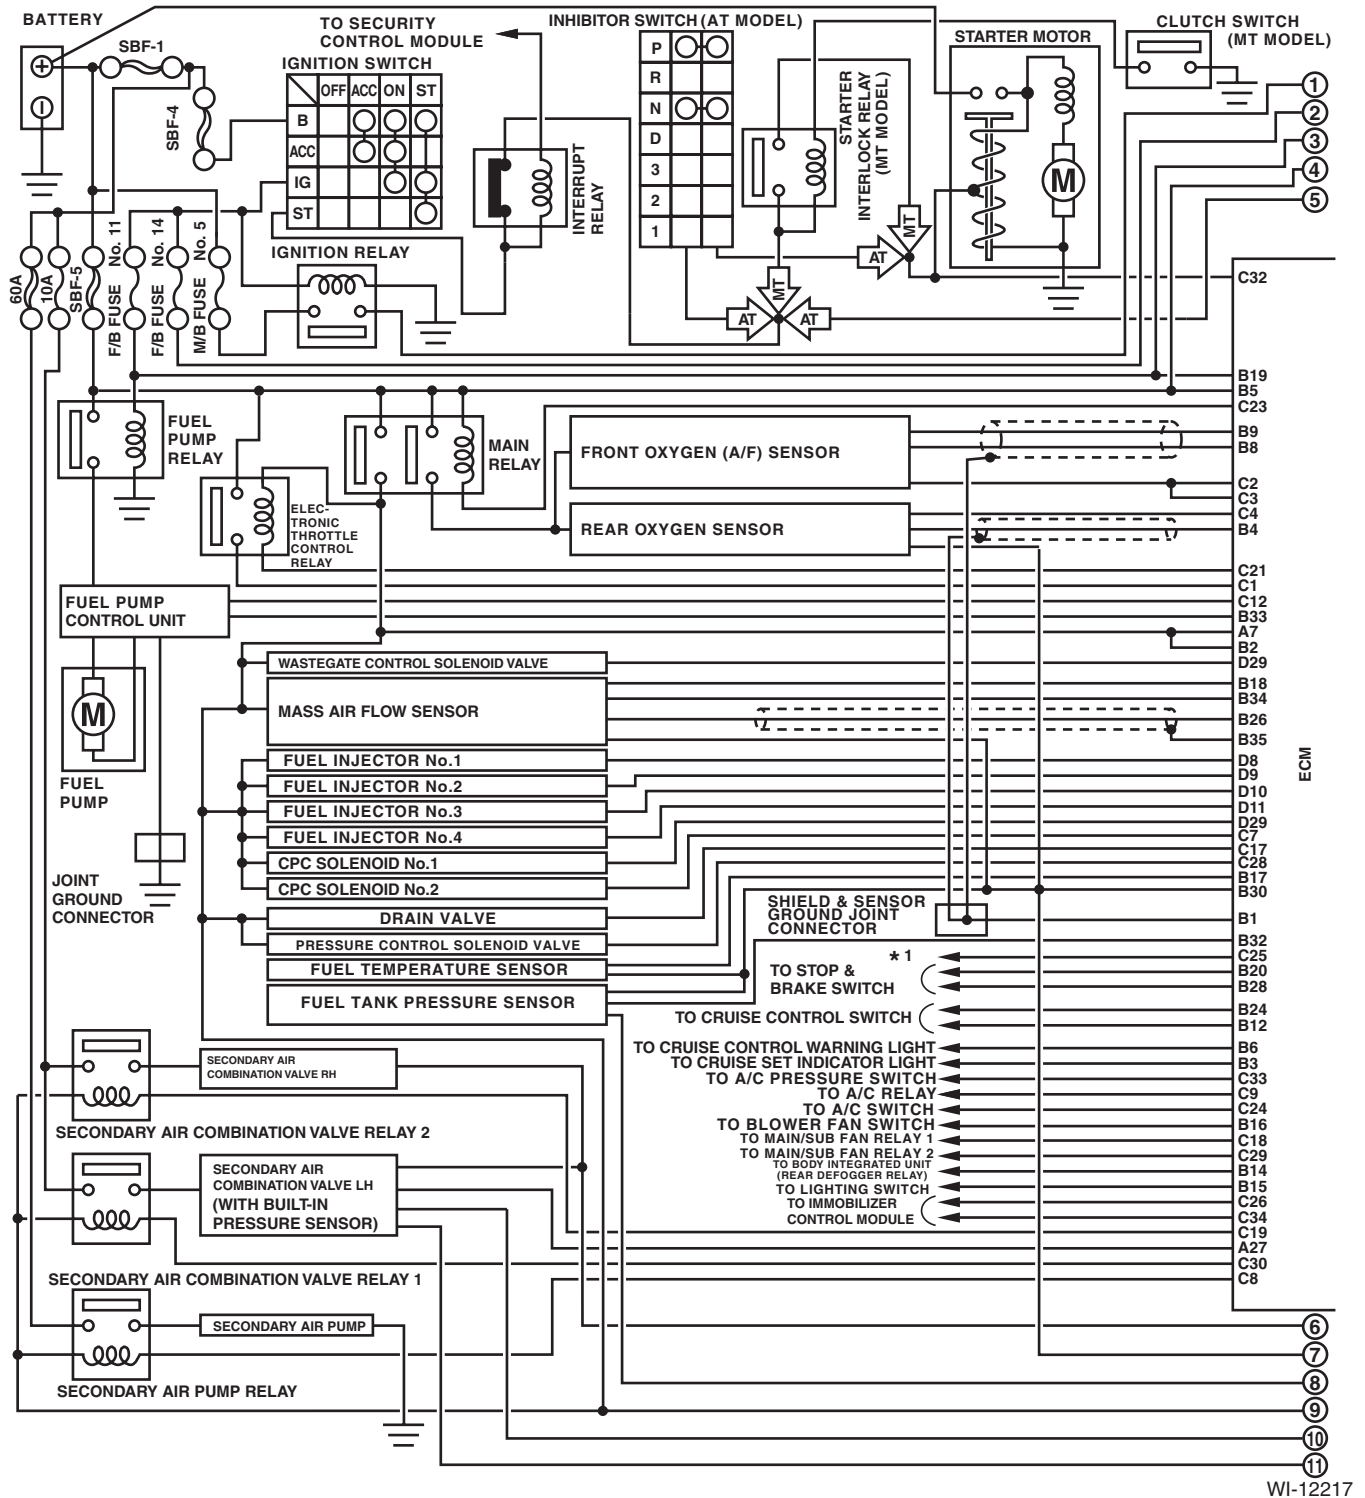

Download Complete manual for FREE @ <https://www.heydownloads.com>

Engine Electrical System


WIRING SYSTEM

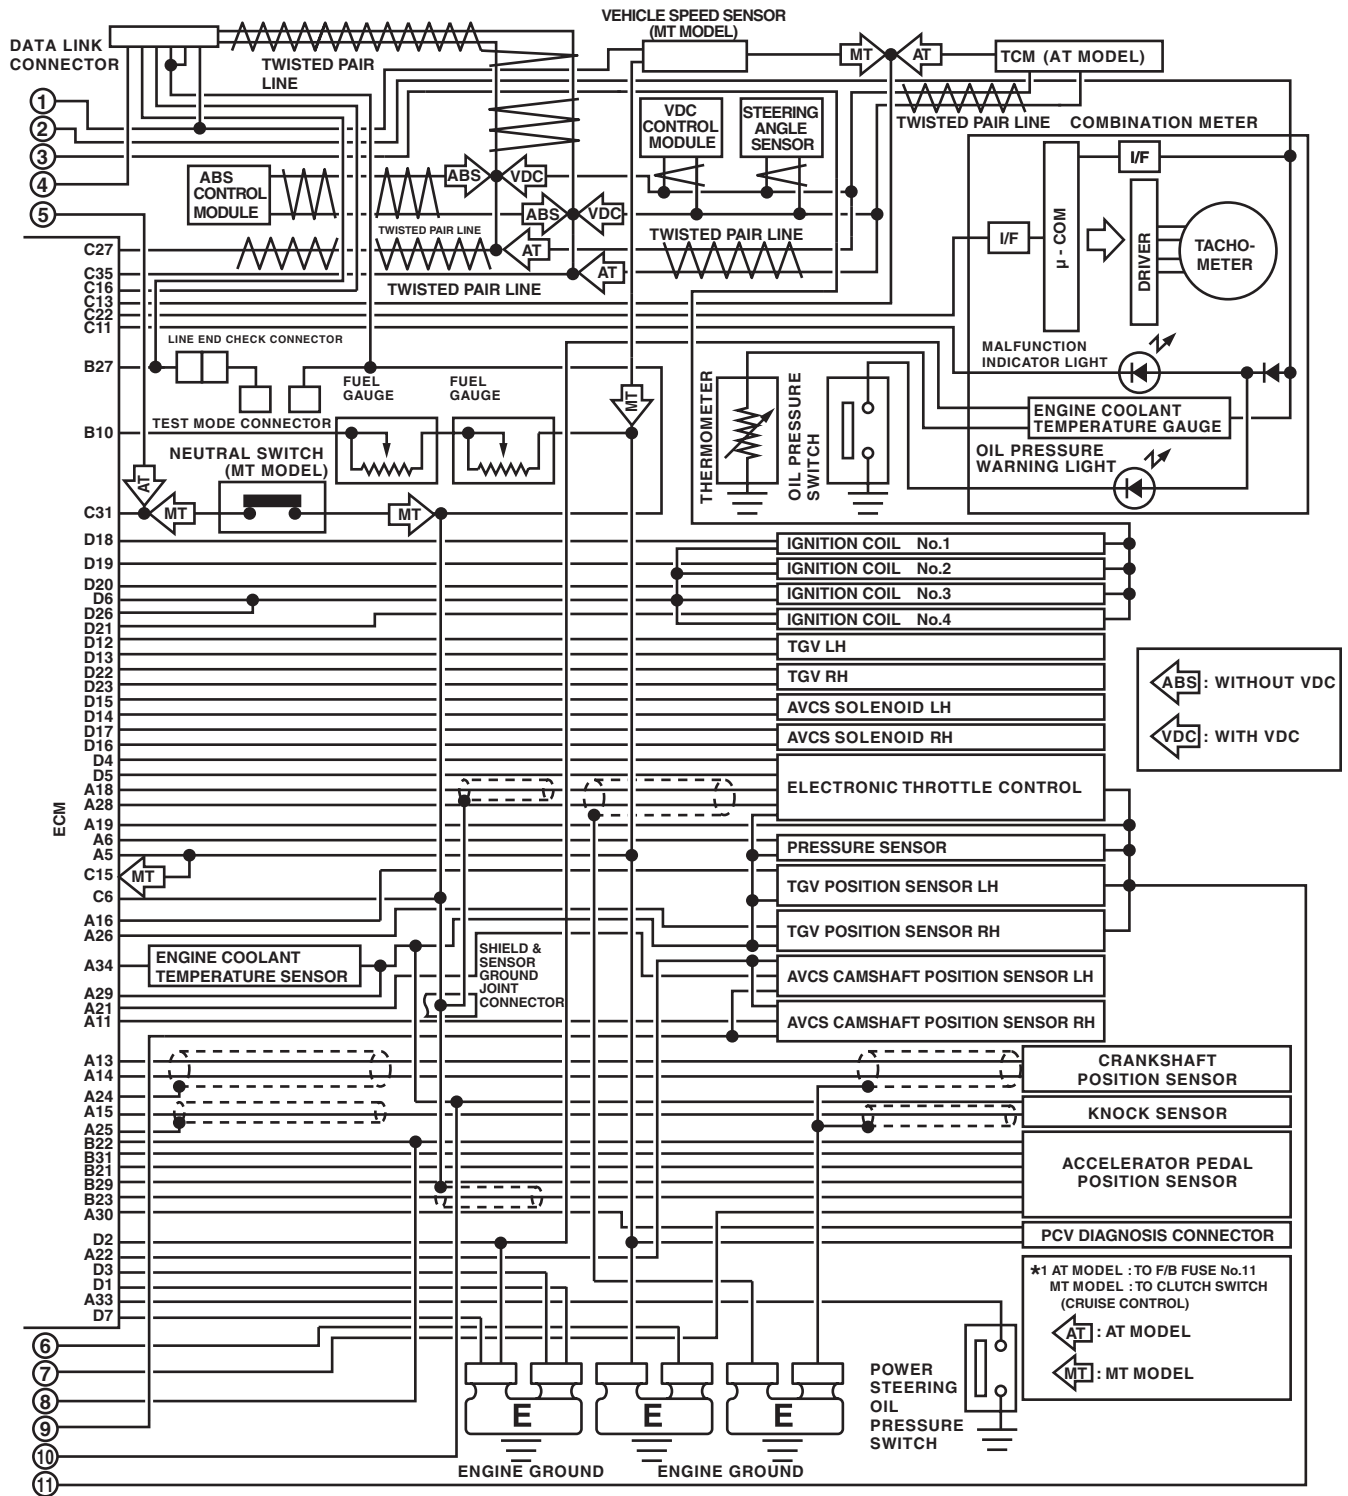

WI-15233

Engine Electrical System

WIRING SYSTEM

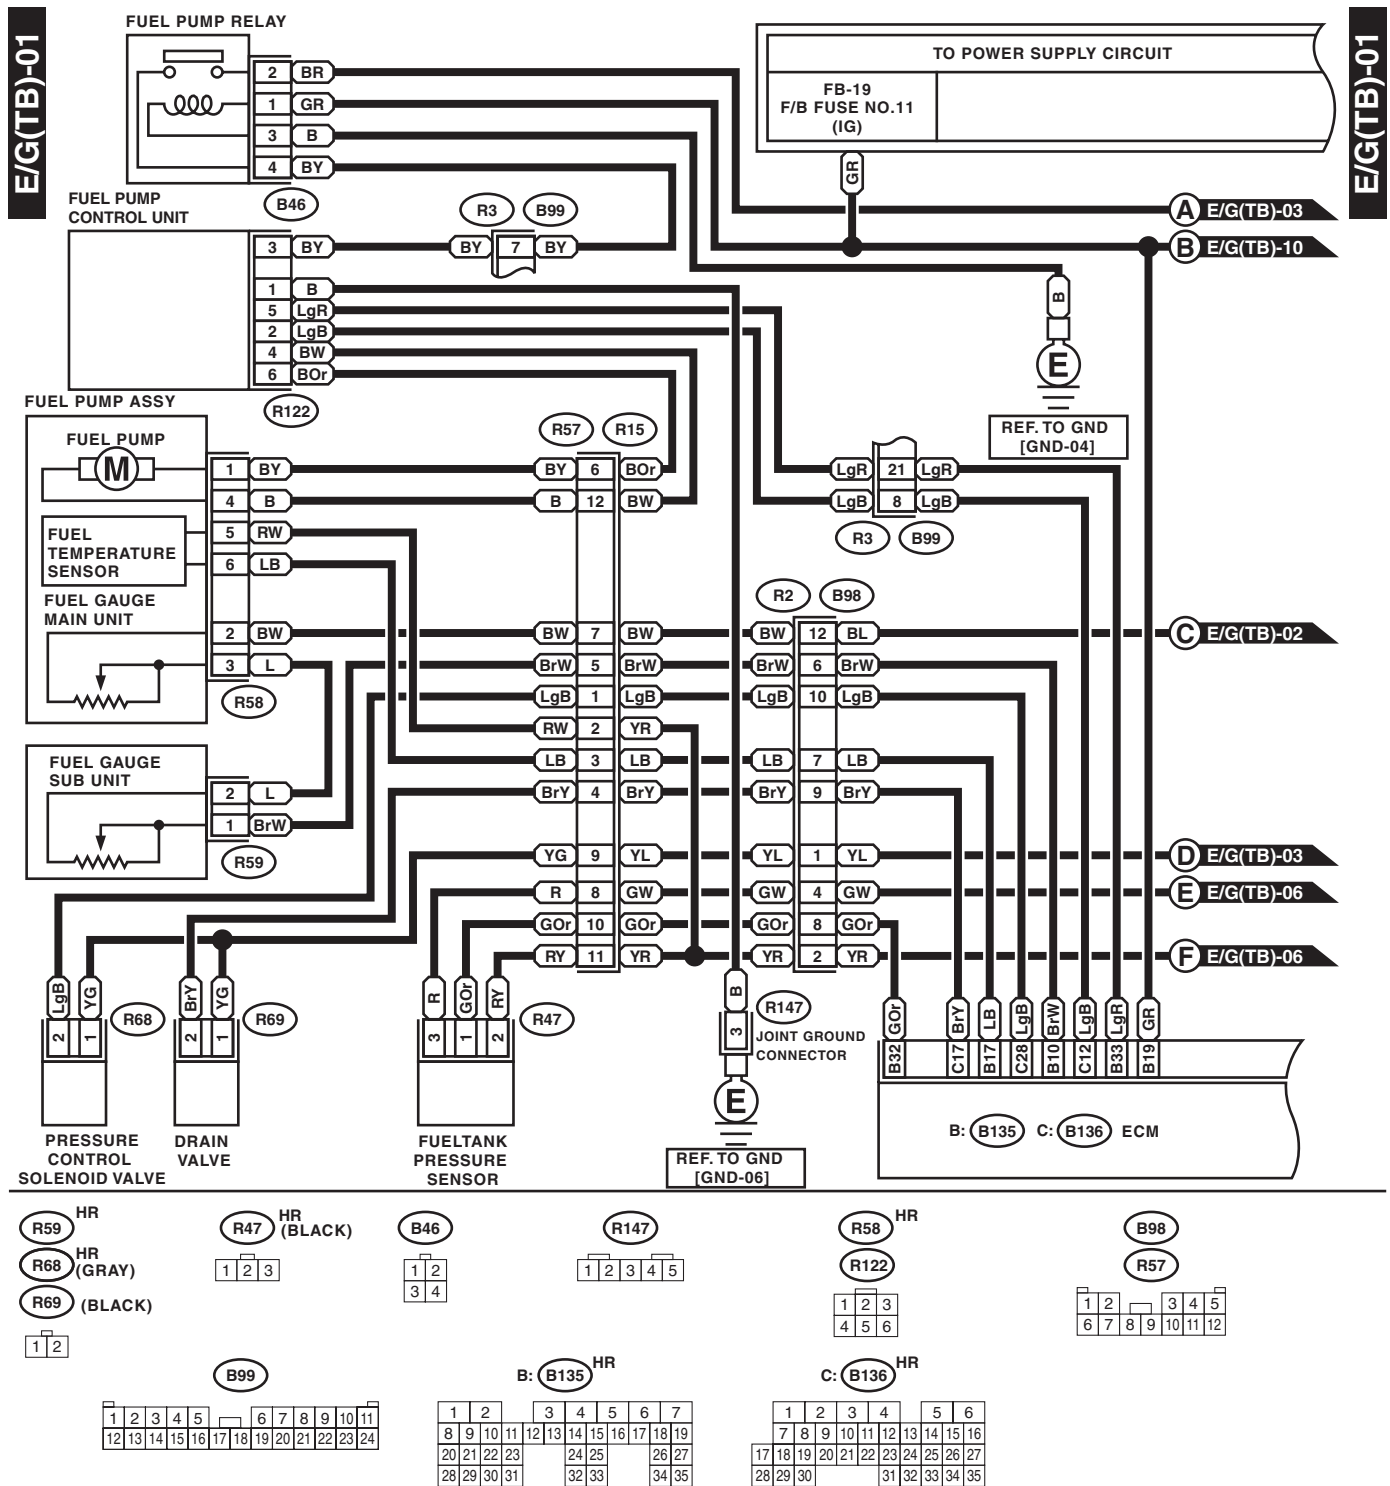


WI-14990

Download Complete manual for FREE @ <https://www.heydownloads.com>

Engine Electrical System

WIRING SYSTEM

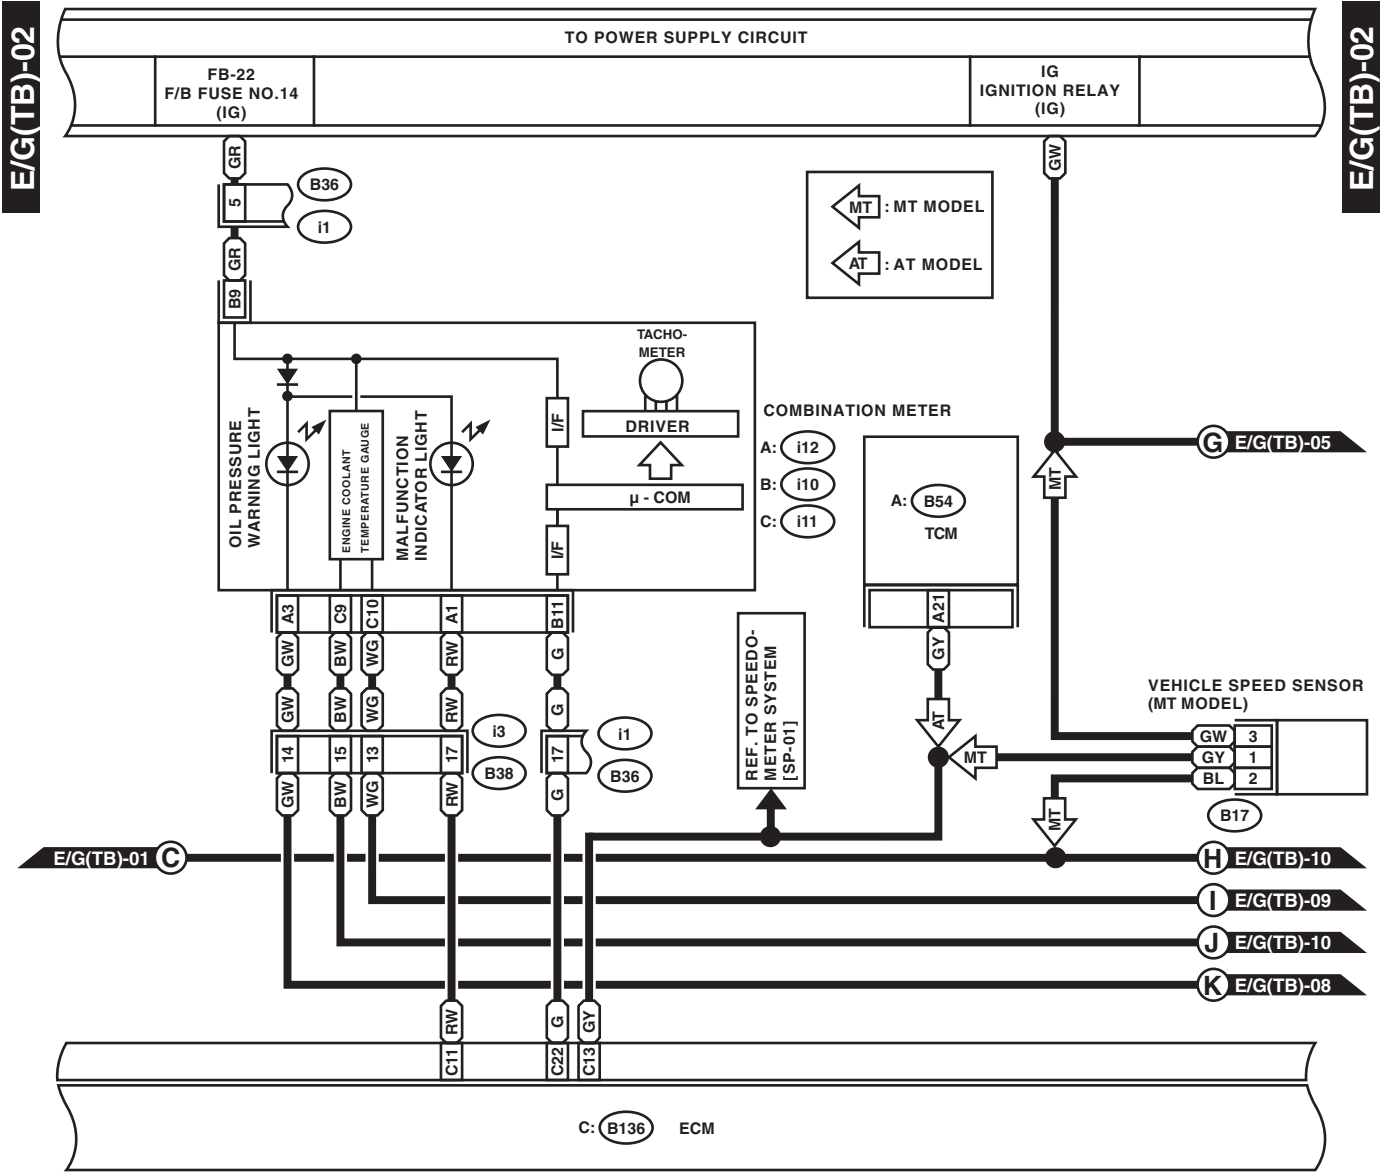

B17 HR (BLACK)

1	2
3	4

C: i11 (GREEN)

1	2	3	4	5	6	7	8	9	10
---	---	---	---	---	---	---	---	---	----

A: i12 (GREEN)

1	2	3	4	5	6
7	8	9	10	11	12
13	14	15	16	17	18

B36

1	2	3	4	5	6	7	8	9	10	11
12	13	14	15	16	17	18	19	20	21	22
23	24	25	26	27	28	29	30	31	32	33

B: i10 (GREEN)

1	2	3	4	5	6	7	8	9	10	11	12	13	14
15	16	17	18	19	20	21	22	23	24	25	26	27	28
29	30	31	32	33	34	35	36	37	38	39	40	41	42

B38

1	2	3	4	5	6	7	8	9	10	11	12	13	14
15	16	17	18	19	20	21	22	23	24	25	26	27	28
29	30	31	32	33	34	35	36	37	38	39	40	41	42


A: B54 HR C: B136 HR

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32
33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48

WI-14991

Engine Electrical System


WIRING SYSTEM

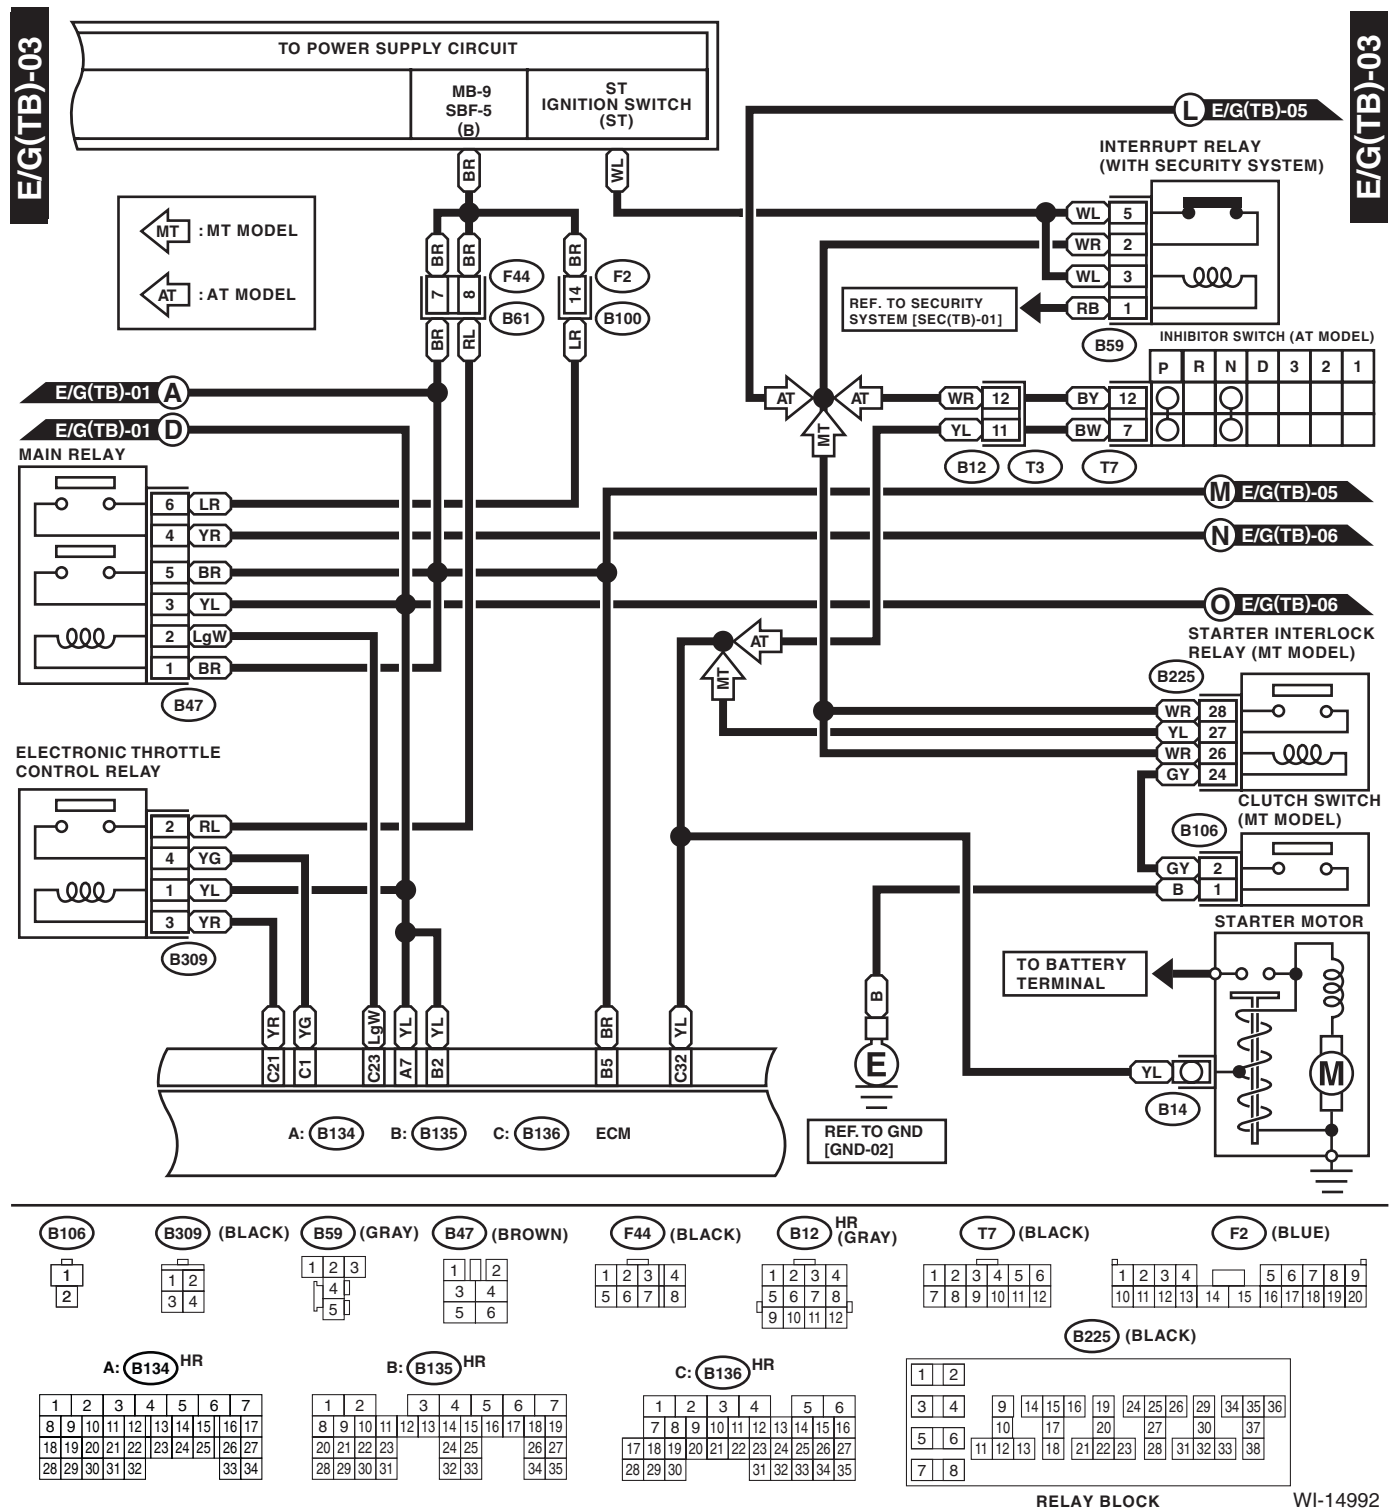

Download Complete manual for FREE @ <https://www.heydownloads.com>

E/G(TB)-04

E/G(TB)-04

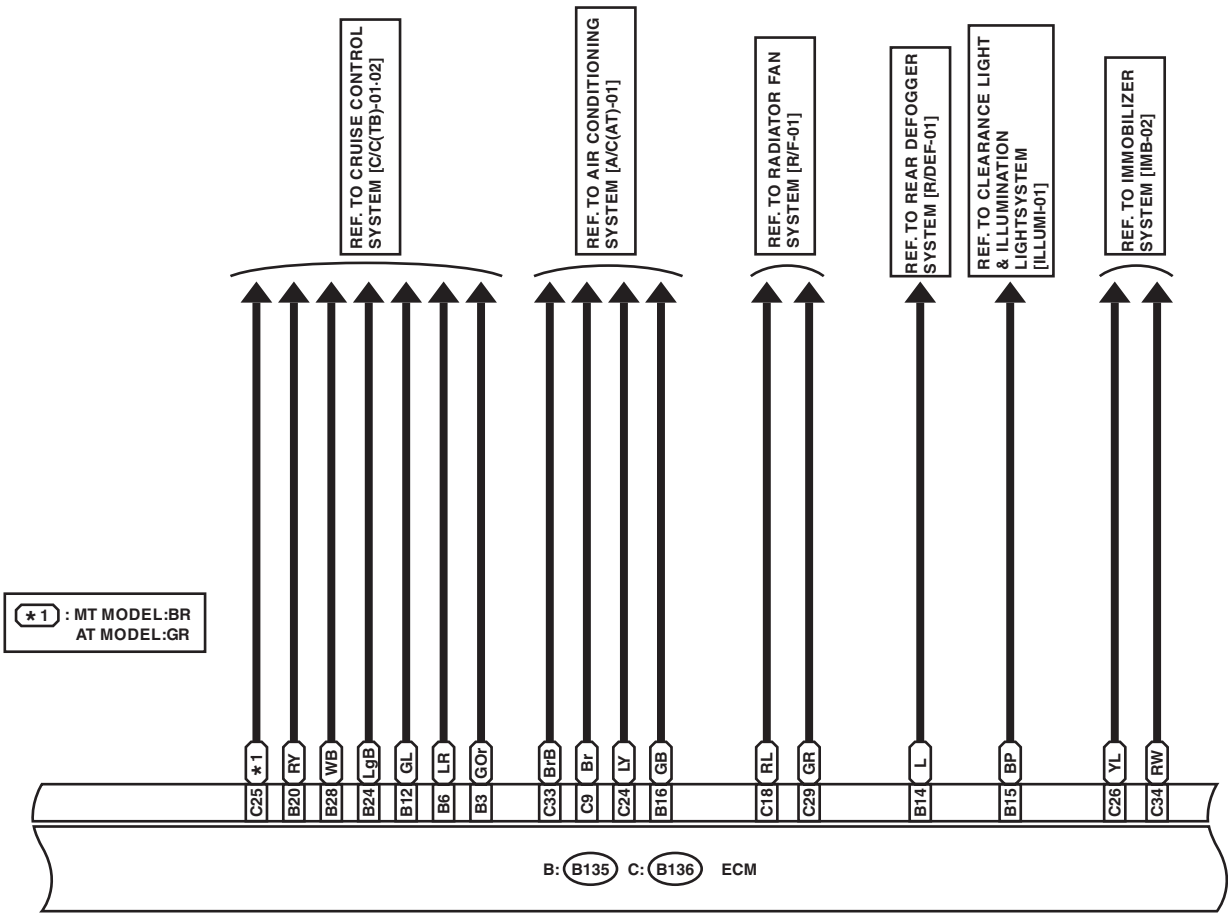

B: B135 HR


1	2		3	4	5	6	7
8	9	10	11	12	13	14	15
16	17	18	19	20	21	22	23
24	25		26	27			
28	29	30	31	32	33	34	35

C: B136 HR

1	2	3	4		5	6
7	8	9	10	11	12	13
14	15	16	17	18	19	20
21	22	23	24	25	26	27
28	29	30	31	32	33	34
35						

Engine Electrical System

WIRING SYSTEM

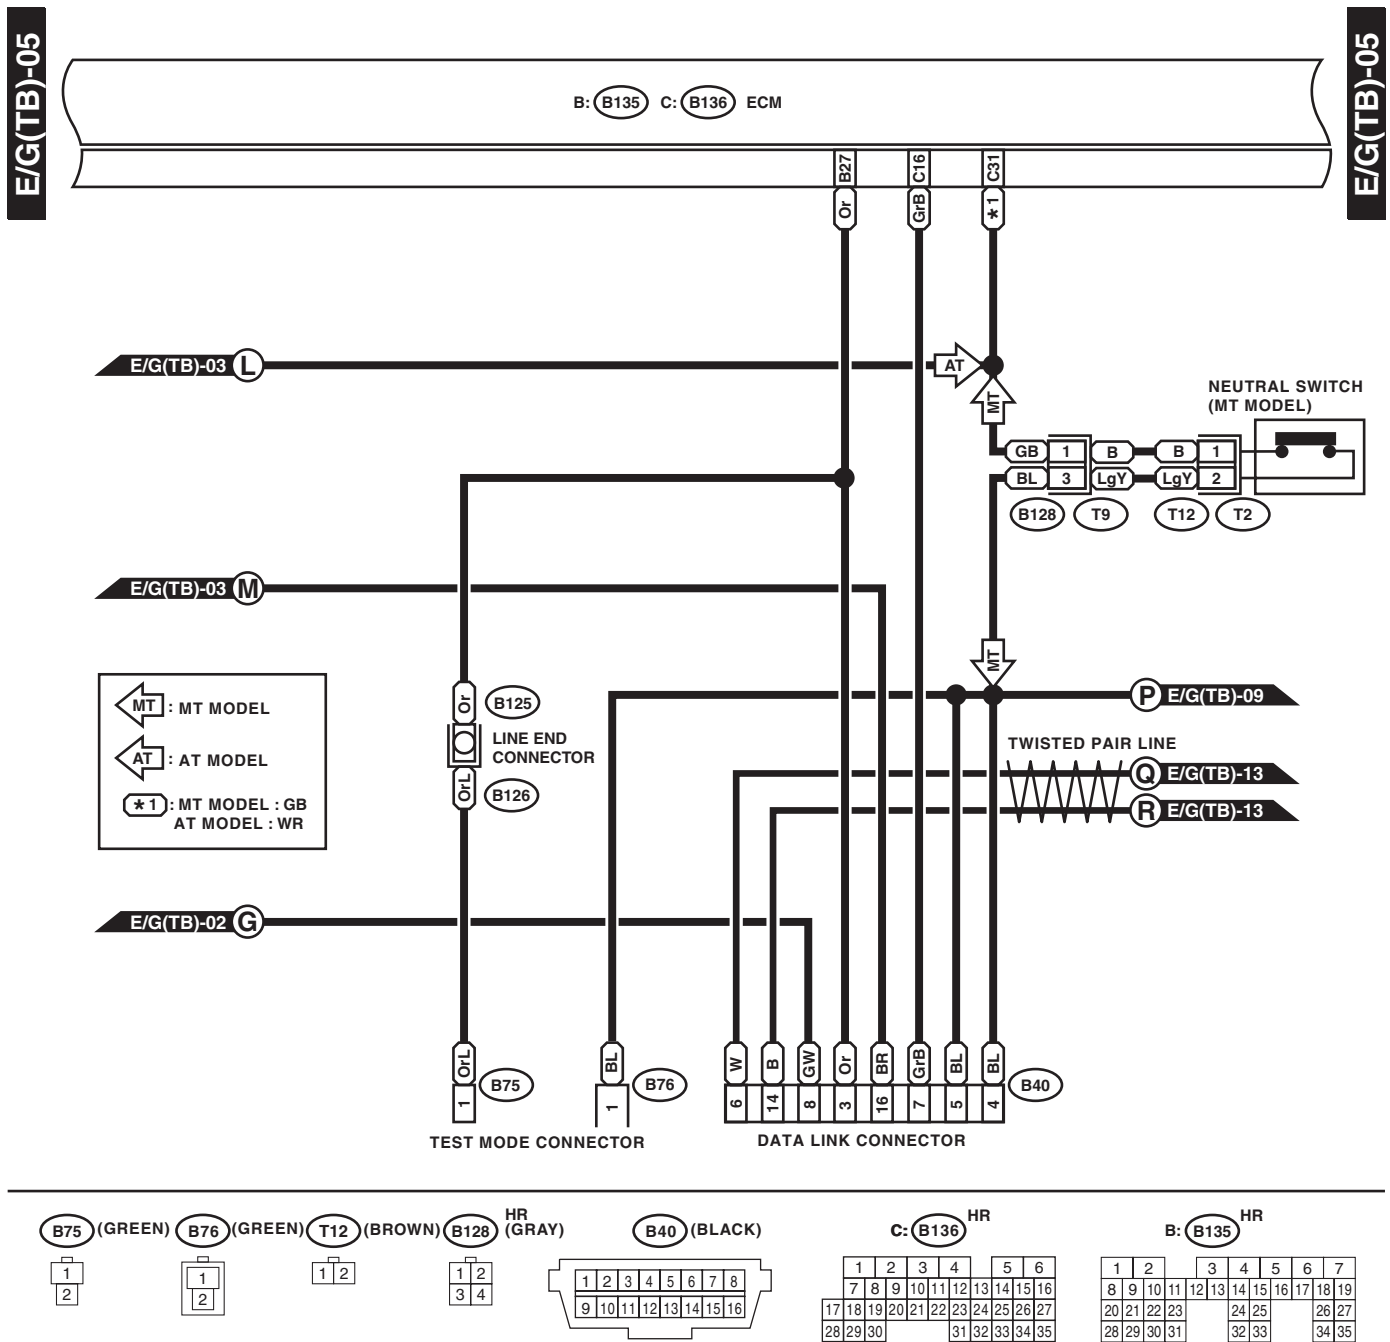


WI-14994

Download Complete manual for FREE @ <https://www.heydownloads.com>

Engine Electrical System


WIRING SYSTEM

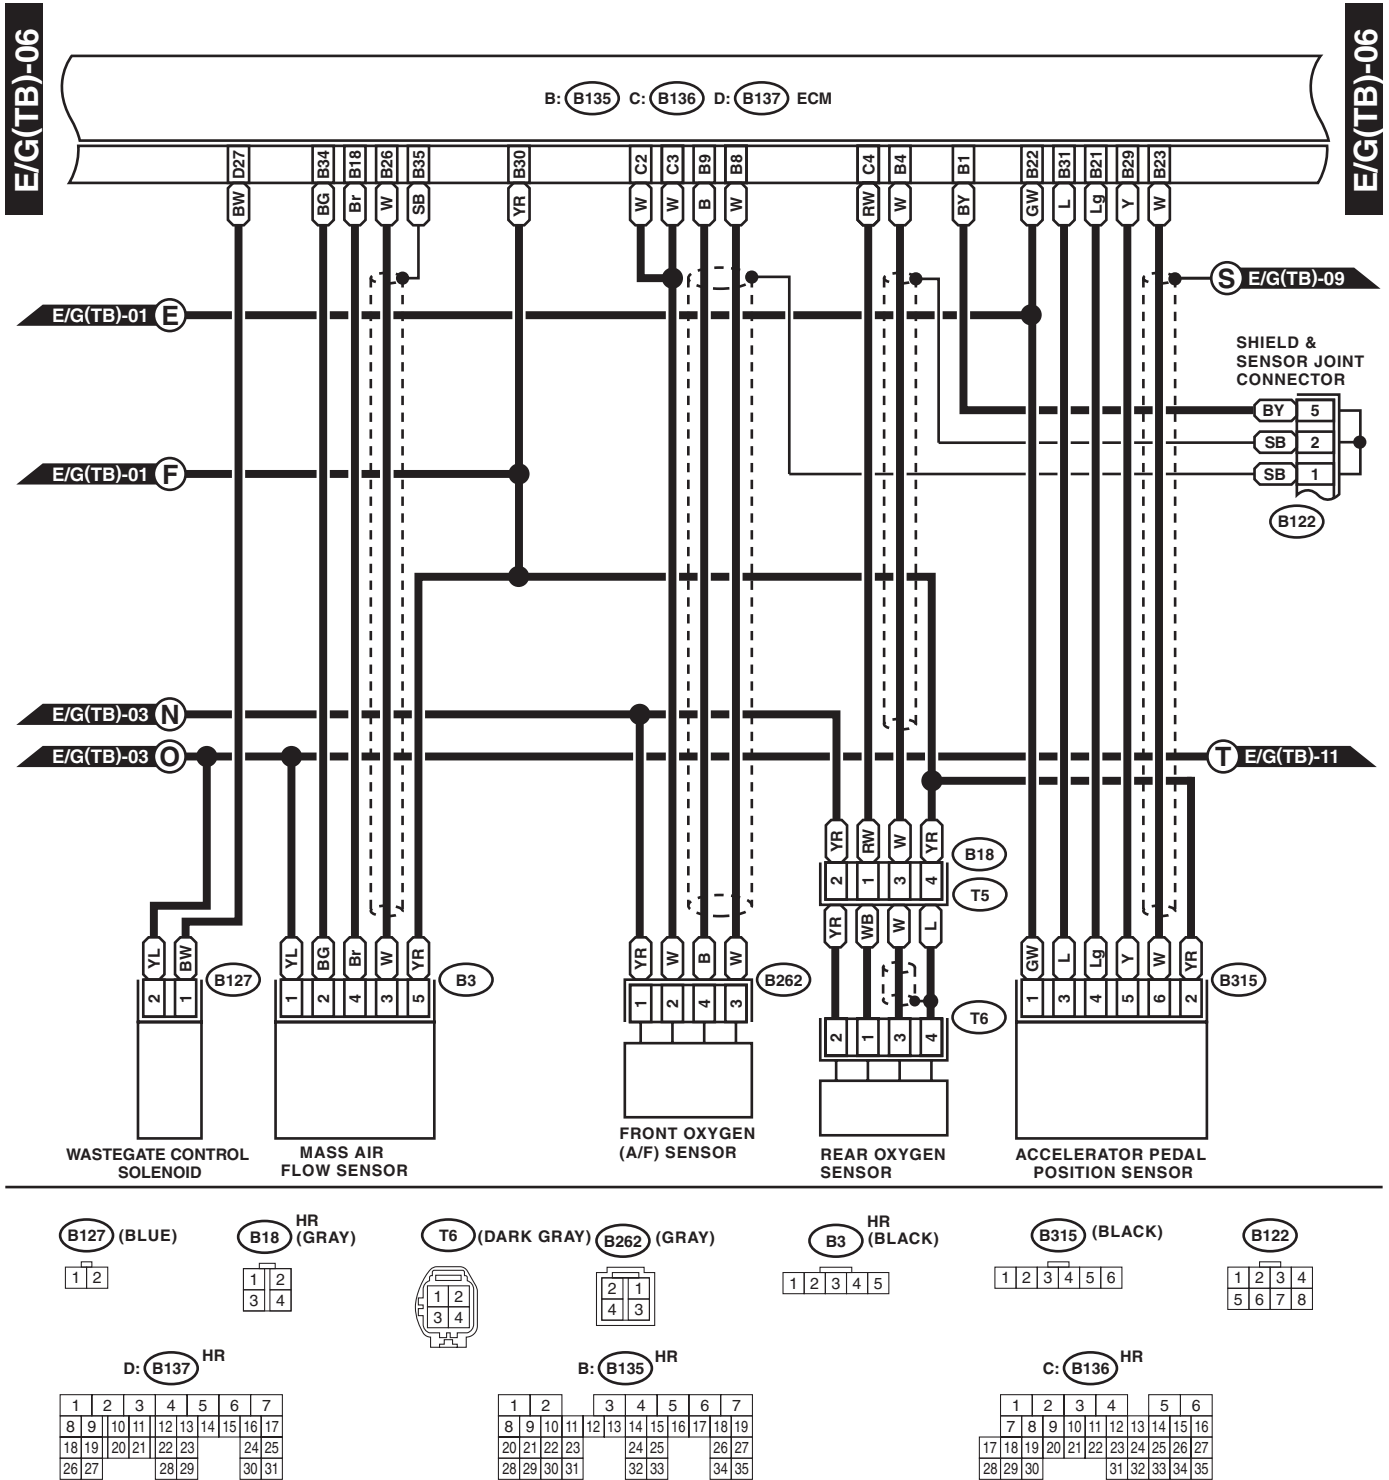

WI-14995


Engine Electrical System

WIRING SYSTEM

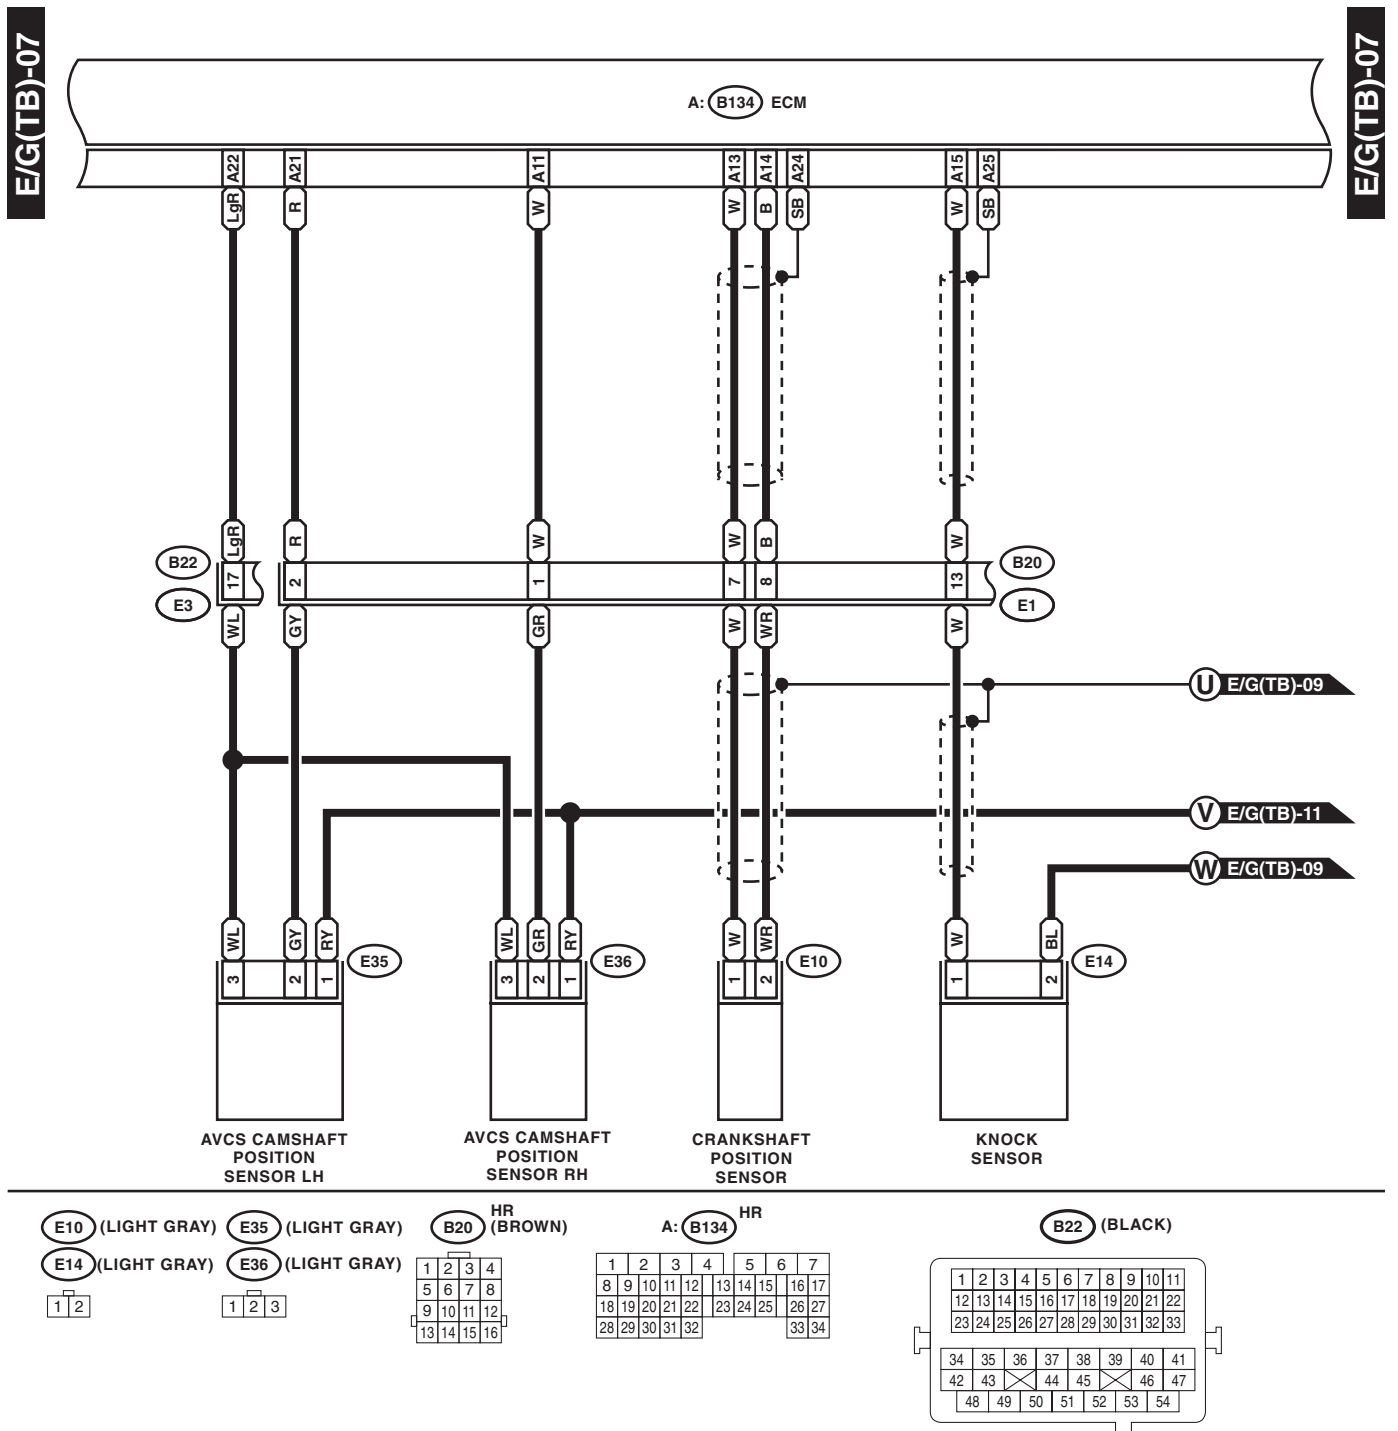

WI-14996

Download Complete manual for FREE @ <https://www.heydownloads.com>

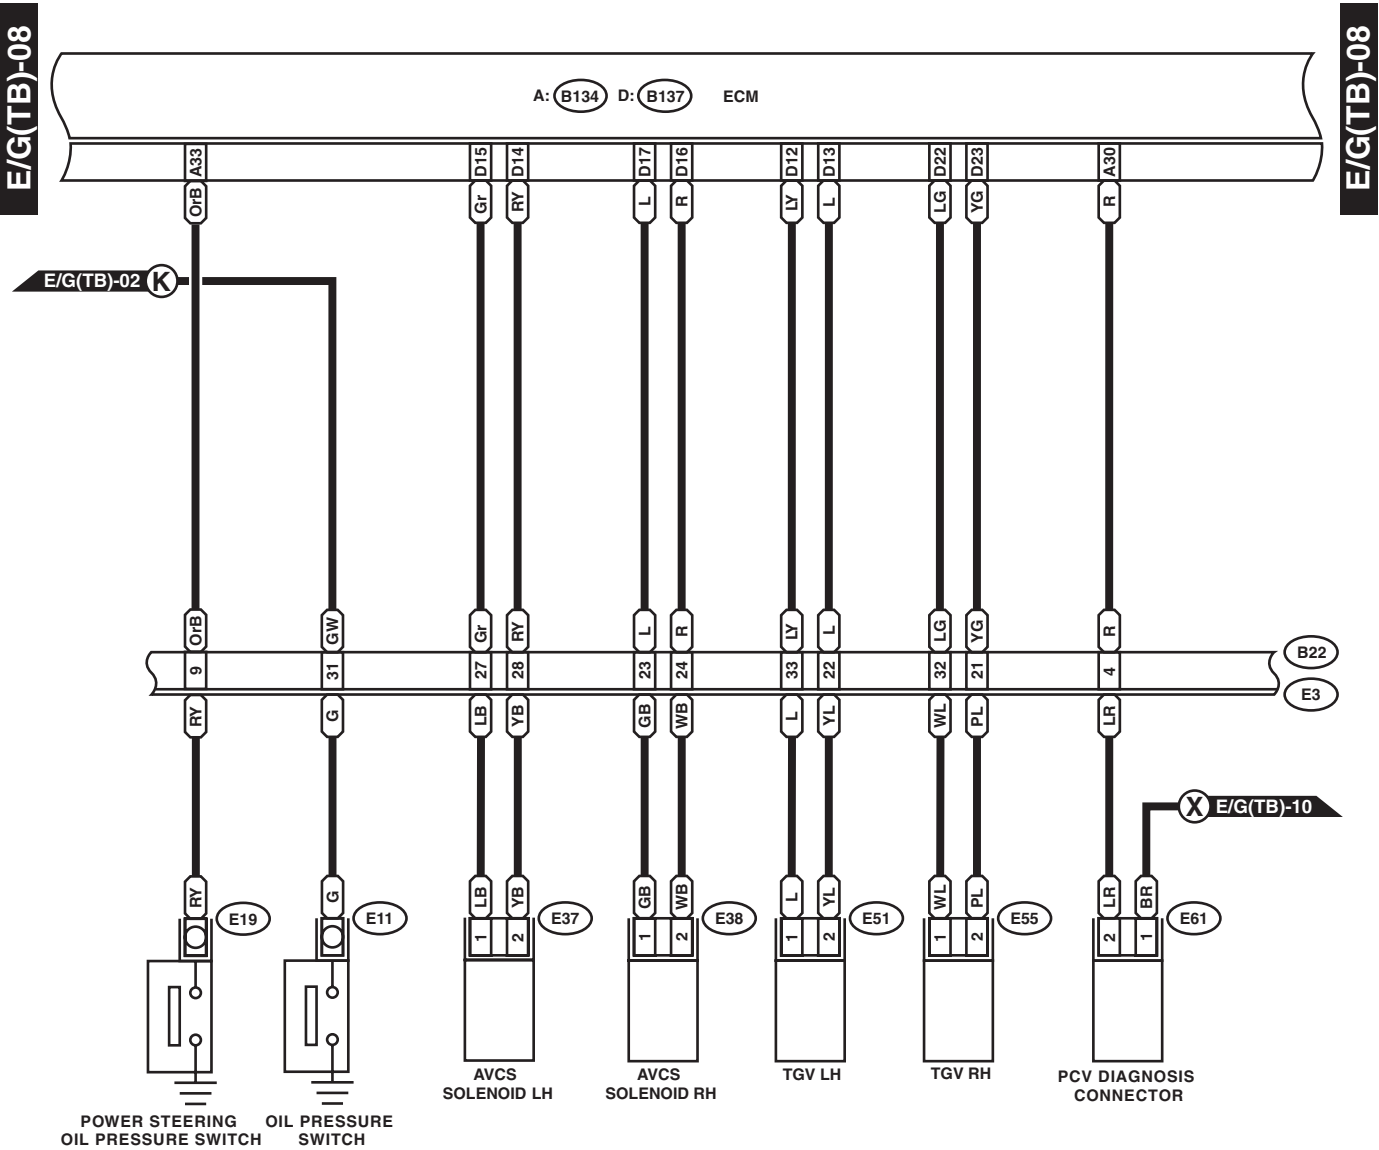

- E37 (BLUE)
 - E38 (BLUE)
 - E51 (BLACK)
 - E55 (BLACK)
 - E61 (DARK GRAY)
- | | |
|---|---|
| 1 | 2 |
|---|---|

D: B137 HR

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16	17	18	19	20	21
22	23	24	25	26	27	28
29	30	31	32	33	34	35


A: B134 HR


1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16	17	18	19	20	21
22	23	24	25	26	27	28
29	30	31	32	33	34	35

B22 (BLACK)

1	2	3	4	5	6	7	8	9	10	11
12	13	14	15	16	17	18	19	20	21	22
23	24	25	26	27	28	29	30	31	32	33
34	35	36	37	38	39	40	41	42	43	44
45	46	47	48	49	50	51	52	53	54	55

WIRING SYSTEM

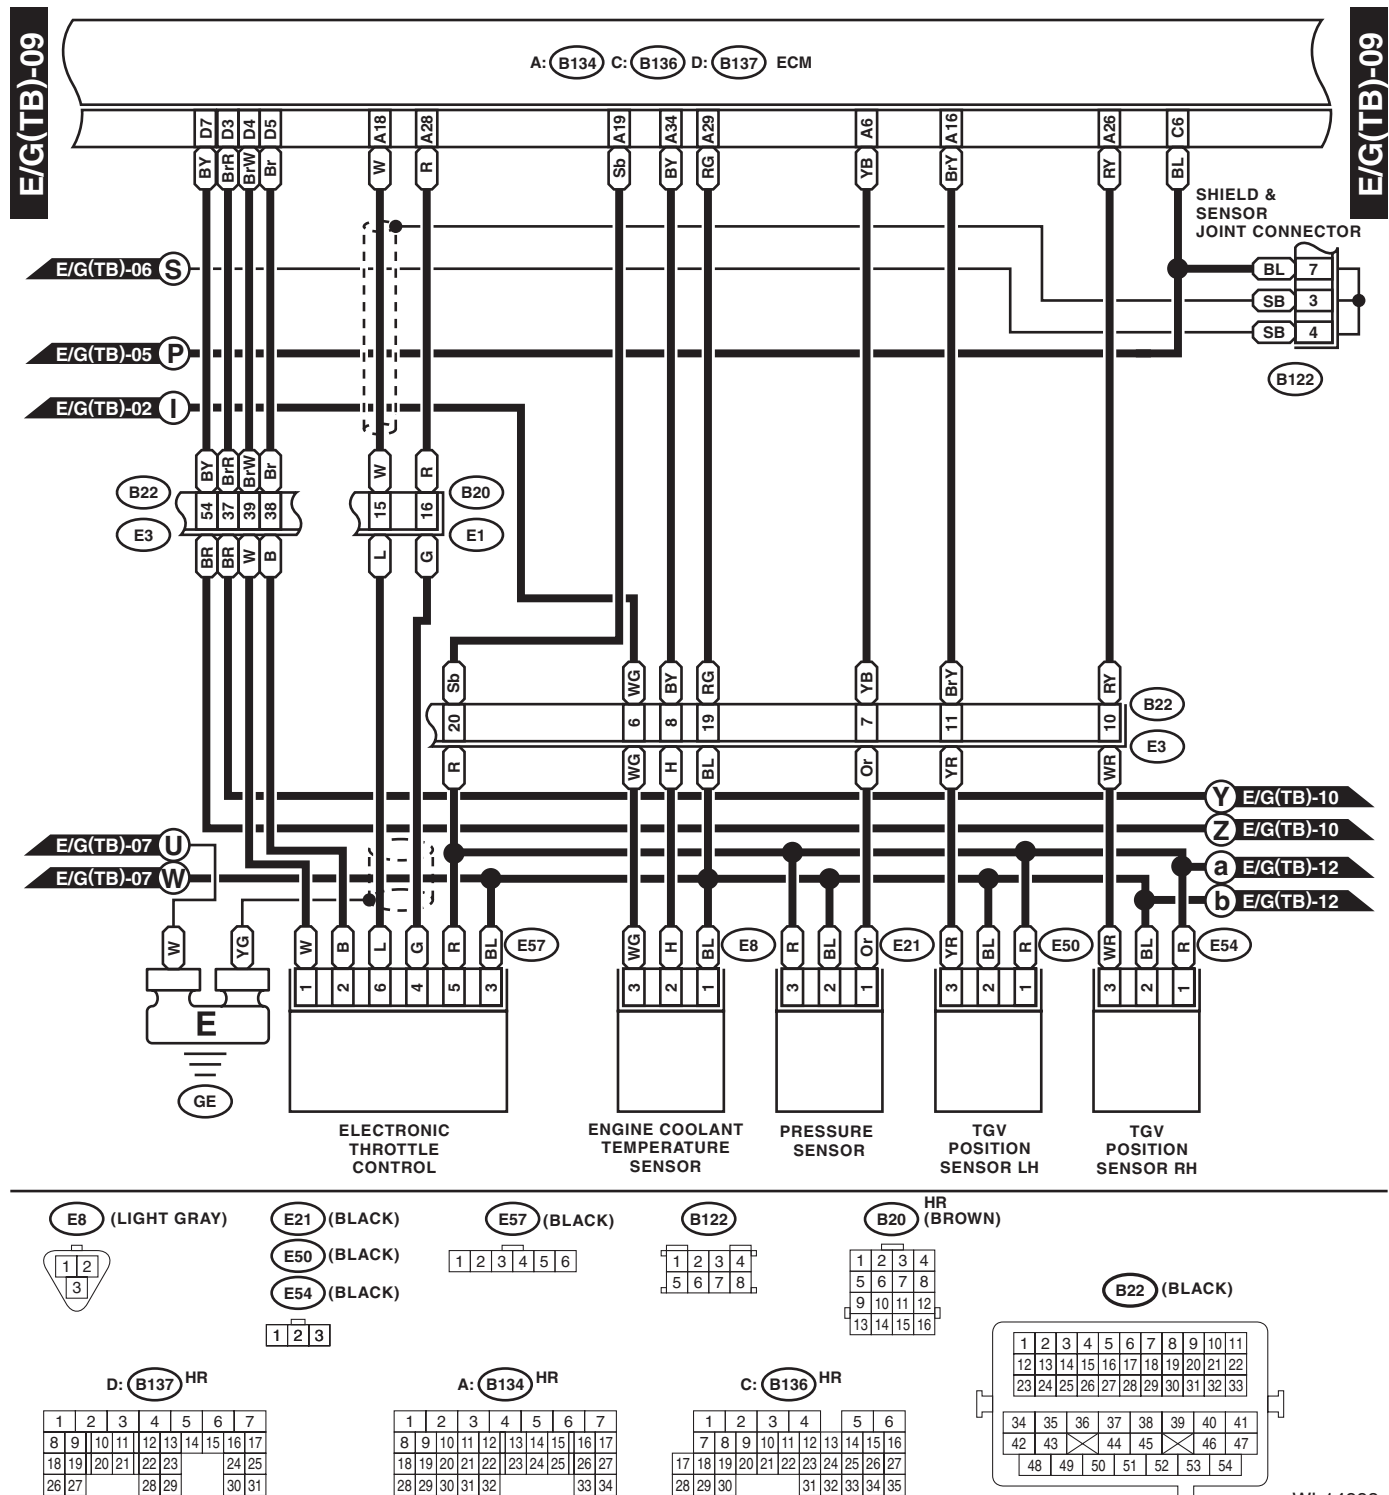

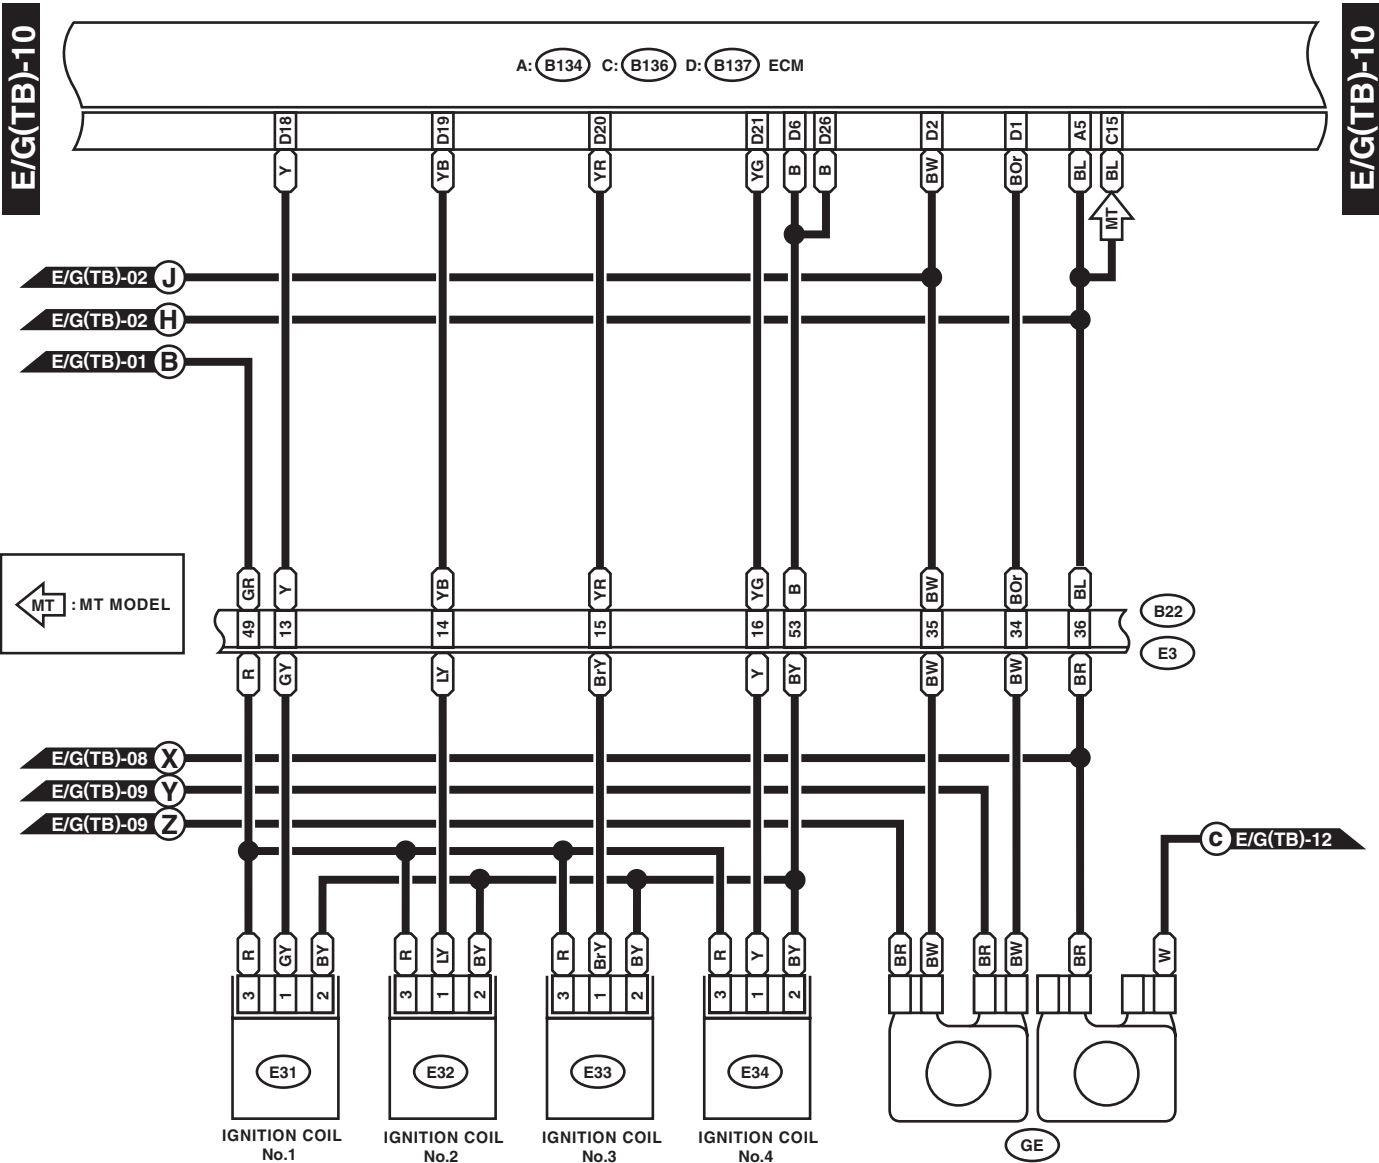

E31

E32

E33 (BLACK)

E34 (BLACK)

1

2

3

D: B137

HR

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16	17	18	19	20	21
22	23	24	25	26	27	28
29	30	31	32	33	34	35

A: B134

HR

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16	17	18	19	20	21
22	23	24	25	26	27	28
29	30	31	32	33	34	35

C: B136

HR


1	2	3	4	5	6
7	8	9	10	11	12
13	14	15	16	17	18
19	20	21	22	23	24
25	26	27	28	29	30
31	32	33	34	35	36

B22 (BLACK)

1	2	3	4	5	6	7	8	9	10	11
12	13	14	15	16	17	18	19	20	21	22
23	24	25	26	27	28	29	30	31	32	33
34	35	36	37	38	39	40	41	42	43	44
45	46	47	48	49	50	51	52	53	54	55

Engine Electrical System

WIRING SYSTEM

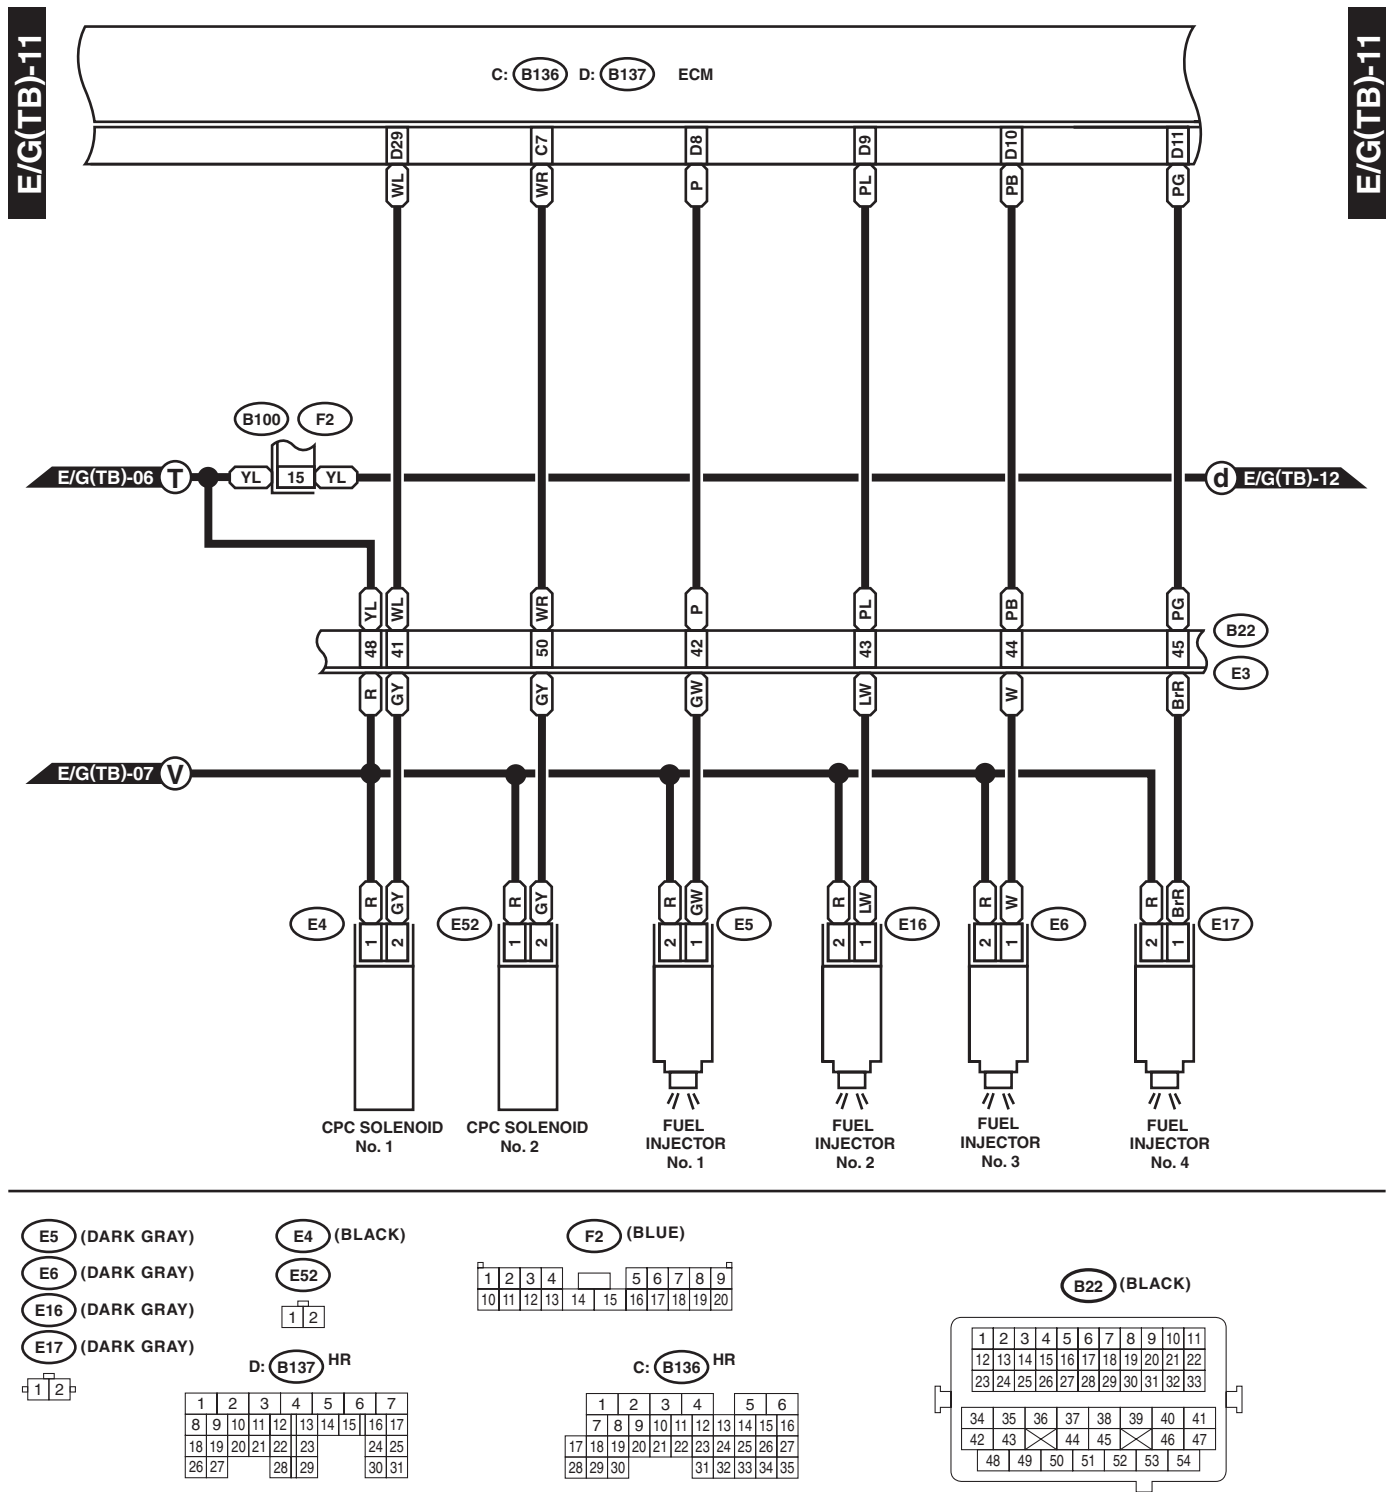


WI-15000

Download Complete manual for FREE @ <https://www.heydownloads.com>

E/G(TB)-12




E/G(TB)-12

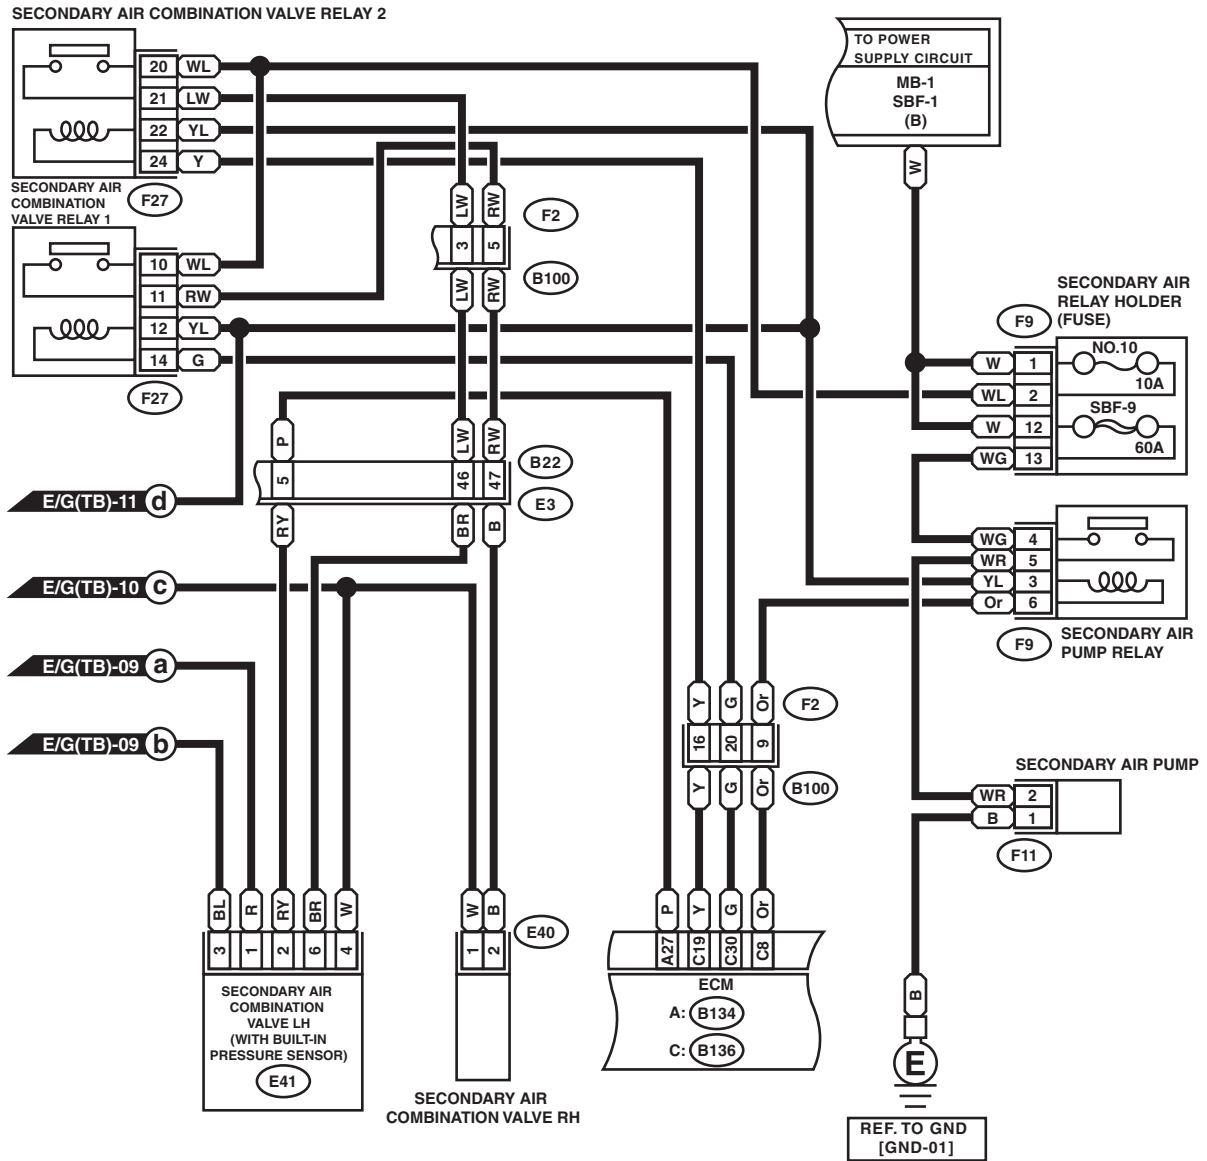

F11 (GRAY) E41 (BLACK) F9 (BLACK)




F2 (BLUE)

  A: B134 HR

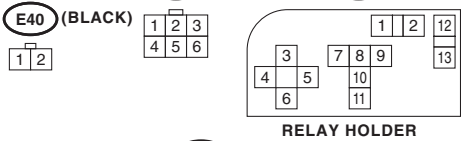

B22 (BLACK)

 C: B136 HR

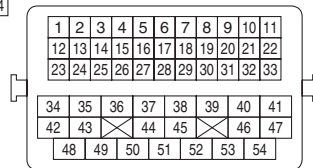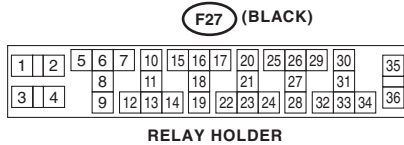



WI-15001

Engine Electrical System

WIRING SYSTEM

E/G(TB)-13

E/G(TB)-13

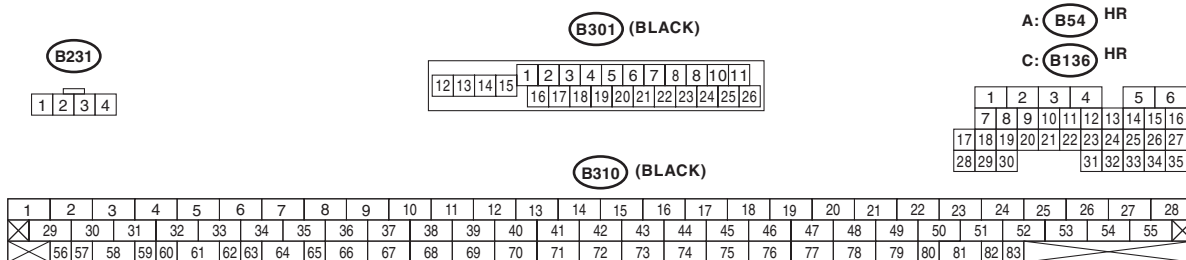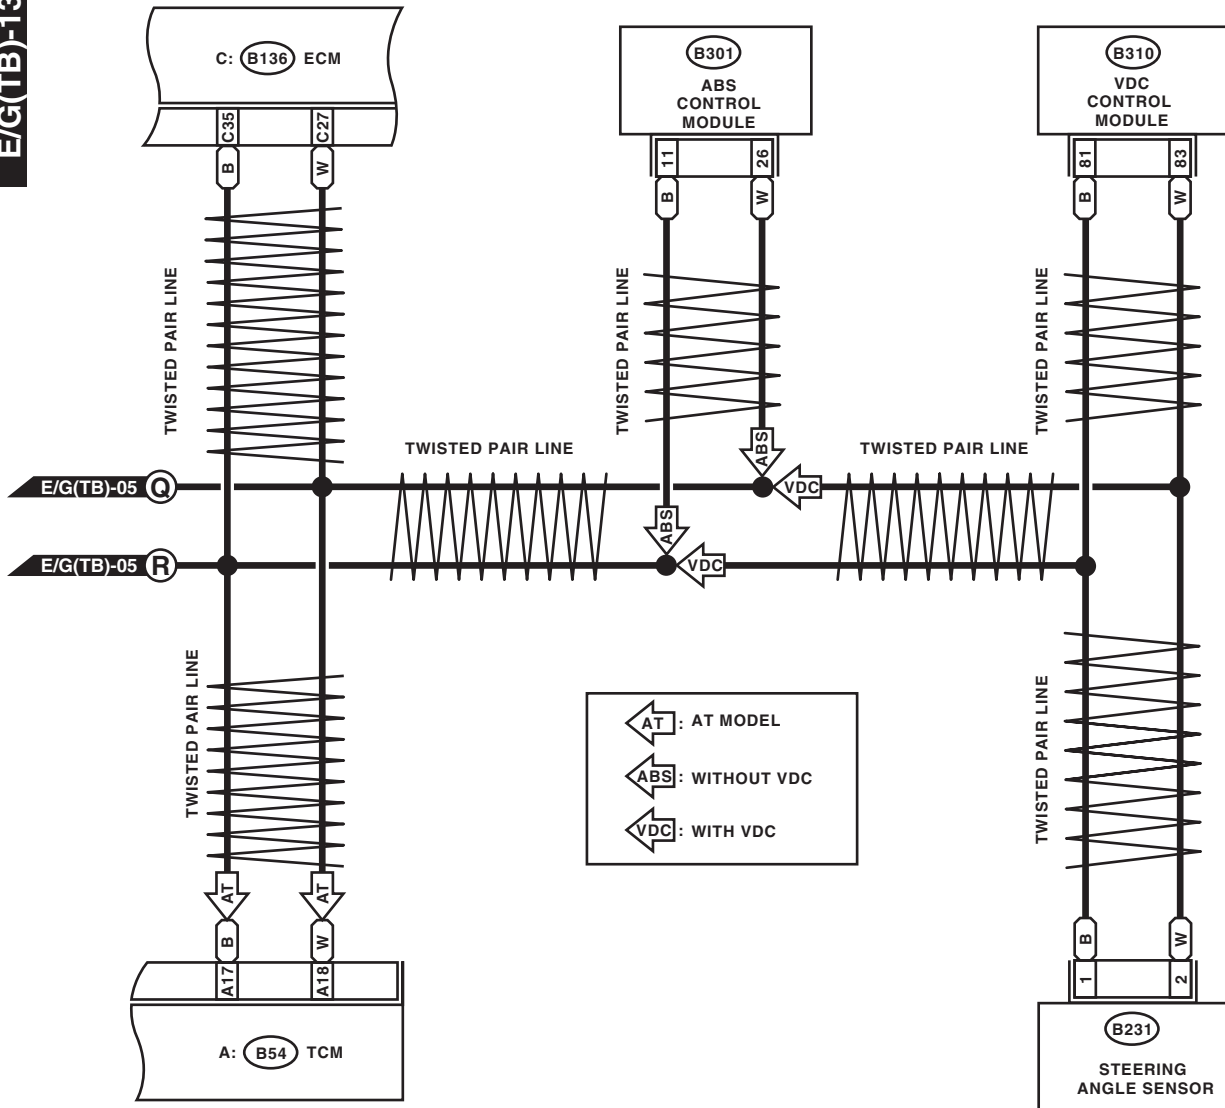

WI-15234

Download Complete manual for FREE @ <https://www.heydownloads.com>

