



Lexus ES250 1989 – 1991 – fuse box diagram

Driver's side kick panel

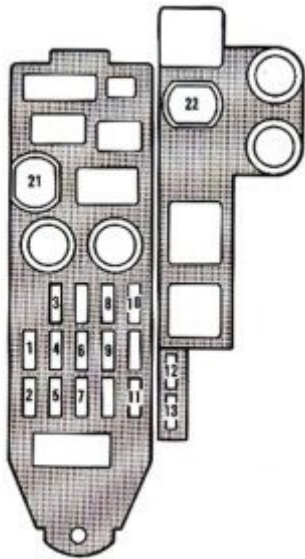

Lexus ES250 – fuse box – driver's side kick panel

Engine compartment

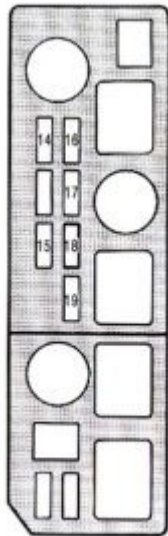

Lexus ES250 – fuse box – engine compartment

Passenger's side kick panel



Lexus ES250 – fuse box – passenger's side kick panel

Fuse		Ampere rating [A]	Circuit protected
1	CIG	15	Cigarette lighter, digital clock display, shift lock system (automatic transmission)
2	ENGINE	10	Charging system
3	GAUGE	7,5	Gauges and meters, warning lights (except discharge and open door warning lights), back-up lights, automatic transmission overdrive system, rear window defogger, power windows, power door lock system
4	RADIO	7,5	Radio, cassette tape player, power rear view mirrors
5	WIPER	20	Windshield wipers and washer, rear window wiper and washer
6	TURN	7,5	Turn signal lights
7	ECU-IG	15	Cruise control system, electronically controlled automatic transmission system, shift lock system (automatic transmission)
8	STOP	20	Stop lights, cruise control system cancel device
9	DEF-I/ UP	10	Engine idle up system
10	TAIL	15	Tail lights, parking lights, license plate lights, instrument panel lights, glovebox light
11	IGN	7,5	Charging system, discharge warning light, emission control system, electric cooling fans, electronic fuel injection system
12	ECU-B	10	Rear window defogger, anti-lock brake system
13	FOG	15	Fog lights
14	HEAD (RH)	15	Right-hand headlight
15	DOME	20	Radio, cassette tape player, clock, electronically controlled automatic transmission system, power

			antenna, interior light, personal lights, door courtesy lights, trunk room light, ignition switch light, open door warning light
16	HEAD (LH)	15	Left-hand headlight
17	HAZ-HORN	15	Emergency flashers, horns
18	EFI	15	Electronic fuel injection system
19	CHARGE	7,5	Charging system, discharge warning light
20	A/C	10	Air conditioner system
21	DEFOG	30	Rear window defogger
22	PWR	30	Moon roof, power windows, power door lock system, power seat
23	HEATER	40	Air conditioner control system