


Chevrolet Aveo 2002 – 2011 fuse box diagram

Instrument panel fuse block

The instrument panel fuse block is located on the end of the instrument panel on the driver side of the vehicle.

Hatchback

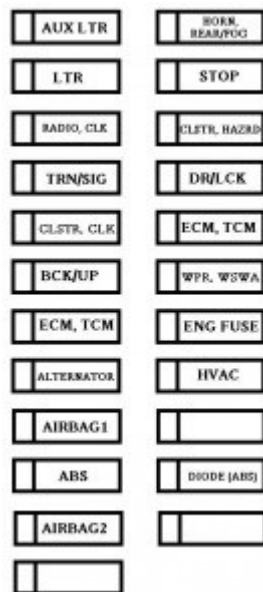


Chevrolet Aveo – fuse box – instrument pane (hatchback)

Fuses	Usage
AUX LTR	Auxiliary Cigarette Lighter
HORN, REAR/FOG	Horn, Rear Fog Lamps
LTR	Cigarette Lighter
STOP	Stop Lamp
RADIO, CLK	Audio, Clock
CLSTR, HAZARD	Instrument Panel Cluster, Hazard Flasher
TRN/SIG	Turn Signal
DRL/LCK	Door Lock, Remote Keyless Entry
CLSTR, CLK	Instrument Panel Cluster, Clock
ECM, TCM	Engine Control Module (ECM), Transmission Control Module (TCM)
BCK/UP	Back-Up Lamp
WPR, WSWA	Wiper, Washer
ECM, TCM	Engine Control Module (ECM), Transmission Control Module (TCM)
ENG FUSE	Engine Fuse
ALTERNATOR	Alternator
HVAC	HVAC Blower
AIRBAG 1	Airbag 1
BLANK	Not Used

ABS	Antilock Brake System
DIODE (ABS)	Antilock Brake System Diode
AIRBAG 2	Airbag 2
BLANK	Not Used
CLK, RADIO	Clock, Audio

Sedan

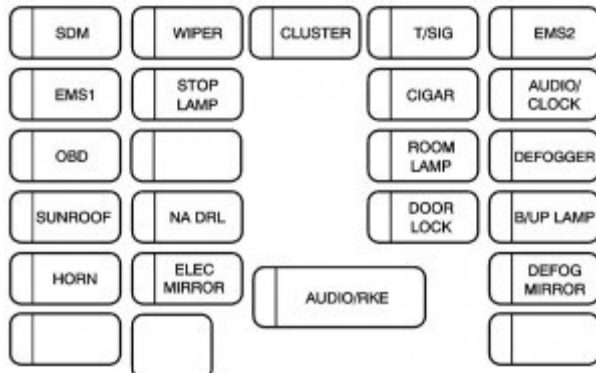

Chevrolet Aveo mk1 – fuse box – instrument

panel (sedan)


Fuses	Usage
SDM	Sensing and Diagnostic Module
WIPER	Windshield Wiper Switch, Windshield Wiper Motor
CLUSTER	Instrument Panel Cluster, Brake Switch, Anti-theft Mode
T/SIG	Turn Signal, Hazard Switch
EMS2	Stoplamp Switch
EMS1	Engine Room Fuse Block, Rear HO2S, Transmission Control Module, VSS, Fuel Pump
STOP LAMP	Brake Switch
CIGAR	Cigarette Lighter, Auxiliary Power Outlet
AUDIO/CLOCK	Radio, Clock
OBD	On-Board Diagnostics, Immobilizer
ROOM LAMP	Trunk Lamp, Trunk Open Switch, Cluster, Dome Lamp
DEFOGGER	Rear Defogger
SUNROOF	Sunroof Module (Option)
DRL	Daytime Running Lamps
DOOR LOCK	Door Lock/Unlock
B/UP LAMP	Back-up Lamps
HORN	Horn
ELEC MIRROR	Mirror Control Switch, Dome Lamp, Air Conditioning Switch
AUDIO/RKE	Radio, Remote Keyless Entry, Clock, Power Mirror Unit, Anti-Theft Module
DEFOG MIRROR	Power Mirror Unit, Air Conditioning Switch

BLANK	Not Used
BLANK	Not Used
BLANK	Not Used
BLANK	Not Used

Engine compartment fuse block

The engine compartment fuse block is located on the driver side of the vehicle, near the battery.

Hatchback

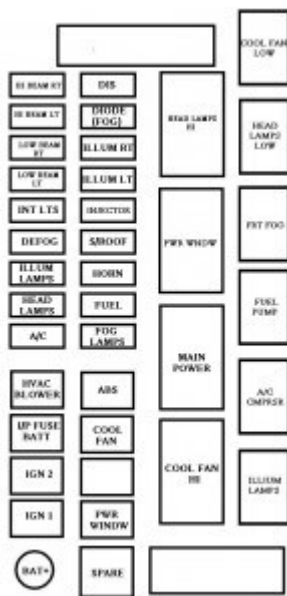


Chevrolet Aveo – fuse box – engine compartment (hatchback)

Fuses	Usage
HI BEAM RT	Passenger Side High Beam Headlamp
DIS	Direct Ignition System
HI BEAM LT	Driver Side High Beam Headlamp
DIODE (FOG)	Fog Lamp Diode
LOW BEAM RT	Passenger Side Low Beam Headlamp
ILLUM RT	Parking Lamp Right Side, Illumination Circuit
LOW BEAM LT	Driver Side Low Beam Headlamp
ILLUM LT	Driver Side Parking Lamp, License Plate Lamp
INT LTS	Room Lamp
INJECTOR	Injector
DEFOG	Defogger
S/ROOF	Sunroof
ILLUM LAMPS	Illumination Relay
HORN	Horn
HEAD LAMPS	Headlamps
FUEL	Fuel Pump

A/C	Air Conditioning Compressor
FOG LAMPS	Front Fog Lamp
HVAC BLOWER	Heating, Ventilation, Air Conditioning Blower
ABS	Antilock Brake System
I/P FUSE BATT.	Instrument Panel Fuse Box
COOL FAN	Radiator Fan
IGN 2	Ignition 2
BLANK	Blank
IGN 1	Ignition 1
PWR WNDW	Power Windows
SPARE	Spare
BLANK	Not used
COOL FAN LOW	Cooling Fan Low
HEAD LAMPS HI	High Beam Headlamp
HEAD LAMPS LOW	Low Beam Headlamp
PWR WNDW	Power Window
FRT FOG	Fog Lamp
MAIN POWER	Main Power
FUEL PUMP	Fuel Pump
A/C COMPRSR	Air Conditioning Compressor
COOL FAN HI	Cooling Fan High
ILLUM LAMPS	Illumination Lamps
BLANK	Not Used

Sedan

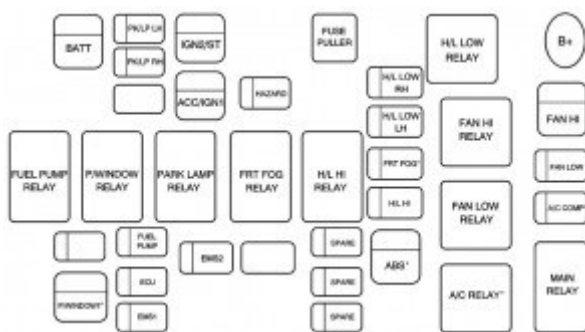

Chevrolet Aveo mk1 – fuse box – engine

compartment (sedan)

Fuses	Usage
BATT	Instrument Panel Fuse Bloc
PK/LP LH	Driver Side Parking Lamp, Taillamp
PK/LP RH	Passenger Side Parking Lamp, Taillamp
IGN2/ST	Ignition Switch
ACC/IGN1	Ignition Switch
HAZARD	Hazard Lamps, Theft-Deterrent System

H/L LOW RH	Passenger Side Low-Beam Headlamp
FAN HI	Cooling Fan High Speed
H/L LOW LH	Driver Side Low-Beam Headlamp
FRT FOG	Front Fog Lamps (Option)
FAN LOW	Cooling Fan Low Speed
H/L HI	High-Beam Headlamps
A/C COMP	Air Conditioning Compressor (Option)
FUEL PUMP	Fuel Pump
SPARE	Spare
ABS	Antilock Brake System (Option)
EMS2	LEGR Valve, HO2S, EVAP Canister Purge Solenoid, CMP Sensor
P/WINDOW1	Power Window Switch (Option)
ECU	Engine Control Module, Transmission Control Module
SPARE	Spare
EMS1	Engine Control Module, Injector, Cooling Fan, Air Conditioning Compressor
SPARE	Spare
H/L LOW RELAY	Low-Beam Headlamp Relay
FAN HI RELAY	Cooling Fan High Speed Relay
FUEL PUMP RELAY	Fuel Pump Relay
P/WINDOW RELAY	Power Window Relay
PARK LAMP RELAY	Parking Lamp Relay
FRT FOG RELAY	Front Fog Lamps Relay
H/L HI RELAY	High-Beam Headlamp Relay
FAN LOW RELAY	Cooling Fan Low Speed Relay
A/C RELAY	Air Conditioning Relay (Option)
MAIN RELAY	Main Relay

Misc.	Usage
FUSE PULLER	Fuse Puller