



STARTING AND IGNITION (1UZ-FE)

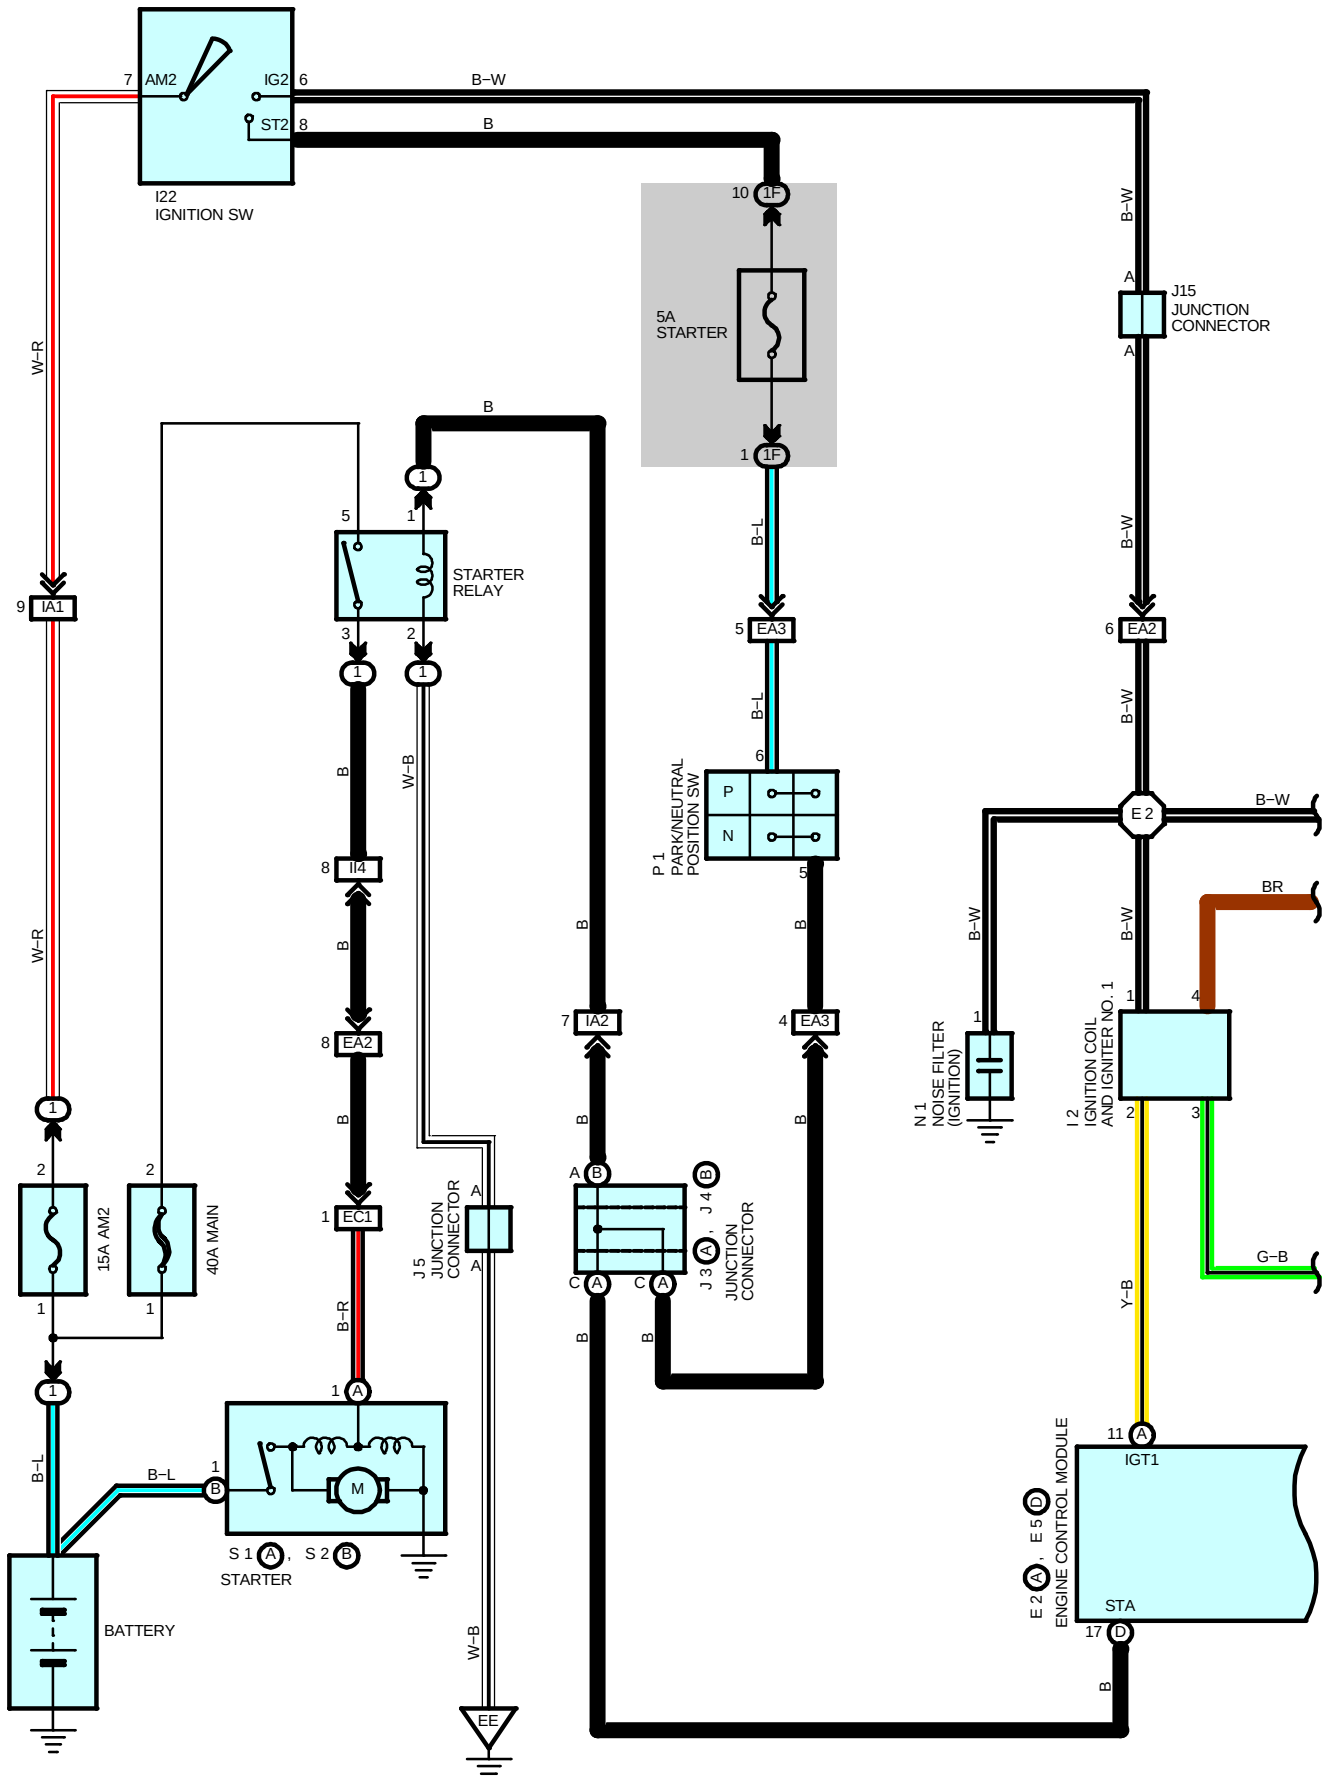

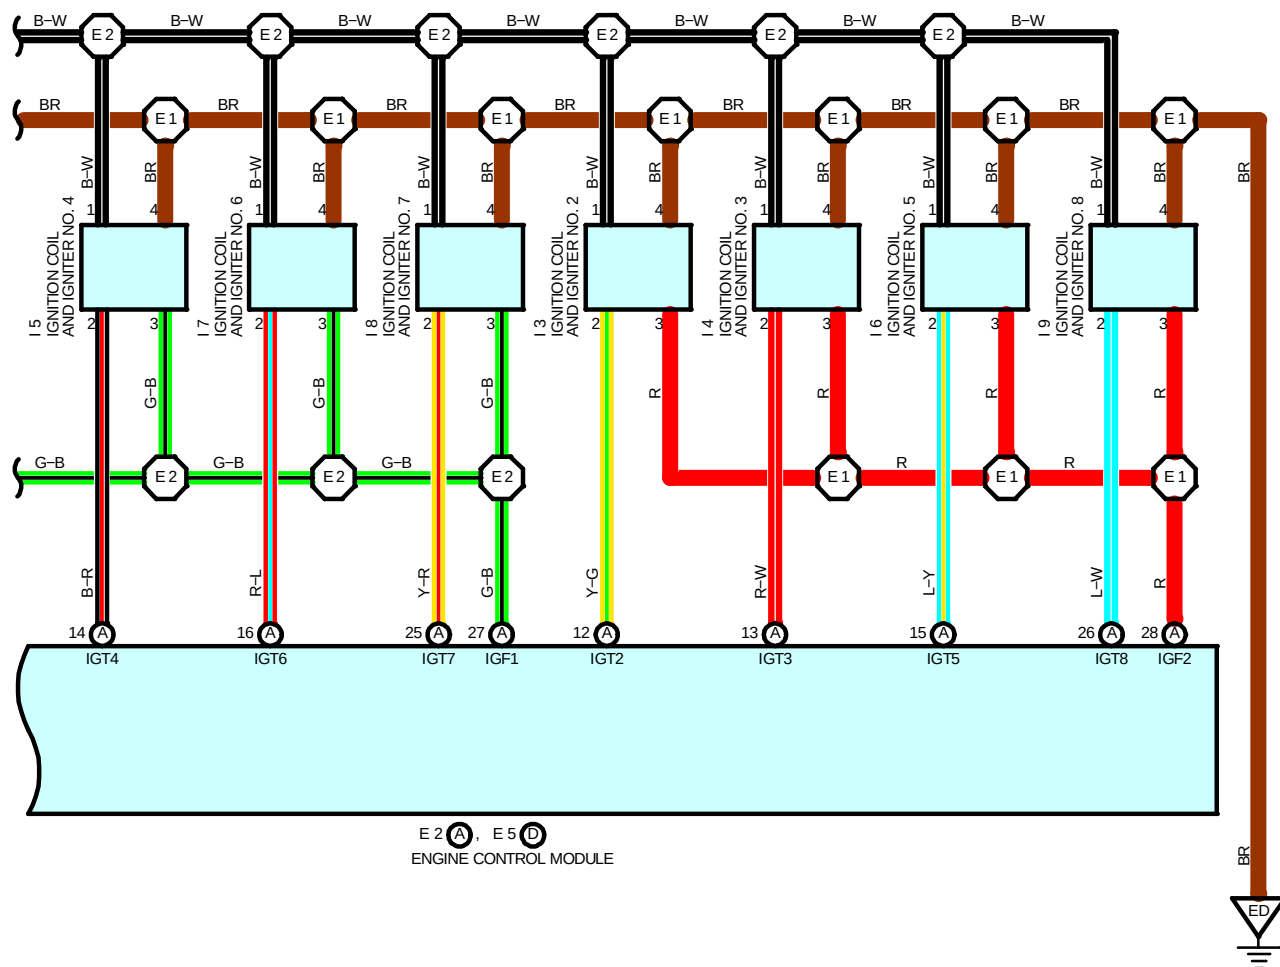

STARTING AND IGNITION (1UZ-FE)

SERVICE HINTS

I22 IGNITION SW

7-6 : Closed with ignition SW at **ON** or **ST** position
 7-8 : Closed with ignition SW at **ST** position

P1 PARK/NEUTRAL POSITION SW

6-5 : Closed with A/T shift lever in **P** or **N** position

S1 (A), S2 (B) STARTER

Points closed with Park/Neutral position SW at **P** or **N** position and ignition SW at **ST** position

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
E2 A	36 (1UZ-FE)	I7	37 (1UZ-FE)	J15	41
E5 D	36 (1UZ-FE)	I8	37 (1UZ-FE)	N1	37 (1UZ-FE)
I2	37 (1UZ-FE)	I9	37 (1UZ-FE)	P1	37 (1UZ-FE)
I3	37 (1UZ-FE)	I22	41	S1 A	37 (1UZ-FE)
I4	37 (1UZ-FE)	J3 A	37 (1UZ-FE)	S2 B	37 (1UZ-FE)
I5	37 (1UZ-FE)	J4 B	37 (1UZ-FE)		
I6	37 (1UZ-FE)	J5	37 (1UZ-FE)		

: RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
1	22	Engine Room No.1 R/B (Engine Compartment Right)

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1F	26	Cowl Wire and Driver Side J/B (Left Kick Panel)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA2	46 (1UZ-FE)	Engine Wire and Cowl Wire (Inside of the ECU Box)
EA3		
EC1	46 (1UZ-FE)	Engine No.2 Wire and Engine Wire (Near the Starter)
IA1	50	Engine Room Main Wire and Cowl Wire (Near the Driver Side J/B)
IA2		
II4	52	Engine Room Main Wire and Cowl Wire (Near the Passenger Side R/B)

: GROUND POINTS

Code	See Page	Ground Points Location
ED	46 (1UZ-FE)	LH Bank of the Cylinder Head
EE	46 (1UZ-FE)	Under the ABS & TRAC & VSC Actuator

: SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E1	46 (1UZ-FE)	Engine Wire	E2	46 (1UZ-FE)	Engine Wire

