



STARTING AND IGNITION (2JZ-GE)

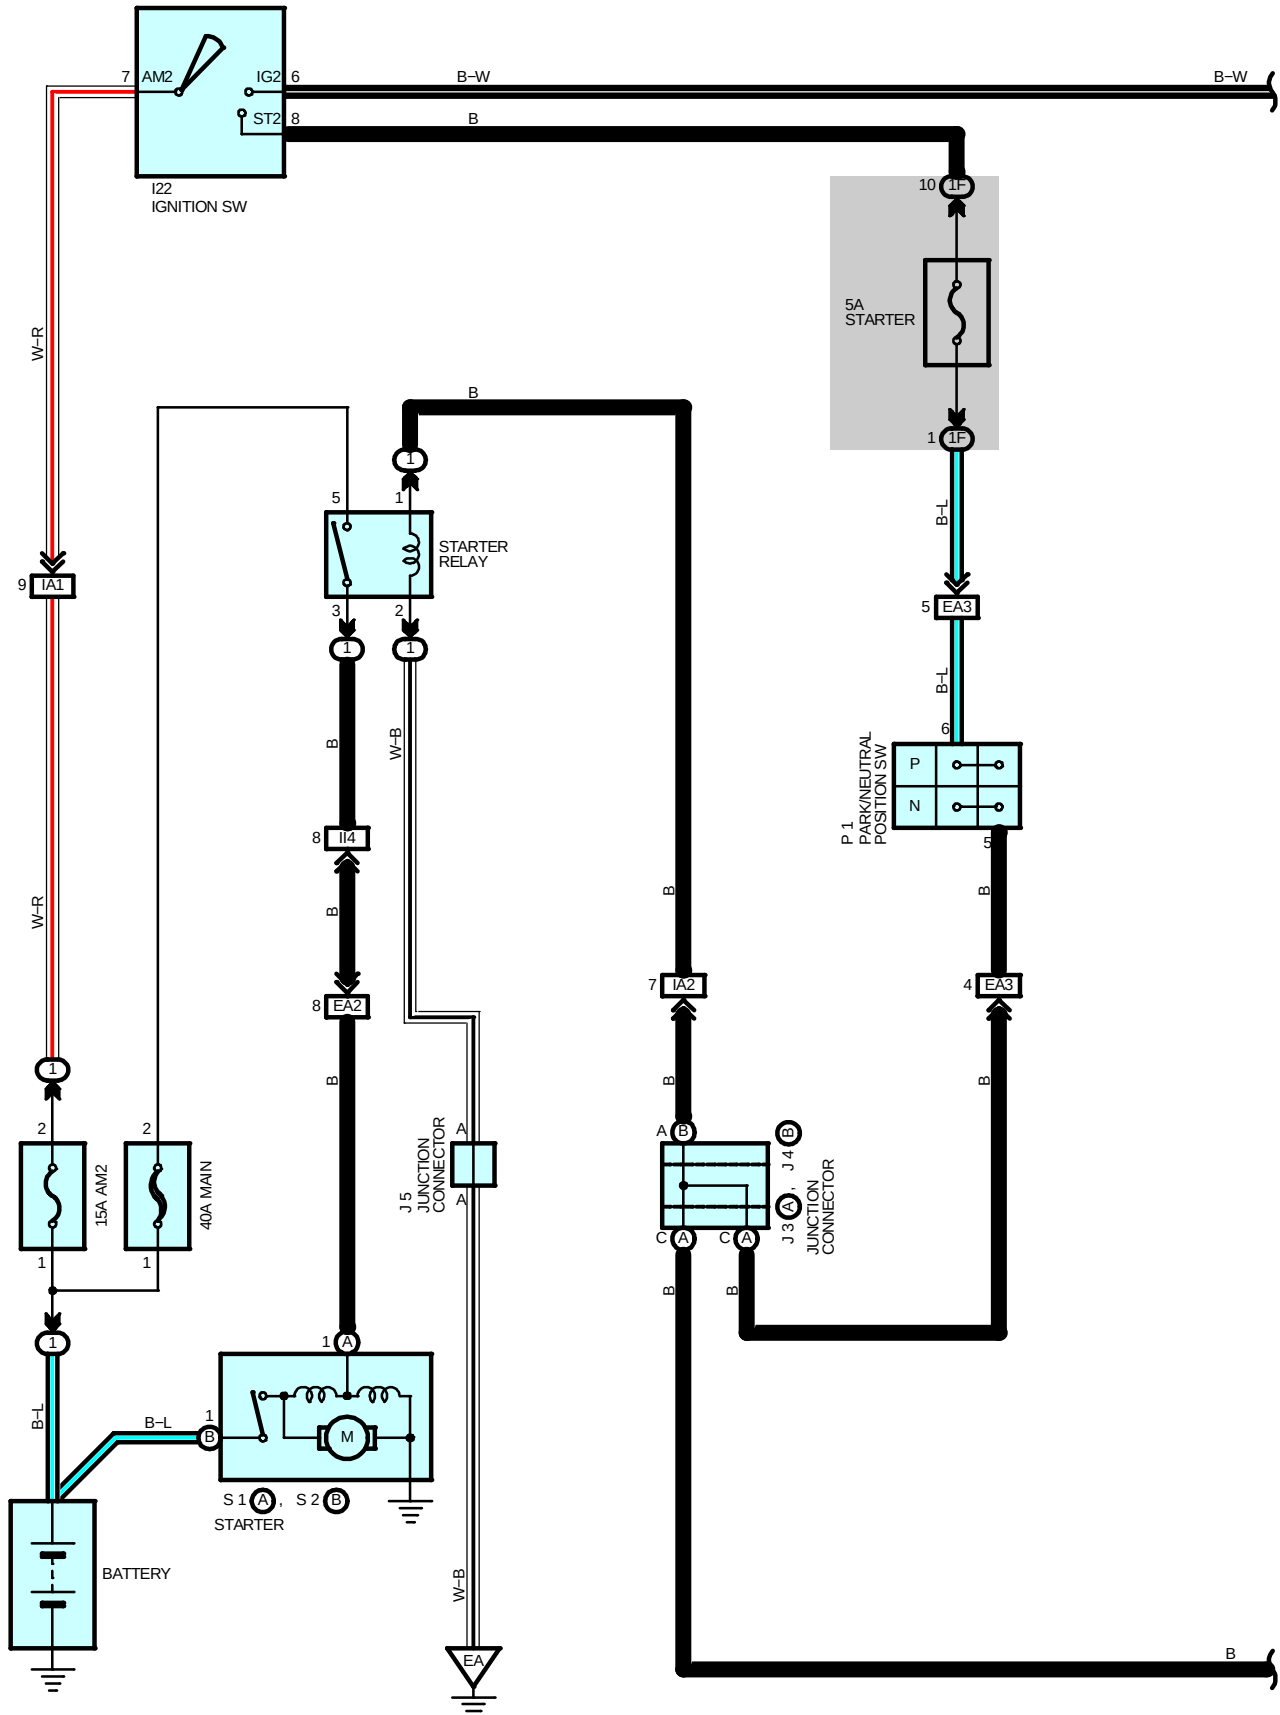

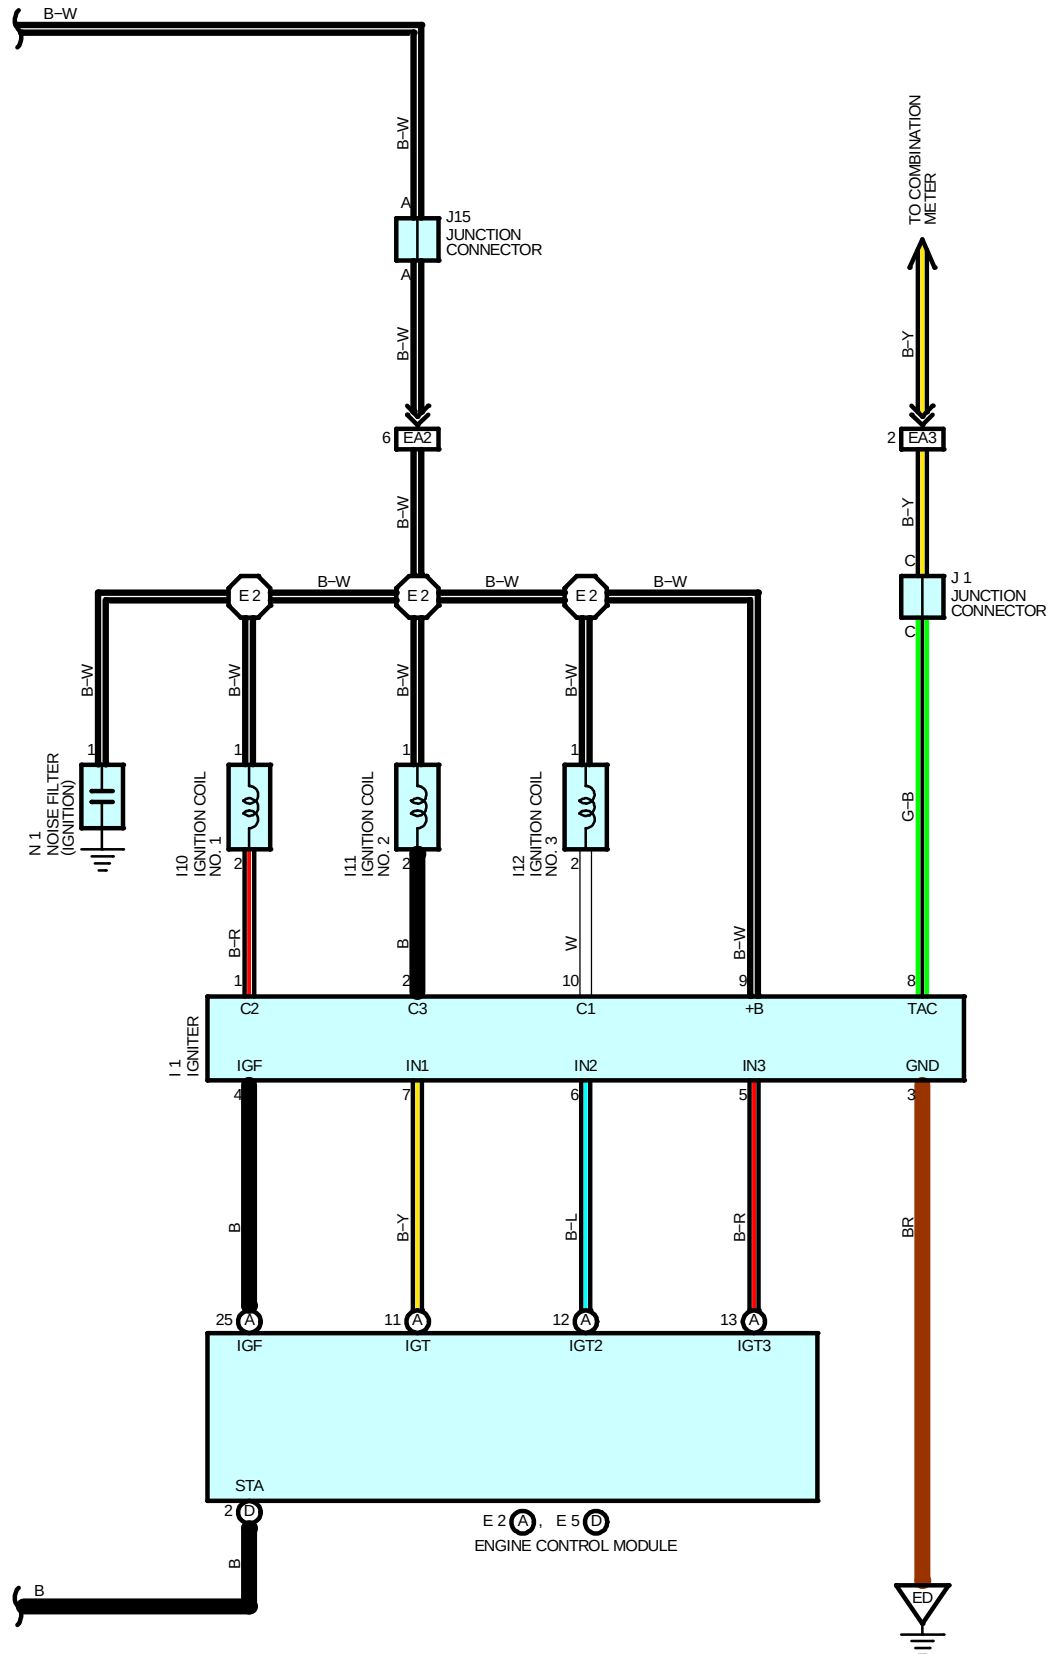

STARTING AND IGNITION (2JZ-GE)

SERVICE HINTS

I22 IGNITION SW

7-6 : Closed with ignition SW at **ON** or **ST** position
 7-8 : Closed with ignition SW at **ST** position

P1 PARK/NEUTRAL POSITION SW

6-5 : Closed with A/T shift lever in **P** or **N** position

S1 (A), S2 (B) STARTER

Points closed with Park/Neutral position SW at **P** or **N** position and ignition SW at **ST** position

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
E2	A	I22	41	N1	39 (2JZ-GE)
E5	D	J1	39 (2JZ-GE)	P1	39 (2JZ-GE)
I1	39 (2JZ-GE)	J3	A	S1	A
I10	39 (2JZ-GE)	J4	B	S2	B
I11	39 (2JZ-GE)	J5	39 (2JZ-GE)		
I12	39 (2JZ-GE)	J15	41		

: RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
1	22	Engine Room No.1 R/B (Engine Compartment Right)

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1F	26	Cowl Wire and Driver Side J/B (Left Kick Panel)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA2	48 (2JZ-GE)	Engine Wire and Cowl Wire (Inside of the ECU Box)
EA3		
IA1	50	Engine Room Main Wire and Cowl Wire (Near the Driver Side J/B)
IA2		
II4	52	Engine Room Main Wire and Cowl Wire (Near the Passenger Side R/B)

: GROUND POINTS

Code	See Page	Ground Points Location
EA	48 (2JZ-GE)	Right Fender
ED	48 (2JZ-GE)	Rear Side of the Intake Manifold

: SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E 2	48 (2JZ-GE)	Engine Wire			

