

EXTERIOR – FRONT BUMPER


ET-3

REMOVAL

1. REMOVE RADIATOR GRILLE (See page [ET-13](#))


2. REMOVE FRONT BUMPER COVER

- (a) Remove the 8 screws and 2 bolts.
- (b) Using a clip remover, remove the 3 clips.

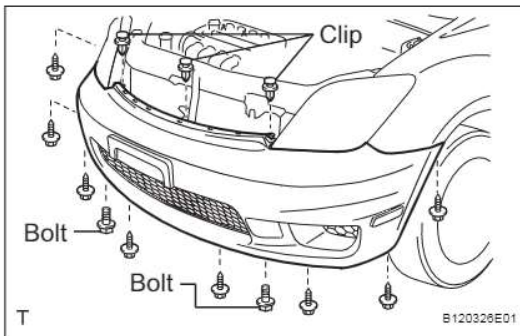


- (c) Apply protective tape under the front fender.
- (d) Detach the 6 claws and remove the bumper cover.

3. REMOVE FRONT BUMPER ENERGY ABSORBER

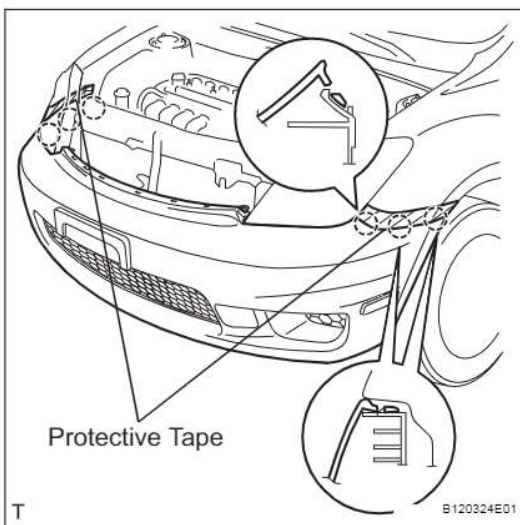

4. REMOVE FRONT BUMPER REINFORCEMENT

- (a) Remove the 4 nuts and reinforcement.

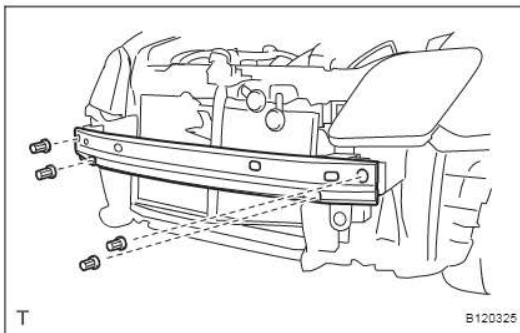5. REMOVE HEADLIGHT ASSEMBLY LH (See page [LI-10](#))6. REMOVE HEADLIGHT ASSEMBLY RH (See page [LI-10](#))

7. REMOVE FRONT BUMPER SIDE SUPPORT LH

- (a) Remove the screw.
- (b) Using a screwdriver, detach the claw and remove the side support.


HINT:

Tape the screwdriver tip before use.

8. REMOVE FRONT BUMPER SIDE SUPPORT RH

HINT:

Use the same procedures described for the LH side.

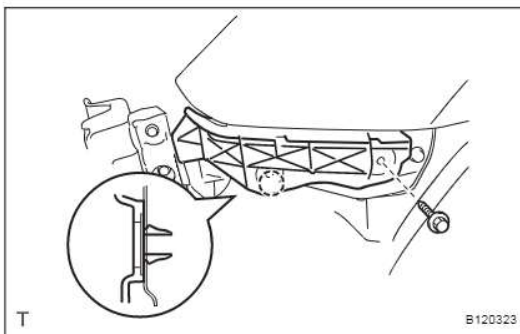


ET-4

EXTERIOR – FRONT BUMPER

DISASSEMBLY

- 1. REMOVE FRONT SPOILER PAD LH**
(a) Remove the 3 screws and spoiler pad.
- 2. REMOVE FRONT SPOILER PAD RH**
(a) Remove the 3 screws and spoiler pad.
- 3. REMOVE FRONT LICENSE PLATE MOUNTING BRACKET**
(a) Remove the 2 screws and mounting bracket.
- 4. REMOVE FOG LIGHT COVER LH**
(a) Using a screwdriver, detach the claws and remove the cover.
HINT:
Tape the screwdriver tip before use.
- 5. REMOVE FOG LIGHT COVER RH**
(a) Using a screwdriver, detach the claws and remove the cover.
HINT:
Tape the screwdriver tip before use.
- 6. REMOVE RADIATOR GRILLE LOWER**
(a) Using a screwdriver, detach the 14 claws and remove the radiator grille lower.
HINT:
Tape the screwdriver tip before use.
- 7. REMOVE FRONT SIDE MARKER LIGHT ASSEMBLY LH**
(a) Remove the 2 retainers and light.
- 8. REMOVE FRONT SIDE MARKER LIGHT ASSEMBLY RH**
(a) Remove the 2 retainers and light.
- 9. REMOVE FRONT BUMPER HOLE COVER**
(a) Using a screwdriver, detach the claws and remove the cover.
HINT:
Tape the screwdriver tip before use.

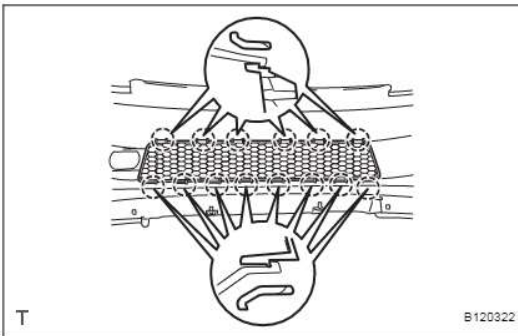


ET

T

B120322

EXTERIOR – FRONT BUMPER**ET-5****REASSEMBLY**

- 1. INSTALL FRONT BUMPER HOLE COVER**
(a) Attach the claws to install the cover.
- 2. INSTALL FRONT SIDE MARKER LIGHT ASSEMBLY LH**
(a) Install the light with the 2 retainers.
- 3. INSTALL FRONT SIDE MARKER LIGHT ASSEMBLY RH**
(a) Install the light with the 2 retainers.
- 4. INSTALL RADIATOR GRILLE LOWER**
(a) Attach the 14 claws to install the radiator grille lower.
- 5. INSTALL FOG LIGHT COVER LH**
(a) Attach the claws to install the cover.
- 6. INSTALL FOG LIGHT COVER RH**
(a) Attach the claws to install the cover.
- 7. INSTALL FRONT LICENSE PLATE MOUNTING BRACKET**
(a) Install the mounting bracket with the 2 screws.
- 8. INSTALL FRONT SPOILER PAD LH**
(a) Install the spoiler pad with the 3 screws.
- 9. INSTALL FRONT SPOILER PAD RH**
(a) Install the spoiler pad with the 3 screws.

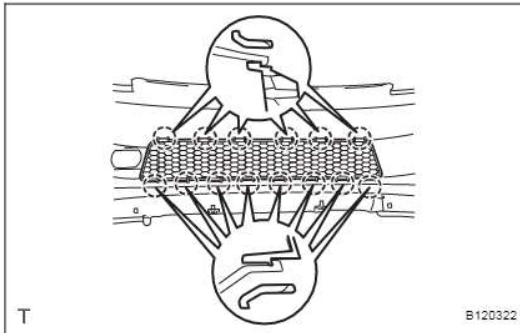**ET**


ET-6

EXTERIOR – FRONT BUMPER

INSTALLATION

HINT:

A bolt without a torque specification is shown in the standard bolt chart (see page [SS-2](#)).

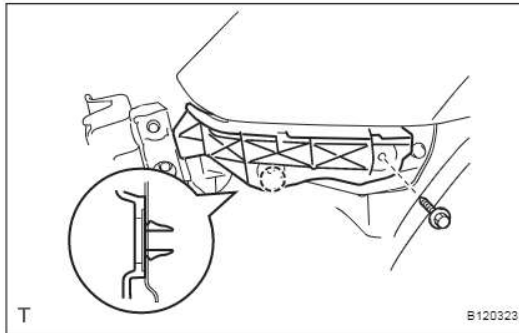

1. INSTALL FRONT BUMPER SIDE SUPPORT LH

- (a) Attach the claw to install the side support.
- (b) Install the screw.

2. INSTALL FRONT BUMPER SIDE SUPPORT RH

HINT:


Use the same procedures described for the LH side.

3. INSTALL HEADLIGHT ASSEMBLY LH (See page [LI-13](#))4. INSTALL HEADLIGHT ASSEMBLY RH (See page [LI-13](#))

5. INSTALL FRONT BUMPER REINFORCEMENT


- (a) Install the reinforcement with the 4 nuts.
Torque: 20 N*m (204 kgf*cm, 15 ft.*lbf)

6. INSTALL FRONT BUMPER ENERGY ABSORBER

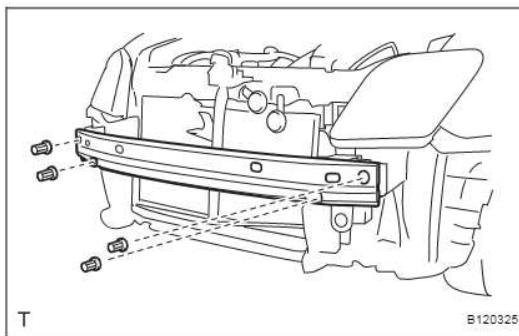



7. INSTALL FRONT BUMPER COVER

- (a) Put protective tape under the front fender.
- (b) Attach the 6 claws to install the bumper cover.

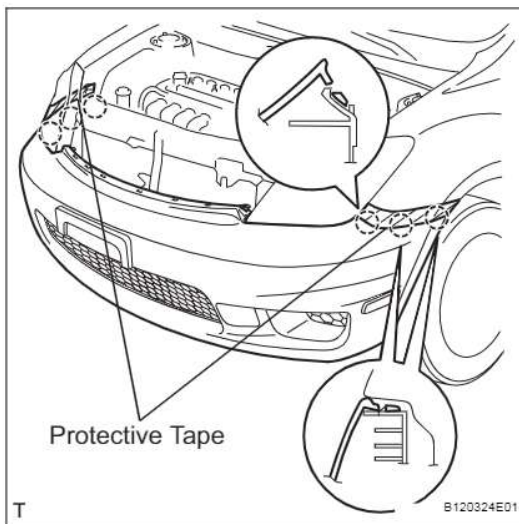

- (c) Install the 8 screws, 2 bolts and 3 clips.

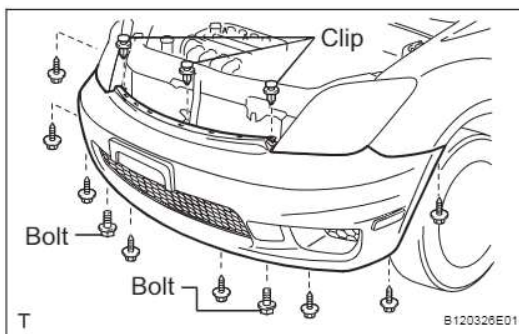8. INSTALL RADIATOR GRILLE (See page [ET-14](#))

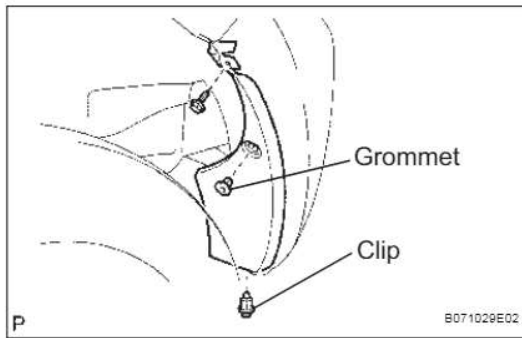EXTERIOR – REAR BUMPER**ET-9****REMOVAL****1. REMOVE REAR BUMPER SIDE SEAL LH**


- Remove the screw.
- Using a screwdriver, remove the clip and grommet. Then remove the side seal.

HINT:

Tape the screwdriver tip before use.



2. REMOVE REAR BUMPER SIDE SEAL RH**HINT:**

Use the same procedures described for the LH side.

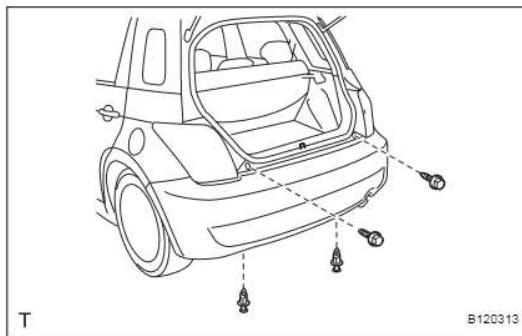**3. REMOVE REAR BUMPER COVER**


- Remove the 2 bolts.
- Using a clip remover, remove the 2 clips.

- Put protective tape under the quarter panel.
- Detach the 5 claws and remove the cover.

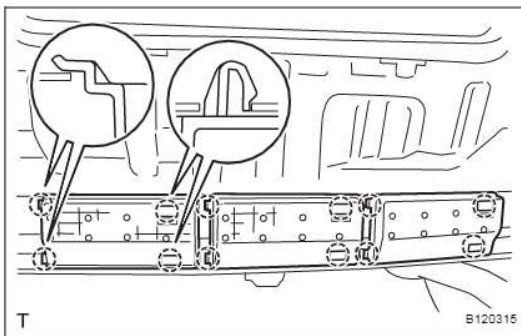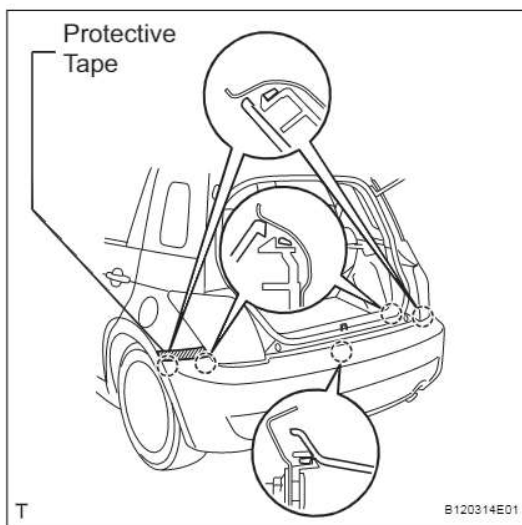**4. REMOVE REAR BUMPER SHIELD BRACKET CENTER**


- Using a screwdriver, detach the 12 claws and remove the 3 brackets.

ET

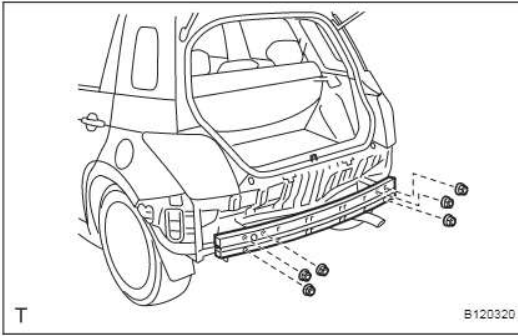ET-10**EXTERIOR – REAR BUMPER**


- 5. REMOVE REAR BUMPER REINFORCEMENT**
(a) Remove the 6 nuts and reinforcement.
- 6. REMOVE REAR BUMPER SIDE SUPPORT LH**
(a) Remove the screw and detach the claw. Then remove the side support.
- 7. REMOVE REAR BUMPER SIDE SUPPORT RH**
(a) Remove the screw and detach the claw. Then remove the side support.
- 8. REMOVE REAR BUMPER SIDE RETAINER LH**
(a) Remove the screw and detach the claw. Then remove the side support.
- 9. REMOVE REAR BUMPER SIDE RETAINER RH**
(a) Remove the screw and detach the claw. Then remove the side support.

FRONT BUMPER
COMPONENTS

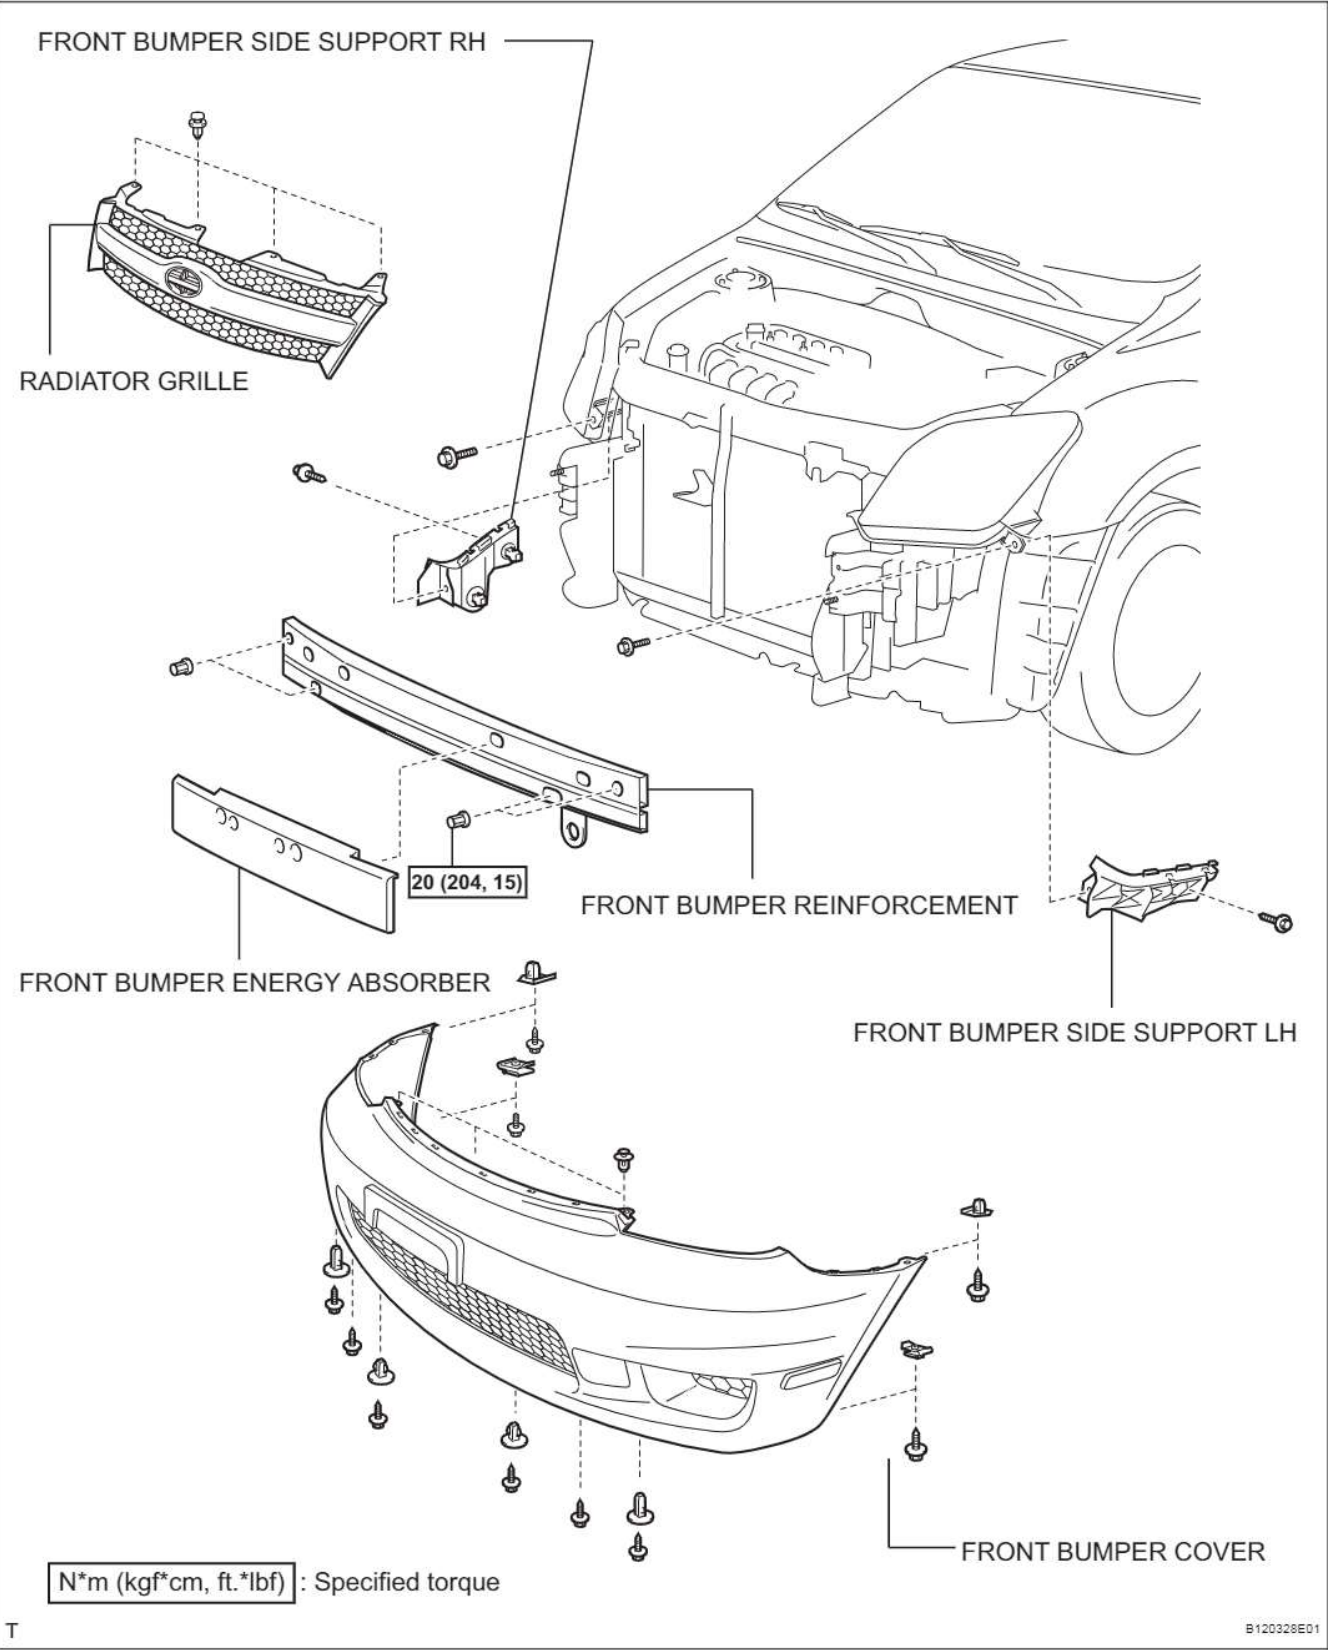

ET-2

EXTERIOR - FRONT BUMPER

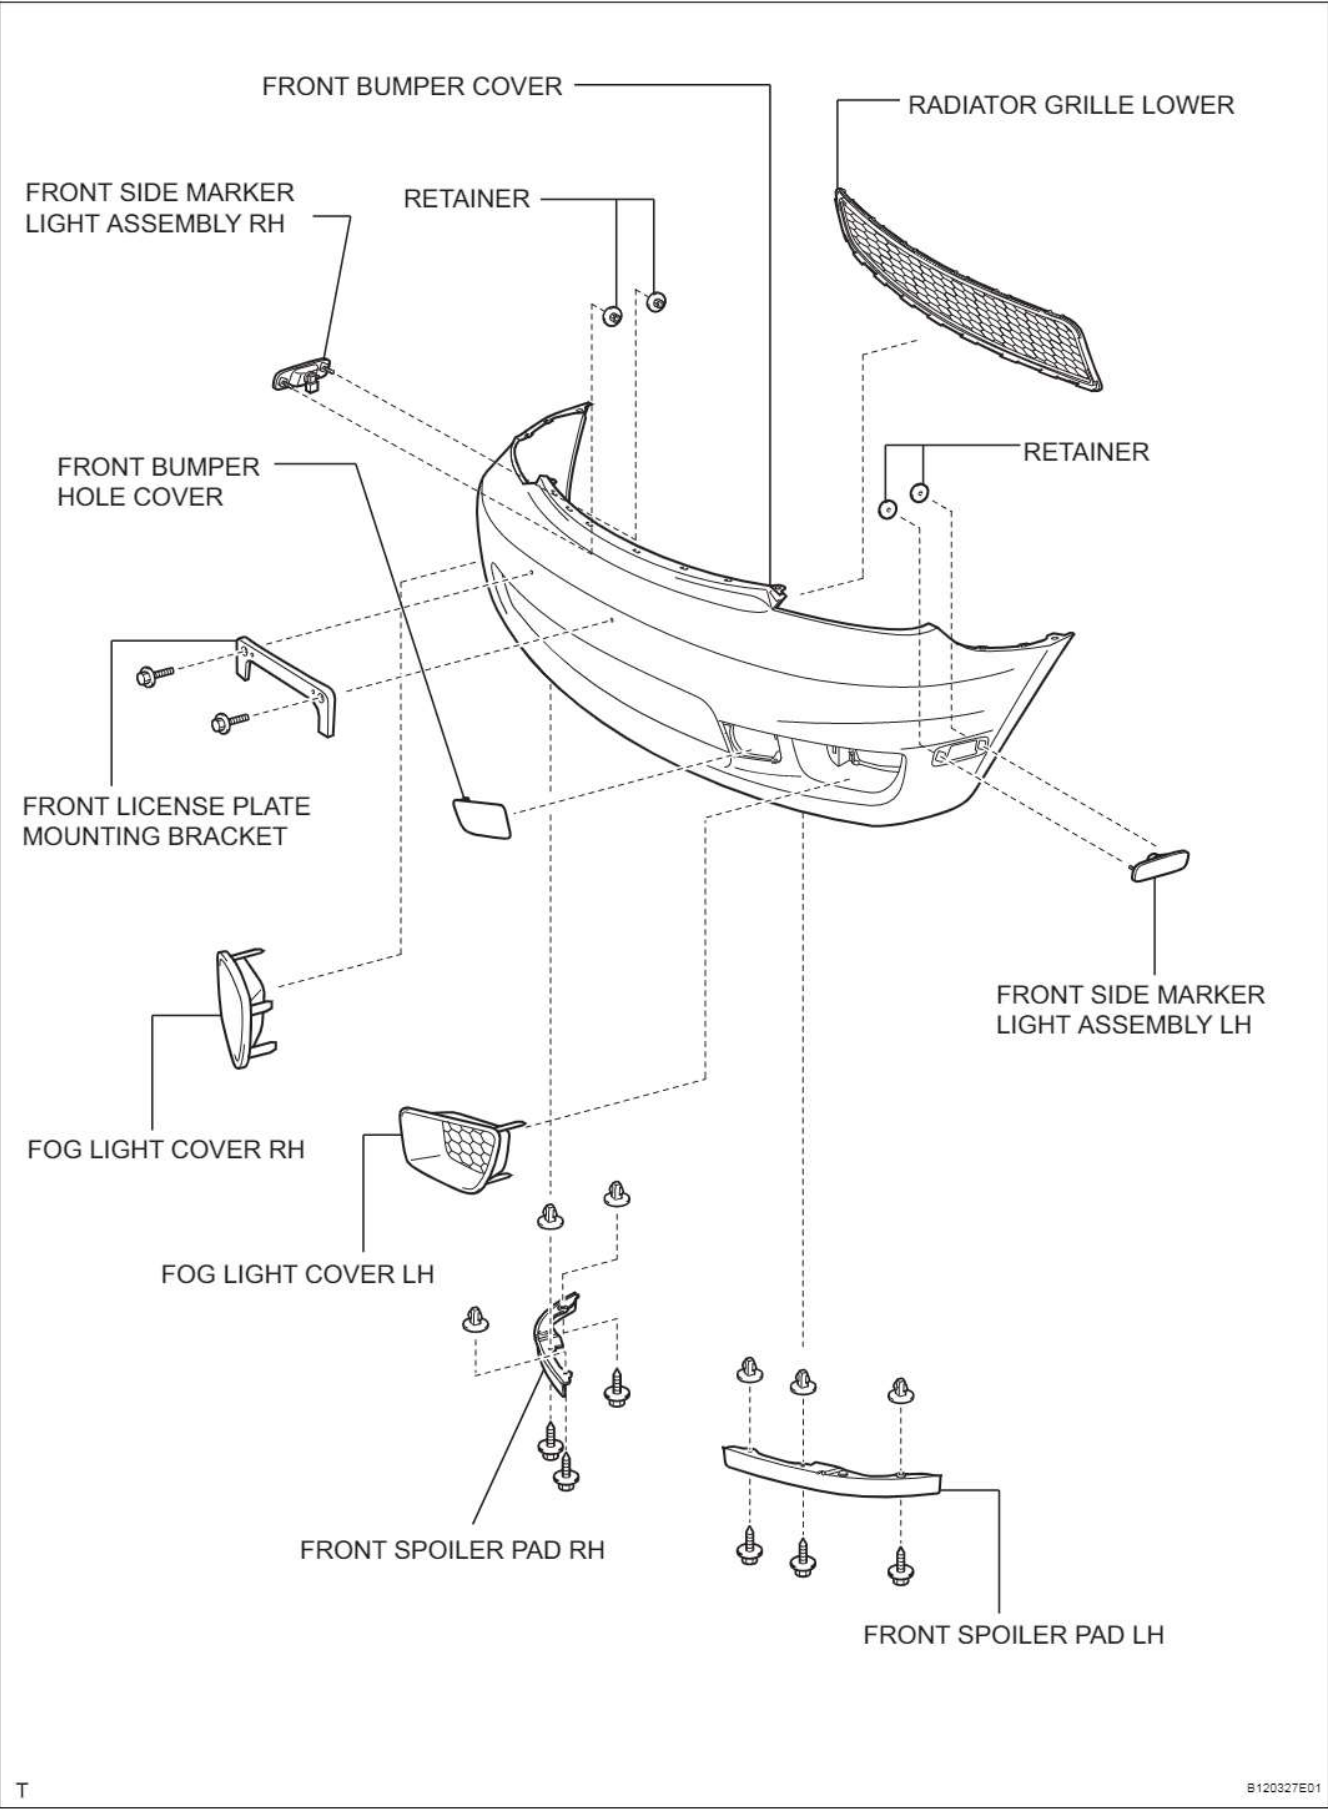

EXTERIOR – REAR BUMPER**ET-11****INSTALLATION****HINT:**

A bolt without a torque specification is shown in the standard bolt chart (see page [SS-2](#)).

1. INSTALL REAR BUMPER SIDE RETAINER LH

- (a) Attach the claw and install the side support with the screw.

2. INSTALL REAR BUMPER SIDE RETAINER RH

- (a) Attach the claw and install the side support with the screw.

3. INSTALL REAR BUMPER SIDE SUPPORT LH



- (a) Attach the claw and install the side support with the screw.

4. INSTALL REAR BUMPER SIDE SUPPORT RH

- (a) Attach the claw and install the side support with the screw.


5. INSTALL REAR BUMPER REINFORCEMENT

- (a) Install the reinforcement with the 6 nuts.
Torque: 20 N*m (204 kgf*cm, 15 ft.*lbf)

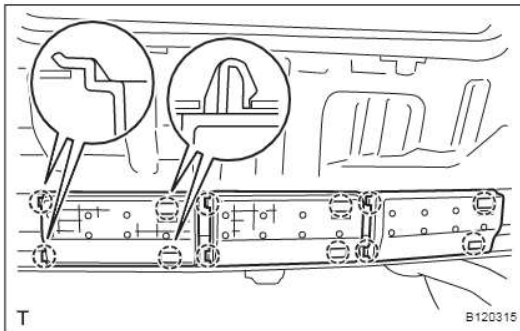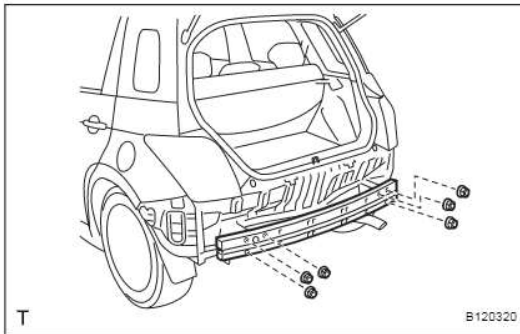
**6. INSTALL REAR BUMPER SHIELD BRACKET CENTER**

- (a) Attach the 12 claws to install the 3 brackets.


ET

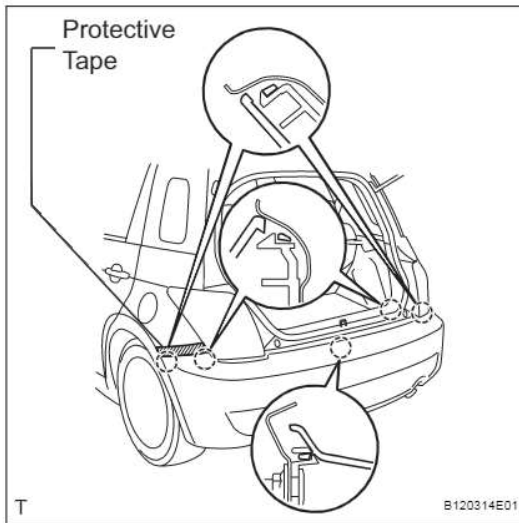ET-12**EXTERIOR – REAR BUMPER****7. INSTALL REAR BUMPER COVER**

- (a) Put protective tape under the quarter panel.
- (b) Attach the 5 claws to install the cover.

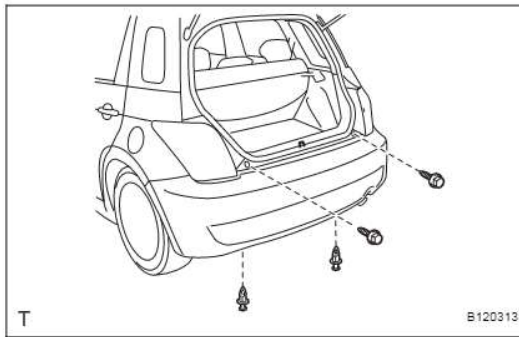

- (c) Install the 2 bolts and 2 clips.

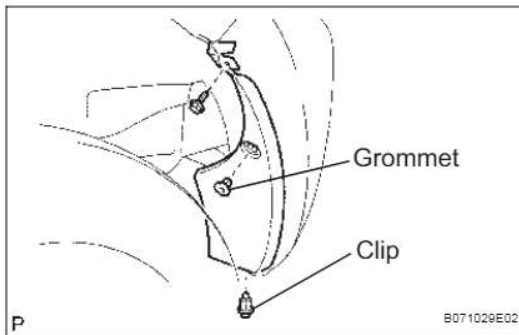**8. INSTALL REAR BUMPER SIDE SEAL LH**

- (a) Install the side seal with the screw, grommet and clip.


9. INSTALL REAR BUMPER SIDE SEAL RH

HINT:

Use the same procedures described for the LH side.


ET

REAR BUMPER
COMPONENTS

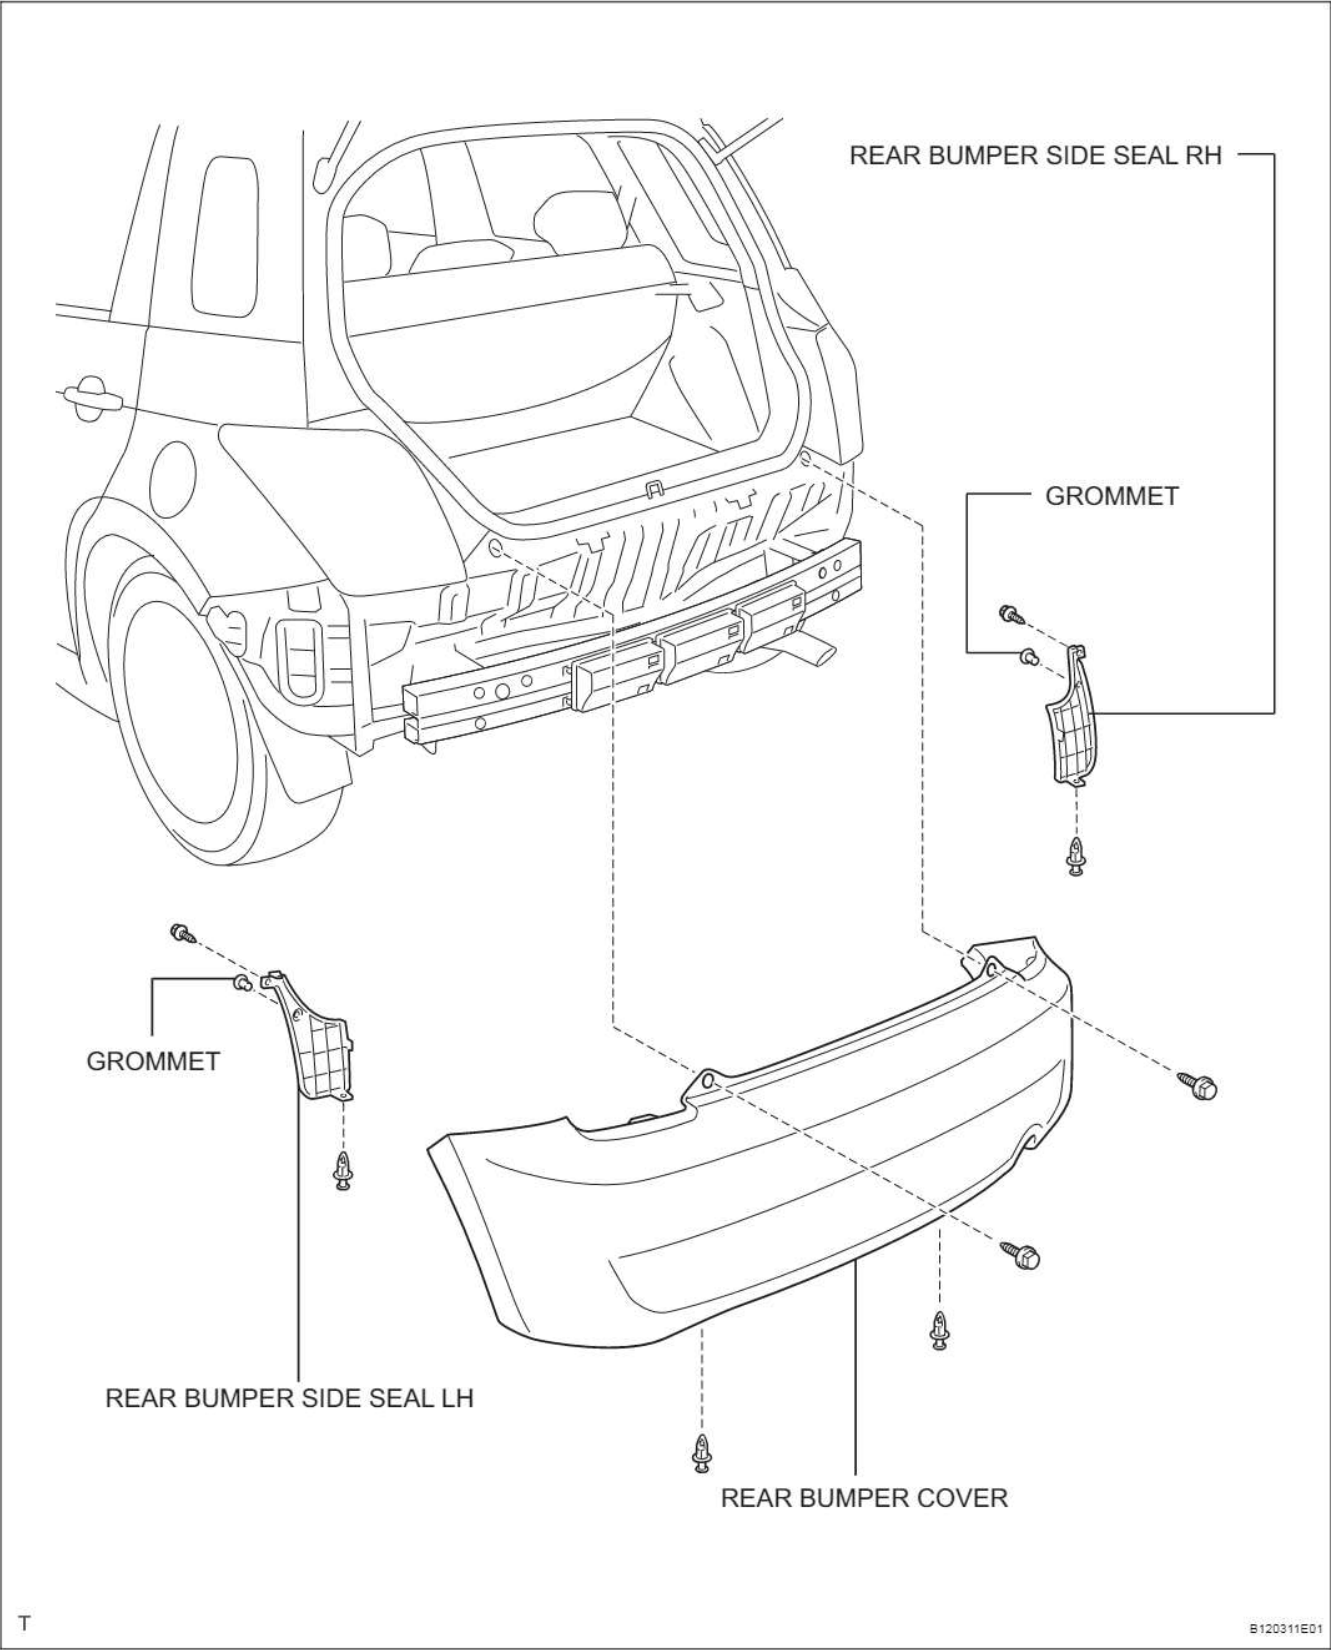

ET-8

EXTERIOR – REAR BUMPER

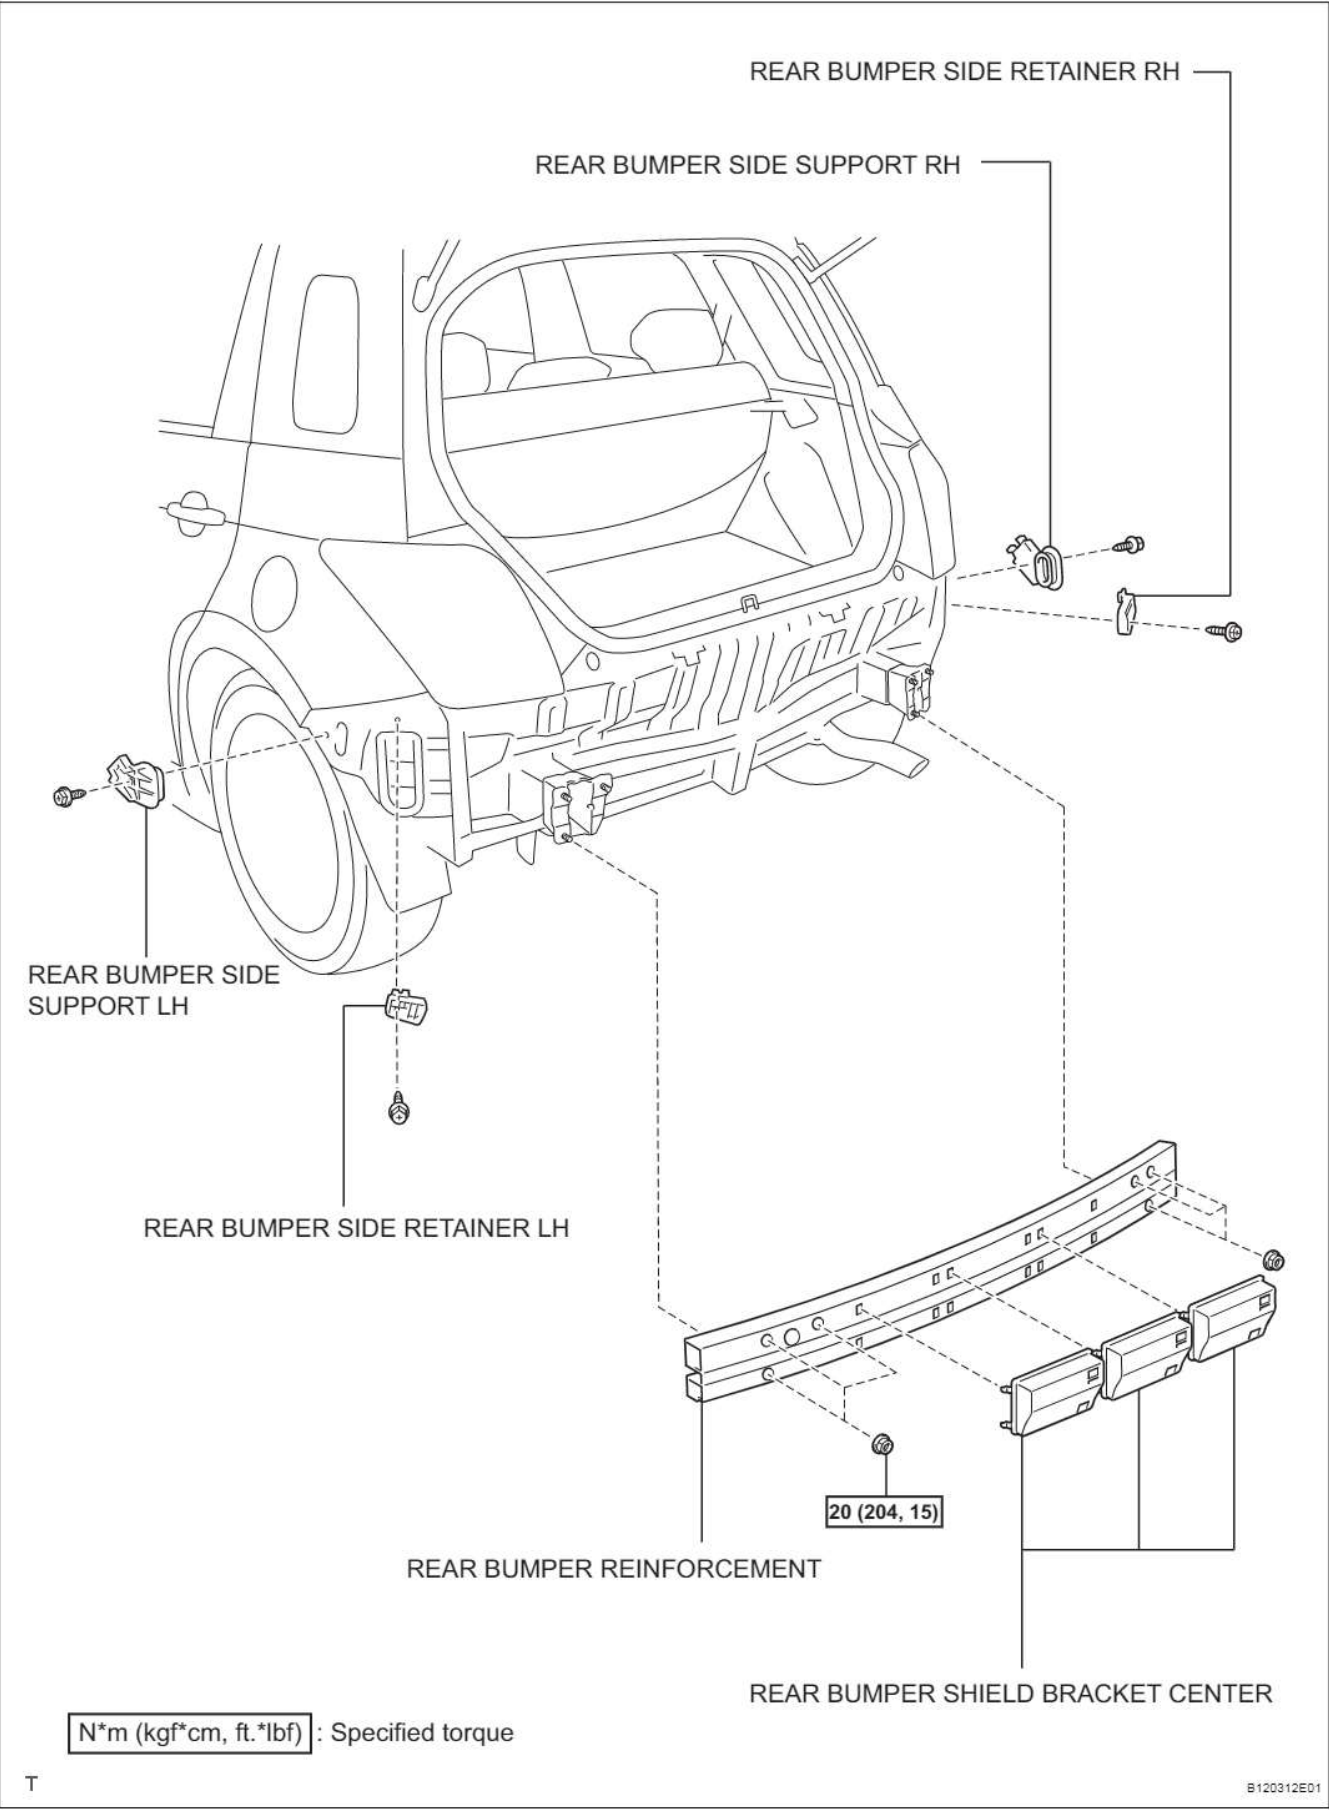

INSTALLATION

HINT:

When installing the name plate, heat the vehicle body and name plate using a heat light.

Standard heating temperature

Item	Specified Condition
Vehicle Body	40 to 60°C (104 to 140°F)
Name Plate	20 to 30°C (68 to 86°F)

NOTICE:

Do not heat the vehicle body and name plate excessively.

1. INSTALL BACK DOOR NAME PLATE

- (a) Clean the vehicle body surface.
 - (1) Using a heat light, heat the vehicle body surface.
 - (2) Remove the double-sided tape from the vehicle body.
 - (3) Wipe off any tape adhesive residue with white gasoline.
- (b) If reusing the name plate:

Clean the name plate.

 - (1) Using a heat light, heat the name plate.
 - (2) Remove the double-sided tape from the name plate.
 - (3) Wipe off any tape adhesive residue with white gasoline.
 - (4) Apply new double-sided tape to the name plate.
- (c) Install the name plate.
 - (1) Using a heat light, heat the vehicle body and name plate.
 - (2) Remove the peeling paper from the face of the name plate.

HINT:

After removing the peeling paper, keep the exposed adhesive free from foreign matter.

- (3) Install the name plate.


NOTICE:

Install the name plate exactly according to the specifications below.

ET

ET-18

EXTERIOR – NAME PLATE

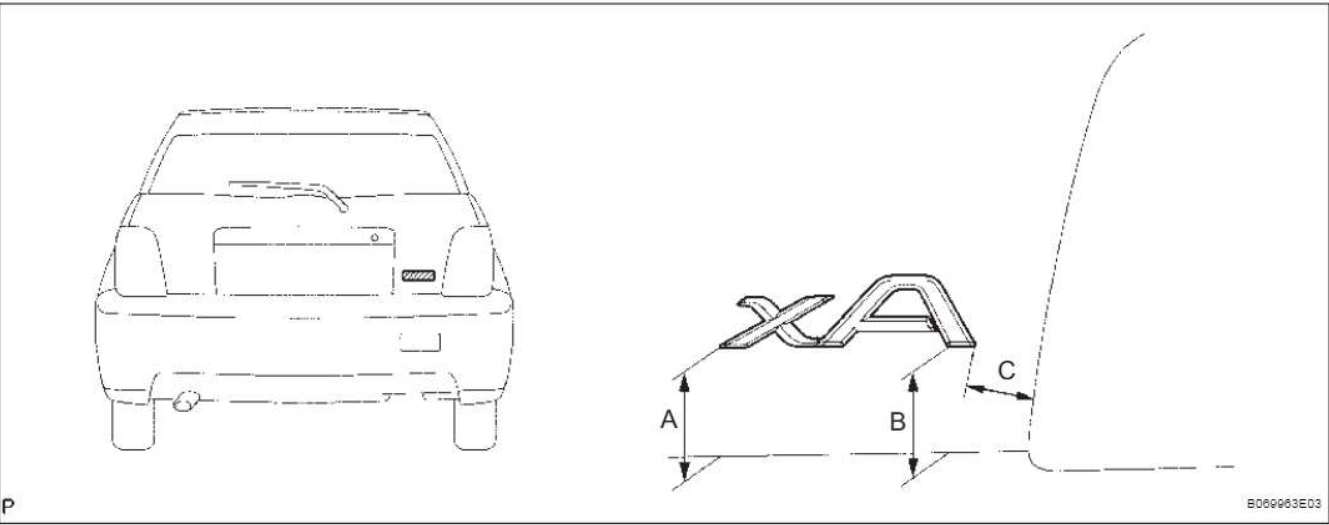



Standard measurement

Area	Specified Condition
A	50.3 mm (1.980 in.)
B	51.2 mm (2.016 in.)
C	39.4 mm (1.551 in.)

ET-12

EXTERIOR – RADIATOR GRILLE

RADIATOR GRILLE COMPONENTS

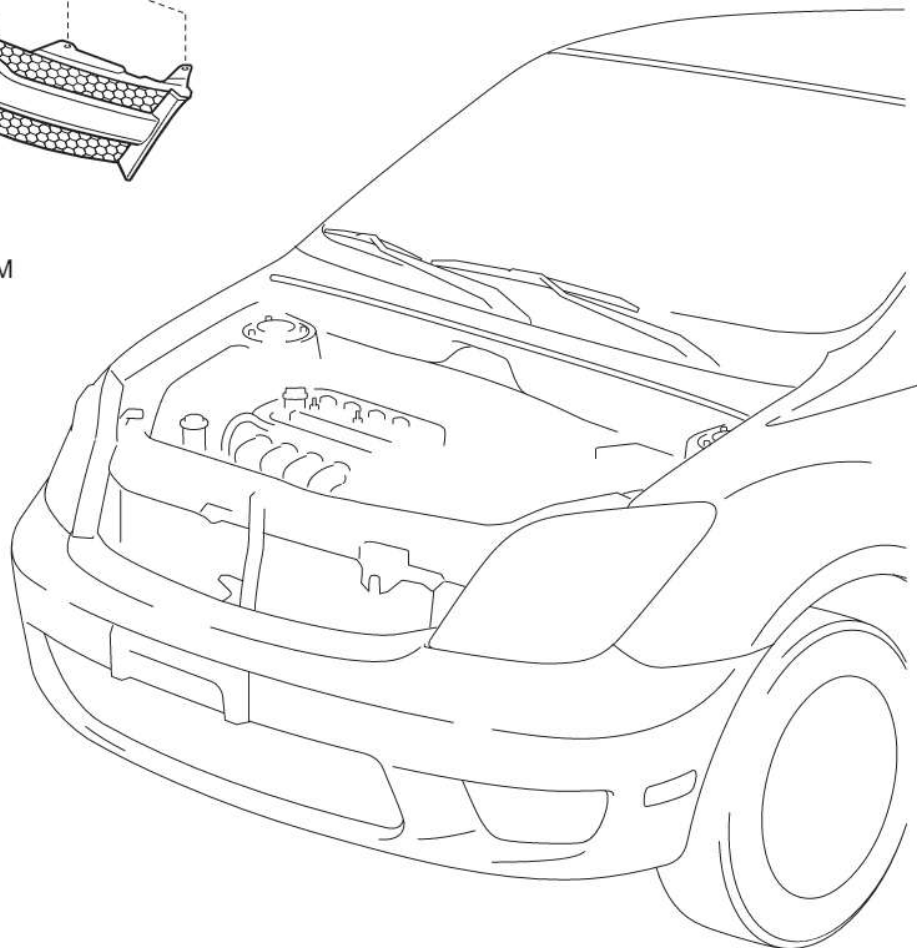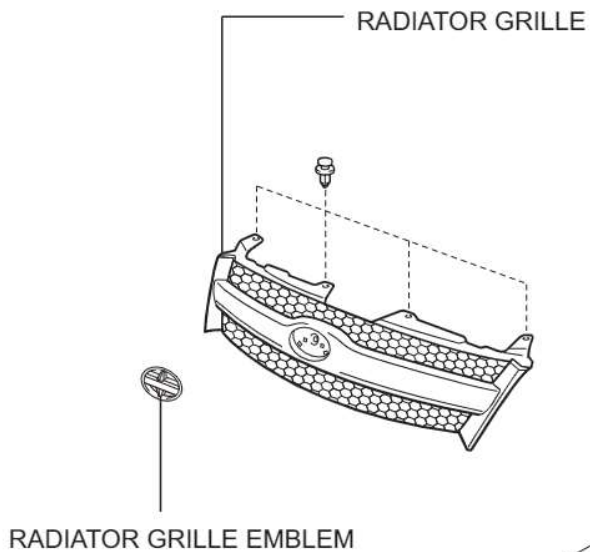

T

B119073E01


ET

EXTERIOR – RADIATOR GRILLE

ET-13

REMOVAL**1. REMOVE RADIATOR GRILLE**


- (a) Using a clip remover, remove the 4 clips.
- (b) Pull the radiator grille in the direction indicated by the arrow in the illustration to detach the 8 claws and remove the radiator grille.

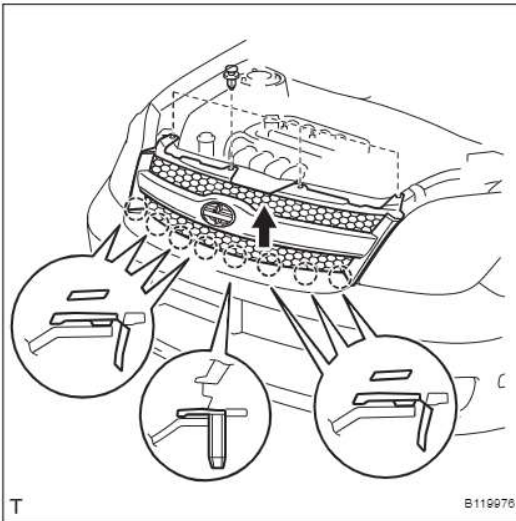**DISASSEMBLY****1. REMOVE RADIATOR GRILLE EMBLEM**


- (a) Using a screwdriver, detach the 6 claws and remove the emblem from the radiator grille.

HINT:


Tape the screwdriver tip before use.

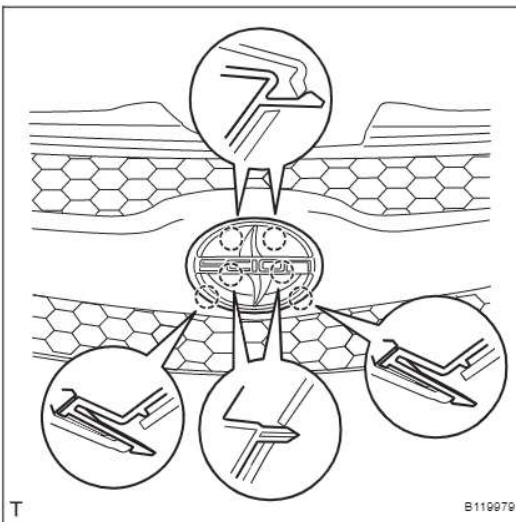**REASSEMBLY****1. INSTALL RADIATOR GRILLE EMBLEM**

- (a) Attach the 6 claws to install the emblem.

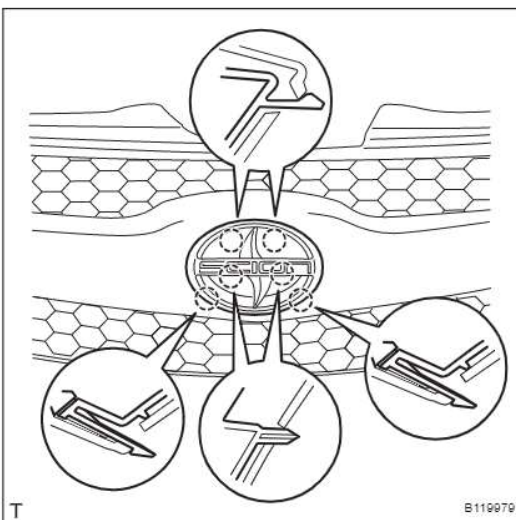


ET

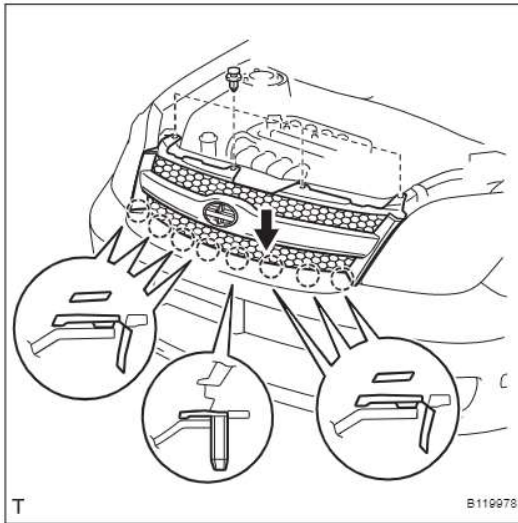ET-14**EXTERIOR – RADIATOR GRILLE****INSTALLATION****1. INSTALL RADIATOR GRILLE**

- (a) Push the radiator grille in the direction indicated by the arrow in the illustration to attach the 8 claws and install the radiator grille.
- (b) Install the 4 clips.

ET-20**EXTERIOR – FRONT DOOR GLASS WEATHERSTRIP****INSTALLATION****HINT:**

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

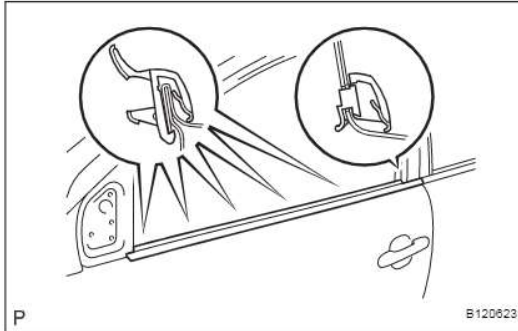


- 1. INSTALL FRONT DOOR GLASS WEATHERSTRIP ASSEMBLY OUTER LH**
(a) Attach the claws to install the weatherstrip.
- 2. INSTALL OUTER REAR VIEW MIRROR ASSEMBLY LH** (See page [MI-9](#))
- 3. INSTALL FRONT NO. 2 SPEAKER ASSEMBLY** (See page [AV-8](#))
- 4. INSTALL FRONT DOOR TRIM BOARD SUB-ASSEMBLY LH** (See page [ED-17](#))
- 5. INSTALL FRONT ARMREST BASE PANEL UPPER LH** (See page [ED-18](#))
- 6. INSTALL FRONT DOOR LOWER FRAME BRACKET GARNISH LH** (See page [ED-18](#))
- 7. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**
- 8. PERFORM INITIALIZATION**
(a) Perform initialization (see page [IN-23](#)).

NOTICE:

Certain systems need to be initialized after disconnecting and reconnecting the cable from the negative (-) battery terminal.

NAME PLATE
COMPONENTS

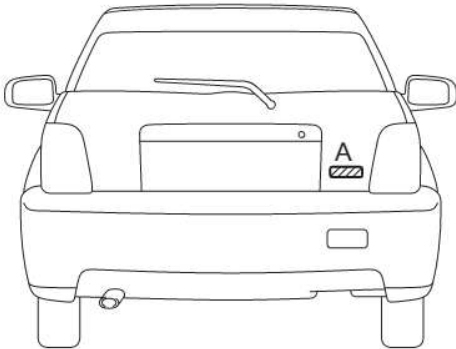

BACK DOOR NAME PLATE

ET

T


B120616E01

REMOVAL

HINT:
When removing the name plate, heat the vehicle body and name plate using a heat light.
Standard heating temperature

Item	Specified Condition
Vehicle Body	40 to 60°C (104 to 140°F)
Name Plate	20 to 30°C (68 to 86°F)

NOTICE:
Do not heat the vehicle body and name plate excessively.

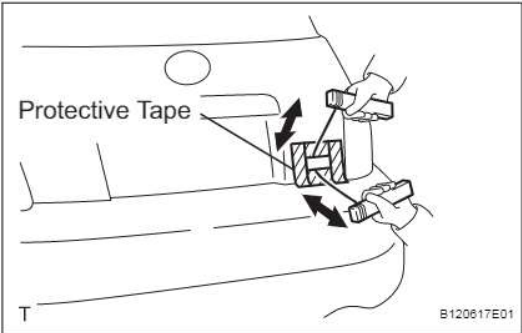


1. REMOVE BACK DOOR NAME PLATE
- (a) Put protective tape around the name plate.
 - (b) Insert a piano wire between the vehicle body and name plate.
 - (c) Tie objects that can serve as handles (for example, wooden blocks) to both wire ends.
 - (d) Pull the piano wire and scrape off the double-sided tape that holds the name plate to the vehicle body.
- NOTICE:**
- If reusing the name plate, take care not to damage the name plate.
 - Be careful not to damage the vehicle body.

INSTALLATION

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

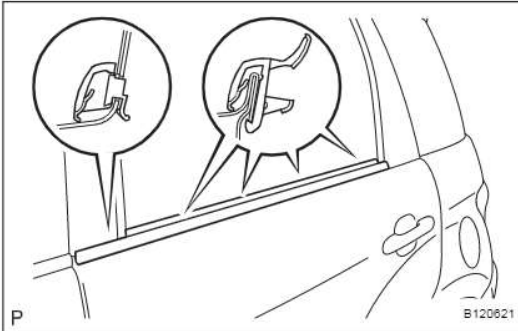

1. INSTALL REAR DOOR GLASS WEATHERSTRIP ASSEMBLY OUTER LH

- (a) Attach the claws to install the weatherstrip.

2. INSTALL REAR DOOR TRIM BOARD SUB-ASSEMBLY LH

3. INSTALL REAR DOOR ARMREST BASE PANEL UPPER LH

4. INSTALL REAR DOOR REAR GUIDE BRACKET GARNISH LH

5. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

6. PERFORM INITIALIZATION

- (a) Perform initialization (see page [IN-23](#)).


NOTICE:

Certain systems need to be initialized after disconnecting and reconnecting the cable from the negative (-) battery terminal.

ET-18

EXTERIOR – FRONT DOOR GLASS WEATHERSTRIP

FRONT DOOR GLASS WEATHERSTRIP COMPONENTS

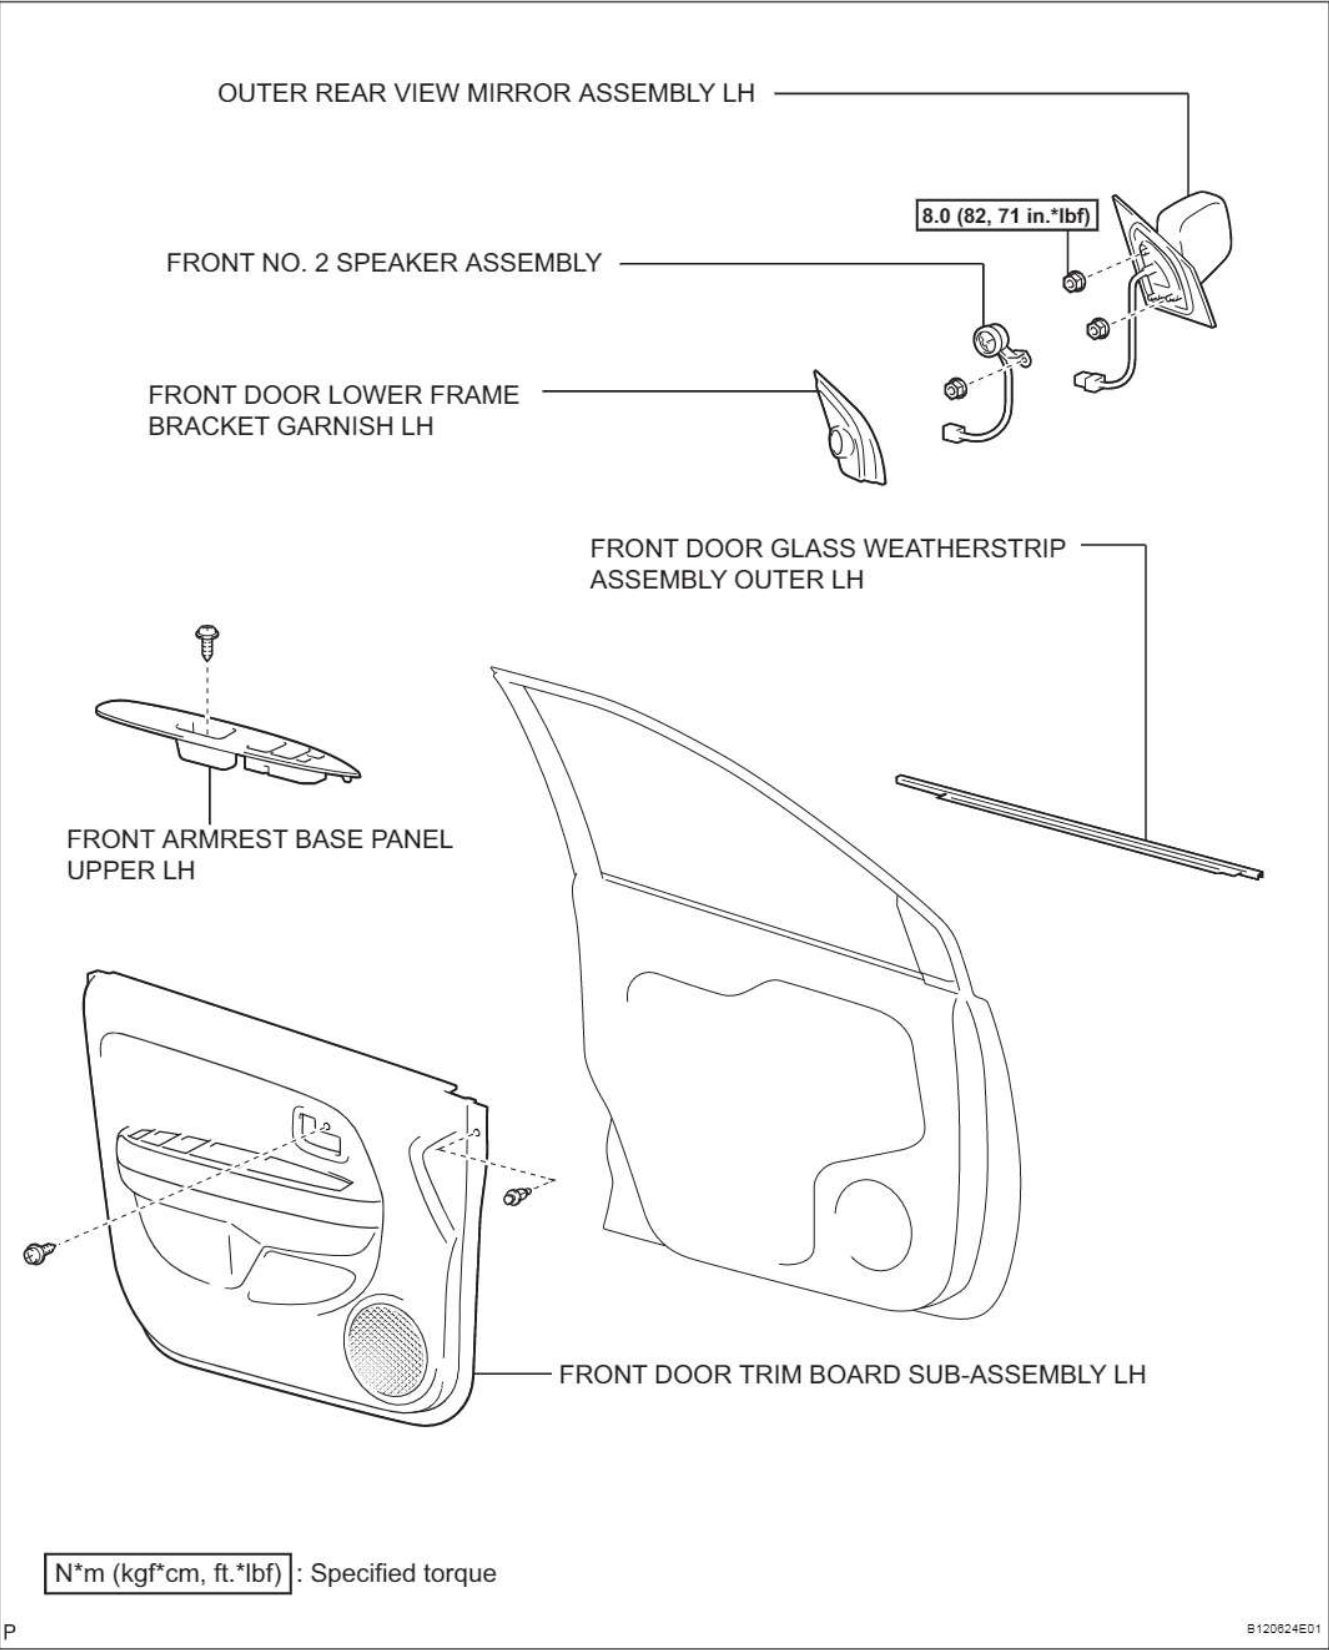

REMOVAL

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

2. REMOVE FRONT DOOR LOWER FRAME BRACKET GARNISH LH (See page [ED-8](#))

3. REMOVE FRONT ARMREST BASE PANEL UPPER LH (See page [ED-8](#))

4. REMOVE FRONT DOOR TRIM BOARD SUB-ASSEMBLY LH (See page [ED-9](#))

5. REMOVE FRONT NO. 2 SPEAKER ASSEMBLY (See page [AV-7](#))


6. REMOVE OUTER REAR VIEW MIRROR ASSEMBLY LH (See page [MI-7](#))

7. REMOVE FRONT DOOR GLASS WEATHERSTRIP ASSEMBLY OUTER LH

- Put protective tape under the weatherstrip.
- Using a moulding remover, detach the claws to remove the weatherstrip as shown in the illustration.

HINT:

Tape the remover tip before use.

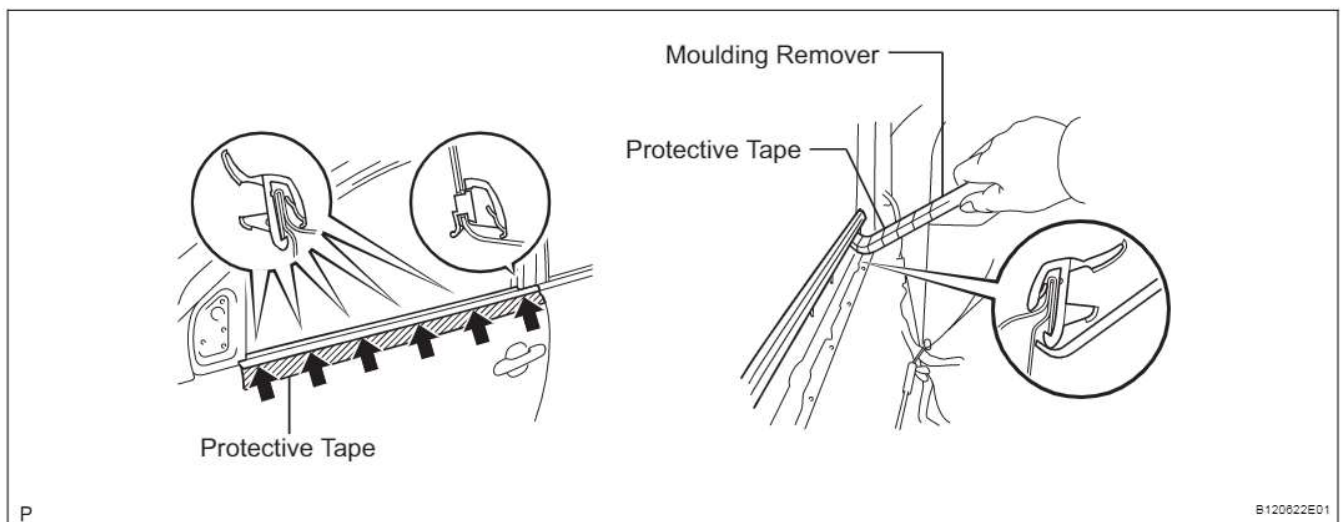

ET

P

B120622E01

INSTALLATION

- HINT:
- Use the same procedures for the RH side and LH side.
 - The procedures listed below are for the LH side.
 - When installing the clip, heat the vehicle body and clip using a heat light.

Standard heating temperature

Item	Specified Condition
Vehicle Body	40 to 60°C (104 to 140°F)
Clip	20 to 30°C (68 to 86°F)


NOTICE:
Do not heat the vehicle body and clip excessively.

1. REPLACE ROOF DRIP SIDE FINISH MOULDING CLIP

HINT:
Use the procedures below to replace damaged or accidentally removed clips. If this step is not necessary, go to the next step.

NOTICE:
After press-fitting the clips, wait 30 minutes or more before installing the moulding.

- HINT:
- Minimum hardening time: 30 minutes
 - Time needed for complete hardening: 24 hours
- (a) Remove the double-sided tape that remains on the moulding installation area of the vehicle body, and then clean the surface with white gasoline.
- (b) Heat the clip installation surfaces of the vehicle body and the installation part of the clips.
- (c) Install new clips in the positions shown in the illustration. Press-fit the clips by hand.

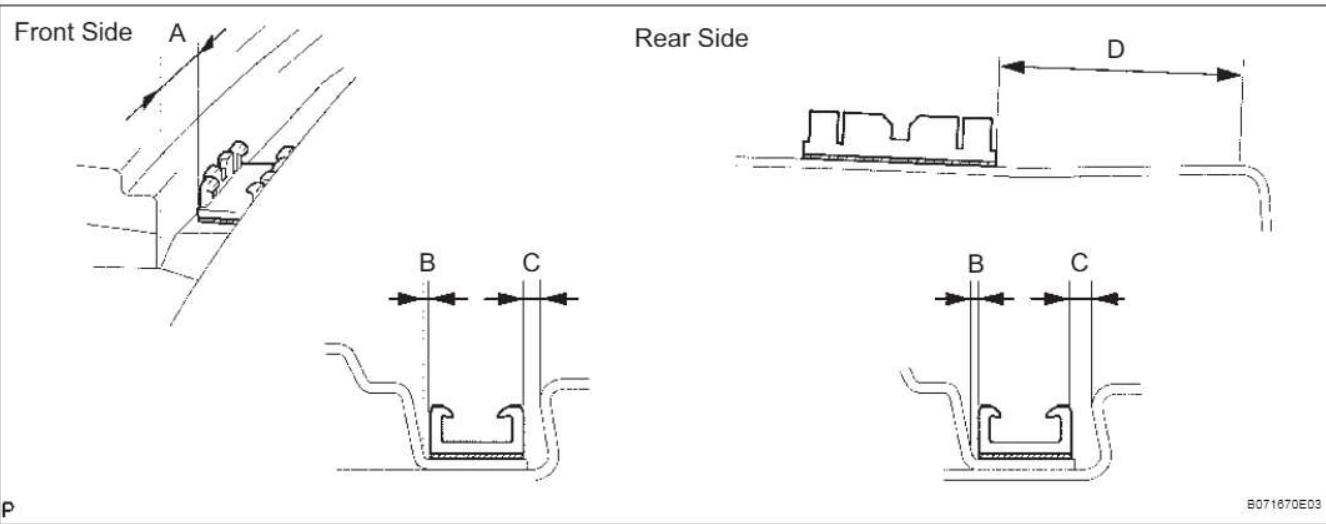


Standard measurement

Area	Specified Condition
A	14.3 mm (0.563 in.)
B	0.8 mm (0.031 in.)
C	2.2 mm (0.087 in.)

EXTERIOR – ROOF DRIP SIDE FINISH MOULDING

ET-27


Area	Specified Condition
D	27.2 mm (1.071 in.)

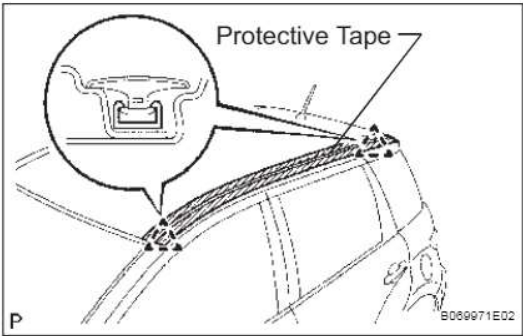

2. **INSTALL ROOF DRIP SIDE FINISH MOULDING LH**
- (a) Apply protective tape around the edges of the moulding.
 - (b) Adjust the position of the moulding so that the front and rear ends attach to the vehicle's 2 clips, and install the moulding.
 - (c) Remove the protective tape from the edges of the moulding.

ET

REAR DOOR GLASS WEATHERSTRIP
COMPONENTS

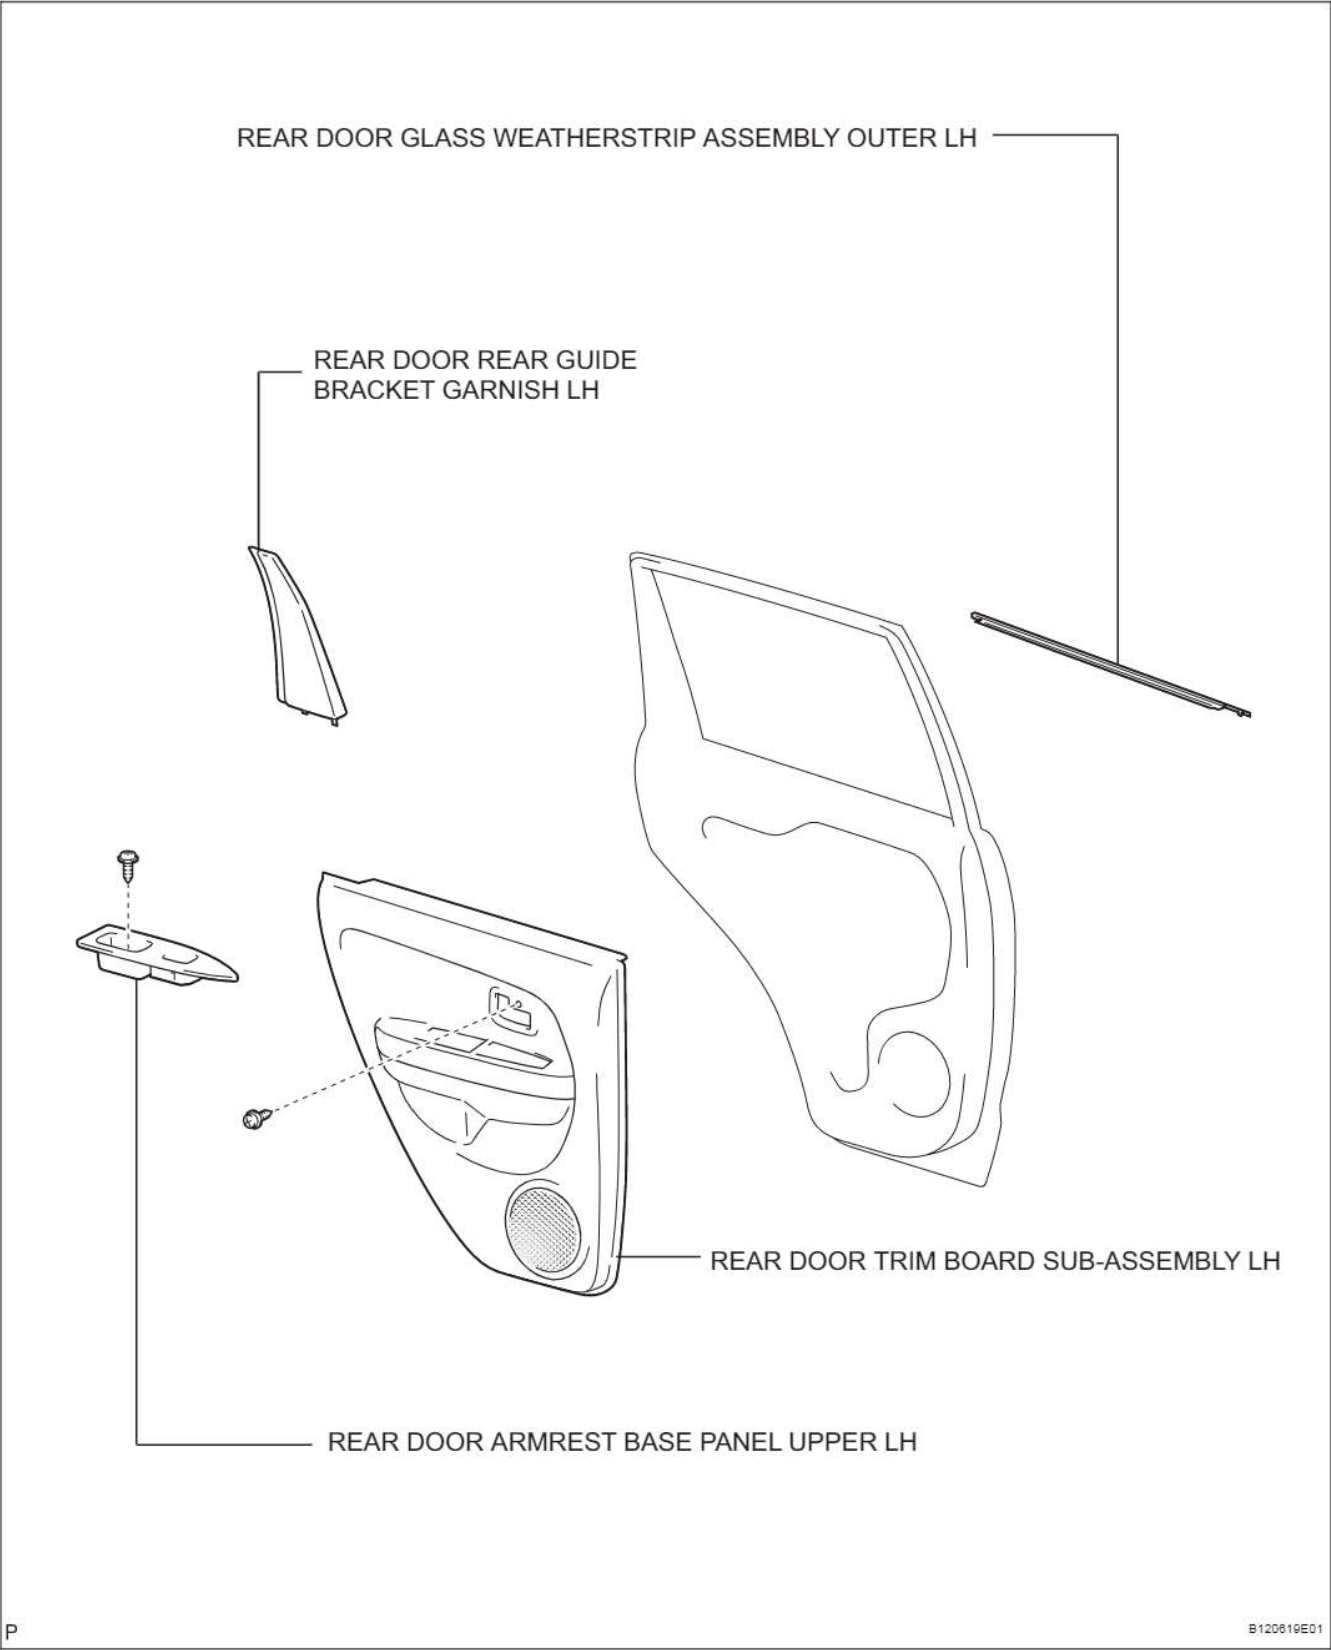

ET

ET-22

EXTERIOR – REAR DOOR GLASS WEATHERSTRIP

REMOVAL

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.


2. REMOVE REAR DOOR REAR GUIDE BRACKET GARNISH LH (See page [ED-24](#))3. REMOVE REAR DOOR ARMREST BASE PANEL UPPER LH (See page [ED-24](#))4. REMOVE REAR DOOR TRIM BOARD SUB-ASSEMBLY LH (See page [ED-24](#))

5. REMOVE REAR DOOR GLASS WEATHERSTRIP ASSEMBLY OUTER LH

- Put protective tape under the weatherstrip.
- Using a moulding remover, detach the claws to remove the weatherstrip as shown in the illustration.

HINT:

Tape the remover tip before use.

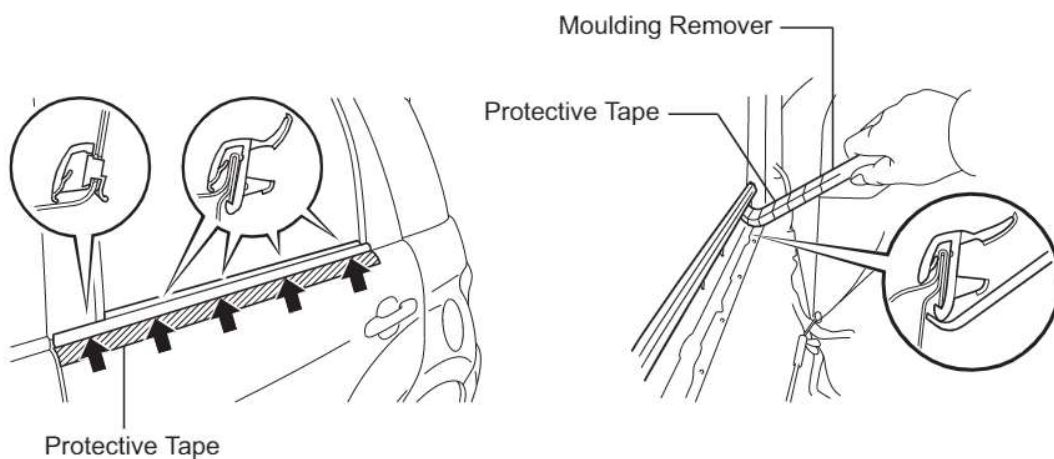

P

B120820E01

INSTALLATION

- HINT:
- Use the same procedures for the RH side and LH side.
 - The procedures listed below are for the LH side.

1. INSTALL SIDE MUDGUARD PROTECTOR LH

- (a) Clean the side mudguard surface.
- (1) Using a heat light, heat the side mudguard surface.

Standard heating temperature



Item	Specified Condition
Side mudguard	20 to 30°C (68 to 86°F)

NOTICE:
Do not heat the side mudguard excessively.

- (2) Remove the double-sided tape from the side mudguard.
- (3) Wipe off any tape adhesive residue with white gasoline.
- (b) Install a new side mudguard protector.
- (1) Remove the peeling paper from the side mudguard protector.

HINT:
After removing the peeling paper, keep the exposed adhesive free from foreign matter.

- (2) Install the side mudguard protector to the side mudguard as shown in the illustration.

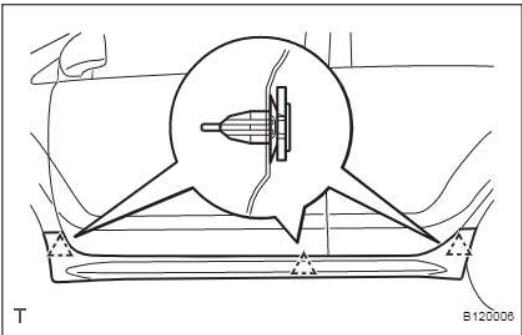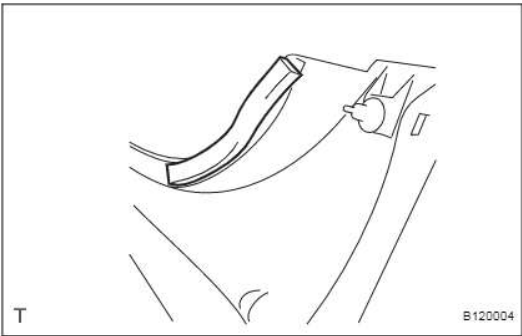


2. INSTALL SIDE MUDGUARD LH


- (a) Attach the 3 clips to install the side mudguard.

EXTERIOR – SIDE MUDGUARD


ET-31

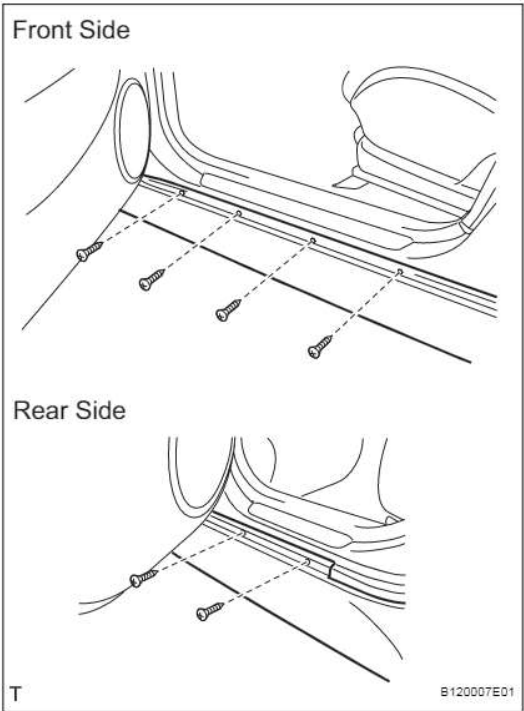

(b) Install the 6 screws.

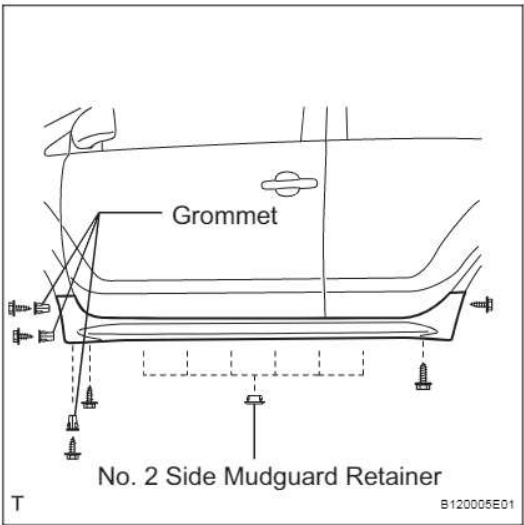

(c) Install the 3 grommets, 6 screws and 6 No. 2 side mudguard retainers.

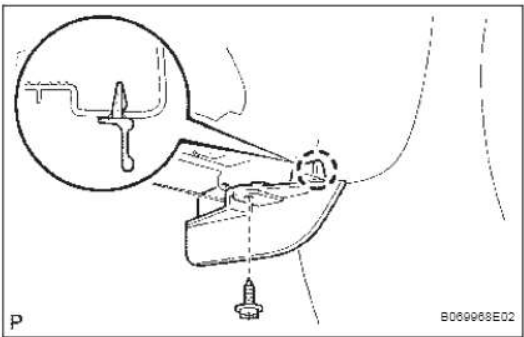

3. INSTALL REAR WHEEL HOUSE PLATE FRONT LH


(a) Install the plate with the screw.

ET

ET-24

EXTERIOR – ROOF DRIP SIDE FINISH MOULDING


ROOF DRIP SIDE FINISH MOULDING COMPONENTS

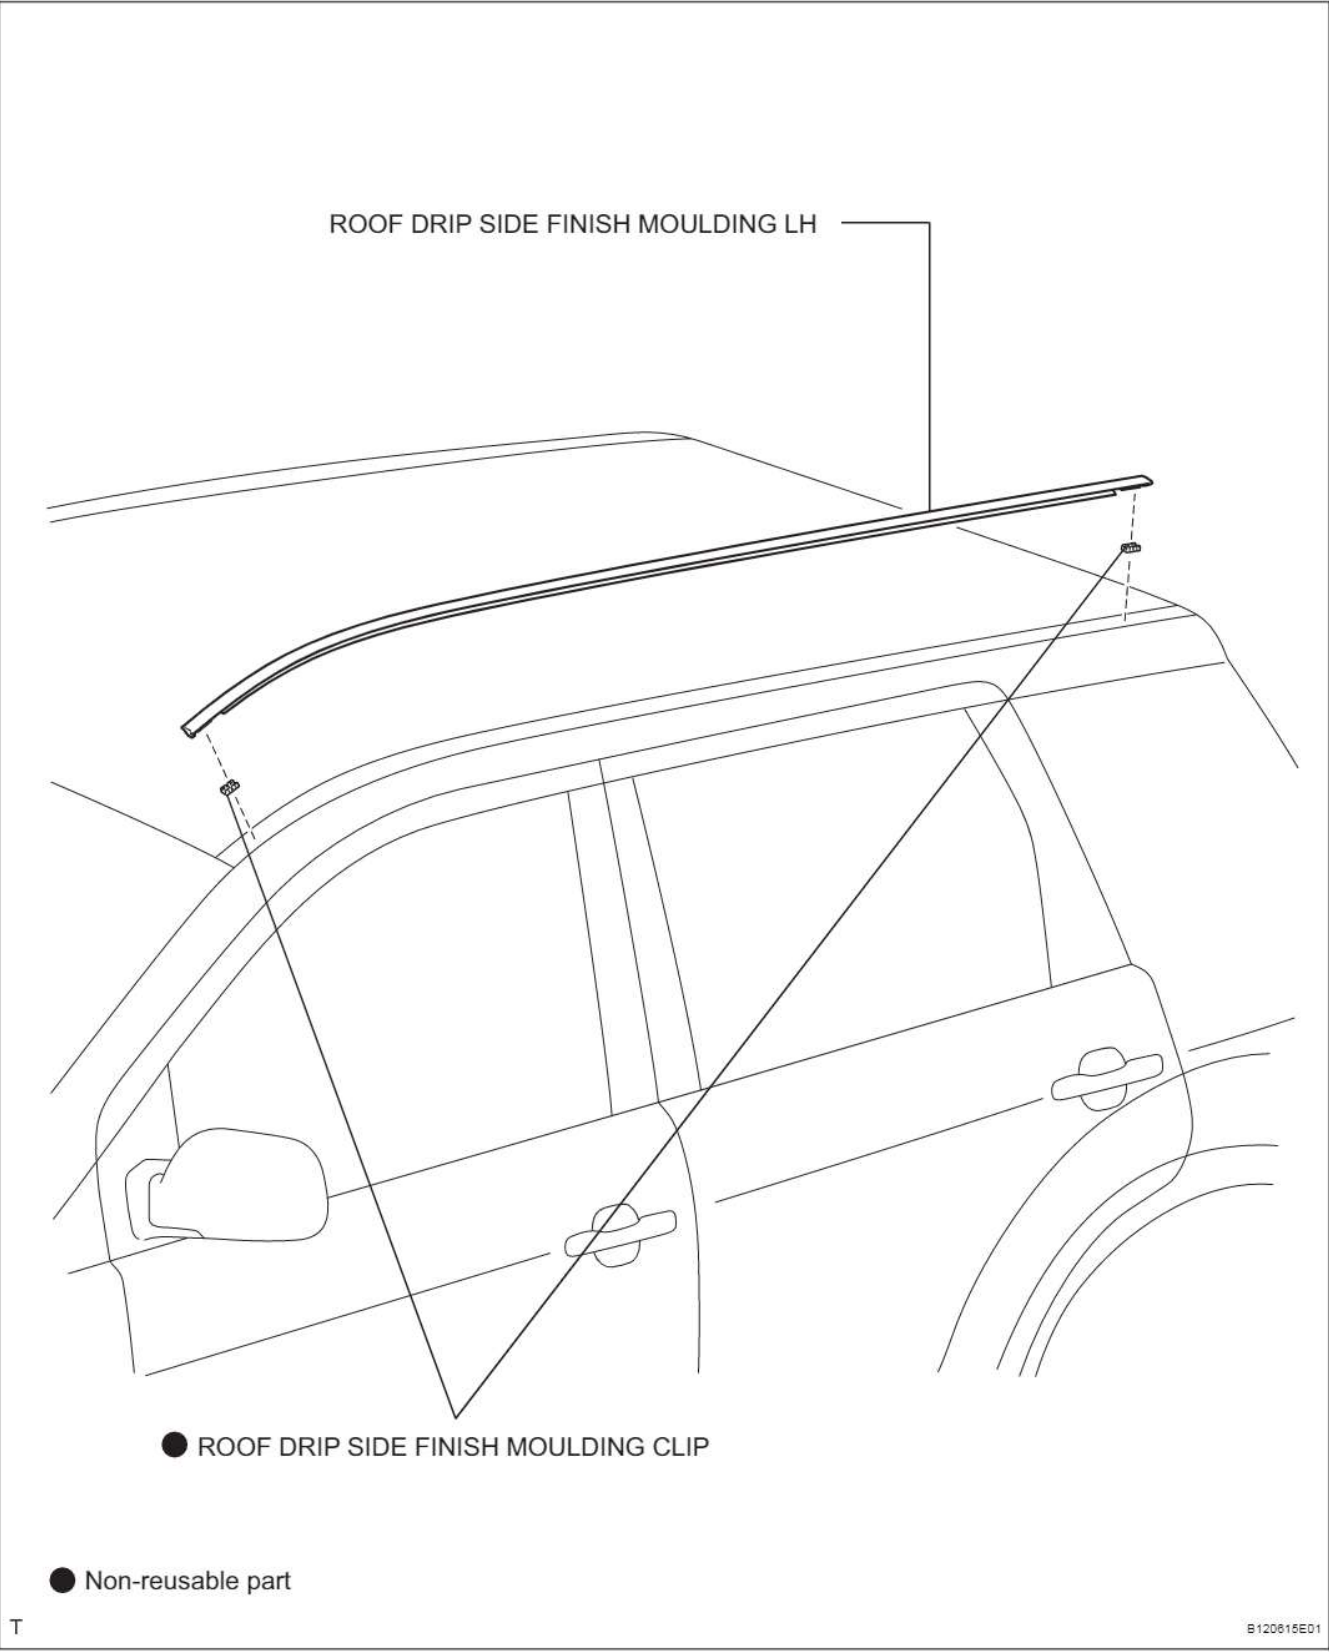

REMOVAL

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

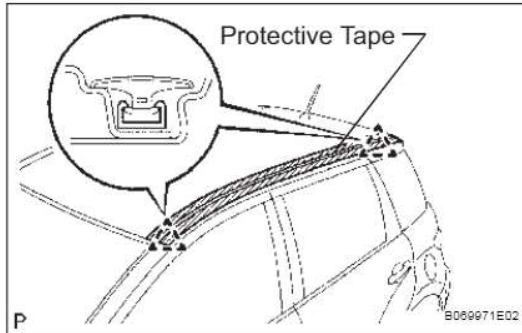

1. REMOVE ROOF DRIP SIDE FINISH MOULDING LH

- (a) Apply protective tape around the edges of the moulding.
- (b) Using a moulding remover, detach the clips both in the front and rear ends of the moulding, and then remove the moulding.

NOTICE:

- Do not remove the clips.
- If the clips are damaged or removed accidentally, replace them.

INSTALLATION

- HINT:
- Use the same procedures for the RH side and LH side.
 - The procedures listed below are for the LH side.
 - When installing the moulding, heat the moulding and vehicle body using a heat light.

Standard heating temperature

Item	Specified Condition
Vehicle Body	40 to 60°C (104 to 140°F)
Moulding	20 to 30°C (68 to 86°F)

NOTICE:
Do not heat the vehicle body and moulding excessively.

1. INSTALL REAR DOOR WINDOW FRAME MOULDING
REAR LH


- (a) Clean the vehicle body surface.
- (1) Using a heat light, heat the vehicle body.
 - (2) Remove the double-sided tape from the vehicle body.
 - (3) Wipe off any tape adhesive residue with white gasoline.
- (b) If reusing the moulding:
- Clean the moulding and install new double-sided tape.
- (1) Using a heat light, heat the moulding.
 - (2) Remove the double-sided tape from the moulding.
 - (3) Wipe off any tape adhesive residue with white gasoline.
- (4) Install new double-sided tape to the moulding.


NOTICE:
Install the double-sided tape exactly according to the specifications below.
Standard measurement

Area	Specified Condition
A	(1) 30.0 mm (1.181 in.) (2) 370.0 mm (14.567 in.) (3) 235.0 mm (9.252 in.)
B	5.0 mm (0.197 in.)
C	0.8 mm (0.031 in.)

- (c) Install the moulding.
- (1) Using a heat light, heat the vehicle body and moulding.
 - (2) Remove the peeling paper from the face of the name plate.

NOTICE:
After removing the peeling paper, keep the exposed adhesive free from foreign matter.

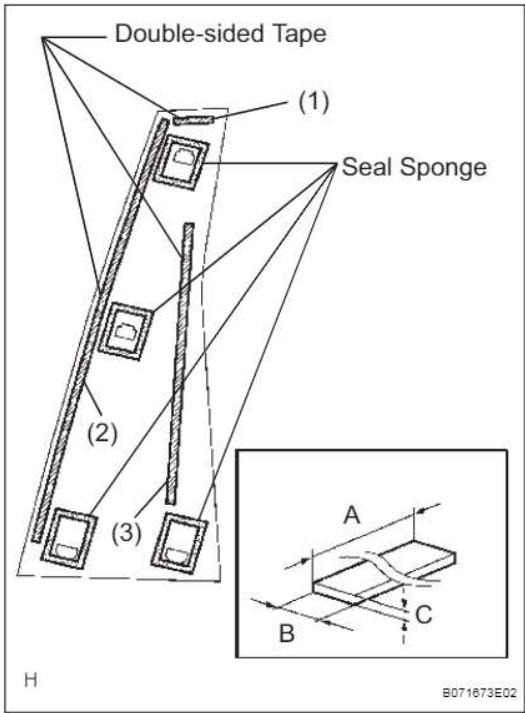

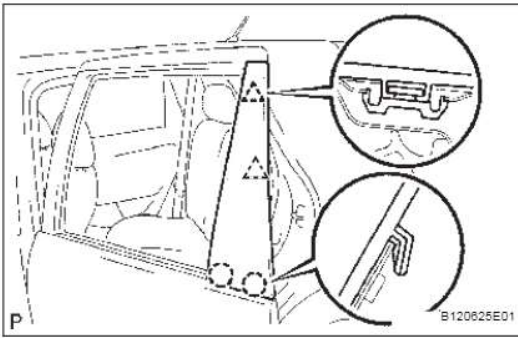
ET-34**EXTERIOR – REAR DOOR WINDOW FRAME MOULDING**

- (3) Attach the 2 claws and 2 clips to install the moulding.

NOTICE:

Do not apply excessive force to the moulding. Apply steady pressure with your thumbs.

SIDE MUDGUARD
COMPONENTS

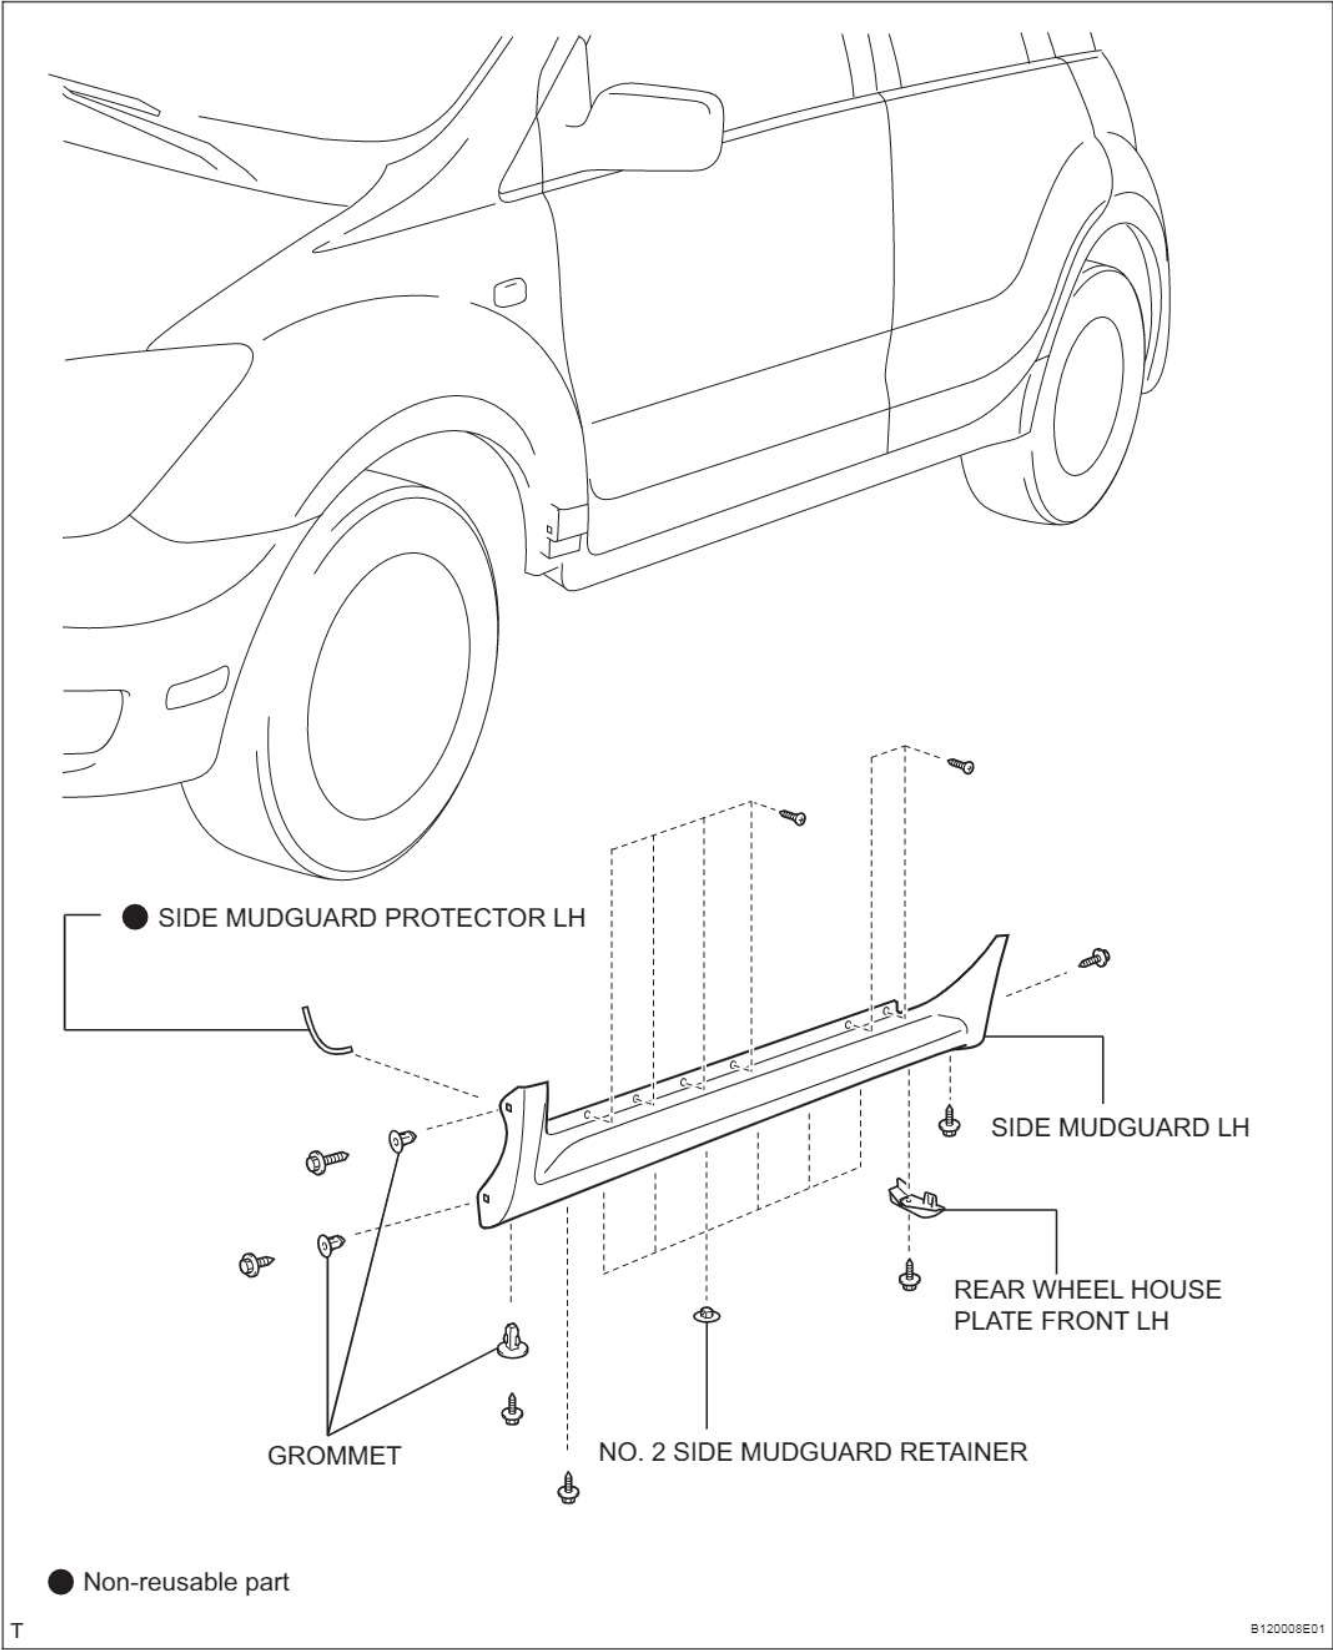

ET

ET-28

EXTERIOR – SIDE MUDGUARD


REMOVAL

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

1. REMOVE REAR WHEEL HOUSE PLATE FRONT LH

- (a) Remove the screw.
- (b) Detach the claw and remove the plate.

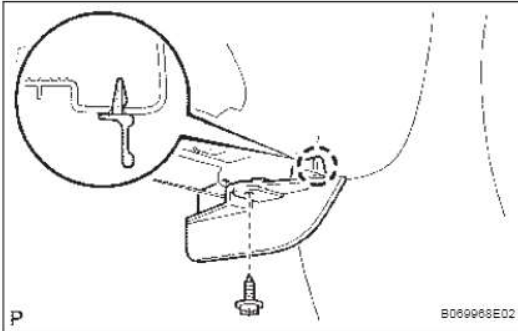


2. REMOVE SIDE MUDGUARD LH

- (a) Using a screwdriver, remove the 6 No. 2 side mudguard retainers.


HINT:


Tape the screwdriver tip before use.

- (b) Remove the 6 screws and 3 grommets.

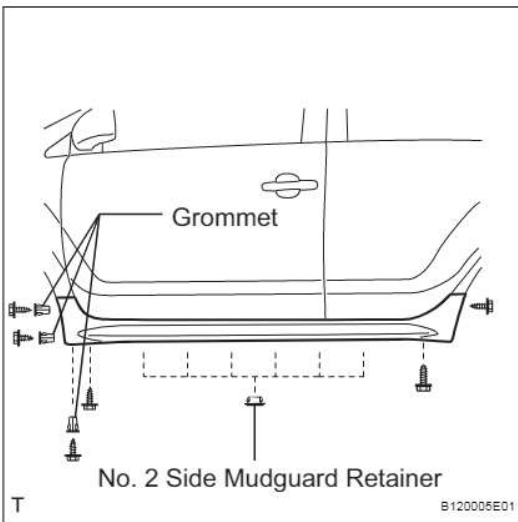

- (c) Remove the 6 screws.

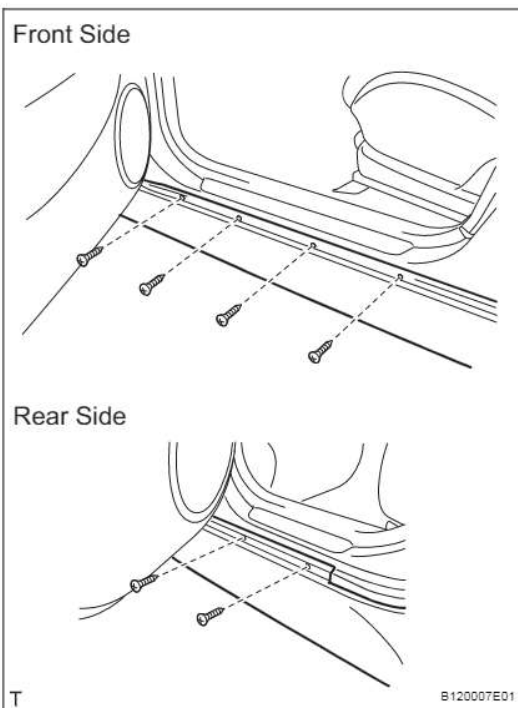

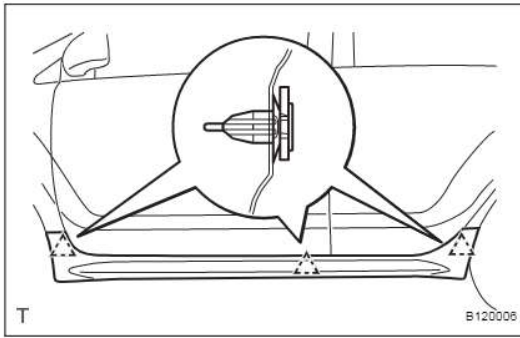
EXTERIOR – SIDE MUDGUARD**ET-29**

(d) Detach the 3 clips and remove the side mudguard.

3. REMOVE SIDE MUDGUARD PROTECTOR LH**ET**

REAR DOOR WINDOW FRAME MOULDING
COMPONENTS

REAR DOOR WINDOW FRAME MOULDING REAR LH

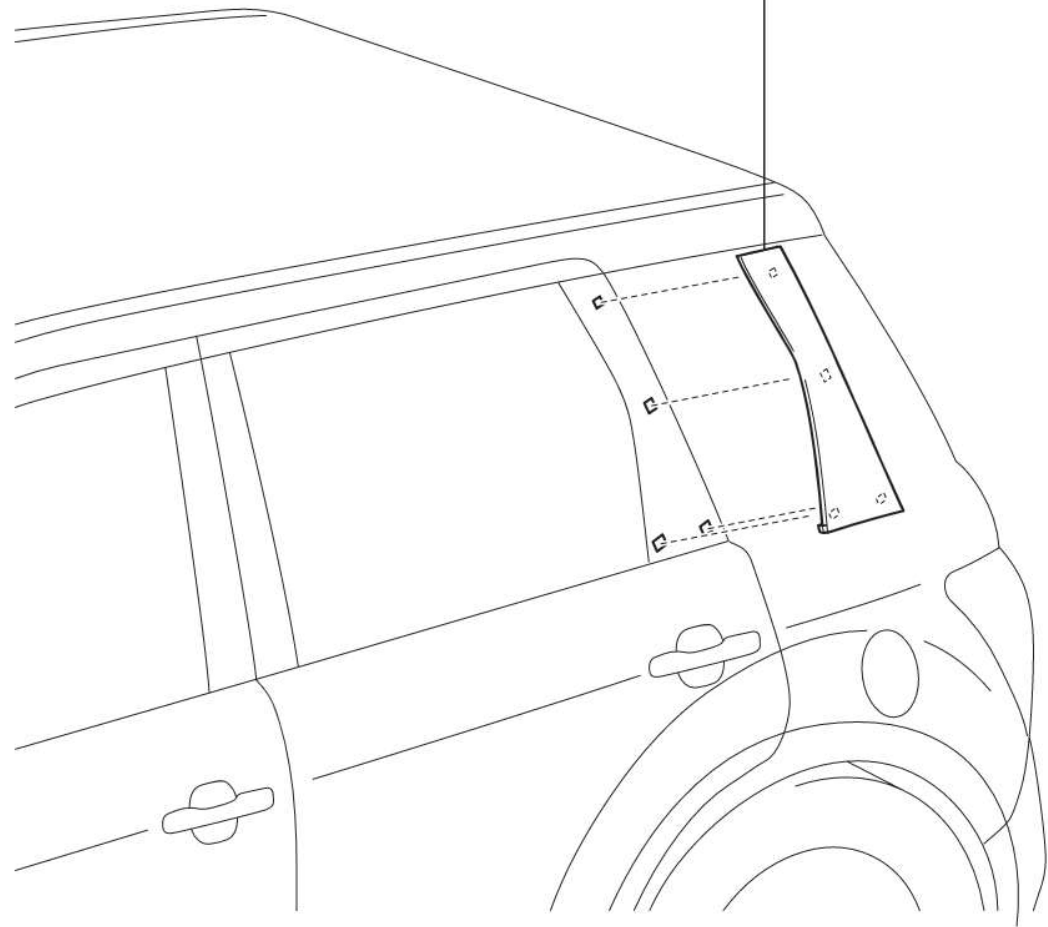

ET

REMOVAL

- HINT:
- Use the same procedures for the RH side and LH side.
 - The procedures listed below are for the LH side.
 - When removing the moulding, heat the moulding and vehicle body using a heat light.

Standard heating temperature



Item	Specified Condition
Vehicle Body	40 to 60°C (104 to 140°F)
Moulding	20 to 30°C (68 to 86°F)

NOTICE:
Do not heat the vehicle body and moulding excessively.

1. REMOVE REAR DOOR WINDOW FRAME MOULDING
REAR LH

- (a) Using a heat light, heat the moulding and vehicle body.
- (b) Cut the double-sided tape that holds the moulding to the vehicle body with a knife.

- NOTICE:
- If reusing the moulding, take care not to damage the moulding.
 - Be careful not to damage the vehicle body.

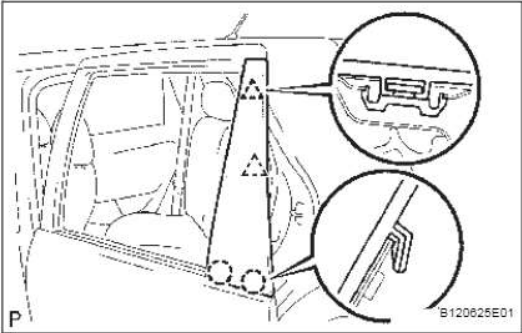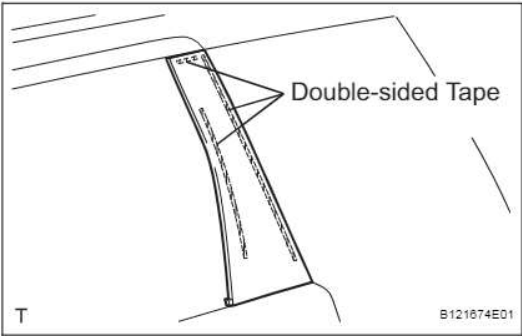


- (c) Detach the 2 clips and 2 claws, and remove the moulding.

ET-34

EXTERIOR – BACK DOOR OUTSIDE GARNISH

BACK DOOR OUTSIDE GARNISH
COMPONENTS

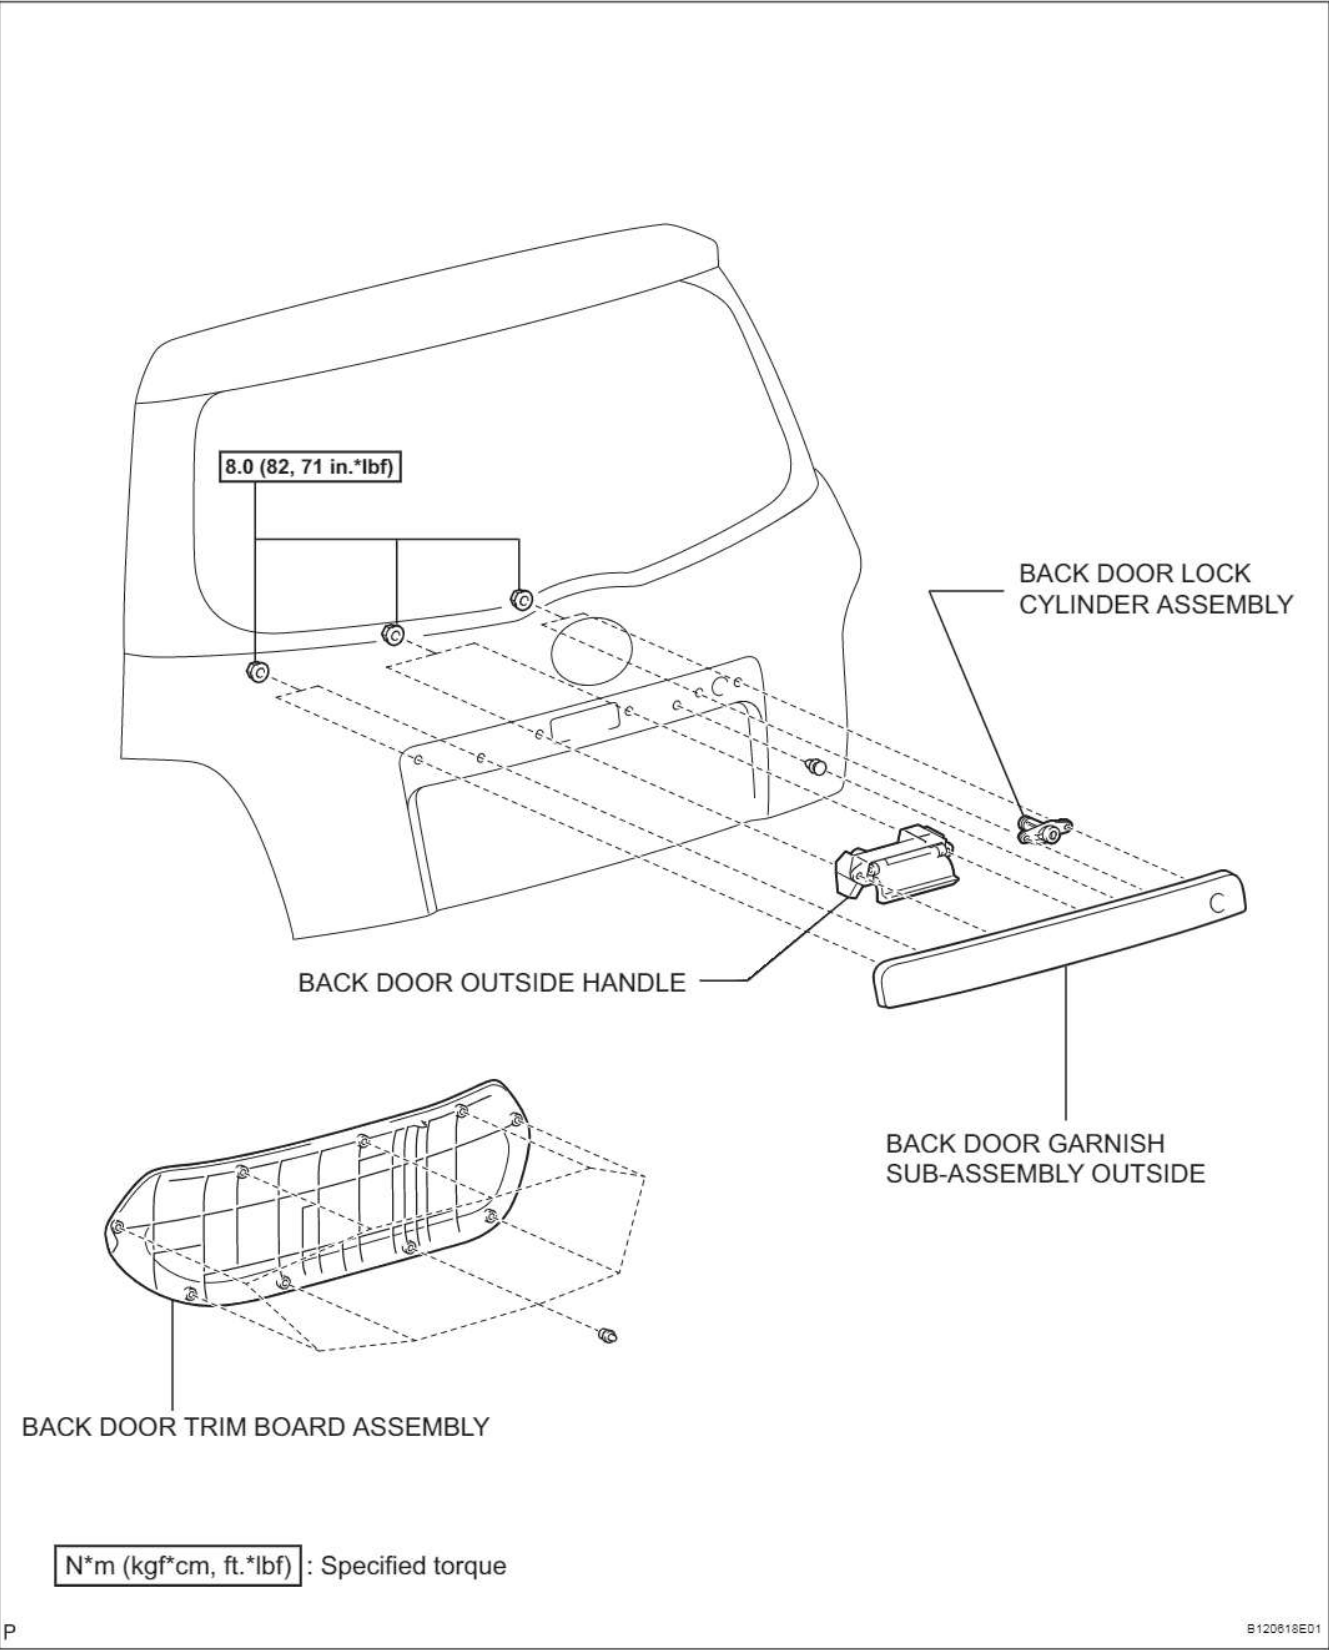

REMOVAL



1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

2. REMOVE BACK DOOR TRIM BOARD ASSEMBLY (See page [ED-36](#))
3. REMOVE BACK DOOR OUTSIDE HANDLE (See page [ED-37](#))
4. REMOVE BACK DOOR LOCK CYLINDER ASSEMBLY (See page [ED-37](#))
5. REMOVE BACK DOOR GARNISH SUB-ASSEMBLY OUTSIDE

- (a) Remove the 2 nuts.
- (b) Detach the clip and remove the garnish.

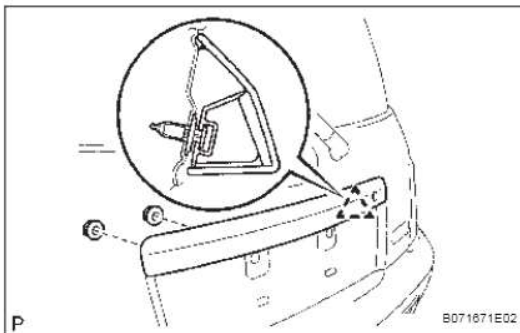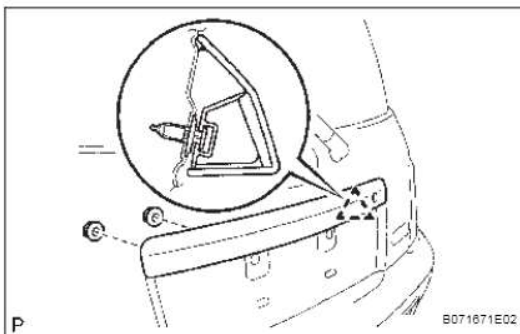

INSTALLATION

1. INSTALL BACK DOOR GARNISH SUB-ASSEMBLY OUTSIDE
 - (a) Attach the clip and install the garnish with the 2 nuts.

Torque: 8.0 N*m (82 kgf*cm, 71 in.*lbf)
2. INSTALL BACK DOOR LOCK CYLINDER ASSEMBLY (See page [ED-40](#))
3. INSTALL BACK DOOR OUTSIDE HANDLE (See page [ED-40](#))
4. INSTALL BACK DOOR TRIM BOARD ASSEMBLY (See page [ED-40](#))
5. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL
6. PERFORM INITIALIZATION

- (a) Perform initialization (see page [IN-23](#)).

NOTICE:

Certain systems need to be initialized after disconnecting and reconnecting the cable from the negative (-) battery terminal.

ET