


INSPECTION

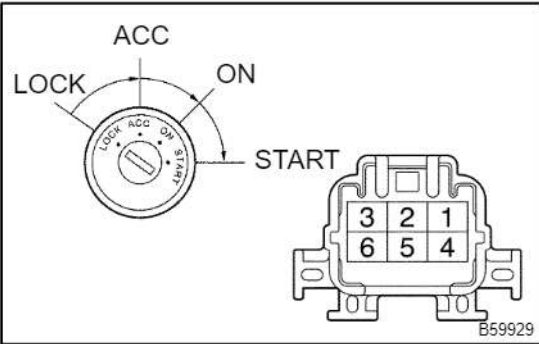

1. INSPECT IGNITION OR STARTER SWITCH ASSY

(a) Inspect the ignition switch.

Standard:


| Switch position | Terminal No.       | Specified condition |
|-----------------|--------------------|---------------------|
| LOCK            | –                  | No continuity       |
| ACC             | 1 ⇔ 3              | Continuity          |
| ON              | 1 ⇔ 2 ⇔ 3<br>5 ⇔ 6 | Continuity          |
| START           | 1 ⇔ 2<br>4 ⇔ 5 ⇔ 6 | Continuity          |

If the continuity is not as specified, replace the switch.

# IGNITION OR STARTER SWITCH ASSY REPLACEMENT

8002U-01

## 1. REMOVE STEERING COLUMN COVER (See page 50-8)

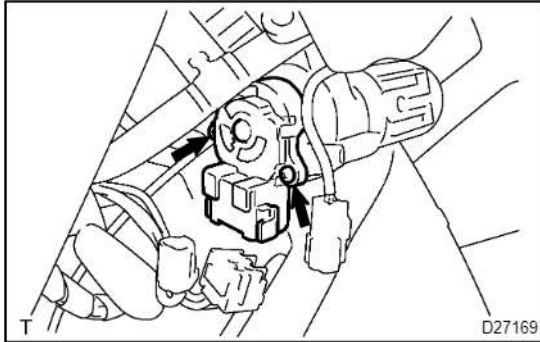

## 2. REMOVE IGNITION OR STARTER SWITCH ASSY

- (a) Disconnect the ignition switch connector and unlock warning switch connector.
- (b) Remove the 2 clamps.
- (c) Remove the 2 screws and ignition switch.