

HANDBOOK



PEUGEOT 4008





On-line handbook

Select one of the following means of access to view your handbook on-line...

This personal space offers advice and other useful information for the care and maintenance of your vehicle.

Find your handbook on the PEUGEOT website, under "MyPEUGEOT".

Scan this code for direct access to your handbook.



If the "MyPEUGEOT" function is not available on the PEUGEOT public website for your country, you can find your handbook at the following address:

<http://public.servicebox.peugeot.com/ddb/>

Select:

- › the language,
- › the vehicle, its body style,
- › the print edition of your handbook appropriate for the date of registration of your vehicle.

Referring to the handbook on-line also gives you access to the latest information available, easily identified by the bookmark, associated with this symbol:



Welcome

Thank you for choosing a 4008, a symbol of confidence, passion and inspiration

This handbook has been designed to help to make the most of your 4008 in all circumstances and in complete safety.

Take the time to read through it so as to familiarise yourself with your vehicle.

This handbook covers all of the variations in equipment available across the whole 4008 range.

Your vehicle will be fitted with only some of the equipment described in this document, depending on its trim level, version and the specification for the country in which it was sold.

The descriptions and illustrations are given as indications only. Automobiles PEUGEOT reserves the right to modify the technical characteristics, equipment and accessories without having to update this edition of the handbook.

This document forms an integral part of your vehicle. Remember to pass it on to the new owner in the event of the sale of the vehicle.

For any work on your vehicle, use a qualified workshop that has the technical information, competence and equipment required, which a PEUGEOT dealer is able to provide.



We draw your attention to the following points:

- The fitting of electrical equipment or accessories not listed by PEUGEOT may cause faults and failures with the electrical system of your vehicle. Contact a PEUGEOT dealer or a qualified workshop for information on the range of recommended accessories.
- Any modification or adaptation not intended or authorised by Automobiles PEUGEOT or carried out without meeting the technical requirements defined by the manufacturer would lead to the suspension of the new vehicle warranty.

Key

Warning:

this symbol is for warnings that you must observe for your own safety, the safety of others, and to avoid the risk of damage to your vehicle.

Information:

this symbol draws your attention to additional information for the best use of your vehicle.



Protection of the environment:

this symbol accompanies advice related to the protection of the environment.

Overview

Eco-driving

Monitoring

Instrument panel	12
Warning and indicator lamps	13
Instrument panel screen	19
Trip computer	32
Distance recorder	32
Trip distance recorder	32
Service indicator	33
Adjusting vehicle settings	37
Audio-CD system screen	44
Audio-CD system touch screen	46
Audio-Telematic system touch screen	48
Lighting dimmer	51

Access

Remote control key	52
"Keyless Entry and Starting" system	56
Doors	62
Boot	63
Alarm	65
Electric windows	68
Panoramic sunroof	70

Comfort

Front seats	71
Rear seats	75
Mirrors	77
Steering wheel adjustment	79
Ventilation	80
Manual heating / air conditioning	82
Automatic air conditioning	84
Rear screen demist - defrost	89
Interior fittings	90
Boot fittings	96

Driving

Starting - stopping the engine with the key	98
Starting - stopping the engine with the Keyless Entry and Starting system	99
Parking brake	102
Manual gearbox	103
Gear shift indicator	104
CVT gearbox	105
Hill start assist	110
Stop & Start (Auto Stop & Go) function	111
Under-inflation detection	114
Four wheel drive system	118
Cruise control	120
Parking sensors	123
Reversing camera	126

Visibility

Lighting controls	127
Daytime running lamps	130
Automatic illumination of headlamps	130
Manual guide-me-home lighting	131
Welcome lighting	132
Headlamp adjustment	133
Wiper controls	134
Automatic rain sensitive wipers	136
Courtesy lamps	138
Boot lamp	140
Panoramic roof lighting	140

Safety

6

Direction indicators	141
Hazard warning lamps	141
Horn	141
Braking assistance systems	142
Trajectory control systems	144
Front seat belts	146
Airbags	150
Child seats	155
Deactivating the passenger's front airbag	157
ISOFIX child seats	164
Child lock	170

Practical information

7

Temporary puncture repair kit	171
Changing a wheel	175
Snow chains	181
Changing a bulb	182
Changing a fuse	188
12 V battery	194
Automatic power cut-off to accessories	197
Changing a wiper blade	197
Recovering the vehicle	198
Towing a trailer	201
Fitting roof bars	203
Accessories	204

Checks

8

Bonnet	207
Petrol engines	208
Diesel engines	209
Fuel tank	210
Running out of fuel (Diesel)	212
Checking levels	213
Checks	216

Technical data

9


Petrol engines	219
Petrol weights	220
Diesel engines	226
Diesel weights	227
Dimensions	233
Identification markings	235

Audio equipment and telematics


Bluetooth® telephone with voice recognition	237
Touch screen AUDIO-TELEMATIC system	249
TOUCH SCREEN AUDIO-CD system	289
AUDIO-CD system	311

Alphabetical index ■


Exterior

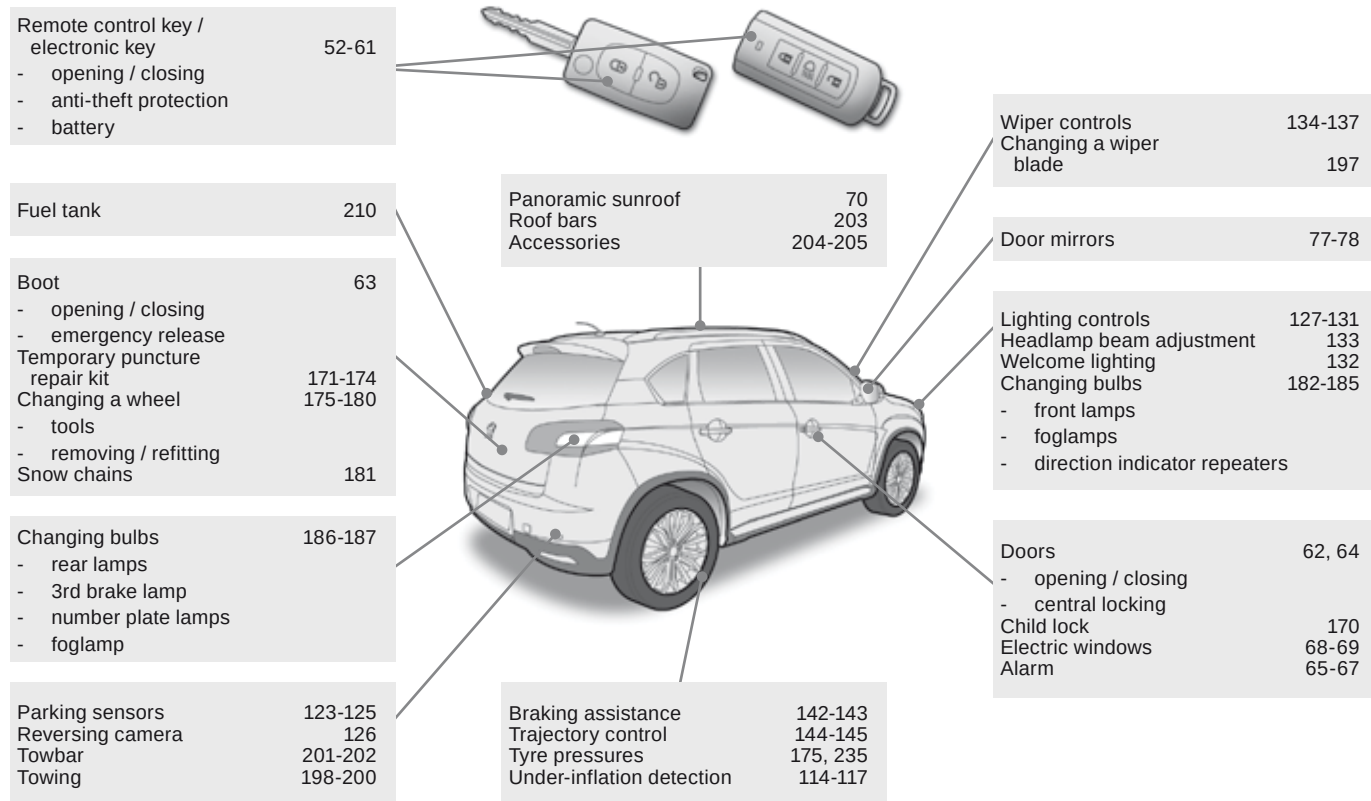


Interior

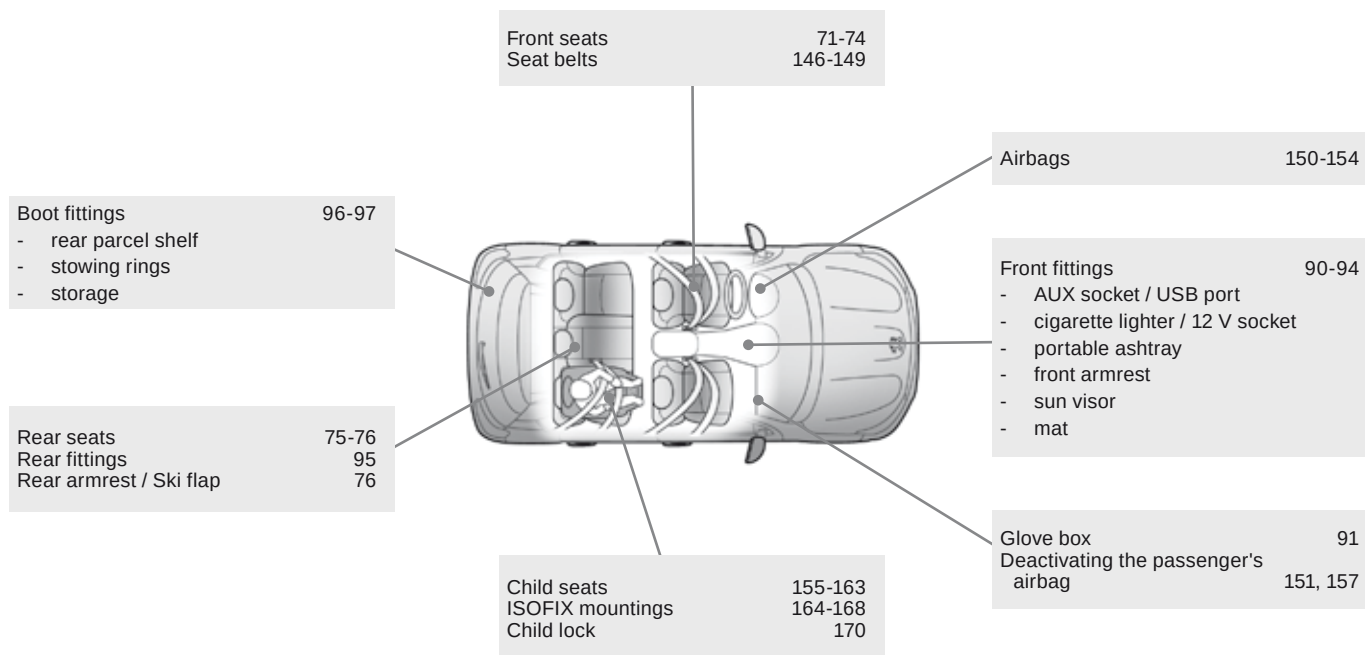

Instruments and controls

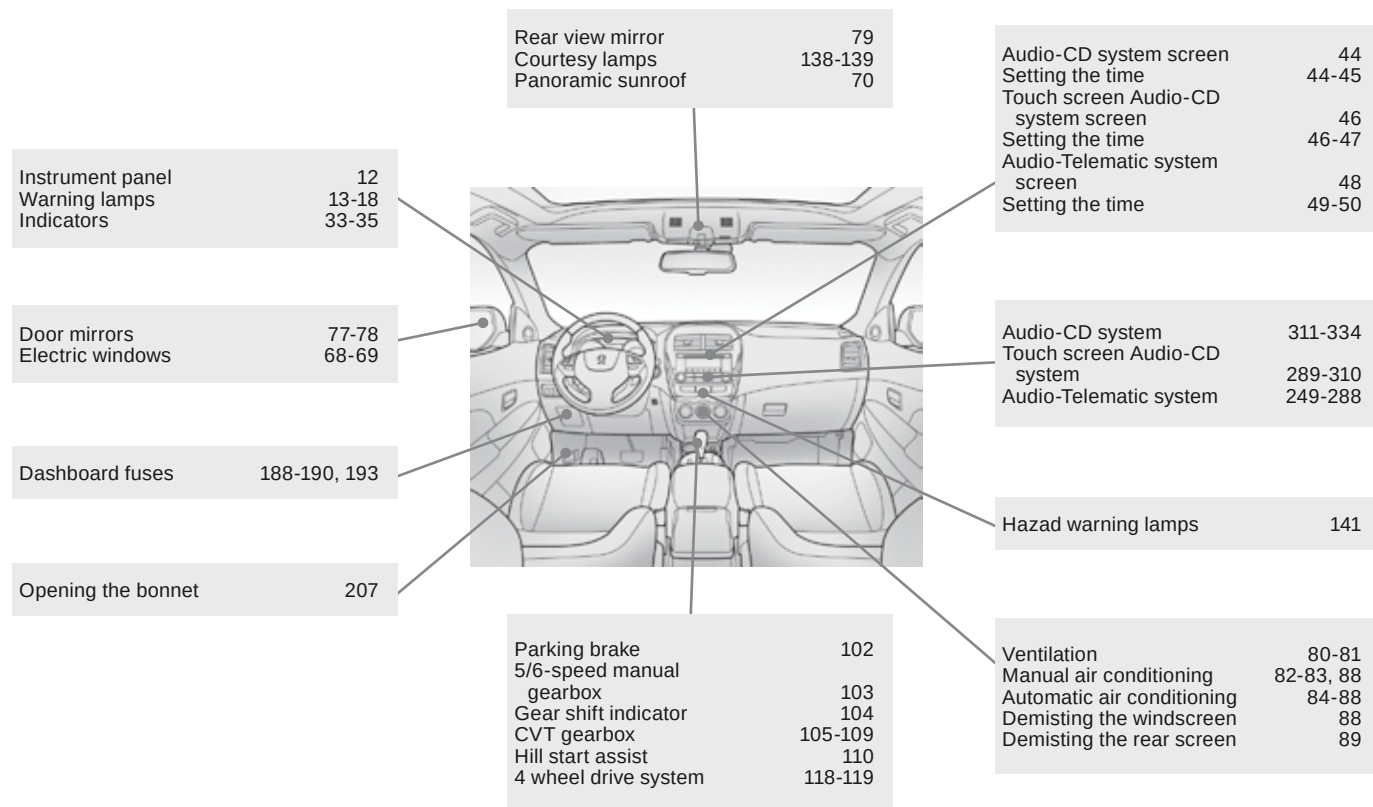


Instruments and controls (continued)

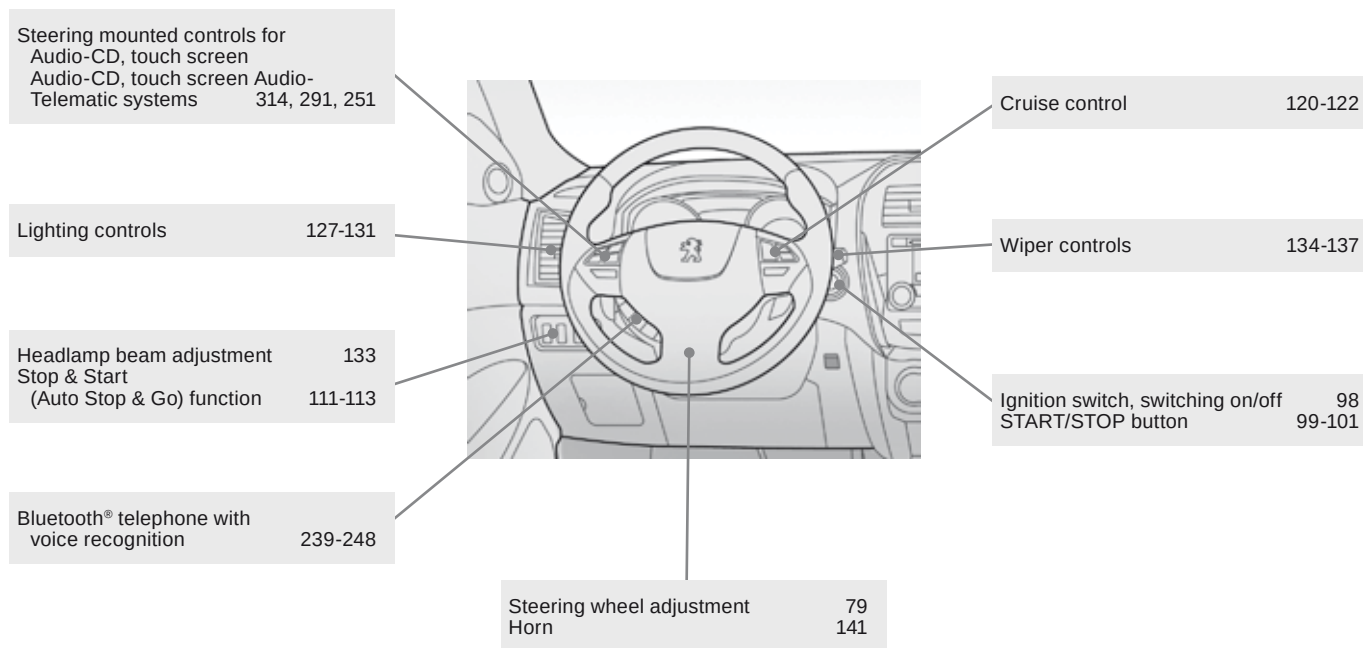


Instruments and controls (continued)

Central switch panel

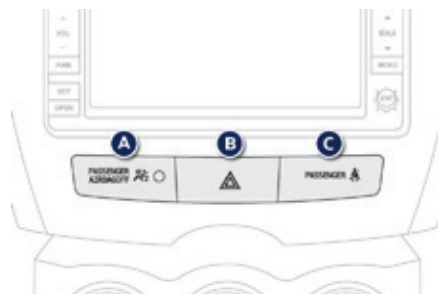


- | | |
|--|-----|
| A. Passenger's airbag deactivation warning lamp. | 151 |
| B. Hazard warning lamps. | 141 |
| C. Front passenger's seat belt not fastened or unfastened. | 147 |

Side switch panel

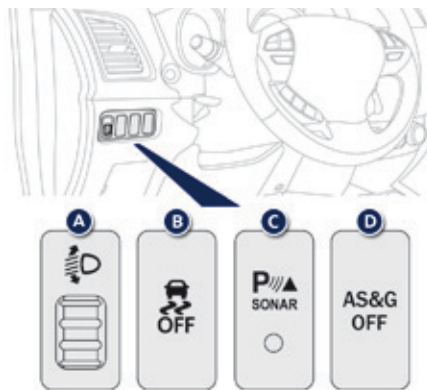

- | | |
|--|-----|
| A. Manual headlamp adjustment. | 133 |
| B. Deactivation of the ASC/TCL system. | 144 |
| C. Deactivation of the parking sensors. | 125 |
| D. Deactivation of the Stop & Start (Auto Stop & Go) function. | 112 |

Maintenance - Technical data

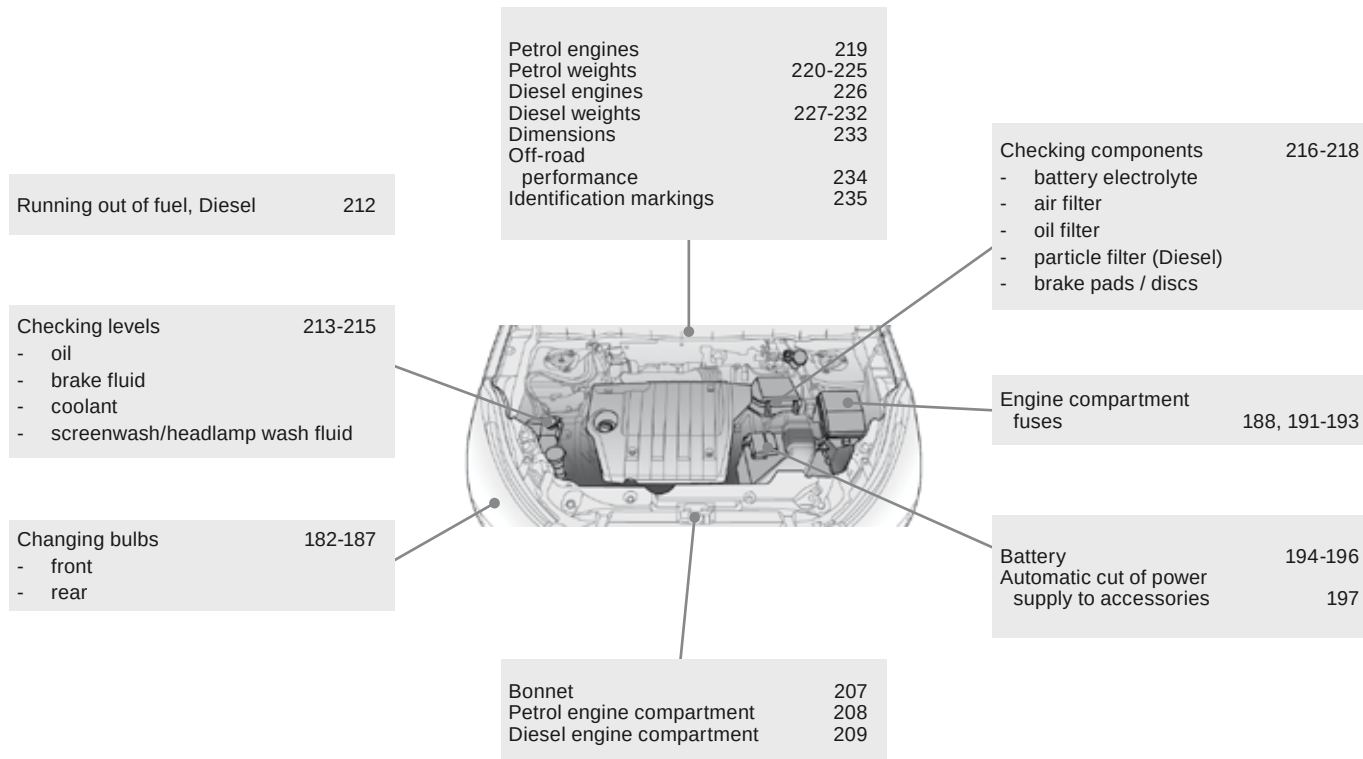

Eco-driving

Eco-driving is a range of everyday practices that allow the motorist to optimise their fuel consumption and CO₂ emissions.

Optimise the use of your gearbox

With a manual gearbox, move off gently and change up without waiting. During acceleration change up early.

With an automatic or electronic gearbox, give preference to automatic mode and avoid pressing the accelerator pedal heavily or suddenly.

The gear shift indicator invites you to change up: as soon as the indication to change up is displayed in the instrument panel, follow it straight away.

With an electronic or automatic gearbox, this indicator appears only in manual mode.

Drive smoothly

Maintain a safe distance between vehicles, use engine braking rather than the brake pedal, and press the accelerator progressively. These practices contribute towards a reduction in fuel consumption and CO₂ emissions and also helps reduce the background traffic noise.

If your vehicle has cruise control, make use of the system at speeds above 25 mph (40 km/h) when the traffic is flowing well.

Control the use of your electrical equipment

Before moving off, if the passenger compartment is too warm, ventilate it by opening the windows and air vents before using the air conditioning. Above 30 mph (50 km/h), close the windows and leave the air vents open.

Remember to make use of equipment that can help keep the temperature in the passenger compartment down (sunroof and window blinds...).

Switch off the air conditioning, unless it has automatic regulation, as soon as the desired temperature is attained.

Switch off the demisting and defrosting controls, if not automatic. Switch off the heated seat as soon as possible.

Switch off the headlamps and front foglamps when the level of light does not require their use.

Avoid running the engine before moving off, particularly in winter; your vehicle will warm up much faster while driving.

As a passenger, if you avoid connecting your multimedia devices (film, music, video game...), you will contribute towards limiting the consumption of electrical energy, and so of fuel.

Disconnect your portable devices before leaving the vehicle.

Limit the causes of excess consumption

Spread loads throughout the vehicle; place the heaviest items in the bottom of the boot, as close as possible to the rear seats.

Limit the loads carried in the vehicle and reduce wind resistance (roof bars, roof rack, bicycle carrier, trailer...). Use a roof box in preference.

Remove roof bars and roof racks after use.

At the end of winter, remove snow tyres and refit your summer tyres.

Observe the recommendations on maintenance

Check the tyre pressures regularly, when cold, referring to the label in the door aperture, driver's side.

Carry out this check in particular:

- before a long journey,
- at each change of season,
- after a long period out of use.

Don't forget the spare wheel and the tyres on any trailer or caravan.

Have your vehicle serviced regularly (engine oil, oil filter, air filter...) and observe the schedule of operations recommended by the manufacturer.

When refuelling, do not continue after the third cut-off of the nozzle to avoid any overflow.

At the wheel of your new vehicle, it is only after the first 1 800 miles (3 000 kilometres) that you will see the fuel consumption settle down to a consistent average.

Instrument panel



Panel grouping together the dials and warning/indicator lamps. These inform the driver of the activation/deactivation of a system or of the occurrence of a fault.

1. Rev counter.
2. Speedometer.


3. Instrument panel display screen:

- Warning and status displays.
- Total and trip distance recorders.
- Service indicator.
- Coolant temperature.
- Trip computer information.
- Cruise control setting.
- Gear shift indicator recommendations.
- Settings menu (display, sound...).
- Fuel level.
- Ambient temperature.
- Transmission mode.

i Management of the display is done using the **INFO** button located on the dashboard to the left of the instrument panel.




Screen type 1

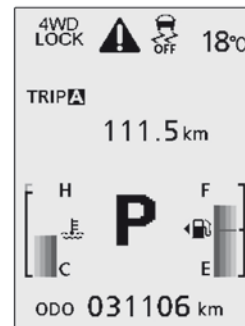

Screen type 2

Warning and indicator lamps

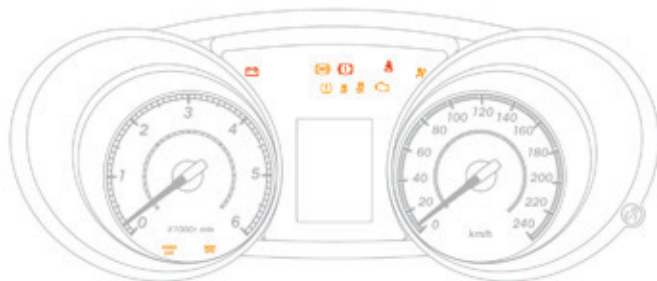

Visual indicators which inform the driver of the occurrence of a malfunction (warning lamp) or of the operation of a system (operation or deactivation indicator lamp).

When the ignition is switched on

Certain warning lamps come on for a few seconds when the ignition is switched on. When the engine is started, these warning lamps should go off.

Associated warnings

The illumination, fixed or flashing, of certain warning lamps may be accompanied by an audible signal and a message.

i If they remain on, before moving off, refer to the information on the warning lamp in question.

Warning lamps

When the engine is running or the vehicle is being driven, the illumination of one of the following warning lamps indicates a malfunction which requires action on the part of the driver. The warning comes on in the instrument panel or appears in the instrument panel screen.

! The illumination of a warning lamp may be accompanied by the display of an additional message, to assist you in identifying the problem. If you encounter any problems, you should contact a PEUGEOT dealer or a qualified workshop.

Warning/indicator lamp		is on	Cause	Action / Observations
	Parking brake / Brake fluid level / Electronic brake force distribution	fixed.	It comes on for a few seconds, then goes off when the ignition is switched to "ON".	
			The parking brake is on or not fully released.	It is accompanied by a message. Release the parking brake to make the warning lamp go off.
			The brake fluid level is too low.	It is accompanied by a message. Top up with brake fluid and contact a PEUGEOT dealer or a qualified workshop.
			The electronic brake force distribution (EBFD) is faulty.	You must stop as soon as it is safe to do so. Have it checked by a PEUGEOT dealer or a qualified workshop.
	Engine autodiagnosis system	flashing.	The engine management system has a fault.	Risk of destruction of the catalytic converter. Have it checked by a PEUGEOT dealer or a qualified workshop.
		fixed.	The emission control system has a fault.	The warning lamp should go off when the engine is started. If it does not go off, contact a PEUGEOT dealer or qualified workshop without delay.
	Battery charge*	fixed.	The battery charging circuit has a fault (dirty or loose terminals, slack or cut alternator belt, ...).	The warning lamp should go off when the engine is started. If it does not go off, contact a PEUGEOT dealer or a qualified workshop.

* According to destination country.

Warning/indicator lamp		is on	Cause	Action / Observations
	Front seat belt not fastened / unfastened	fixed, then flashing, accompanied by an audible signal.	The driver has not fastened or has unfastened their seat belt.	Pull the strap, then insert the tongue in the buckle.
	Anti-lock Braking System (ABS)	fixed.	The anti-lock braking system has a fault.	The vehicle retains conventional braking. Drive carefully at reduced speed and contact a PEUGEOT dealer or a qualified workshop without delay.
	Airbags and pretensioners	temporarily.	When you switch on the ignition, this warning lamp comes on for a few seconds, then goes off.	If it does not go off, contact a PEUGEOT dealer or a qualified workshop.
		fixed.	Fault with one of the airbag or seat belt pretensioner systems.	Have it checked by a PEUGEOT dealer or a qualified workshop.
	Under-inflation	fixed, accompanied by a message	The tyre pressure for one or more wheels is too low.	Check the tyre pressures as soon as possible. This check should preferably be done with the tyres cold. You must reinitialise the system after every adjustment of one or more tyre pressures and after replacing one or more wheels. For more information refer to the "Under-inflation detection" section.
		flashing then fixed, accompanied by a message.	The system has a fault and/or one or more wheels does not have a detected sensor.	The tyre pressures are no longer monitored. Have the system checked by a PEUGEOT dealer or a qualified workshop.

Operation indicator lamps

If one of the following indicator lamps comes on, this confirms that the corresponding system has come into operation. It may be accompanied by an audible signal and a message in the instrument panel screen.

Warning/indicator lamp		is on	Cause	Action / Observations
	Left-hand direction indicator	flashing with audible warning.	The lighting stalk has been pressed downwards.	If this indicator lamp flashes abnormally quickly, this could indicate that the bulb of one of the direction indicators has blown. Change the bulb or contact a PEUGEOT dealer or a qualified workshop.
	Right-hand direction indicator	flashing with audible warning.	The lighting stalk has been pushed upwards.	If this indicator lamp flashes abnormally quickly, this could indicate that the bulb of one of the direction indicators has blown. Change the bulb or contact a PEUGEOT dealer or a qualified workshop.
	Sidelamps or dipped beam headlamps	fixed.	The sidelamps or dipped beam headlamps are on.	
	Main beam headlamps	fixed.	The lighting stalk is pulled towards you.	Pull the stalk to return to dipped beam headlamps.
	Front foglamps	fixed.	The front foglamps are switched on.	Turn the ring on the stalk rearwards twice to switch off the front foglamps.
	Rear foglamp	fixed.	The rear foglamp is switched on.	Turn the ring on the stalk rearwards to switch off the rear foglamp.


Warning/indicator lamp		is on	Cause	Action / Observations
CRUISE	Cruise control	fixed	This comes on when the cruise control has been activated.	Press the "ON/OFF" button to activate/deactivate the cruise control.
	 Diesel engine pre-heating	fixed.	The engine is cold and: - the ignition switch is at the ON position (ignition on), or - the START/STOP starting button has been pressed (ignition on).	With key starting, wait until the warning lamp has gone off before starting. With the Keyless Entry and Starting system, the engine will only start after the warning lamp has gone off. The duration for which the warning lamp is on is determined by the climatic conditions (up to 30 seconds in severe weather). If the engine does not start, switch the ignition off and then on again and wait again until the warning lamp goes off, then start the engine.
	Active stability control and traction control (ASC/TCL)	flashing.	Operation of the ASC/TCL systems.	The systems optimise traction and improve the directional stability of the vehicle. Adapt your driving and moderate your speed.
		fixed.	Fault in the ASC/TCL systems.	Have it checked by a PEUGEOT dealer or a qualified workshop.
AS&G	Stop & Start (Auto Stop & Go) function	fixed.	When the vehicle stops (red lights, traffic jams, ...) the Stop & Start (AS&G) function has put the engine into STOP mode.	The warning lamp goes off and the engine restarts automatically in START mode, as soon as you want to move off.
		flashes for a few seconds, then goes off.	STOP mode is temporarily unavailable. or START mode is invoked automatically.	See "Stop & Start (AS&G) function" for special cases with STOP mode and START mode.

Deactivation indicator lamps



If one of the following indicator lamps comes on, this confirms that the corresponding system has been switched off intentionally. This may be accompanied by an audible signal and a message in the screen.

Warning/indicator lamp	is on	Cause	Action / Observations
	ASC/TCL	fixed.	The ASC/TCL off switch, located at the bottom of the dashboard (driver's side) has been pressed. ASC/TCL is deactivated. ASC: active stability control. TCL: traction control. Press the button to activate the ASC/TCL. The ASC/TCL system is automatically activated on starting the vehicle.
	Stop & Start system (Auto Stop & Go)	fixed.	The off switch for the Stop & Start (AS&G) system, located at the bottom of the dashboard (driver's side) has been pressed. The Stop & Start (AS&G) system is deactivated. Press the switch again to activate the Stop & Start (AS&G) system.



Instrument panel screen

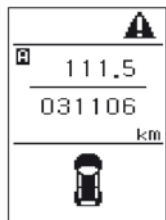


Ignition off.

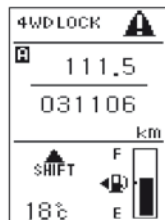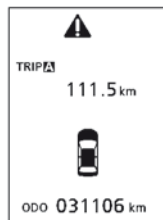

Ignition on
(with a manual gearbox).

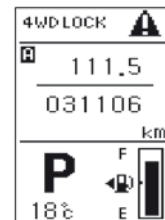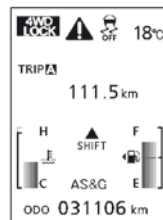

Ignition on
(with a CVT gearbox).

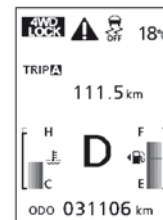

Each time the engine is started: warning lamps and/or messages come on, applying a checking self test. They go off after a few seconds.

Warnings and alerts

When an alert occurs, the displayed information then disappears. the warning lamp and its associated message appear, accompanied if appropriate by an audible signal.



When there are several alerts, they are displayed in turn and this symbol appears. It remains displayed while there are still alerts.

When you want to see the trip computer information, you can choose to ignore the alerts, by pressing the **INFO** button on the dashboard.



When this symbol appears: make a **short press**.



When this symbol appears: make a **long press**.

You will then be able to display the alerts again by pressing the **INFO** button several times to cycle through the trip computer information and return to the alerts.

The messages displayed may vary according to the type of display screen (type 1 or type 2) in the instrument panel.

Certain messages are only displayed in the type 2 screen.

Warning messages (ignition at "OFF")

Screen 1	Screen 2	Cause	Solution - Action	Observations
 TURN OFF LIGHTS	 TURN OFF LIGHTS	You have forgotten to switch off the vehicle lighting.	Switch off the vehicle lighting by placing the control at OFF.	There is an intermittent audible signal.
	 ALARM ACTIVATING	The alarm has been triggered.		
	 KEY BATTERY LOW	The battery for the Keyless Entry and Starting system is flat.	Replace the battery (see "Changing the batteries").	
	 KEY NOT DETECTED	The electronic key that you have on your person is not recognised.	Check that you have the correct electronic key.	If the message persists, contact a PEUGEOT dealer.
	 KEY STILL IN VEHICLE	The electronic key is still in the vehicle and you have tried to lock the doors or boot from the outside.	Ensure that you have the electronic key on your person before locking the vehicle.	
	 CHECK DOORS	One of the doors or the boot is not properly closed when locking the vehicle from the outside.	Close the door or the boot, then lock the vehicle.	

Screen 1	Screen 2	Cause	Solution - Action	Observations
	 KEYLESS OPERATION SYSTEM SERVICE REQUIRED	Fault with the "Keyless Entry and Starting" system.	Contact a PEUGEOT dealer.	
	 IMMOBILIZER SYSTEM SERVICE REQUIRED	Fault with the electronic anti-theft system.	Switch off the ignition, then start the engine.	If the problem persists, contact a PEUGEOT dealer.
	 KEY NOT DETECTED INSERT KEY INTO KEY SLOT IN GLOVE BOX	The electronic key is not detected.	Insert the electronic key into the housing located in the glove box.	Remember to remove the electronic key from the housing after starting the vehicle.
	 REMOVE KEY FROM KEY SLOT IN GLOVE BOX	The electronic key has not been removed from the housing in the glove box.	Remove the electronic key from the housing in the glove box.	
	 PUSH ENGINE SWITCH WHILE TURNING STEERING WHEEL	The steering column is locked.	Switch the ignition on and turn the steering wheel slightly to unlock the steering column.	
	 SHIFT TO P POSITION	The engine is off but the gear lever is not in position P .	Place the gear lever in position P .	Only for vehicles fitted with a "CVT" gearbox.

Screen 1	Screen 2	Cause	Solution - Action	Observations
	 STEERING LOCK SERVICE REQUIRED	The steering column has not locked after opening the driver's door.	Lock the steering column by turning the steering wheel slightly before leaving the vehicle.	
	 ELECTRICAL SYSTEM SERVICE REQUIRED	Fault with the electrical system.	Contact a PEUGEOT dealer or a qualified workshop.	

Warning messages (ignition at "ON")

Screen 1	Screen 2	Cause	Solution - Action	Observations
 SERVICE REQUIRED	 POWER STEERING SERVICE REQUIRED	Fault with the electric power steering.	Stop the vehicle, wait few moments then start the engine again.	If the message remains after restarting, contact a PEUGEOT dealer or a qualified workshop.
	 KEY BATTERY LOW	The battery for the "Keyless Entry and Starting" system is flat.	Replace the battery (see "Changing the batteries").	
	 KEY NOT DETECTED	The electronic key that you have on your person is not recognised.	Check that you have the correct electronic key.	If the message persists, contact a PEUGEOT dealer.
	 KEY STILL IN VEHICLE	The electronic key is still in the vehicle and you have tried to lock the doors or boot from the outside.	Ensure that you have the electronic key on your person before locking the vehicle.	
	 CHECK DOORS	One of the doors or the boot is not properly closed when locking the vehicle from the outside.	Close the door or the boot, then lock the vehicle.	
	 KEYLESS OPERATION SYSTEM SERVICE REQUIRED	Fault with the "Keyless Entry and Starting" system.	Contact a PEUGEOT dealer.	

Screen 1	Screen 2	Cause	Solution - Action	Observations
 CHECK	 BRAKE SYSTEM SERVICE REQUIRED	The brake fluid level is too low.	Top up using a brake fluid listed by PEUGEOT.	If the problem persists, contact a PEUGEOT dealer or a qualified workshop.
		Fault with the braking system.	You must stop as soon as it is safe to do so.	Have the system checked by a PEUGEOT dealer or a qualified workshop.
 SERVICE REQUIRED	 ABS SERVICE REQUIRED	Fault with the anti-lock braking system (ABS).	Contact a PEUGEOT dealer or a qualified workshop.	The vehicle retains conventional braking without assistance but you are advised to stop.
 LOW TIRE PRESSURE	 LOW TIRE PRESSURE	The tyre pressure is too low in one or more tyres.	Check the tyre pressures as soon as possible. This check should preferably be done with the tyres cold. You must reinitialise the system after adjusting one or more tyre pressures or after changing one or more wheels. For more information, refer to the "Under-inflation detection system" section.	If the problem persists, contact a PEUGEOT dealer or a qualified workshop.
 SERVICE REQUIRED	 TPMS SERVICE REQUIRED	There is a fault with the under-inflation detection system and/or at least one wheel does not have a detected sensor.	The tyre pressures are no longer monitored. Have the system checked by a PEUGEOT dealer or a qualified workshop.	

Screen 1	Screen 2	Cause	Solution - Action	Observations
		One of the doors or the boot is not properly closed.	Close the door or the boot.	The opening in question is identified in the screen.
 CLOSE HOOD	 CLOSE HOOD	The bonnet is not properly closed.	Close the bonnet.	
	 IMMOBILIZER SYSTEM SERVICE REQUIRED	Fault with the electronic anti-theft system.	Switch off the ignition then start the engine again.	If the problem persists, contact a PEUGEOT dealer.
	 OFF	The driver's door is open and the ignition is still on.	Switch off the ignition before leaving the vehicle.	

Screen 1	Screen 2	Cause	Solution - Action	Observations
	 STEERING LOCK SERVICE REQUIRED	Fault in the steering column.	You must stop as soon as it is safe to do so.	Contact a PEUGEOT dealer or a qualified workshop.
	 ELECTRICAL SYSTEM SERVICE REQUIRED	Fault with the electrical system.	Stop the vehicle and contact a PEUGEOT dealer or a qualified workshop.	
 CHECK	 ENGINE OVERHEATING STOP SAFELY	The cooling system temperature is too high.	Wait for the engine to cool down before topping up, if necessary. If the problem persists, contact a PEUGEOT dealer or a qualified workshop.	You must stop as soon as it is safe to do so.
 SLOW DOWN	 TRANSMISSION OVERHEATING SLOW DOWN	The temperature of the CVT transmission fluid is too high.	Stop the vehicle and contact a PEUGEOT dealer or a qualified workshop.	
 FASTEN SEAT BELT	 FASTEN SEAT BELT	The driver has not fastened or has unfastened their seat belt.	Fasten your seat belt.	There is a continuous audible signal if you drive without fastening your seat belt.
 SERVICE REQUIRED	 FUEL SYSTEM SERVICE REQUIRED	Malfunction of the fuel system.	Contact a PEUGEOT dealer or a qualified workshop.	

Screen 1	Screen 2	Cause	Solution - Action	Observations
 RELEASE PARKING BRAKE	 RELEASE PARKING BRAKE	You have moved off with the parking brake not fully released.	Release the parking brake.	
 CHECK	 LOW OIL PRESSURE	The oil pressure is too low or there is a fault with the engine lubrication system.	Stop the vehicle and contact a PEUGEOT dealer or a qualified workshop.	
 SERVICE REQUIRED	 CHARGING SYSTEM SERVICE REQUIRED	Battery charge fault.	Stop the vehicle and contact a PEUGEOT dealer or a qualified workshop.	
 SERVICE REQUIRED	 AIRBAG SYSTEM SERVICE REQUIRED	Airbag or pretensioner fault.	Contact a PEUGEOT dealer or a qualified workshop to have the systems checked.	
 SERVICE REQUIRED	 HEADLAMP LEVELLING SERVICE REQUIRED	Fault with automatic headlamp adjustment system.	Contact a PEUGEOT dealer or a qualified workshop.	Only on vehicles fitted with xenon headlamps.
 SERVICE REQUIRED	 ASC SYSTEM SERVICE REQUIRED	Fault with the stability control system (ASC).	Contact a PEUGEOT dealer or a qualified workshop.	
 SERVICE REQUIRED	 4WD SYSTEM SERVICE REQUIRED	Fault with the four wheel drive transmission system.	Contact a PEUGEOT dealer or a qualified workshop.	

Screen 1	Screen 2	Cause	Solution - Action	Observations
 SERVICE REQUIRED	 TRANSMISSION SERVICE REQUIRED	Fault with the CVT gearbox.	Contact a PEUGEOT dealer or a qualified workshop.	
 SLOW DOWN	 4WD SYSTEM OVERHEATING SLOW DOWN	The temperature of the four wheel drive transmission system is too high.	Stop the vehicle and contact a PEUGEOT dealer or a qualified workshop.	The vehicle changes automatically to two wheel drive (2WD).
 REFUEL	 REFUEL	The fuel level is low.	Refuel as soon as possible.	
 CHECK	 CHECK DPF SYSTEM	The low level of the particle filter additive reservoir has been reached.	Have the reservoir topped up as soon as possible by a PEUGEOT dealer or a qualified workshop.	Only for the 1.6 litre HDi engine.
		Start of saturation of the particle filter.	As soon as the driving conditions allow, regenerate the filter by driving at a speed of at least 25 mph (40 km/h) for around 20 minutes (with the 1.6 litre HDi engine the minimum speed is 36 mph (60 km/h)).	If the message remains on, contact a PEUGEOT dealer or a qualified workshop.
		The particle filter is faulty.	Stop as soon as it is safe to do so.	Contact a PEUGEOT dealer or a qualified workshop as soon as possible.

Screen 1	Screen 2	Cause	Solution - Action	Observations
 CHECK ENGINE OIL LEVEL	 CHECK ENGINE OIL LEVEL	Engine oil level not correct (below minimum level or above maximum level).	Stop the vehicle as soon as it is safe to do so. Check the level with the dipstick and top-up if the level low. If the level is above the maximum mark, do not restart the engine and contact a PEUGEOT dealer or a qualified workshop.	Never drive with an incorrect oil level.
 *	 *	Presence of water in the Diesel fuel filter.	Risk of damage to the injection system on Diesel engines.	Contact a PEUGEOT dealer or a qualified workshop as soon as possible.
 POSSIBLE ICY ROADS	 POSSIBLE ICY ROADS	The ambient temperature is at or below 3 °C (37 °F).	There may be black ice on the road. Take care and drive gently.	
	 PRESS CLUTCH PEDAL TO START ENGINE	The clutch pedal is not depressed while starting the engine.	Depress the clutch pedal to start the engine.	For vehicles fitted with a manual gearbox.
	 PRESS BRAKE PEDAL TO START ENGINE	The gear lever is not in position P or position N when starting the engine.	Place the gear lever at position P to start the engine.	For vehicles fitted with a CVT gearbox.
		The brake pedal is not pressed while starting the engine.	Press the brake pedal to start the engine.	

* Depending on country of sale.

Information messages (ignition at "ON")


Screen 1	Screen 2	System	Observations
 2WD	 2WD	2WD two wheel drive system	Flashes for a few moments when the "2WD" (2 wheel drive) mode is selected using the transmission mode selector, for 4 wheel drive versions.
 4WD AUTO	 4WD AUTO	4WD four wheel drive system	Flashes for a few moments when the "4WD" (4 wheel drive) mode is selected using the transmission mode selector, for 4 wheel drive versions.
 4WD LOCK	 4WD LOCK	4WD LOCK four wheel drive system	Flashes for a few moments when the "LOCK" (4 wheel drive) mode is selected using the transmission mode selector, for 4 wheel drive versions.
		Active stability control (ASC)	Flashes when the stability control system (ASC) is operating.

Prevention messages

Screen 1	Screen 2	System	Cause	Observations	Solution - Action
 ROUTINE MAINTENANCE REQUIRED	 ROUTINE MAINTENANCE REQUIRED	Service indicator	Informs the driver that the next service is overdue.	This is displayed for a few seconds when the ignition is switched on.	Contact a PEUGEOT dealer or a qualified workshop.
 REST REMINDER	 REST REMINDER	Rest reminder	Informs the driver that they should stop to take a break.	This is displayed when the driving time that you set previously is reached. An audible signal sounds 3 times and then every 5 minutes until the vehicle stops.	You are advised to take a break approximately every two hours.

Trip computer

Information display

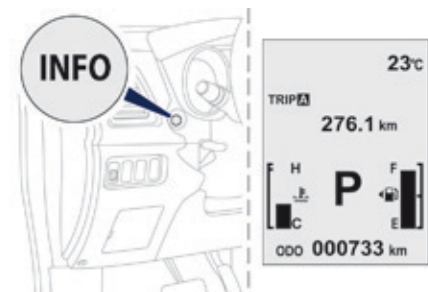


With the ignition on, each press on the **INFO** button displays the following screens in succession:

- distance recorder and trip recorder A,
- distance recorder and trip recorder B,
- service indicator,
- coolant temperature,
- range,
- average fuel consumption,
- average speed,
- current fuel consumption,
- setting menu,
- any alert messages.


Distance recorder

System for measuring the total distance travelled by the vehicle during its life.

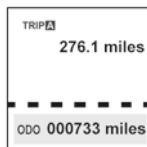

The total distance is displayed in the lower part of the screen.

Trip distance recorder (Trip A or B)

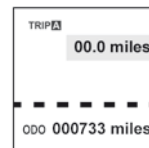

Each of these trip recorders indicates the distance travelled since the last reset. Press the **INFO** button to display the desired trip.

Reset to zero

With the ignition on and either trip **A** or **B** displayed, press the **INFO** button for more than 2 seconds. Only the trip displayed will be reset.

Service indicator

System which informs the driver when the next service is due in accordance with the manufacturer's servicing schedule.

The point at which the next service is due is calculated from the last service indicator zero reset.

It is determined by two parameters:

- the distance travelled (in miles (km)),
- the time elapsed since the last service (in months).

The distance remaining to be travelled may be weighted by the time factor, depending on the use made of the vehicle.

Operation

When the ignition is switched on, you must press the **INFO** button several times in succession until the service indicator is displayed. The distance recorder display line indicates the number of miles or kilometres remaining and the time elapsed line indicates the number of months remaining before the next service is due.



Example: the screen indicates that 7300 miles (kilometres) remain before the next service is due.



The symbol "--" remains displayed until the first service of a new vehicle has been carried out.

Service overdue

Each time the ignition is switched on, the **"ROUTINE MAINTENANCE REQUIRED"** symbol is displayed for a few seconds to indicate that the service must be carried out without delay.



Example: the screen indicates that the service is overdue. This service must be carried out by a PEUGEOT dealer or a qualified workshop.

Resetting the service indicator to zero


Your PEUGEOT dealer or a qualified workshop carries out this operation after each service. If you have carried out your vehicle's service yourself, the zero reset procedure is the following:

- ☞ switch off the ignition,
- ☞ press the **INFO** button several times in succession until the service indicator is displayed,
- ☞ press and hold the **INFO** button for a few seconds until the **spanner flashes**,
- ☞ press the **INFO** button while the spanner is flashing to change the display "---" to "**CLEAR**" then the time remaining before the next service is due is displayed.

After a certain distance and a certain time, the display of "---" is reset automatically and the display indicates the time remaining before the next service is due.



Coolant temperature gauge

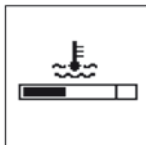

When the engine is running, this indicates the temperature of the coolant.


If the bar is close to the **critical** position located on the right, the temperature is too high. The symbol flashes when your engine is overheating.

You must stop your vehicle as soon as it is safe to do so.

Wait a few minutes before switching off the engine.

- i** Wait for the engine to cool before topping up the level. The cooling system is pressurised. To avoid any risk of scalding, unscrew the cap by two turns to allow the pressure to drop. When the pressure has dropped, remove the cap and top up the level, if necessary. Contact a PEUGEOT dealer or a qualified workshop.

Range

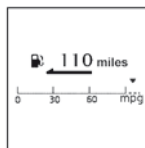

When the engine is running, this indicates the distance which can still be travelled with the fuel remaining in the tank based on the average fuel consumption over the last few miles/kilometres travelled.


When the range is less than **30 miles (50 km)**, dashes are displayed. Refuel as soon as possible. The display of the range is updated.

- i** This value may vary following a change in the style of driving or the relief, resulting in a large variation in the current fuel consumption.

If you only add a few litres, the value displayed will be incorrect. Therefore, you must fill the tank whenever possible.


- i** When you disconnect the battery, the previous fuel consumption data is lost and the value displayed will be different from that displayed before the battery was disconnected. The distance displayed must be considered an approximate indication.

Average fuel consumption (l/100 km or km/l or mpg)

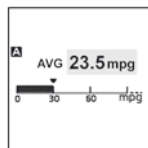

This is the average fuel consumption calculated since the trip computer was last reset.

Average speed (km/h or mph)

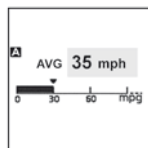

This is the average speed calculated since the trip computer was last reset.

Resetting the information to zero




When the required information is displayed, press the **INFO** button for more than two seconds to reset all of the information to zero.

When the ignition is switched on, the zero reset switches automatically from manual mode to automatic mode.

Automatic

If the ignition key remains in the OFF position for more than 4 hours, the information is reset to zero automatically.

Current fuel consumption (l/100 km or km/l or mpg)

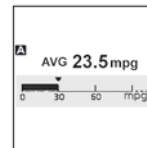

This is the average fuel consumption calculated over the last few seconds.

i This value may change following a change in the style of driving or the relief.

i If dashes "---" are displayed for long periods in place of the digits while driving, contact a PEUGEOT dealer or a qualified workshop.

Adjusting vehicle settings

With the **ignition on**, press the **INFO** button on the dashboard, to the left of the instrument panel, several times until the "SETTINGS MENU" screen is displayed.



When the vehicle is **stationary**, this menu allows the user to change the following:

- the reinitialisation mode for average fuel consumption and average speed,
- the fuel consumption units,
- the temperature display unit,
- the display language,
- activation/deactivation of the sound when pressing the **INFO** button,
- the break (rest) reminder display interval,
- reinitialise the under-inflation alert threshold (see the "Under-inflation detection" section),
- choose a set of tyres (see the "Under-inflation detection" section),
- restore the factory settings.


! To change the settings, you must stop the vehicle and switch on the ignition. Apply the parking brake and place the gear lever in neutral.

i There are some differences in the content of the menus of the type 1 and type 2 display screens.

i For your safety, **when the vehicle is moving**, the function settings are not displayed when you press the **INFO** button.

Operation

- Press and hold the **INFO** button for a few seconds to display the menu screen.

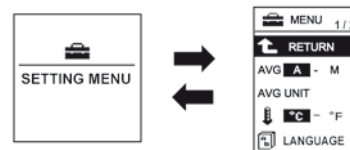

- In the menu screen, press the **INFO** button to select a function from the list:

MENU 1/3:

- **1 - 2, A - M, A - P*** (choice of the type of reset of average fuel consumption and average speed),
- **AVG UNIT** (choice of the fuel consumption units),
- choice of the **temperature display unit**,
- **LANGUAGE** (option of the display language),

* Depending on the display language.

MENU 2/3:

- **activation / deactivation of the INFO** button **sound**,
- **ALERT** (changing of the "REST REMINDER" display interval),
- **selection of the sound** of the direction indicators,
- **activation / deactivation of the current fuel consumption**,

MENU 3/3:

- **REINITIALISE** (reinitialise the under-inflation alert threshold),
- **choice of set of tyres**,
- **RESET** (restore factory settings).

i Press and hold the **INFO** button for a few seconds to return to the previous screen.
When the menu screen is displayed, if no operation is carried out within 15 seconds, the Settings Menu screen is displayed.


Choice of the reset mode for average fuel consumption and average speed

You can choose between two average fuel consumption and average speed reset modes:

- automatic reset,
- manual reset.

In the menu screen:

- ☞ press the **INFO** button to select:

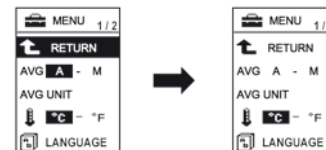

- ☞ press and hold the **INFO** button for a few seconds to switch in succession from reset mode **1 - A (automatic)*** to reset mode **2 - M - P (manual)***.

The mode selected is confirmed.


* According to display language.

Choice of the fuel consumption unit


The distance, speed and quantity of fuel units will also be changed in accordance with your choice of fuel consumption unit.

In the menu screen:

- press the **INFO** button to select "**UNIT**".

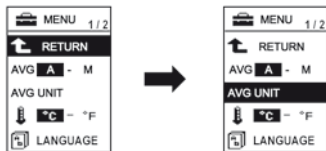

 - press and hold the **INFO** button for a few seconds to display the "**AVG UNIT**" screen.




- press the **INFO** button to scroll the units (km/L, L/100km, mpg (US), mpg (UK) and RETURN) in succession,
- press and hold the **INFO** button for a few seconds to confirm your selection.

i If the battery is disconnected, the settings memory is cleared and the default unit (km/L) is restored automatically.

Choice of the temperature display unit

In the menu screen:

- press the **INFO** button to select the temperature unit setting symbol (thermometer):

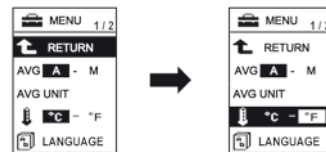

- press and hold the **INFO** button for a few seconds to scroll the units (°C and °F) in succession.


The mode selected is confirmed.

i If the battery is disconnected, the settings memory is cleared and the default unit (°C) is restored automatically.


Choice of the display LANGUAGE

In the menu screen:

- press the **INFO** button to select "**LANGUAGE**":

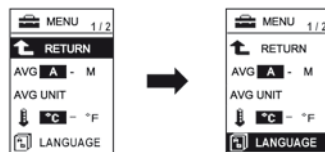

- press and hold the **INFO** button for a few seconds to display the "**LANGUAGE**" screen:

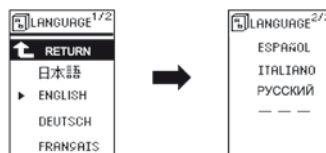

- press the **INFO** button to scroll the languages (Japonais, English, Deutsch, Français, Espanol, Italiano, Russe "---" and RETURN) in succession,
- press and hold the **INFO** button for a few seconds to confirm your selection.

i If you select the "---" setting, no message will be displayed in message display situations.

i If the battery is disconnected, the settings memory is cleared and the default language (ENGLISH) is restored automatically.

Activation / deactivation of the "INFO" button sound

You can activate or deactivate the sound associated with the **INFO** button.

In the menu screen:



- press the **INFO** button to select the **INFO** button sound activation / deactivation symbol (located in menu 2/3):



- press and hold the **INFO** button for a few seconds to scroll the choices (ON, OFF) in succession.

The mode selected is confirmed.

i If the battery is disconnected, the settings memory is cleared and the default choice (ON) is restored automatically.

Changing the display interval of the "REST REMINDER" message

The "REST REMINDER" function allows you to programme an alert message reminding you to take a break.

 
The **"REST REMINDER"** message appears accompanied by an audible signal. You can change the display interval of the **"REST REMINDER"** message.

In the menu screen:

- press the **INFO** button to select **"ALARM"** (located in menu 2/3):



- press and hold the **INFO** button for a few seconds to display the **"ALARM"** screen,



- press the **INFO** button to select the display interval of the **"REST REMINDER"** message,
- press and hold the **INFO** button for a few seconds to confirm.

i As a safety measure, it is recommended that you stop for a break every two hours.


i If the battery is disconnected, the settings memory is cleared and the default value (OFF) is restored automatically.

Selection of the sound for the direction indicators

You can select the sound for the direction indicators, with the type 2 instrument panel only.

In the menu screen:

- press the **INFO** button to select sound 1 or 2 (located in menu 2/3):

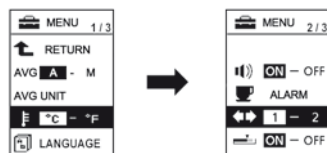


Activation / deactivation of the current fuel consumption*

You can activate or deactivate the display of the current fuel consumption, with the type 2 instrument panel only.

In the menu screen:

- press the **INFO** button to select the current fuel consumption activation / deactivation symbol (located in menu 2/3):

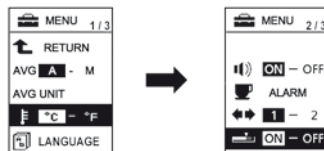


- press and hold the **INFO** button for a few seconds to scroll through the choices in succession (ON, OFF).

Reinitialising the under-inflation detection system (REINITIALISE)

You must reinitialise the under-inflation detection system after adjusting one or more tyre pressures or replacing one or more wheels.

In the menu screen:

- press the **INFO** button to select **"REINITIALISE"** (located in menu 2/3 or 3/3 depending on the instrument panel):

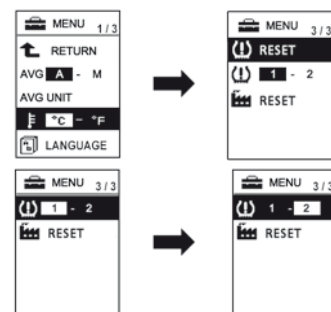

- press and hold the **INFO** button for **at least 3 seconds**.

There is an audible signal and the under-inflation warning lamp flashes slowly until reinitialisation is complete.


* Depending on equipment.

Choice of the set of tyres fitted

If you have previously registered a second set of tyres with sensors, you must select the set in use in the display screen after every change.

In the menu screen:

- press the **INFO** button to select the set of tyres 1 or 2 (located in menu 3/3):

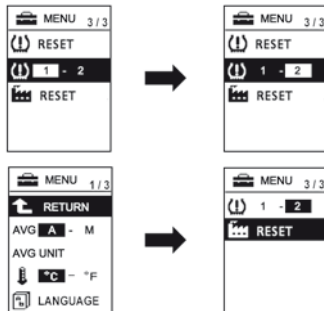


- press and hold the **INFO** button for **at least 3 seconds**.

Restoring factory settings (RESET)

You can restore the factory settings for all functions (except the under-inflation alert threshold and the choice of a set of tyres).

On the menu screen:


- press the **INFO** button to select "**RESET**" (located in menu 3/3):

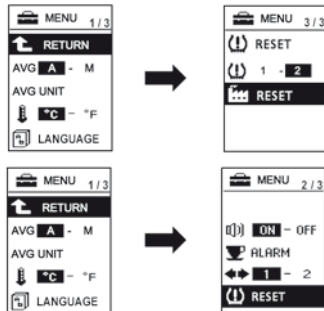

- press and hold the **INFO** button for **at least 5 seconds**.

There is an audible signal and all of the factory settings are restored for all functions.


Audio-CD system screen

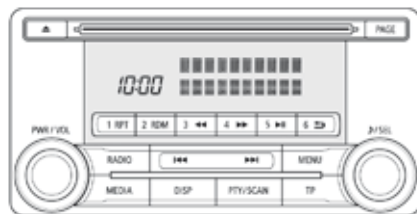

Associated with the Audio-CD system, this screen can display the following information:

- the time,
- audio system information.
(see the "Audio equipment and telematics" section).

Setting the time

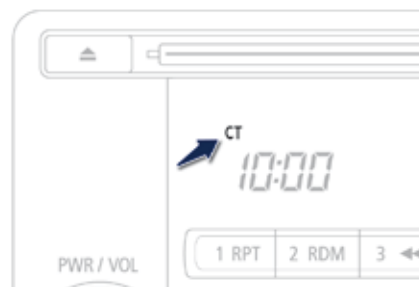

Selecting the adjustment mode

The digital clock can be set in **automatic mode** or in **manual mode**.

Automatic mode

This mode permits automatic setting of the local time using the signal from RDS stations. The symbol "CT" appears in the screen.

Manual mode

This mode permits manual setting of the time using the audio system buttons. It can also be used when the "Automatic mode" displays an inaccurate time, when the local RDS stations are broadcasting from a different time zone.

To select the mode:

- ☞ Press the **"PWR/VOL"** button to switch on the audio system.
- ☞ Press the **MENU** button.
- ☞ Press the **SEL** knob to scroll through the menus and select **"RDS setting - CT ON - CT OFF"** (clock time).
- ☞ Turn the **SEL** knob to the left or to the right to select **"CT OFF"** (manual mode) or **"CT ON"** (automatic mode).
- ☞ Press the **SEL** knob to confirm.

i If no action is carried out within 10 seconds, the selection menu closes automatically.

Manual adjustment


- ☞ Press the **PWR/VOL** button to switch on the audio system.
- ☞ Press the **MENU** button.
- ☞ Press the **SEL** knob to run scroll through the menus and select **"Time Setting Adjust"**.
- ☞ Turn the **SEL** knob to select **"ON"** for access to time setting.
- ☞ Press the **SEL** knob to confirm.
- ☞ Turn the **SEL** knob to adjust the time.
- ☞ Press the **SEL** knob to confirm.

i The digital clock does not display seconds.
The time setting is lost if the battery is disconnected.

Audio-CD system touch screen

Associated with the touch screen Audio-CD system, this screen can display:

- the time,
 - information related to the audio system.
- (See the "Audio equipment and telematics" section).

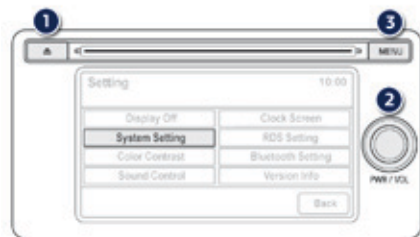


1. CD eject.
2. System On / Off.
Volume adjustment.
3. Access to the different menus in the system.

! For reasons of safety, the driver should only carry out operations that require close attention with the vehicle stationary.

General operation

Use the buttons arranged on the screen to operate the system.

Setting the time

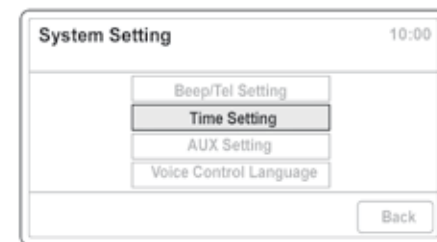

- ☞ Press the **MENU** button to display the main menu.
- ☞ Press **"Setting"**.
- ☞ Press **"System Setting"**.
- ☞ Press **"Time Setting"**.

! Do not use pointed objects on the touch screen.
Do not touch the screen with wet hands.

i Use a clean soft cloth to clean the screen.

Time Adjustment 10:00

Month	Date	Year	Hour	Min.
▲	▲	▲	▲	▲
1	1	2012	12	9
▼	▼	▼	▼	▼

Set Back

- ☞ Press **"Time Adjustment"**.
- ☞ Use the virtual arrows in the screen to adjust the date and time.
- ☞ Press **"Set"** to conform or **"Back"** to cancel and return to the previous screen.

Time Display Setting 10:00

Date/Time Format	Year Month Day	
Clock Time	On	Off

Back

Display format

You can the display format for the date and time:

- ☞ Press the **MENU** button.
- ☞ Press **"Setting"**.
- ☞ Press **"System Setting"**.
- ☞ Press **"Time Setting"**.
- ☞ Press **"Time Display Settings"**.

You and then select the format for the display of the date and time ("**Date / Time Format**") and activate automatic adjustment of the time ("**Clock Time**").

Permanent display

Once the data and time are set, you can choose to have them always displayed in the screen. To do this:

- ☞ Press the **MENU** button.
- ☞ Press **"Setting"**.
- ☞ Press **"Clock Screen"**.

The date and time are displayed. Simply touch the screen again to return to the original display.

Audio-Telematic system touch screen

Associated with the touch screen Audio-Telematic system, the screen can display:

- the time,
 - information related to the audio and satellite navigation systems.
- (See the "Audio equipment and telematics" section).

General operation

Use the buttons on either side of the screen, or touch the virtual buttons appearing in the screen to operate the system.



1. **PWR/VOL**: audio system on/off, volume adjustment.
2. **AUDIO**: display of the last audio source used.
3. **SEEK TRACK**: change of audio source, fast forward / back, automatic frequency search.
4. **MODE**: selection of an audio source.
5. **OPEN**: access to the CD/DVD player.
6. **SETTINGS**: access to system settings.
7. **INFO**: access to information (calendar, voice commands...).
8. **NAVI MENU**: access to navigation settings.
9. **FOLDER / TUNE SOUND**: selection of a folder or search for a radio station.
10. **MAP**: display the map with the location of the vehicle.
11. **ZOOM**: zoom (in or out) on the map.
12. Access to the navigation settings and the selection of destination.
13. Day / night mode.

! For reasons of safety, the driver should only carry out operations that require close attention with the vehicle stationary. In addition, some functions are not accessible when driving.

! Do not use pointed objects on the touch screen.
Do not touch the screen with wet hands.

i Uses a soft clean cloth to clean the screen.

i For more information on these menus, refer to the "Audio equipment and telematics" section.

Settings		10:10
Display Off	System	
Picture Control	Clock Screen	

"Settings" menu

Press the **SETTINGS** button on the control panel to open the menu.

System screen

Once in the "Tuning..." menu, select "**System**" to modify the time zone, the units, or the display language (English, Dutch, Swedish, French, Portuguese, Italian, German, Spanish, Norwegian, Flemish or Danish) and adjust other settings.

Setting the time



The digital clock is set **automatically**.

This mode enables the system to set the local time automatically using the signal from the RDS stations.

☞ On the control panel, press the **SETTINGS** button for access to settings.

Settings		10:10
Display Off	System	
Picture Control	Clock Screen	

- On the touch screen, press the **"System"** button.
- The system settings screen is displayed.

System		10:10
Time	Units	
Language	Keyboard Layout	
Pairing	Reset all	

					Back
--	--	--	--	--	------

- Press the **"Time"** button.

Once this menu has been selected, you can access the following functions:

Time					Current Time 10:10pm AVR. 8
					
	Auto	GMT	GMT+1	GMT+2	
Summer Time	On			Off	
RDS Auto Correct	On			Off	
Format Change					Back

1. Auto / GMT / GMT+1 / GMT+2:

Select the time zone.

2. Summer Time:

Summer time On / Off.

3. RDS Auto Correct:

Automatic adjustment On / Off.

- Press the **Back** button to confirm and return to the previous menu.

i You must deactivate automatic adjustment (RDS Auto Correct) to change the time zone and summer time settings.

Setting the display format

From the **"Time"** menu:

- press the **"Format Change"** button.
- adjust the display settings.
- press the **"Back"** button to confirm.

Lighting dimmer

System for manual adjustment of the brightness of the instruments and controls in relation to the exterior brightness.



With the lighting on or off, press the button to change the intensity of the lighting of the instruments and controls in "day" or "night" mode.

With the vehicle's lighting off, only the brightness of the instrument panel is modified.

With the vehicle's lighting on, the brightness of the entire dashboard (instrument panel, screen, air conditioning control panel...) is modified.

i There is an audible signal and the intensity of the lighting increases each time the button is pressed.

When the lighting reaches the maximum setting, press again to change to the minimum setting.


When the lighting reaches the required intensity, release the button.

The setting is saved when the ignition switch is turned to OFF.

Remote control key

System which permits central unlocking or locking of the vehicle using the door lock or remotely. It is also used for the guide-me-home lighting and starting the engine, as well as providing protection against theft.

Unlocking the vehicle

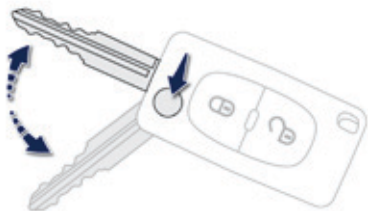


Unfolding the key

- First press this button to unfold the key.

Complete unlocking using the remote control



- Press the open padlock to unlock the vehicle.

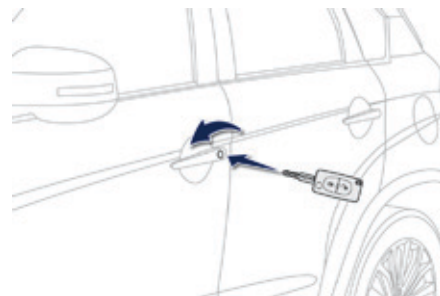

Unlocking using the key

- Turn the key to the front in the driver's door lock to unlock it.

i Unlocking is confirmed by the interior lighting which comes on for around 15 seconds and the direction indicators which flash **twice**. According to version, the door mirrors unfold at the same time.

Selective unlocking using the remote control



☞ Press the open padlock once to unlock the driver's door only.

☞ Press the open padlock again to unlock the other doors and the boot.

i Unlocking is confirmed by illumination of the interior lighting for about 15 seconds and the direction indicators, which flash **twice**.
According to version, the door mirrors unfold at the same time as the first unlocking action.

i Selective unlocking is only available on versions not fitted with deadlocking. Selective unlocking is not available using the key.

Locking the vehicle


Normal locking using the remote control



- ☞ Press the closed padlock to lock the vehicle completely.

i Locking is confirmed by the direction indicators which flash **once**. According to version, the door mirrors fold at the same time.

i If one of the doors or the boot is still open, the central locking does not take place.
When the vehicle is locked, if it is unlocked inadvertently, it will lock itself again automatically after a certain time unless a door is open.

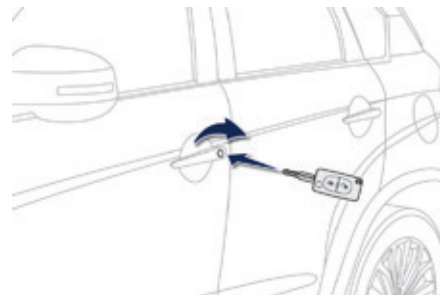

Normal locking using the key

- ☞ Turn the key to the rear in the driver's door lock to lock it.

Deadlocking using the remote control



- Press the closed padlock to lock the vehicle completely.

- Press the closed padlock again within five seconds to deadlock the vehicle.

i Deadlocking is confirmed by the direction indicators, which flash **three times**.
According to version, the door mirrors fold at the same time.

! Deadlocking renders the exterior and interior door controls inoperative. It also deactivates the manual central control button.
Therefore, you should never leave anyone inside the vehicle when it is deadlocked.




Folding the key

- First press this button to fold the key.


! If you do not press the button when folding the key, there is a risk of damage to the mechanism.

"Keyless Entry and Starting" system

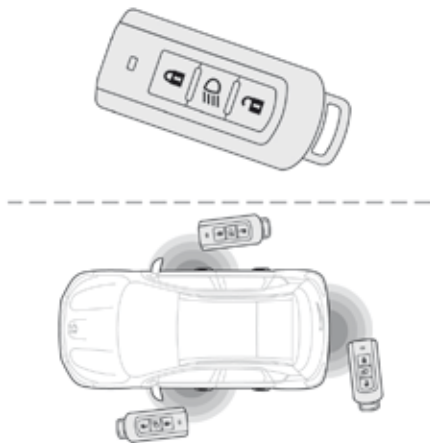

System that allows the locking, unlocking and starting of the vehicle while keeping the electronic key on your person. It can also be used as a remote control; see the "Remote control" section.

Unlocking the vehicle

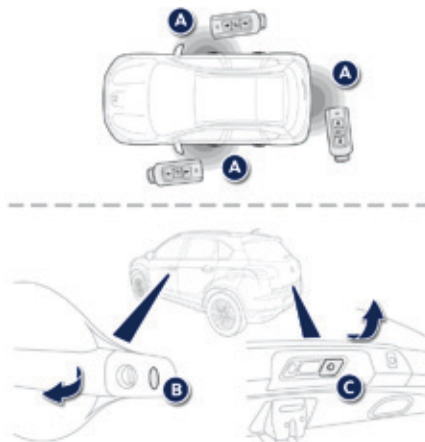

Complete unlocking

- With the electronic key on your person and in one of the defined zones **A**, press one of the buttons **B** or **C** to unlock the vehicle, then pull on the handle to open the door. Your passengers can also open their doors, as soon as the electronic key is in one of the defined zones.


! For security, the detection zones in which the electronic key is operational have a radius of about 70 cm around each opening button.

Selective unlocking

- With the electronic key on your person, press button **B** once to unlock only the driver's door, then pull on the door handle to open.
- Press button **B** again to unlock the vehicle completely.

i Unlocking is confirmed by an audible signal and the direction indicators which flash **twice**. The door mirrors unfold at the same time. Selective unlocking is only available on versions not fitted with deadlocking.

Locking the vehicle

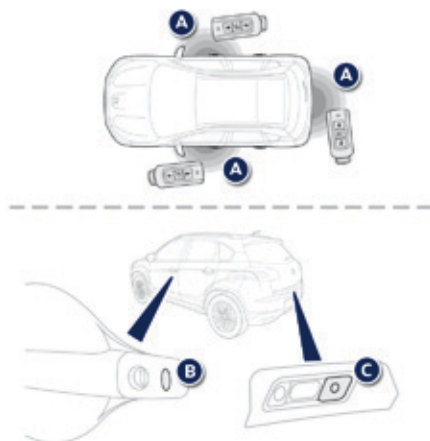


Locking

- ☞ With the key in one of the defined zones **A**, press one of the buttons **B** or **C**.

i Locking is confirmed by an audible signal and the direction indicators, which flash **once**.
The door mirrors fold at the same time.

i The operating mode must be "OFF".
With Stop & Start, if the engine is in Stop mode, the vehicle cannot be locked.

! Always ensure that you have the electronic key on your person before locking the vehicle: in some circumstances, it is possible to lock the vehicle without the presence of the electronic key having been detected inside the vehicle.

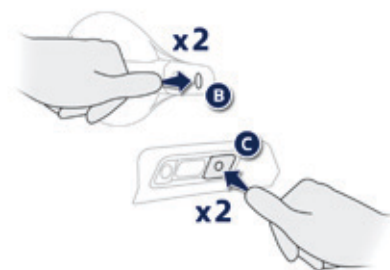

Deadlocking

- ☞ With the electronic key in one of the defined zones **A**, press button **B** or **C** to lock the vehicle.
- ☞ Within five seconds, press button **B** or **C** again to deadlock the vehicle.

i Locking is confirmed by two audible signals and by the direction indicators which flash **three times**.
The door mirrors unfold at the same time.

Switching on the lighting remotely

! Deadlocking renders the exterior and interior door controls inoperative. It also deactivates the manual central control button. Therefore, never leave anyone inside the vehicle when it is deadlocked.



This only operates with the **ignition off** and the lighting control in the "**OFF**" or "**AUTO**" position.



Press this button to switch on the lighting remotely (illumination of the sidelamps and dipped beam headlamps) for a period of 30 seconds.


A second press switches off the lighting.

Remote operation of the lighting will be switched off:

- on switching on the ignition,
- if the lighting control is not in the "**OFF**" or "**AUTO**" position,
- when activating manual guide-me-home lighting.

Emergency procedure with the Keyless Entry and Starting system


Emergency unlocking/locking using the integral key

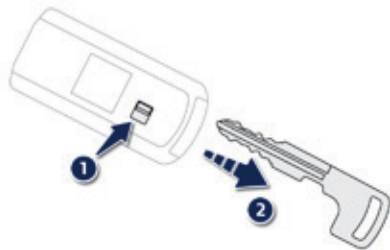

The integral key is used to lock and unlock the vehicle when the electronic key cannot operate:


- cell battery flat, vehicle battery discharged or disconnected, ...
- vehicle located in an area with strong electro-magnetic signals.

☞ Pull and hold button **1**, to extract the integral key **2**.

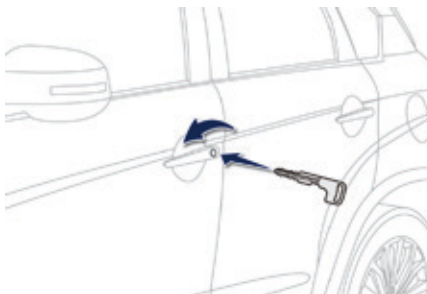

Unlocking

☞ Turn the key towards the front in the driver's door lock to unlock the vehicle.

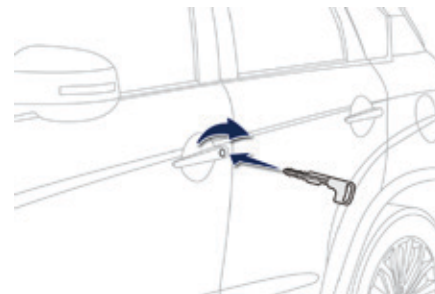


Locking

☞ Turn the key towards the rear in the driver's door lock to lock the vehicle.

i The emergency key allows you to lock or unlock the driver's door only. To lock or unlock the other doors, use the interior controls (see "Locking / unlocking from inside").

Changing the batteries

With the Keyless Entry and Starting system, message appears in the instrument panel when replacement of the battery is needed.

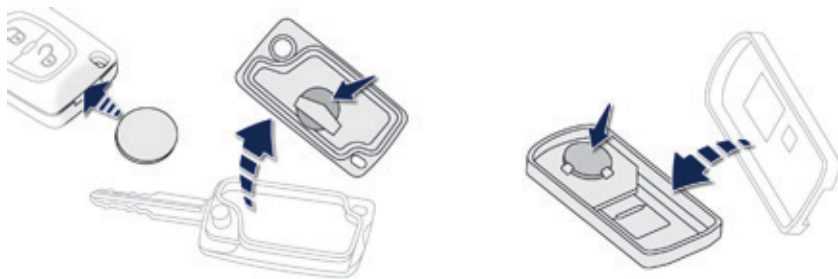

Remote control key

Battery ref.: CR1620 / 3 volts.

- ☞ Unclip the cover using a small screwdriver at the cutout.
- ☞ Lift off the cover.
- ☞ Remove the flat battery from its location.
- ☞ Fit the new battery into its location observing the original direction of fitment.
- ☞ Clip the cover onto the casing.

Electronic key

Battery ref.: CR2032 / 3 volt.

! Observe the polarity when fitting the cell battery, as it could explode. Always replace the cell battery with one that is identical or of equivalent type. When the housing is open, take care to protect it from water and dust.

♻️ Do not throw the remote control batteries away, they contain metals which are harmful to the environment. Take them to an approved collection point.

! Lost electronic key

Visit a PEUGEOT dealer with the vehicle's registration document and your personal identification documents and if possible the key code label. The PEUGEOT dealer will be able to retrieve the key code and the transponder code required to order a new key.

Electronic key

The electronic key is a sensitive system; do not operate it while it is in your pocket as there is a possibility that it may unlock the vehicle, without you being aware of it.

Do not repeatedly press the buttons of your electronic key out of range and out of sight of your vehicle. You run the risk of stopping it from working and the remote control would have to be reinitialised.

The electronic key cannot operate as a remote control when it is in the reader or even when the ignition is switched on.

Locking the vehicle

Driving with the doors locked may make access to the passenger compartment by the emergency services more difficult in an emergency. As a safety precaution (with children on board), take the Keyless Entry and Starting electronic key when you leave the vehicle, even for a short time.

Electrical interference

The Keyless Entry and Starting electronic key may not operate if close to certain electronic devices: telephone, laptop computer, strong magnetic fields, ...

Anti-theft protection


Do not make any modifications to the electronic engine immobiliser system; this could cause malfunctions. Don't forget to turn the steering to engage the steering lock.

When purchasing a second-hand vehicle

Have all of the keys in your possession paired by a PEUGEOT dealer, to ensure that only your keys allow your vehicle to be unlocked and started.


Doors

Opening

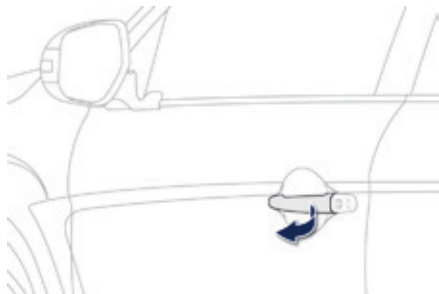

From outside

- ☞ After unlocking the vehicle using the remote control or the key, pull the door handle.

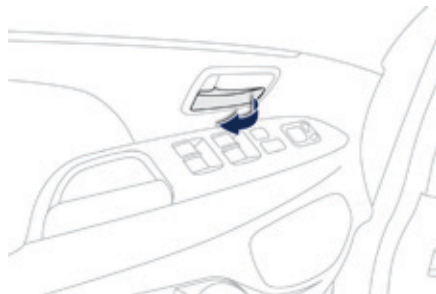


From inside

- ☞ Pull the front or rear door lever to open the door.

On the driver's side, this action on the door lever unlocks the door if it was locked.


On the passenger's side or for the rear doors, the door must first be unlocked manually (see "Individual controls") if it was locked.

 Closing



If a door is not closed correctly, this symbol comes on in the instrument panel screen until the door concerned is closed.

Boot Opening

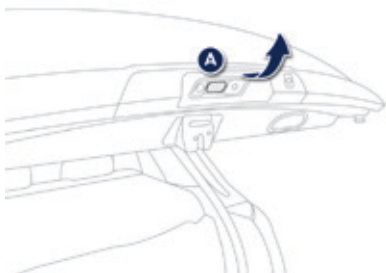

- After unlocking the vehicle, press the handle **A** and raise the tailgate.

Closing




- Pull the handle **B** downwards to guide the tailgate.
- Release the handle and press gently on the exterior surface of the tailgate to close it.



If the tailgate is not fully closed, this symbol comes on in the instrument panel screen until it is closed.

Manual release

This enables the boot to be unlocked in the event of a central locking fault.

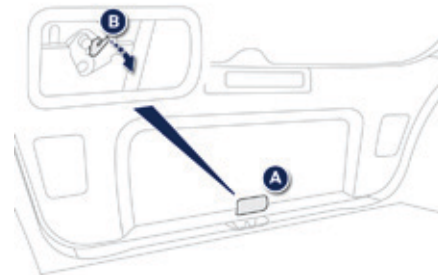

- Fold back the rear seats to gain access to the tailgate release from inside the boot.
- Remove the plastic cover from the opening **A** in the tailgate interior pillar.
- Move the control **B** to the right to unlock and open the boot.

Locking / unlocking from inside

Central locking control

System which provides full manual locking or unlocking of the doors and boot from the inside.




Locking

- ☞ Press the front of button **A** to lock the vehicle.

Unlocking

- ☞ Press the rear of button **A** to unlock the vehicle.

Individual controls

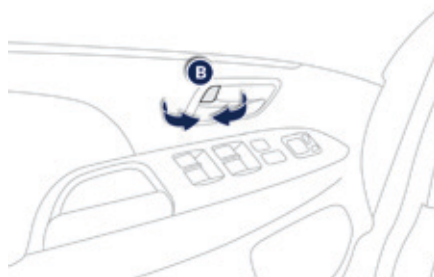

Locking the front and rear doors

- ☞ Pivot the interior control **B** towards the front.

This control can also be used to lock the front passenger's door and the rear doors in the event of a failure with the central locking.

To do this:

- ☞ Open the door in question.
- ☞ Pivot the interior control **B** towards the front, then close the door.

! It is possible to lock the vehicle with a passenger door open, using using the individual locking controls: ensure that you have the key before closing the passenger door.

Unlocking the front and rear doors

- ☞ Pivot the interior control **B** towards the rear.

Alarm*

System which protects and provides a deterrent against theft and break-ins. It provides the following types of monitoring:

- perimeter

The system checks for any opening of the vehicle. The alarm is triggered if anyone tries to open a door, the boot, the bonnet...

- volumetric

The system checks for any variation in the volume in the passenger compartment. The alarm is triggered if anyone breaks a window, enters the passenger compartment or moves inside the vehicle.

- tilt

The system checks for any change in the attitude of the vehicle. The alarm is triggered if the vehicle is lifted, moved or knocked.

Self-protection function

The system checks for the putting out of service of its components. The alarm is triggered if the battery, the central control or the siren wiring are put out of service or damaged.



For all work on the alarm system, contact a PEUGEOT dealer or a qualified workshop.

Locking the vehicle with full alarm system



Activation

- ☞ Switch off the ignition (OFF mode if your vehicle has the Keyless Entry and Starting system).
- ☞ Remove the key from the ignition switch, if your vehicle does not have the "Keyless Entry and Starting" system.
- ☞ Leave the vehicle, and close all the doors and the bonnet.
- ☞ Press the locking button on the remote control or one of the door or boot buttons if your vehicle has the "Keyless Entry and Starting" system.

The alarm is being activated: the indicator lamp **A** flashes rapidly accompanied by an intermittent audible signal for about 20 seconds.

Once the 20 seconds have expired, **the system is active**. The audible signal stops and the indicator lamp in the button flashes slowly.

Deactivation

Do one of the the following to deactivate the alarm:

- ☞ Press the unlocking button on the remote control or one of the door or boot buttons if your vehicle has the "Keyless Entry and Starting" system.
- ☞ Switch on the ignition (ON mode if your vehicle has the "Keyless Entry and Starting" system).
- ☞ Open a door or the boot while the system is being activated.

The alarm system is deactivated: the indicator lamp **A** goes off.

* According to equipment.

Locking the vehicle with perimeter monitoring only

Deactivate the interior volumetric and tilt monitoring to avoid unwanted triggering of the alarm in certain cases, such as:

- an animal left in the vehicle,
- a window left partly open,
- washing your vehicle.

Deactivation of the interior volumetric and tilt monitoring

- ☞ Switch off the ignition and remove the key from the ignition switch (OFF mode if your vehicle has the "Keyless Entry and Starting" system).
- ☞ Raise and hold the wiper control stalk in the "**MIST**" position for about 3 seconds.
- ☞ The audible signal sounds **once** and the interior volumetric and tilt monitoring are deactivated.

Raise and hold the wiper control stalk in the "**MIST**" position for about three seconds to activate them again, the audible signal sounds **twice**.

Triggering of the alarm

This is indicated by sounding of the siren and flashing of the direction indicators for thirty seconds.

A message then appears in the instrument panel screen while the siren is operating. When the ignition is next switched on (ON mode if your vehicle has the "Keyless Entry and Starting" system), an audible signal sounds four times to inform you that the alarm was triggered during your absence.


Complete deactivation of the alarm

You can completely deactivate the alarm system. To do this, proceed as follows:

- ☞ Switch off the ignition (OFF mode if your vehicle has the "Keyless Entry and Starting" system).
- ☞ Remove the key from the ignition switch, if your vehicle does not have the "Keyless Entry and Starting" system.
- ☞ Open the driver's door.
- ☞ Place the lighting control stalk in the "OFF" position.
- ☞ Pull the wiper control stalk towards you and hold.
After about ten seconds there is an audible signal.
- ☞ When the audible signal stops, continue to hold the wiper stalk pulled towards you and press the remote control locking button.
- ☞ The state of the system is then signalled to you by the number of beeps:
One beep: the alarm system is completely deactivated.
Two beeps: the alarm system is activated.
Each new press of the remote control locking button changes the state of the system.

Electric windows

System which opens or closes a window manually or automatically. It is fitted with a system which provides protection if an obstacle is detected on one-touch models and a deactivation system to prevent misuse of the rear controls.

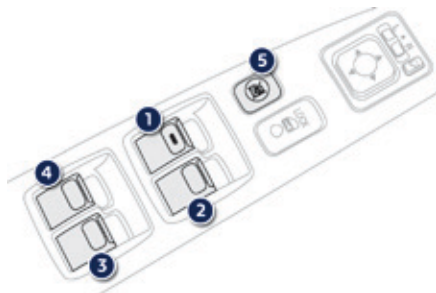

1. Driver's electric window.
2. Passenger's electric window.
3. Rear right electric window.
4. Rear left electric window.
5. Deactivating the passenger and rear electric window switches.

Front and rear passengers' electric windows

- ☞ With the ignition on, press or pull the switch. The window stops when you release the switch.

Driver's one-touch electric window

With the ignition on, you have two options:

- **manual mode**
 - ☞ Press the switch gently to open or pull it gently to close. The window stops as soon as the switch is released.
- **automatic mode**
 - ☞ Press the switch fully to open or pull it fully to close. The window opens or closes completely when the switch is released.
 - ☞ Pressing the switch again stops the movement of the window.

i The electric window switches remain operational for approximately 30 seconds after the ignition is switched off. The windows can no longer be opened or closed once a front door is opened. The rear windows do not lower fully.

Safety anti-pinch (driver's side)

In automatic mode, when the window rises and meets an obstacle, it stops and lowers again.

Reinitialising the electric windows

- i** Should there be no automatic movement of a window when rising or after the safety anti-pinch has been triggered three times in succession, the electric windows must be reinitialised.

From the switch in the driver's door:


- ☞ pull the switch until the window is fully closed, then release it,
- ☞ pull the switch again for at least one second after reaching the window closed position.

The safety anti-pinch function is not active during these operations.

- i** Always remove the key from the ignition when leaving the vehicle, even for a short time.
In the event of contact during operation of the windows, you must reverse the movement of the window. To do this, press the switch concerned.
When the driver operates the passenger electric window switches, they must ensure that no one is preventing correct closing of the windows.
The driver must ensure that passengers use the electric windows correctly.
Be particularly aware of children when operating the windows.

Deactivating the passenger and rear electric window switches

2

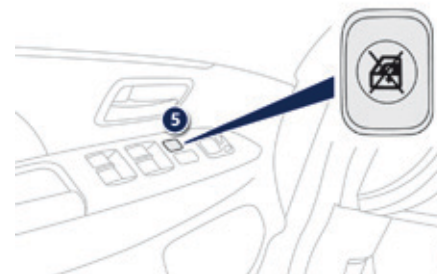

- ☞ For the safety of your children, press switch **5** to prevent operation of the passenger and rear electric windows irrespective of their position.

When the button is pressed down, the switches are deactivated.


When the button is up, the switches are activated.

- i** When the button is pressed down, only the window in the driver's door operates.

Panoramic sunroof

It has a motorised blind.

Motorised blind

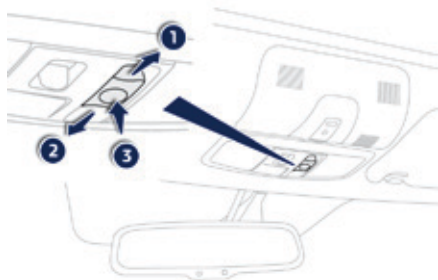

With the ignition on, there are two ways of opening or closing the blind:

- ☞ Briefly pull or push the control in direction **1** or **2**, the blind stops when you release the control.
- ☞ Maintain pressure on the control in direction **1** or **2** until movement starts, the blind then opens or closes fully.

Stopping temporarily

- ☞ To stop the opening or closing of the blind, press part **3** of the control or reverse the movement of the control.

Safety anti-pinch

At the end of its travel, if the blind encounters an obstacle to closing, it stops and moves back slightly.

- ! Remember to always switch off the ignition when leaving the vehicle, even for a short time.
When operating the control, the driver should ensure that there is nothing preventing movement of the blind.
The driver must ensure that passengers use the blind correctly.
Be particularly aware of children when operating the blind.

Front seats

Seat consisting of a seat cushion, a seat back and a head restraint which can all be adjusted to adapt your position for ease of driving and comfort.

i As a safety measure, seat adjustments should only be done when stationary.

Manual adjustments




Forwards-backwards

☞ Raise the control bar and slide the seat forwards or backwards.

When the seat is in the correct position, push it forwards and backwards without raising the control bar to check that it has latched.

! Before moving the seat backwards, ensure that there is nothing that might prevent the full travel of the seat, so as to avoid the risk of jamming the seat caused by the presence of objects on the floor behind the seat or rear passengers. If the seat jams, stop the movement immediately.

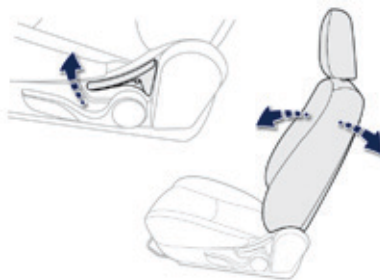


Seat backrest angle

☞ Pull the control lever up to adjust the seat backrest.

! When the backrest is at the desired angle, release the control.

When the backrest is at the correct angle, release the control lever. To ensure that the backrest does not suddenly fold forwards and hurt you, restrain it with your back or your hand while operating the control.

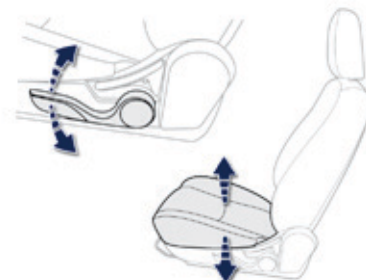

Driver's seat height

☞ Pull the control upwards to raise or push it downwards to lower, as many times as necessary, to obtain the position required.

Front seats


Electric adjustments



Forwards-backwards


- ☞ Push the control forwards or rearwards to slide the seat.

! Before moving the seat backwards, ensure that there is nothing that might prevent the full travel of the seat, so as to avoid the risk of jamming the seat caused by the presence of objects on the floor behind the seat or rear passengers. If the seat jams, stop the movement immediately.

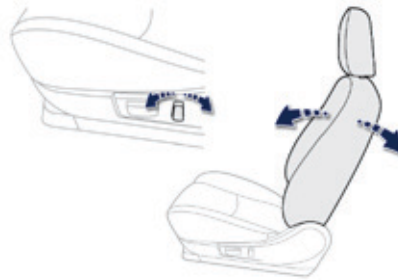

Seat backrest angle

- ☞ Tilt the control forwards or rearwards to adjust the angle of the seat backrest.

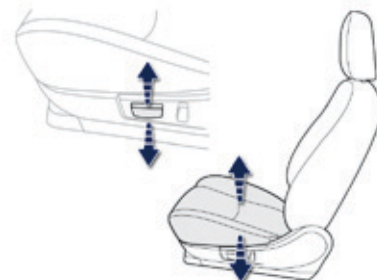


Driver's seat cushion height and angle

- ☞ Pull or push the front part of the control upwards or downwards to raise or lower the front of the seat cushion.
- ☞ Pull or push the rear part of the control upwards or downwards to raise or lower the rear of the seat cushion.
- ☞ Pull or push all of the control upwards or downwards to raise or lower the whole seat cushion

i To avoid discharging the battery, carry out these adjustments with the engine running.

Additional adjustments

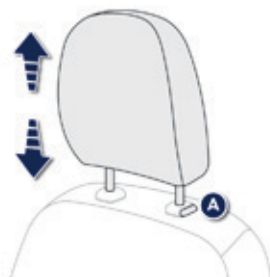

Head restraint height

- ☞ To raise a head restraint, pull it upwards.
- ☞ To lower the head restraint, press the lug **A** and the head restraint at the same time.

The head restraint is fitted with a frame with notches which prevents it from lowering; this is a safety device in case of impact.

The adjustment is correct when the upper edge of the head restraint is level with the top of the head.

Removing a head restraint

- ☞ To remove a head restraint, press the lug **A** and pull the head restraint upwards.
- ☞ To put the head restraint back in place, engage the head restraint stems in the openings keeping them in line with the seat back and press the lug **A** at the same time.



Never drive with the head restraints removed; they must be in place and adjusted correctly.

Front armrest



Heated seats adjustment

With the engine running, tilt the button to the position required.

The temperature of the seat is regulated automatically.

There are two setting positions:

- "HI": High heating
- "LO": Low heating

When the button is in the intermediate position, the heating is switched off.

The indicator lamps **A** come on when the system is activated.




You can move the console housing cover in order to use it as an armrest.


Rear seats

Bench seat with fixed one-piece cushion and split backrest (left hand 2/3, right hand 1/3) which can be folded individually to adapt the load space in the boot.

Folding the backrest

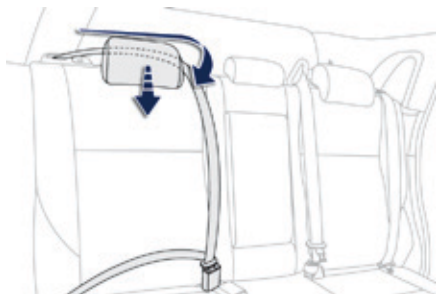


- ☞ Move the corresponding front seat forward if necessary.
- ☞ Place the head restraints in the low position (see "Rear head restraints").
- ☞ Press control **1** forwards to release the seat backrest **2**.
- ☞ Fold the seat back **2** on to the cushion.

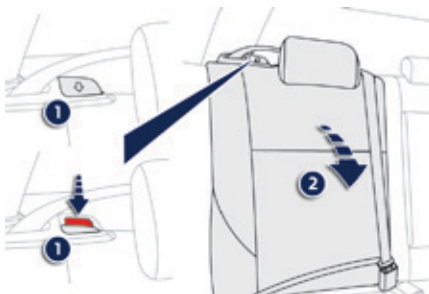

Repositioning the seat backrest

- ☞ Straighten the seat backrest **2** and secure it.
- ☞ Check that the red indicator, located next to the control **1**, is no longer visible.

3

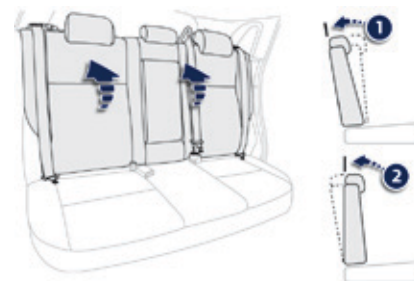

When repositioning the seat backrests, they can be locked in one of two different positions, depending on the speed in which the operation is carried out:

- if done quickly, the backrest returns to its original position **1**,
- if done slowly, the backrest goes into the vertical position **2**.

To go from position **2** to position **1**, simply release the backrest and push it until it locks in place.

Rear head restraints



These have one position for use (up) and a stowed position (down).

They can also be removed.


To remove a head restraint:

- ☞ pull the head restraint upwards to the stop,
- ☞ then, press the lug **A**.



Never drive with the head restraints removed; they must be in place and correctly adjusted.


Rear armrest

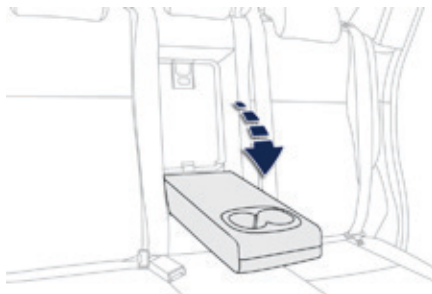

- ☞ Lower the rear armrest for a more comfortable position.

It may be fitted with cup holders and also gives access to the ski flap.

Ski flap

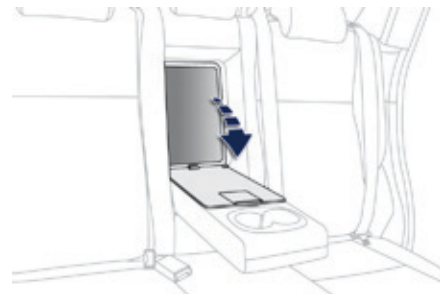

Device for storing and transporting long objects.

Opening

- ☞ Lower the armrest.
- ☞ Lower the flap opening control.
- ☞ Lower the flap.
- ☞ Load the objects from inside the boot.

Mirrors

Door mirrors



Each fitted with an adjustable mirror glass permitting the lateral rearward vision necessary for overtaking or parking. They can also be folded for parking in confined spaces.

Demisting - Defrosting



If your vehicle is fitted with heated mirrors, the demisting-defrosting operates with the engine running, by switching on the heated rear screen (see "Rear screen demist-defrost").



Adjustment

Adjustment is possible when the ignition switch is in the "ON" or "ACC" position.

- ☞ Move control **A** to the right or to the left to select the corresponding mirror.
- ☞ Move control **B** in all four directions to adjust.
- ☞ Return control **A** to the central position.

! The objects observed are, in reality, closer than they appear. Take this into account in order to correctly judge the distance of vehicles approaching from behind.



Electric folding / unfolding

From inside:

- with the ignition switch in the "ON" or "ACC" position, by pressing the control **C**,
- with the ignition switch in the "LOCK" position, by pressing control **C**, **within 30 seconds**.

From the outside:

- ☞ by locking or unlocking the vehicle, using the remote control or the locking / unlocking buttons (for vehicles fitted with the "Keyless Entry and Starting" system).

! If you have folded the mirrors using the control **C**, you must use this control to unfold them, otherwise the mirrors will not be lock in place correctly. The mirrors can also be folded manually.


Rear view mirror

Adjustable mirror providing a central rearward view.

Equipped with an anti-dazzle system, which darkens the mirror glass and reduces the nuisance to the driver caused by the sun, headlamps from other vehicles...

! As a safety measure, the mirrors should be adjusted to reduce the "blind spot".

Manual day/night model

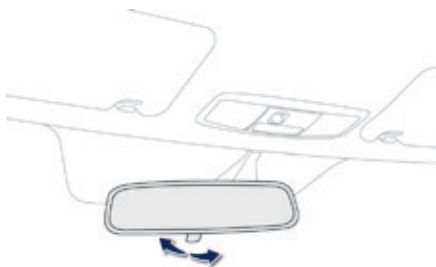

Adjustment

- ☞ Adjust the mirror so that the glass is directed correctly in the "day" position.

Day / night position

- ☞ Pull the lever to change to the "night" anti-dazzle position.
- ☞ Push the lever to change to the normal "day" position.


Automatic day/night model



By means of a sensor, which measures the light from the rear of the vehicle, this system automatically and progressively changes between the day and night uses.

i In order to ensure optimum visibility during your manoeuvres, the mirror lightens automatically when reverse gear is engaged.

Steering wheel adjustment

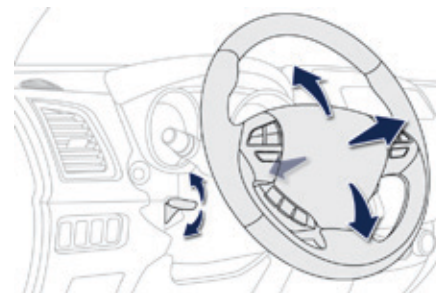

3

- ☞ **When stationary**, lower the control lever to release the steering wheel adjustment mechanism.
- ☞ Adjust the height and reach to suit your driving position.
- ☞ Pull the control lever to lock the steering wheel adjustment mechanism.

! As a safety precaution, these operations should only be carried out while the vehicle is stationary.

Ventilation

Air intake

The air circulating in the passenger compartment is filtered and originates either from the outside via the grille located at the base of the windscreen or from the inside in air recirculation mode.


Air treatment

The incoming air follows various routes depending on the controls selected by the driver:

- direct arrival in the passenger compartment (air intake),
- passage through a heating circuit (heating),
- passage through a cooling circuit (air conditioning).

Control panel

The controls of this system are grouped together on control panel **A** on the centre console.

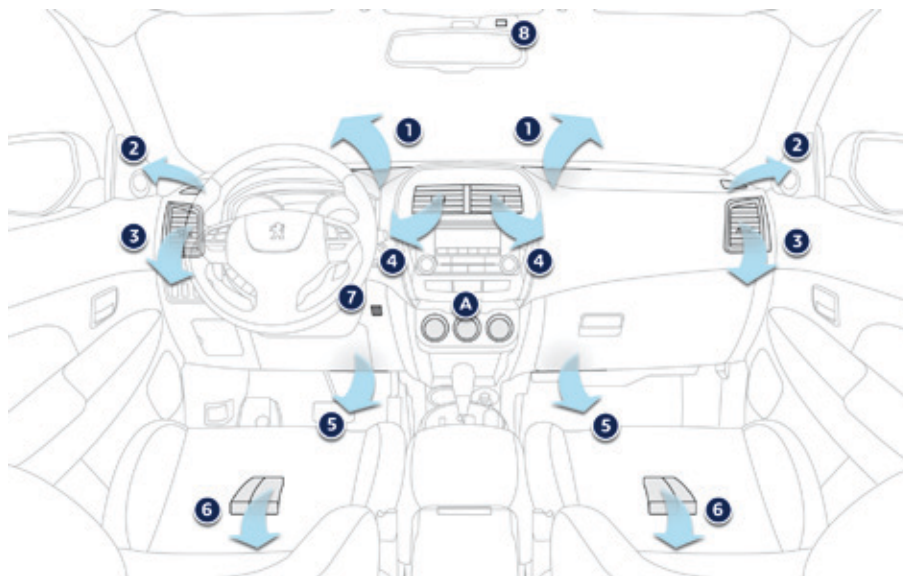

Air distribution

1. Windscreen demisting-defrosting vents.
2. Front side window demisting-defrosting vents.
3. Side adjustable air vents.
4. Central adjustable air vents.
5. Air outlets to the front footwells.
6. Air outlets to the rear footwells.
7. Temperature sensor.
8. Sunshine / rain sensor.

Recommendations for ventilation and air conditioning

- i** In order for these systems to be fully effective, follow the operation and maintenance guidelines below:
- ☞ To obtain an even air distribution, take care not to obstruct the exterior air intake grilles located at the base of the windscreen, the nozzles, the vents and the air outlets, as well as the air extractor located in the boot.
 - ☞ Do not cover the sunshine sensor, located on the dashboard; this is used for regulation of the air conditioning system.
 - ☞ Operate the air conditioning system for at least 5 to 10 minutes, once or twice a month to keep it in perfect working order.
 - ☞ Ensure that the passenger compartment filter is in good condition and have the filter elements replaced regularly.
- We recommend the use of a combined passenger compartment filter. Thanks to its special active additive, it contributes to the purification of the air breathed by the occupants and the cleanliness of the passenger compartment (reduction of allergic symptoms, bad odours and greasy deposits).
- ☞ To ensure correct operation of the air conditioning system, you are also advised to have it checked regularly as recommended in the warranty and maintenance record.
 - ☞ If the system does not produce cold air, switch it off and contact a PEUGEOT dealer or a qualified workshop.

When towing the maximum load on a steep gradient in high temperatures, switching off the air conditioning increases the available engine power and so improves the towing ability.

- ☘** If after an extended stop in sunshine, the interior temperature is very high, first ventilate the passenger compartment for a few moments.
- Put the air flow control at a setting high enough to quickly change the air in the passenger compartment.
- The air conditioning system does not contain chlorine and does not present any danger to the ozone layer.

- i** The condensation created by the air conditioning results in a discharge of water under the vehicle which is perfectly normal.

Manual heating / air conditioning

The system operates with the engine running.



1. Temperature setting



☞ Turn the temperature control dial to the right to raise the temperature, and to the left to lower it.

2. Air flow setting



☞ Turn the dial to the right to increase and to the left to reduce the air flow.

i To avoid misting and deterioration of the air quality in the passenger compartment, ensure that an adequate air flow is maintained.

3. Air distribution setting



☞ Place the dial in the desired position, to direct air towards:



the centre and side vents,



the centre, side and footwell vents,



the footwells,



the windscreen, side windows and footwells,



the windscreen and side windows.

The air distribution can be modulated by placing the dial in intermediate positions.

4. Exterior air intake / Recirculation of interior air



☞ Press button **4** to select the air entry mode.

This function allows the passenger compartment to be isolated from exterior odours and smoke.

When the warning lamp in button **4** is off, the intake of exterior air is active.

When the warning lamp in button **4** is on, the intake of exterior air is deactivated, and you are in air recirculation.

Do not drive for long with interior air recirculation, except in truly exceptional atmospheric conditions.

5. Air conditioning On / Off

The air conditioning is designed to operate effectively in all seasons, with the windows closed. It enables you to:

- lower the temperature, in summer,
- increase the effectiveness of the demisting in winter, above 3 °C.

Switching on



☞ Press button **5**, the lamp in the button comes on.

Switching off

☞ Press button **5** again, the lamp in the button goes off.

Switching off may affect comfort levels (humidity, condensation).

i If your vehicle is not fitted with air conditioning, the button is not active.

Automatic air conditioning



1. Temperature adjustment
2. Air flow adjustment
3. Air distribution adjustment
4. Intake of exterior air / Recirculation of interior air
5. Air conditioning On / Off

Automatic operation

- ☞ Set the temperature control dial **1** to the temperature required.
- ☞ Place the air flow control dial **2** in the **"AUTO"** position.
- ☞ Place the air distribution adjustment dial **3** in the **"AUTO"** position.

The system controls the air distribution, the flow, the temperature and the air intake to ensure the level of comfort selected and adequate air circulation in the passenger compartment. No further action on your part is required.

In automatic mode:

- ☞ when the temperature is set to maximum (Rapid heating), the intake of exterior air is activated and the air conditioning stops.
- ☞ when the temperature is set to minimum (Rapid cooling), air recirculation is activated and the air conditioning operates.

i When the engine is cold, to avoid an excessive distribution of cold air, the ventilation will reach its optimum level gradually.
On entering the vehicle, the interior temperature may be much colder (or warmer) than the temperature setting. There is no need to change the temperature setting in order to reach the comfort required rapidly.
The automatic regulation of the air conditioning will operate to correct the temperature difference as quickly as possible.

Manual settings

It is possible to set one or more functions manually while leaving the other functions in automatic mode.

Switching to manual mode may result in discomfort (temperature, humidity, odour, condensation) and does not offer optimum comfort.

1. Temperature setting



☞ Turn the temperature control dial to the right to increase the temperature and to the left to decrease it.

2. Air flow setting



☞ Turn the dial to the right to increase the air flow or to the left to decrease it.

To avoid condensation and deterioration of the quality of the air in the passenger compartment, ensure that a sufficient flow of air is maintained.

3. Air distribution setting



☞ Place the dial in the position required to direct the air towards:



the central and side vents,



the central and side vents and the footwells,



the footwells,



the windscreen, the side windows and the footwells,



the windscreen and the side windows.

The air distribution can be adapted by placing the adjustment dial in the intermediate positions.

4. Intake of exterior air / Recirculation of interior air

This function insulates the passenger compartment from exterior odours and smoke.



Press button **4** to select the air intake mode.

When the indicator lamp on button **4** is off, the exterior air intake function is on.

When the indicator lamp on button **4** is on, the intake of exterior air is off and the system is in air recirculation mode.

i Do not drive for long periods in interior air recirculation mode, except in truly exceptional atmospheric conditions.

Personalisation of the Exterior air intake / Interior air recirculation function

This function is controlled automatically. However, you can deactivate its automatic control if you wish to change the air intake mode at any time.

Changing the status

Press the Air intake / Interior air recirculation button for at least 10 seconds. When the status changes from active to inactive, three bleeps are heard and the indicator lamp flashes three times. When the status changes from inactive to active, two bleeps are heard and the indicator lamp flashes three times.

Automatic control active

If the air distribution adjustment dial and the air flow adjustment dial are placed in the "AUTO" position, the Air intake / Interior air recirculation function is also controlled automatically.

Automatic control inactive

Even if the air distribution adjustment dial and the air flow adjustment dial are placed in the "AUTO" position, the Air intake / Interior air recirculation function is no longer controlled automatically. The settings are retained, even after switching off the ignition.

5. Air conditioning On / Off



Press button **5** to activate the air conditioning.

The indicator lamp comes on.

Personalisation of the Air Conditioning On / Off function

This function is controlled automatically. However, you can deactivate its automatic control if you wish to activate or deactivate the air conditioning at any time.

Changing the status

Press the Air Conditioning On / Off button for at least 10 seconds.

When the status changes from active to inactive, three bleeps are heard and the indicator lamp flashes three times.

When the status changes from inactive to active, two bleeps are heard and the indicator lamp flashes three times.


Automatic control active

If the air distribution adjustment dial and the air flow adjustment dial are placed in the "AUTO" position, or if the temperature control dial is set to the minimum temperature, the air conditioning system is controlled automatically.


Automatic control inactive

The air conditioning system is no longer controlled automatically.

Front Demist - Defrost

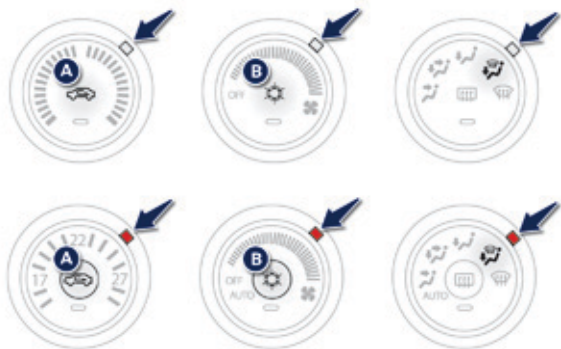

1. Press button **A**, to select "exterior air intake". The lamp in the button is off.
2. Place the air distribution dial in the "windscreen, side windows and footwells" position.
3. Select the desired level of air flow.
4. Select the desired temperature.
5. If your vehicle has air conditioning, switch it on by pressing button **B**. The lamp in this button comes on.

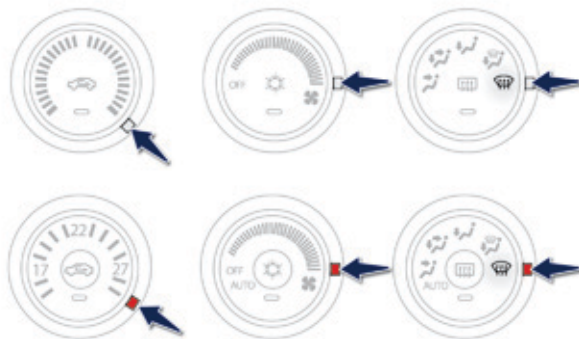

Rapid demisting

1. Place the distribution control on the "windscreen and side window" position.
2. Select maximum air flow.
3. Select maximum temperature.

Rear screen demist - defrost

The control button is located on the air conditioning system control panel.

Switching on

The rear screen demisting/defrosting can only operate when the engine is running.



- ☞ Press this button to demist/defrost the rear screen and (depending on version) the door mirrors. The indicator lamp associated with the button comes on.


Switching off

The demisting/defrosting switches off automatically to prevent an excessive consumption of current.


- ☞ It is possible to stop the demisting/defrosting operation before it is switched off automatically by pressing the button again. The indicator lamp associated with the button goes off.
- ☞ Switch off the demisting/defrosting of the rear screen and door mirrors as soon as appropriate, as lower current consumption results in reduced fuel consumption.

Front fittings

1. Sun visor.
2. Glove box.
3. Portable ashtray.
4. Cigarette lighter
12 V socket (120 W max).
5. Armrest with storage compartments.
6. Cup holder.
7. Bottle holder.

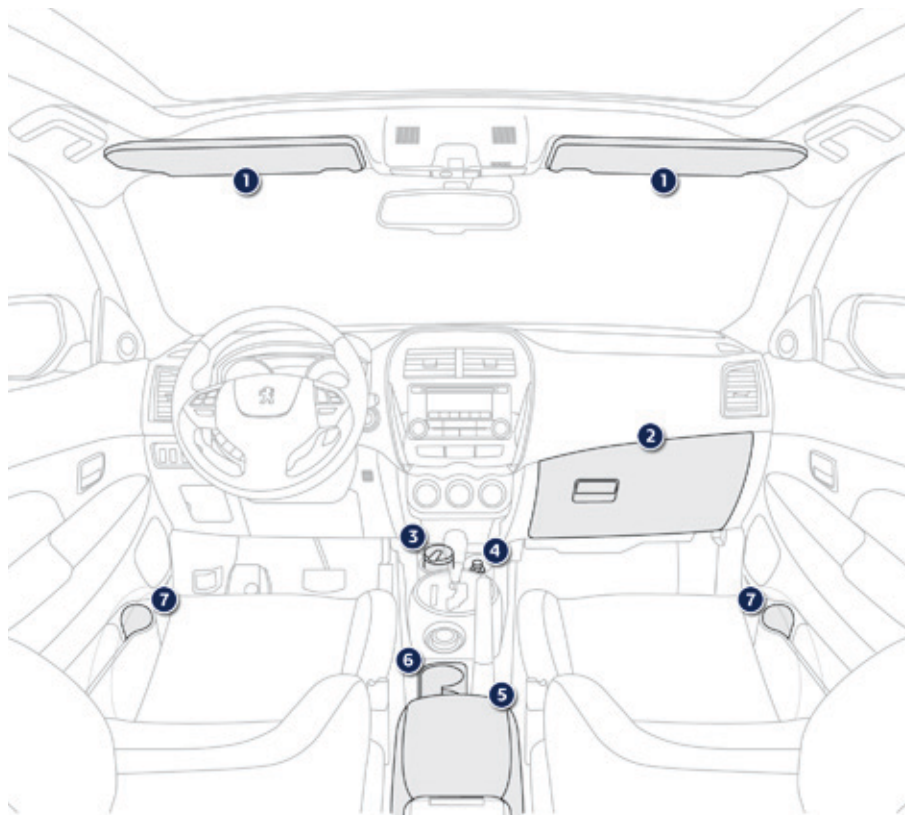

Mat

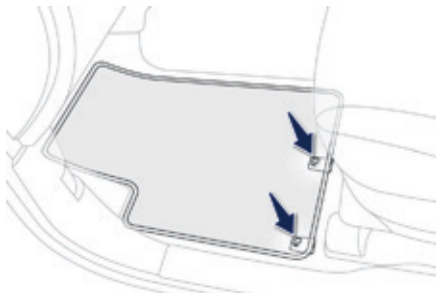


When removing the mat on the driver's side, move back the seat as far as possible and remove the fixings.

When refitting, position the mat correctly on the pins and clip the fixings. Check that the mat is secured firmly.

To prevent any risk of jamming under the pedals:

- only use mats suited to the fixings already present in the vehicle; it is imperative that these fixings are used.
- never fit one mat on top of another.


Sun visor

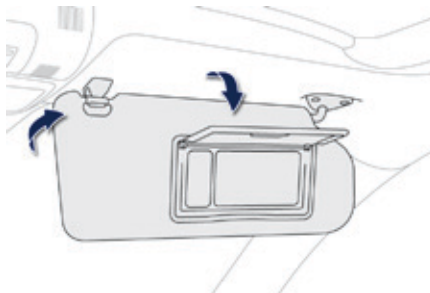

The sun visors fold forwards, and to the side when they are unhooked.

They are fitted with a courtesy mirror and a ticket holder.

Glove box

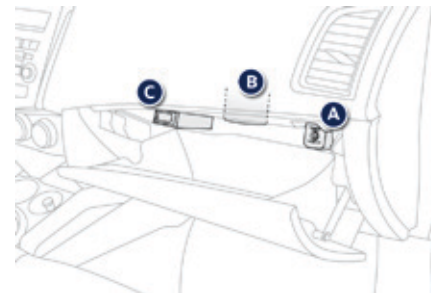

It has dedicated locations for storing a water bottle, the vehicle's handbook pack...


☞ To open the glove box, raise the handle. It is illuminated when the lid is opened.

It houses the front passenger airbag deactivation switch **A**.

If the vehicle is fitted with air conditioning, it has a ventilation nozzle **B**, distributing the same conditioned air as the vents in the passenger compartment.


If your vehicle is fitted with the "Keyless Entry and Starting" system, it contains the back-up starting unit **C**.

Portable ashtray

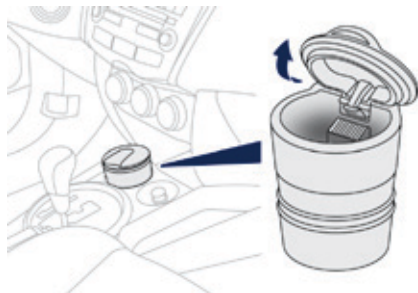

- ☞ Pull the cover to open the ashtray.
- ☞ To empty it, remove the ashtray by pulling it upwards.

Cigarette lighter / 12 V accessory socket

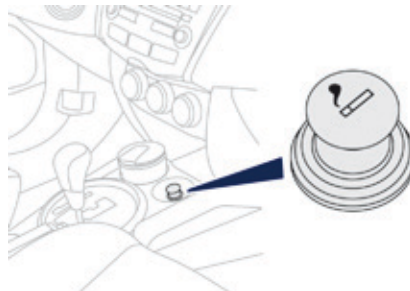


- ☞ To use the cigarette lighter, press it in and wait a few seconds until it pops out automatically.
- ☞ To connect a 12 V accessory (max power: 120 W), remove the cigarette lighter and connect a suitable adaptor.

You can use this socket to connect a telephone charger, a bottle warmer...

After use, put the cigarette lighter back into place straight away.


Front armrest

Upper storage compartment

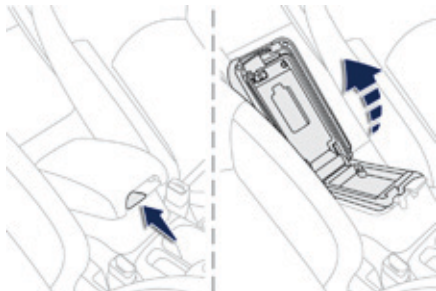


Pull the right-hand lever to open the storage compartment lid, which serves as an armrest. To close, fold down the lid until it locks.

Lower storage compartment

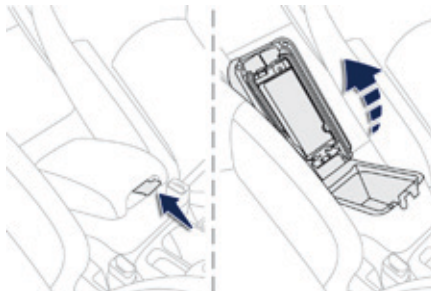

Pull the left-hand lever to open the lid. To close, fold down the lid until it locks. This storage compartment may contain up to 3 accessory sockets.


12 V socket (120 W max)

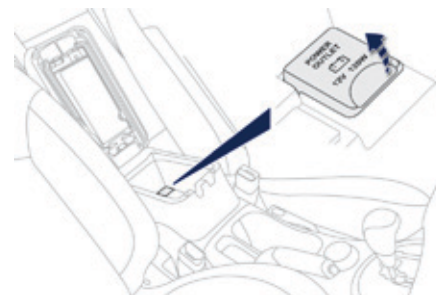

This operates when the ignition switch is in the "LOCK", "ACC" or "ON" position. Open the cover of the front armrest to gain access to the socket.

! Check that the electrical equipment operates on 12 V and that its maximum electrical power is 120 W. The prolonged use of electrical equipment without running the engine may discharge the battery.

Auxiliary sockets (RCA)

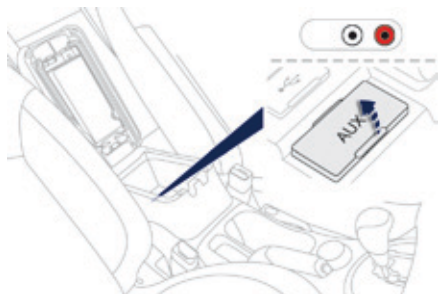


They are used to connect a portable device (MP3 player...).

Open the front armrest cover for access to the sockets.

For more information on using this equipment, see "Audio and Telematics".

USB port

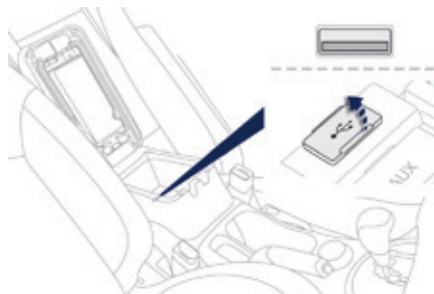

It permits the connection of a portable device, such as a digital audio player of the iPod® or USB memory stick type.

Open the front armrest cover for access to the port.

It reads certain audio file formats allowing them to be heard via the vehicle's speakers.

You can manage these files using the steering mounted controls or the audio system control panel.

i Connected to the USB port, the portable device charges automatically while in use.

For more information on the use of this equipment, see "Audio and Telematics".


Rear fittings

Grab handle



Pull the handle downwards to lower it.

Coat hook

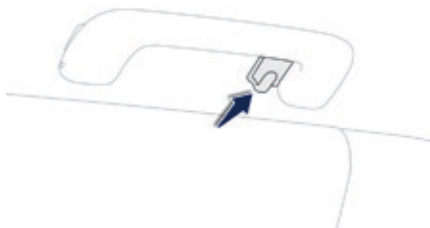

The rear left grab handle is fitted with a coat hook.


Seat pockets




3

Boot fittings

1. **Rear parcel shelf**
(see details on a following page)
2. **Stowing rings**
3. **Retaining strap**
4. **Side storage**

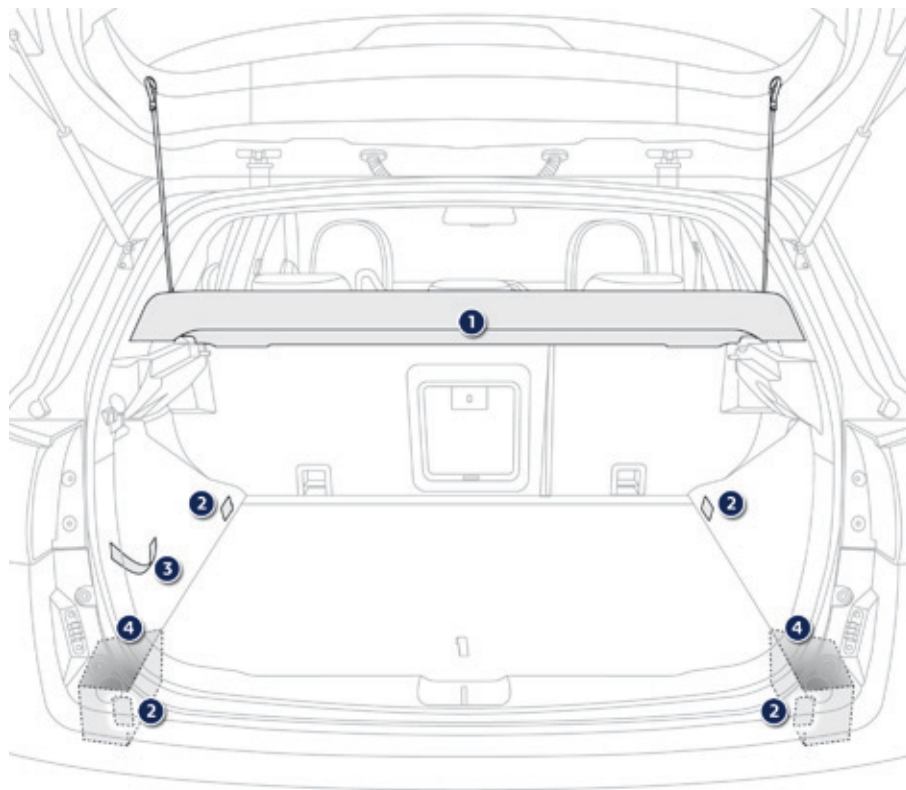

Rear parcel shelf

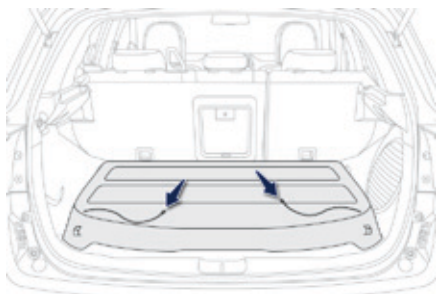


To remove the shelf:

- ☞ unhook the two cords,
- ☞ raise the shelf slightly, then remove it.

There are several options for storing the shelf:

- either upright behind the front seats,
- or flat at the base of the boot.

Stowing rings

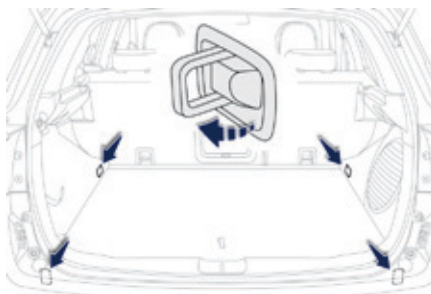


There are four stowing rings in the boot for securing luggage:

- two rings are located on the boot floor,
- two rings are located on the rear side pillars.

Starting - stopping the engine with the key

Ignition switch

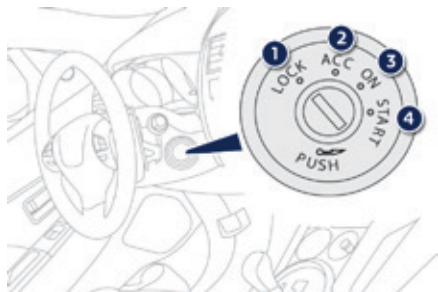

- Position 1: **LOCK**
The steering is locked.
- Position 2: **ACC**
The accessories (radio, 12 V socket...) can be used.
- Position 3: **ON**
Ignition on.
- Position 4: **START**
Starting the engine.

! If you use the accessories for a prolonged period (with the key in position **2 (ACC)**), you risk discharging the battery. Starting your vehicle will then no longer be possible. **Be aware.** See the "Automatic power cut-off to accessories" section.

Starting using the key

- ☞ Insert the key in the ignition switch.
- ☞ Turn the key to position **2 (ACC)** and unlock the steering column, by turning wheel slightly.
- ☞ Press and hold the brake pedal.
- ☞ Fully depress the clutch pedal (vehicles fitted with a manual gearbox).
- ☞ Put the gear lever into neutral (vehicles fitted with a manual gearbox), or in position **P** (vehicles fitted with a CVT gearbox).
- ☞ Operate the starter by turning the key to position **4 (START)**.
- ☞ Once the engine is running, release the key. The key returns automatically to position **3 (ON)**.

i For Diesel vehicles, when the engine is cold wait with the ignition switch in position **3 (ON)** until the preheater warning lamp goes off, before turning the key to position **4 (START)**. The warning lamp does not come on when the engine is hot.

Stopping

- ☞ Immobilise the vehicle.
- ☞ Put the gear lever into neutral (vehicles fitted with a manual gearbox), or in position **P** (vehicles fitted with a CVT gearbox).
- ☞ While pressing the key, turn it to position **1 (LOCK)**.
- ☞ Remove the key from the ignition switch.
- ☞ Lock the steering.

i Do not attach any heavy objects to the key as this could weigh down on it when in the ignition switch and cause a fault.


! Switching off the engine leads to a loss of braking assistance.

i Key in ignition

A buzzer sounds on opening the driver's door, if the key has been left in the ignition.

Starting - stopping the engine with the Keyless Entry and Starting system

Changing the mode of the vehicle

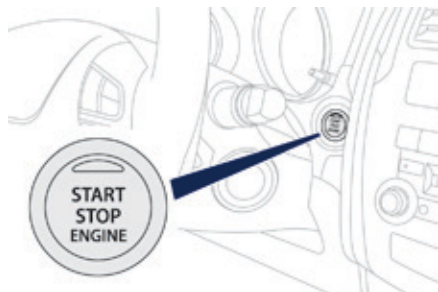

With the electronic key inside the vehicle; each press on the "START/STOP" button, **with no action on the pedals**, changes the vehicle's mode:


- ☞ First press (ACC mode), the button's warning lamp comes on in orange. The accessories (radio, 12V socket...) can be used.
- ☞ Second press (ON mode), the button's warning lamp comes on in green. Switching on the ignition.
- ☞ Third press (OFF mode), the warning lamp in the button goes off.

i If the warning lamp flashes orange, contact a PEUGEOT dealer or a qualified workshop as soon as possible.

! If you use the accessories for a prolonged period with the ignition switch in position **2 (ACC)**, you risk discharging the battery. Starting your vehicle will then no longer be possible. **Take care.** See the "Automatic power cut-off to accessories" section.

Starting using the electronic key

For vehicles fitted with a manual gearbox, put the gear lever in neutral.
For vehicles fitted with a CVT gearbox, put the gear lever in **P**.

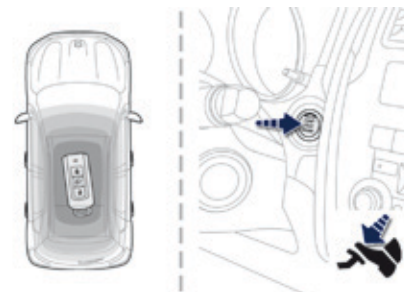

- ☞ With the electronic key inside the vehicle, depress the clutch pedal fully on vehicles with a manual gearbox or press the brake pedal on vehicles with a CVT gearbox.



- ☞ Press and release the "START/STOP" button.

Each attempt at starting takes around 15 seconds. If the engine does not start, press the **"START/STOP"** button once more to try again.

i If one of the starting conditions is not met, a reminder message appears in the instrument panel screen. In some circumstances, it is necessary to turn the steering wheel slightly while pressing the **"START/STOP"** button to assist unlocking of the steering; a message warns you when this is needed.

The presence of the electronic key in the defined zone is essential. For reasons of safety, do not leave this area when the engine is running.

!  For Diesel vehicles, when the engine is cold starting does not take place until the pre-heater warning lamp has gone off.

i The presence of the electronic key in the vehicle is essential for switching on the ignition and starting only. Once the engine has started, make sure that the electronic key remains with the vehicle until the end of the journey: otherwise you would not be able to lock the vehicle.

Switching off using the electronic key

-  Immobilise the vehicle.
-  Place the gear lever in neutral for vehicles fitted with a manual gearbox, or on **P** for vehicles fitted with a CVT gearbox.
-  With the electronic key inside the vehicle, press the **"START/STOP"** button.

The engine stops.

The steering locks when a door is opened or on locking the vehicle.

i If the vehicle is not immobilised, the engine will not stop.




This message is displayed when the driver's door is opened and the vehicle is not in "OFF" mode.

-  Press the **"START/STOP"** button again to change to "OFF" mode.

! Switching off the engine leads to a loss of braking assistance.

Back-up starting with the electronic key

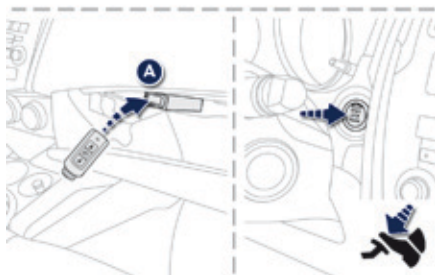

When the electronic key is in the defined zone and your vehicle does not start after pressing the "**START/STOP**" button:

- ☞ Open the glove box.
- ☞ Insert the electronic key in the location **A**.

- ☞ Press the brake pedal on vehicles fitted with a CVT gearbox or depress the clutch pedal fully on vehicles with a manual gearbox.
- ☞ Press the "**START/STOP**" button.

i Once the engine has started, you can remove the electronic key from its housing **A** and close the glove box.



The message is displayed when you open the driver's door and the electronic key has not been removed from its location **A**. Remember to take the electronic key with you when you leave the vehicle.

Emergency stop with the electronic key

In the event of an emergency only, the engine can be stopped without any conditions. To do this, press and hold the "**START/STOP**" button for about 3 seconds or make 3 successive presses on the button. The engine stops and the vehicle goes into "ACC" mode.

! During an emergency stop, the braking servo assistance and steering power assistance functions are no longer provided. Take great care.

Anti-theft protection

Electronic engine immobiliser


The keys contain an electronic chip which has a secret code. When the ignition is switched on, this code must be recognised in order for starting to be possible.

This electronic engine immobiliser locks the engine management system a few minutes after the ignition is switched off and prevents starting of the engine by anyone who does not have the key.

In the event of a malfunction, you are informed by a message in the instrument panel screen.

In this case, your vehicle does not start; contact a PEUGEOT dealer as soon as possible.

Parking brake

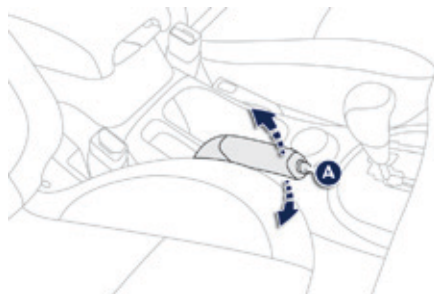

Applying

- ☞ Pull the parking brake lever fully up to immobilise your vehicle.

Releasing

- ☞ Pull the parking brake lever up gently, press the release button **A** then lower the lever fully.



When the vehicle is being driven, if the parking brake is still on or has not been fully released, a message appears in the screen.

! When parking on a slope, direct your wheels against the kerb, apply the parking brake, engage a gear or place the gear lever in position **P** for vehicles fitted with a CVT gearbox, and switch off the ignition ("OFF" mode).

5-speed manual gearbox

Engaging reverse gear



- ☞ Push the gear lever to the right then backwards.

! Only engage reverse gear when the vehicle is stationary with the engine at idle.

- i** As a safety precaution and to facilitate starting of the engine:
- always select neutral,
 - press the clutch pedal.

6-speed manual gearbox

Engaging 5th or 6th gear



- ☞ Move the lever fully to the right to engage 5th or 6th gear.

Engaging reverse gear

- ☞ Raise the ring under the knob and move the gear lever to the left then forwards.

! Only engage reverse gear when the vehicle is stationary with the engine at idle.

- i** As a safety precaution and to facilitate starting of the engine:
- always select neutral,
 - press the clutch pedal.

Gear shift indicator*

System which reduces fuel consumption by advising the driver to change gear on vehicles fitted with a manual gearbox.


Operation

The system intervenes only when driving economically.

Depending on the driving situation and your vehicle's equipment, the system may advise you to skip one or more gears. You can follow this instruction without engaging the intermediate gears.

The gear recommendations should not be considered compulsory. In fact, the configuration of the road, the amount of traffic and safety remain determining factors when choosing the best gear. Therefore, the driver remains responsible for deciding whether or not to follow the advice given by the system. This function cannot be deactivated.

A symbol appears in the instrument panel when the system suggests changing to a more suitable gear:

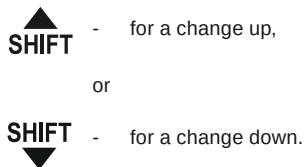

i In the case of driving which makes particular demands on the performance of the engine (firm pressure on the accelerator pedal, for example, when overtaking...), the system will not recommend a gear change. The system never suggests engaging reverse gear.



* Depending on engine.

CVT gearbox

The six-speed automatic gearbox offers a choice between the comfort of automatic regulation or the pleasure of manual gear changing.

This gearbox has two driving modes:

- an automated mode for automatic control of the gears by the gearbox and therefore without any action on the part of the driver,
- a manual mode for sequential changing of the gears by the driver using the steering mounted controls or the gear lever.

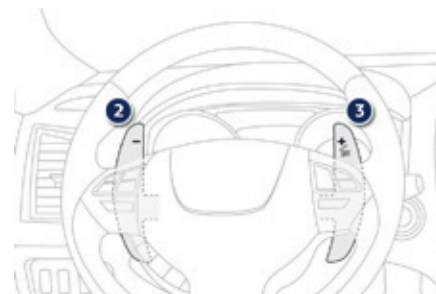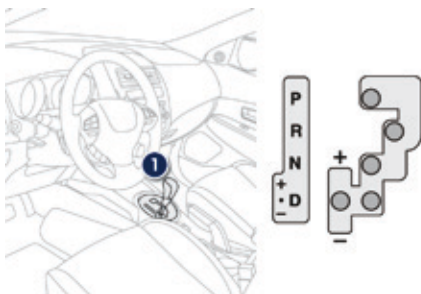

4

i The mode can be changed at any time.

It includes the following controls:

- a gear lever **1** on the centre console for selecting the driving mode, reverse gear and neutral or for changing gear in manual mode,
- a "-" steering mounted control paddle **2** for manual downward gear changes,
- a "+/OFF" steering mounted control paddle **3** for manual upward gear changes.

Gear lever positions

P: park.

Immobilisation of the vehicle, parking brake applied or not.

R: reverse gear.

With the vehicle stationary, keep your foot on the brake pedal and push the gear lever forwards.

N: neutral.

D: driving in automated mode.

Move the lever backwards to select this mode.

+/-: manual mode with sequential gear changing.

Move the lever backwards, then to the left to select this mode, then:

- push forward to change up,
- pull backward to change down.

Functions of the steering mounted control paddles


+: gear changing in manual mode.

Press behind the **"+/OFF"** steering mounted control paddle to change up.

-: gear changing in manual mode.

Press behind the **"-"** steering mounted control paddle to change down.

Moving off

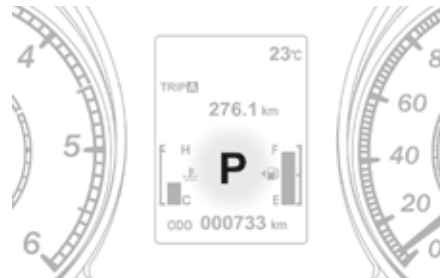

From position **P**, parking brake applied:



Press the brake pedal firmly while starting the engine.

☞ Start the engine.



Press the brake pedal firmly to release the gear lever.

☞ Select first gear (position **D** or **+/-**) or reverse (position **R**).

"D" or **"1"** or **"R"** appear in the instrument panel screen.


☞ Release the parking brake, the vehicle moves off on its own.

Stopping - Starting on a slope

It is essential to use the parking brake to hold the vehicle on a slope and not the accelerator pedal.

When starting on a slope, accelerate gradually while releasing the parking brake.

Manual mode

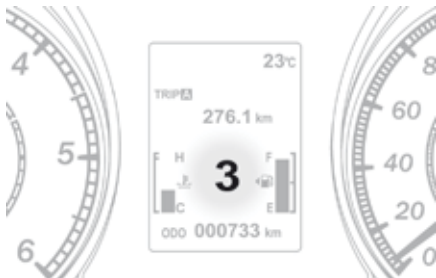

- ☞ Select position +/-.
- ☞ Use the steering mounted controls or the gear lever to change gear.

The gears engaged appear in succession in the instrument panel screen.


The gear change instructions are only carried out if the engine speed permits it.

You can change gear without taking your foot off the accelerator pedal.

When decelerating, the gearbox changes down automatically.

With the vehicle stationary, first gear is engaged.

Automated mode

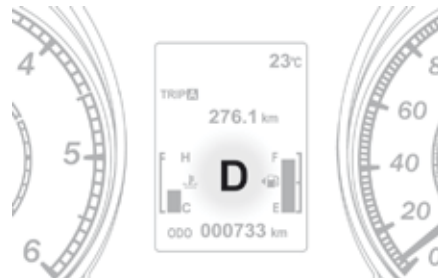

- ☞ Select position D.

"D" appears in the instrument panel screen.

The gearbox operates in auto-active mode, without any action on the part of the driver. It continuously selects the gear most suited to the conditions of:

- driving style,
- road characteristics,
- vehicle load.

To optimise driving comfort and obtain the most suitable gear, avoid sharp variations in the pressure on the accelerator pedal.

i For the best acceleration, when overtaking another vehicle, for example, press firmly on the accelerator going beyond the point of resistance.

Stopping the vehicle

Manual gear changing

In the automated mode, you can take over control temporarily at any time using the steering mounted controls.

The use of these controls permits manual selection of the gears in situations which require a faster change down than that offered in automated mode (arrival at a roundabout, exit from a car park with a steep gradient, overtaking...).

The gearbox engages the gear requested if the engine speed permits it. The gear engaged appears.

To return to the automated mode, do one of the following:

- press the back of the **"+/OFF"** steering mounted control **3** for approximately 2 seconds,
- move the gear lever quickly towards position **+/-** and then return it to position **D**,
- stop the vehicle.

Before switching off the engine, you must place the gear lever in position **P**.

You must apply the parking brake to immobilise the vehicle.

Operating fault



With the ignition on, if the message **"Slow down"** or **"Service required"** appears in the instrument panel screen, this indicates a gearbox malfunction.


When a message is displayed, carry out the following operations:

- slow down and stop your vehicle in a safe place,
- place the lever in position **P** and let the engine run,
- open the bonnet to allow the engine to cool.

If the message disappears for a long period, you can set off again.

If the message remains displayed or appears frequently, contact a PEUGEOT dealer or a qualified workshop without delay.

Emergency release

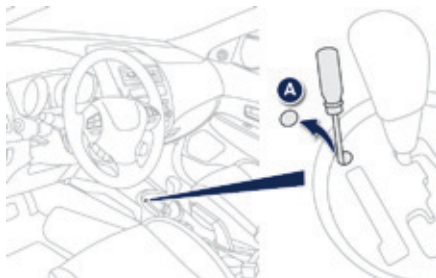

If the battery is discharged or if the gear lever locking mechanism is damaged, it is possible for the gear lever to be locked in position **P**, even when you press the brake pedal firmly.

! You must contact a PEUGEOT dealer or a qualified workshop to have the system checked.

However, if you have to move the vehicle, release the gear lever using the following procedure:

- ☞ Apply the parking brake.
- ☞ Switch off the engine if necessary.
- ☞ Remove the cap **A**, using a flat screwdriver covered with a cloth.
- ☞ Press the brake pedal firmly.
- ☞ Put the ignition switch into position ACC (ACC mode, if you vehicle has the Keyless Entry and Starting system).
- ☞ Insert the screwdriver into the aperture.
- ☞ While pushing the screwdriver downwards, move the gear lever to position **N**.

Hill start assist

System which keeps your vehicle immobilised temporarily (approximately 2 seconds) when starting on a gradient, the time it takes to move your foot from the brake pedal to the accelerator pedal.

This function is only active when:


- the vehicle is completely stationary, with your foot on the brake pedal,
- when certain conditions of gradient are met,
- with the driver's door closed.

The hill start assist function cannot be deactivated.

! When the engine is not running, including periods on standby with the Stop & Start (AS&G) system, the function is not operative.

! Do not leave the vehicle while it is being held in the hill start assist phase. If you need to leave the vehicle while the engine is running, apply the parking brake.

Operation

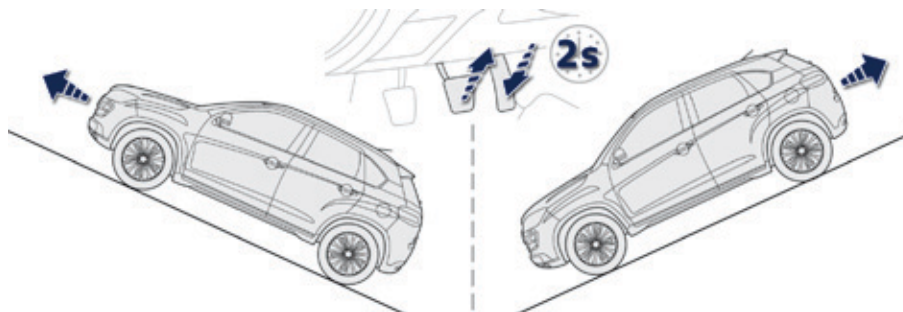

On an ascending slope, with the vehicle stationary, the vehicle is held for a brief moment when you release the brake pedal:

- if you are in first gear or neutral with a manual gearbox,
- if you are in position **D** with the CVT gearbox.

On a descending slope, with the vehicle stationary and reverse gear engaged, the vehicle is held for a brief moment when you release the brake pedal.

Operating fault



SERVICE REQUIRED

**ASC SYSTEM
SERVICE REQUIRED**

If a fault occurs with the system, this warning lamp comes on, accompanied by a message in the instrument panel screen. Contact a PEUGEOT dealer or a qualified workshop to have the system checked.

Stop & Start (Auto Stop & Go) function

The Stop & Start (Auto Stop & Go) function puts the engine temporarily into standby during stops in the traffic (red lights, traffic jams, or other...).

The engine restarts automatically as soon as you want to move off. The restart takes place instantly, quickly and silently.

Perfect for urban use, the Stop & Start (Auto Stop & Go) function reduces fuel consumption and exhaust emissions as well as the noise level when stationary.

Operation

Going into engine STOP mode

AS&G The "AS&G" warning lamp comes on in the instrument panel or the instrument panel screen and the engine goes into standby after a few seconds:

- **with a manual gearbox**, with the vehicle stationary and your foot on the brake, when you put the gear lever into neutral and release the clutch pedal.

i If you move the gear lever, the "AS&G" warning lamp flashes, accompanied by an audible signal. The alert stops as soon as the gear lever is returned to the neutral position.

! When the engine is stopped automatically, the operation of certain vehicle systems, such as for example, braking, power steering... are modified. **Take care.**

! Never refuel with the engine in STOP mode; you must switch off the ignition with the key or the START/STOP button.

Special cases: STOP mode not available

STOP mode is not invoked when:

- the driver's seat belt is not fastened,
- the driver's door is open,
- the bonnet is open,
- the minimum time period of 30 seconds since starting the engine has not elapsed,
- the vehicle has not exceeded 3 mph (5 km/h) since the last engine start,
- the vehicle has restarted less than 10 seconds ago,
- the engine is needed to maintain a comfortable temperature in the passenger compartment,
- demisting is active,
- some special conditions (battery charge, engine temperature, braking assistance, ambient temperature...) where the engine is needed to assure control of a system,

AS&G - the "AS&G" warning lamp is flashing in the instrument panel.

This operation is perfectly normal.

Going into engine START mode

AS&G The "AS&G" warning lamp goes off and the engine starts automatically:

- **with a manual gearbox**, when you **fully** depress the clutch pedal.

i If the bonnet is opened while the engine is in standby, the "AS&G" warning lamp flashes, accompanied by an audible signal. The engine will not restart automatically.
To restart the engine with the bonnet open, use the ignition key or press the START/STOP button, while pressing fully on the brake and clutch pedals.

Special cases: START invoked automatically


For safety reasons or to ensure smooth operation, START mode is invoked automatically when:

- the speed of the vehicle exceeds 2 mph (3 km/h),
- you open the driver's door,
- you unfasten the driver's seatbelt,
- some special conditions (battery charge, engine temperature, braking assistance, ambient temperature...) where the engine is needed to assure control of a system.

AS&G In this case the "AS&G" warning lamp flashes for few seconds, then goes off.

This operation is perfectly normal.

Deactivation

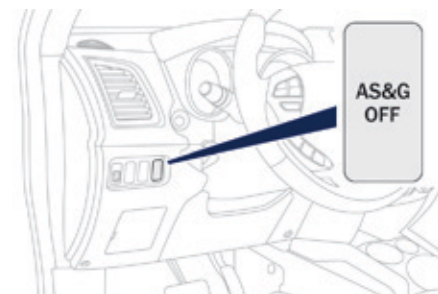

At any time, press the "AS&G OFF" switch to deactivate the system.

AS&G OFF This is confirmed by the "AS&G OFF" warning lamp coming on in the instrument panel or instrument panel screen.

i If the system has been deactivated in STOP mode, the engine will not start.

Reactivation

Press the **"AS&G OFF"** switch again.

The system is active again; this is confirmed by the **"AS&G OFF"** warning lamp going off in the instrument panel or instrument panel screen.

- i** The system is reactivated automatically at every new start using the key or the START/STOP button.

Operating fault



In the event of a malfunction with the system, the **"AS&G OFF"** warning lamp flashes in the instrument panel or instrument panel screen, and the system no longer operates. have it checked by a PEUGEOT dealer or a qualified workshop.

In the event of a fault in STOP mode, the vehicle may stall. The following warning lamps come on in the instrument panel or instrument panel screen:



It is then necessary to switch off the ignition, then restart the engine using the key or the START/STOP button.

Maintenance

- !** This system requires a specific battery with a special specification and technology (reference numbers available from a PEUGEOT dealer or a qualified workshop).

Fitting a battery not listed by PEUGEOT introduces the risk of malfunction of the system.

- !** The "Auto Stop & Go" system makes use of advanced technology. All work on this type of battery must be done only by a PEUGEOT dealer or a qualified workshop.

Under-inflation detection

System which continuously and automatically checks the pressures of the four tyres after switching on the ignition.

A pressure sensor is located in the valve of each tyre (except the spare wheel).

The system triggers an alert if a drop in pressure is detected in one or more tyres, compared to the reference pressure registered in the system. This reference pressure must be reinitialised every time the tyre pressures are adjusted or a wheel changed.

The system operates on condition that sensor identifiers have first been memorised in the system by a PEUGEOT dealer or a qualified workshop.

You can memorise two sets of tyres (for example: wheels with "standard" tyres and wheels with "winter" tyres).

 The tyre under-inflation detection system is an aid to driving which does not replace the need for vigilance on the part of the driver.

 This system does not avoid the need to check the tyre pressures regularly (including the spare wheel) and before a long journey.
Driving with under-inflated tyres adversely affects road holding, extends braking distances and causes premature tyre wear, particularly under arduous conditions (vehicle loaded, high speed, long journey).

 The tyre pressures for your vehicle can be found on the tyre pressure label (see the "Identification markings" section).
The tyre pressures must be checked when the tyres cold (vehicle stopped for 1 hour or after driving for less than 6 miles (10 km) at moderate speed). Otherwise, add 0.3 bar to the values indicated on the label.



Driving with under-inflated tyres increases fuel consumption.

Under-inflation alert



The alert is given by the fixed illumination of this warning lamp and the display of a message.

- ☞ Reduce speed, avoid sudden steering movements or harsh brake applications.
- ☞ Stop as soon as it is safe to do so.

! The loss of pressure detected does not always lead to visible deformation of the tyre. Do not rely on just a visual check.

- ☞ If you have a compressor (the one in the temporary puncture repair kit for example), check the four tyre pressures when cold. If it is not possible to check the tyre pressures at the time, drive carefully at reduced speed.
- or
- ☞ In the event of a puncture, use the temporary puncture repair kit or the spare wheel (according to equipment).


i The alert is maintained until the reference pressure is reinitialised after the inflation, repair or replacement of the tyres concerned. In the event of the repair or replacement of tyres, the sensor identifiers must be registered in the system by a PEUGEOT dealer or a qualified workshop.
The spare wheel does not have a sensor, so there is no need to reinitialise the the system for running with the spare wheel fitted.

Reinitialising the reference pressure

- !** Before reinitialising the system, ensure that the pressures in the four tyres are suitable for the conditions of use of the vehicle and as specified on the tyre pressure label.
The under-inflation detection system cannot warn of an incorrect pressure at the time of reinitialisation.

The system must be reinitialised after any adjustment of tyre pressures and after changing one or more wheels.

The reinitialisation instruction is entered in the screen menu, with the ignition on and the vehicle stationary.

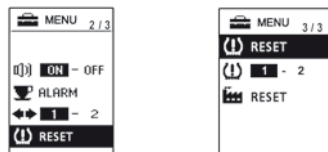

- ☞ Press repeatedly on the **INFO** button to select **"REINITIALISE"** (located in menu 2/3 or 3/3 depending on the instrument panel).
- ☞ Press and hold the **INFO** button for at least 3 seconds to reinitialise the under-inflation detection system.

Reinitialisation of the system is confirmed by the flashing of the warning lamp in the instrument panel.

Operating fault



The flashing and then fixed illumination of the under-inflation warning lamp accompanied by the display of a message indicates a fault with the system.

In this case, monitoring of the tyre pressures is not assured.

This alert is also displayed if:

- one or more wheels is not fitted with a sensor (spare wheel in use),
- a wireless device operating on the same frequency is close to the vehicle,
- there are accumulations of snow or ice in the wings or wheels,
- the state of charge of the tyre pressure monitoring system battery is too low,
- the wheel sensor identifiers have not been memorised in the system by a PEUGEOT dealer or a qualified workshop.

i Go to a PEUGEOT dealer or a qualified workshop to have the system checked or, following the repair of a puncture, to have the original wheel, equipped with a sensor, refitted.

! The under-inflation alert is only reliable if the system has been reinitialised with the four tyre pressures correctly adjusted.

! Any tyre repair or replacement on a wheel fitted with this system must be carried out by a PEUGEOT dealer or a qualified workshop. If you fit the second set of tyres memorised in the system, a fault will be signalled until the second set is selected in the configuration menu.

Managing sets of tyres

If you have had a second set of tyres registered by a PEUGEOT dealer or a qualified workshop, every time you change the set of tyres (fitting a set of winter tyres, for example), you must select the set you have just fitted in the configuration menu.

i After fitting the new set of tyres, you should check and adjust the tyre pressures to the values specified on the tyre pressure label (see the "Identification markings" section).

Selection of the other set of tyres is done via the menu screen, with the ignition on and the vehicle stationary.

- ☞ Press repeatedly on the **INFO** button to select the menu for managing sets of tyres (**located in menu 3/3**).




- ☞ Press and hold the **INFO** button for **at least 3 seconds** to change successively from set of tyres **1** to set of tyres **2** or the other way round.

i The system automatically reinitialises the reference pressure based on the pressure in the new set (the under-inflation detection warning lamp flashes during the operation).

Four wheel drive system

System which permits the selection of a transmission mode in relation to the driving conditions.

Three transmission modes are available and can be selected manually by the driver in accordance with his requirements.

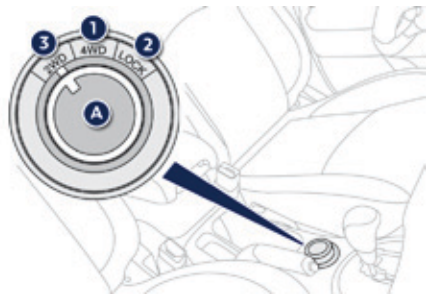

You can change transmission mode when stationary or while driving. The transmission mode can be selected by turning the control A.

Selecting the transmission mode

4WD AUTO (position 1)

The vehicle operates with four wheel drive and provides optimum traction for all levels of grip. This is the vehicle's normal and regular operating mode, the distribution of the torque between the front and rear axles is controlled automatically.

The distribution favours the front wheels, the transfer of torque to the rear wheels is managed electronically by the control unit in relation to the level of grip, so providing optimum road holding.

4WD LOCK (position 2)

The vehicle operates with four wheel drive in this mode also.

It is recommended when grip is particularly poor or difficult (sand, mud, slopes, ...).

2WD (position 3)

The vehicle operates with front two wheel drive. This is suitable for use on a tarmac roads or where the driver considers that there is no risk of loss of grip (dry road).



The selection of this mode is recommended when the level of grip permits.

Display in the instrument panel



2WD




4WD AUTO



4WD LOCK

The transmission mode is displayed in the form of an intermittent display in the instrument panel screen when the transmission mode is selected.

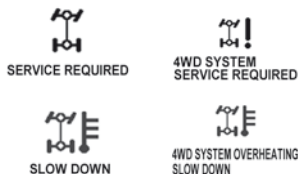

Operating faults

If the selected transmission mode display flashes, the vehicle switches automatically to front "2WD" transmission mode.

It is then no longer possible to select the transmission mode using the control **A**.

If the message "SLOW DOWN" is displayed on the instrument panel, let the transmission cool down then wait for the display to clear before setting off again.

If "4WD" and "LOCK" are displayed alternately and if "SERVICE REQUIRED" is displayed in the instrument panel, the system has failed and the safety system has been activated.

Contact a PEUGEOT dealer or a qualified workshop without delay.

i As the engine torque is applied to all four wheels, the condition of the tyres has a considerable impact on the performance of the vehicle. Ensure that all four tyres are in good condition.

Avoid driving the vehicle in sandy or muddy areas or in other areas in which the wheels could spin.

Spinning the wheels places the transmission components under pressure and could cause a serious malfunction.

Do not drive the vehicle through deep water.

Avoid driving over excessively uneven terrain (risk of scraping under the body or of grounding on crossing a bridge).

! **Have your vehicle towed on a flatbed.**

The vehicle must not be towed with the front or rear wheels on the ground even if it is in front "2WD" (2 wheel drive) mode.

! If the replacement of a tyre is necessary on 4-wheel drive versions, it is recommended that all four tyres be replaced at the same time, ensuring that the same make, model and size is used on all wheels.

This is because using tyres of different sizes, structure or rate of wear could damage transmission components.

Cruise control

System which automatically maintains the vehicle speed at the value programmed by the driver, without any action on the accelerator pedal.

The cruise control is **switched on** manually: the vehicle speed must be at least 25 mph (40 km/h) and second gear or higher must be engaged in the case of a manual gearbox.


The cruise control is **switched off** manually, by an action on the brake or clutch pedal or if the ASC system is triggered.

The programmed speed can be exceeded temporarily by pressing the accelerator pedal.

To return to the programmed speed, simply release the accelerator pedal.
Switching off the ignition cancels any programmed speed value.

i The cruise control cannot, in any circumstances, take the place of the need to comply with speed limits or of the vigilance and responsibility of the driver.


Steering mounted controls

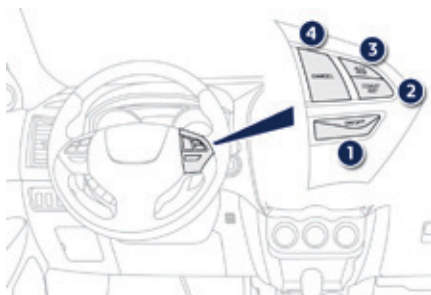

The controls of this system are grouped together on the steering wheel.

1. **"ON/OFF"** button: activation / deactivation of the cruise control mode.
2. **"COAST SET"** button: store a driving speed and decrease the cruising speed.
3. **"ACC RES"** button: increase the cruising speed and recall the stored speed.
4. **"CANCEL"** button: stop control of the vehicle's speed.

Display in the instrument panel

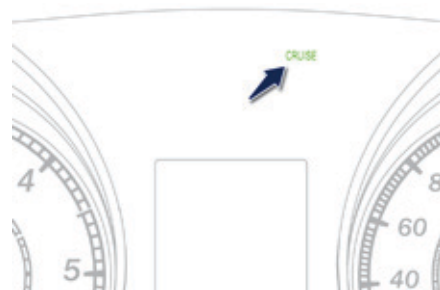

When you press button 1, the **"CRUISE"** indicator comes on in the instrument panel.

Programming

- ☞ Press button 1.
- ☞ Set the programmed speed by accelerating to the required speed, then press button 2 **"COAST SET"**.

Increasing the programmed speed

☞ Using button 3 **"ACC RES"**:

- successive presses increase the speed in steps of approximately 1 mph (1.6 km/h).
- a maintained press of this button increases the programmed speed progressively.

Once the speed required has been reached, release the button, the new speed is stored.

☞ Using the accelerator pedal:

- accelerate to reach the speed required, then press button 2 **"COAST SET"**. Release the button to store the new speed.

Decreasing the programmed speed

☞ Using button 2 **"COAST SET"**:

- successive presses decrease the speed in steps of approximately 1 mph (1.6 km/h).
- a maintained press of this button decreases the speed progressively.

Once the speed required has been reached, release the button, the new speed is stored.

☞ Using the brake pedal:

- brake to deactivate the cruise control, then press button 2 **"COAST SET"**. Release to store the new speed.

Temporary acceleration/ deceleration

Temporary acceleration

Press the accelerator pedal as normal. When the pedal is released, you return to the stored speed.

Temporary deceleration

Press the brake pedal to reduce the speed. To return to the stored speed, press button 3 **"ACC RES"**.

Deactivating the function

To deactivate the cruise control:

- ☞ press the **brake** or **clutch** pedal, or
- ☞ press button **1 "ON OFF"**, or
- ☞ press button **4 "CANCEL"**.

The cruise control may be deactivated automatically:

- ☞ when the vehicle reaches a speed below 20 mph (35 km/h),
- ☞ when the active stability control system (ASC) comes into operation.

Reactivating the function


When the cruise control has been deactivated using the button **4 "CANCEL"**, you can return to the stored speed by pressing button **3 "ACC RES"** when you reach a minimum speed of 25 mph (40 km/h).



When the cruise control is in operation, pay attention if you press and hold one of the programmed speed adjustment buttons: this can result in a very rapid change in the speed of your vehicle. Do not use the cruise control on slippery roads or in heavy traffic. On a steep descent, the cruise control will not be able to prevent the vehicle from exceeding the programmed speed. To prevent the mat from becoming caught under the pedals:

- ensure that the mat is positioned correctly,
- never fit one mat on top of another.

Parking sensors

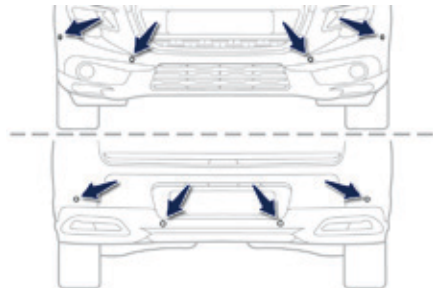

This system indicates the proximity of an obstacle (person, vehicle, tree, gate, etc.) which comes within the field of detection of sensors located in the bumper. Certain types of obstacle (stake, roadworks cone, etc.) detected initially will no longer be detected at the end of the manoeuvre due to the presence of blind spots.

! This function cannot, in any circumstances, take the place of the vigilance and responsibility of the driver.

Rear parking sensors



The system is switched on by engaging reverse gear. This is accompanied by an audible signal. The indicator lamp in the button comes on to confirm that the system is active. The system is deactivated when you come out of reverse gear.

Audible assistance


The proximity information is given by an intermittent audible signal, the frequency of which increases as the vehicle approaches the obstacle.

When the distance between the vehicle and the obstacle becomes less than approximately thirty centimetres, the audible signal becomes continuous.


4

Detection zones


The detection zones differ depending on whether the vehicle is fitted with a towbar. If you select towbar mode, the towbar zone **A** is excluded from the detection zones.

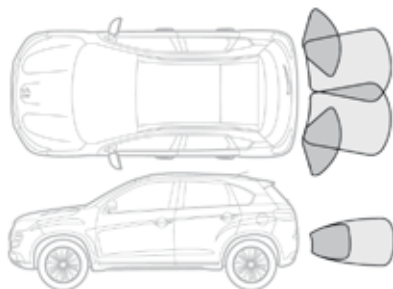

Vehicle only

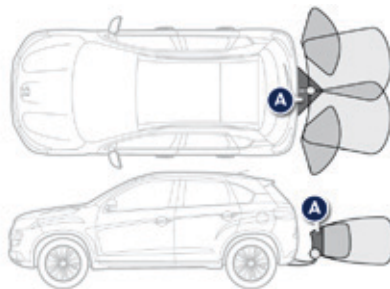

Vehicle fitted with a towbar

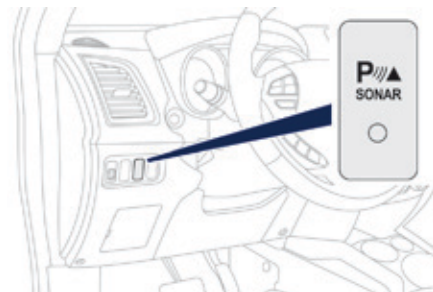

Modification of the detection zones

- ☞ Press this button to deactivate the system.
- ☞ Press this button again for a few seconds and release it.

The detection zone modification information is indicated by an audible signal:

- **double** signal on vehicles fitted with a towbar,
- **single** signal on vehicles which are not fitted with a towbar.

Visual assistance



This supplements the audible signal by displaying bars in the screen, in front of or behind the vehicle.

These bars flash at the start of the manoeuvre then become fixed from a certain distance between the vehicle and the obstacle.

Front parking sensors

The front parking sensors are triggered when an obstacle is detected in front, a gear is engaged (position **D** for vehicles with a CVT gearbox) and the speed of the vehicle remains below 6 mph (10 km/h).

The front parking sensors are interrupted if the vehicle stops for more than five seconds in forward gear, if no further obstacles are detected or when the speed of the vehicle exceeds 6 mph (10 km/h).



Deactivation / Activation of the front and rear parking sensors

The function is deactivated by pressing this button. The indicator lamp in the button goes off. Pressing this button again reactivates the function. The indicator lamp in the button comes on.

i Remember to deactivate the system if towing a trailer or caravan.

Operating fault

In the event of an problem, when reverse gear is engaged this lamp in the button flashes, accompanied by an audible signal.




If one of the sensors is faulty, it flashes in the instrument panel screen.


Contact a PEUGEOT dealer or a qualified workshop.

i In bad weather or in winter, ensure that the sensors are not covered with mud, ice or snow.
When the vehicle is moving at a speed below 6 mph (10 km/h), certain sound sources (motorcycle, lorry, pneumatic drill, etc.) may trigger the audible signals of the parking sensor system.

Reversing camera

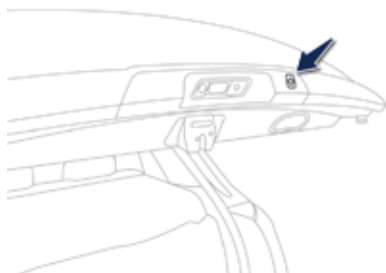

Linked with the navigation option, the reversing camera complements the parking sensor system and is activated automatically when reverse gear is engaged.

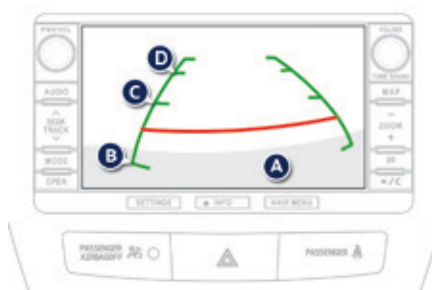

The image from the camera is displayed in the navigation screen.

The zone (A) represents the upper part of the rear bumper.

The red line represents the distance of 50 cm from the edge of the rear bumper.

The green lines represent the width of the vehicle increased by 20 cm on each side.

The marks on the green lines correspond to the edges of the rear bumper (B), then the distance of 1 metre from the edge of the rear bumper (C) and 2 metres (D).

! In no circumstances can the reversing camera replace the need for vigilance on the part of the driver.

i Clean the reversing camera from time to time using a soft dry cloth.

i **High pressure jet wash**
When washing your vehicle, do not direct the lance to within 30 cm of the camera lens.

Lighting controls

Stalk for selecting and switching the vehicle's front and rear exterior lamps.

Main lighting

The various front and rear lamps of the vehicle are designed to adapt the lighting progressively in relation to the climatic conditions and so ensure the best visibility for the driver:

- sidelamps, to be seen,
- dipped beam headlamps to see without dazzling other drivers,
- main beam headlamps to see clearly when the road is clear.

Additional lighting

Other lamps are provided to fulfil the requirements of particular driving conditions:

- a rear foglamp to be seen from a distance,
- front foglamps for even better visibility,
- daytime running lamps to be seen during the day.

5


i In some weather conditions (e.g. low temperature or humidity), the presence of misting on the internal surface of the glass of the headlamps and rear lamps is normal; it disappears after the lamps have been on for a few minutes.

i Other lighting functions are also available:


- automatic illumination of headlamps,
- guide-me-home lighting,
- welcome lighting.

i Travelling abroad

If using your vehicle in a country that drives on the other side of the road, the headlamps must be adjusted to avoid dazzling on-coming drivers. Contact a PEUGEOT dealer or a qualified workshop.

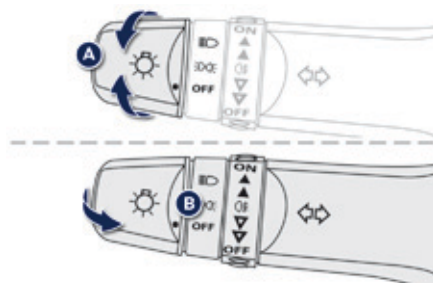

Model without AUTO lighting

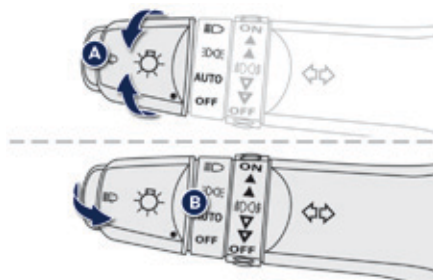

Model with AUTO lighting

Manual controls

The lighting is controlled directly by the driver by means of the ring **A** and the stalk **B**.

- A.** Main lighting mode selection ring: turn it to position the symbol required facing the mark.

	Dipped headlamps or main beam headlamps.
	Sidelamps.
AUTO	Automatic illumination of headlamps.
OFF	Lighting off / daytime running lamps.

- B.** Stalk for switching headlamps: pull the stalk towards you to switch the lighting between dipped and main beam headlamps.


In the lamps off and sidelamps modes, the driver can switch on the main beam headlamps temporarily ("headlamp flash") by maintaining a pull on the stalk.

Displays

Illumination of the corresponding indicator lamp in the instrument panel confirms that the lighting selected is on.



Model with a rear foglamp only

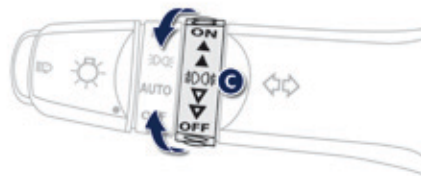

Model with front foglamps and a rear foglamp

Foglamp selection ring.

They operate if at least the sidelamps are on.



rear foglamp

- ☞ To switch on the rear foglamp, turn the ring **C** forwards.
- ☞ To switch off the rear foglamp, turn the ring **C** rearwards.



front and rear foglamps

Rotate and release the ring **C**:

- ☞ forwards a first time to switch on the front foglamps,
- ☞ forwards a second time to switch on the rear foglamp,
- ☞ rearwards a first time to switch off the rear foglamp,
- ☞ rearwards a second time to switch of the front foglamps.



In good or rainy weather, both day and night, the front foglamps and the rear foglamps are prohibited. In these situations, the power of their beams may dazzle other drivers.

Do not forget to switch off the front foglamps and the rear foglamps when they are no longer necessary.

5



Lighting on reminder

An audible signal when the driver's door is opened warns the driver if the vehicle lighting is on, with the ignition off. Switching off the lighting stops the audible signal.

Daytime running lamps

Daytime lighting which comes on automatically when the engine is started making the vehicle more visible to other users.

This function is assured by special lamps. The lighting control stalk must be placed in position "0" or "AUTO" (day mode).

Automatic illumination of headlamps

The sidelamps and the dipped beam headlamps come on automatically, without any action on the part of the driver, if a low level of exterior light is detected or if the wipers are switched on.

When the light returns to a sufficient level or the wipers are switched off, the lighting is switched off automatically.

The sensor is located at the base of the windscreen. Contact a PEUGEOT dealer or a qualified workshop to adjust the sensitivity of the sensor.



In foggy weather or in snow, the sunshine sensor may detect sufficient light. The lighting will not come on automatically.


Do not cover the sunshine sensor, the associated functions will no longer be controlled.

Automatic switching off

When the lighting control stalk is at "dipped or main beam headlamps", if the ignition switch is at "LOCK" or "ACC" or if the key has been removed from the ignition switch, the lamps switch off automatically **when the driver's door is opened**.

Manual guide-me-home lighting

Temporarily keeping the dipped beam headlamps on after the vehicle's ignition has been switched off makes the exit of the vehicle's occupants easier when the light is poor.

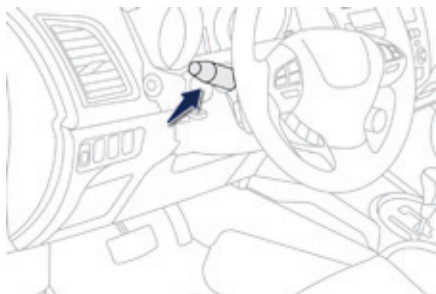

Switching on

- ☞ Place the lighting control stalk in the "OFF" position, or "AUTO" for vehicles that have it.
- ☞ Place the ignition switch on "LOCK" and remove the key (or select "OFF" mode for vehicles that have the "Keyless Entry and Starting" system).
- ☞ Within one minute after switching off the ignition, "flash" the headlamps using the lighting control stalk.
The headlamps come on for around 30 seconds.
- ☞ A further "headlamp flash" within 60 seconds of switching the ignition to OFF (or selection of "OFF" mode for vehicles with the "Keyless Entry and Starting" system) reactivates the function for a further 30 seconds.

Switching off

The manual guide-me-home lighting switches off immediately if you.

- flash the headlamps again,
- place the lighting control stalk in another position,
- switch the ignition on (or select "ON" mode for vehicle with the "Keyless Entry and Starting" system).

Exterior welcome lighting

Remote switching on of the lighting makes your approach to the vehicle easier in poor light. It comes on when the vehicle is unlocked remotely.

Switching on



- ☞ Place the lighting control in position "OFF" or "AUTO".
- ☞ Press the open padlock on the remote control or the electronic key.


The sidelamps come on for about 30 seconds. For vehicles fitted with automatic illumination of headlamps, the welcome lighting only comes on under conditions of low ambient light.

Switching off

The welcome lighting goes off immediately if:

- you press the open padlock on the remote control,
- you place the lighting control in another position,
- you switch on the ignition (or select "ON" mode for vehicles fitted with the "Keyless Entry and Starting" system).

Manual adjustment of the headlamp beams

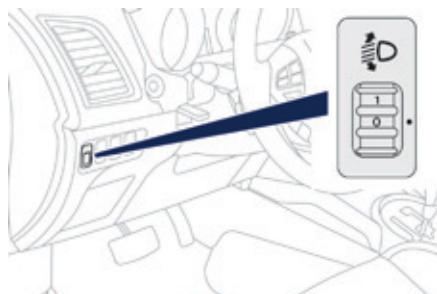

To avoid causing a nuisance to other road users, the height of the halogen headlamp beams should be adjusted according to the load in the vehicle.

- 0 1 or 2 people in the front seats.
- 1 5 passengers (including the driver).
- 2 5 passengers (including the driver) + maximum authorised load.
- 3 Driver + maximum authorised load.

Automatic headlamp adjustment



On vehicles with xenon bulbs: **when stationary**, the system automatically corrects the height of the beam, whatever the load of the vehicle. The driver is then assured of having optimum lighting and not causing a nuisance to other road users.



In cases of malfunction, this message appears in the multifunction screen.




Do not touch the xenon bulbs. Contact a PEUGEOT dealer or a qualified workshop.


Wiper controls

System for selection and control of the various front and rear wiping modes for removing rain and cleaning the screens.

The vehicle's front and rear wipers are designed to improve the driver's visibility according to the climatic conditions.

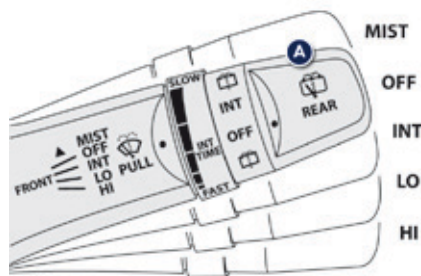

Model with intermittent wiping

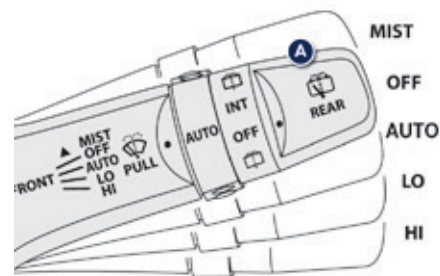

Model with AUTO wiping

Settings

Various automatic wiper control modes are also available depending on whether the following options are fitted:


- automatic rain sensitive windscreen wipers,
- rear wiping on engaging reverse gear.

Manual controls

Windscreen wipers

A. wiping speed selection stalk:

MIST	single wipe.
OFF	park.
INT	intermittent (the speed can be set manually).
	or
AUTO	automatic rain sensitive wipers (the speed can be set manually).
LO	slow.
HI	fast.

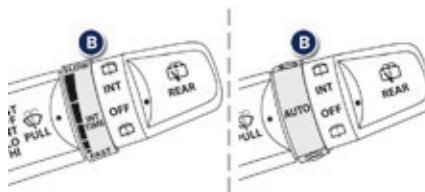

B. intermittent operation or rain sensor sensitivity adjustment ring.


You can increase or decrease:

- the wiping frequency when the intermittent mode is active,
- the sensitivity of the rain sensor when the automatic mode is active.
 - "+": high sensitivity.
 - "-": low sensitivity.

Windscreen wash

Pull the wiper stalk towards you. The windscreen wash then the wipers operate for a set time.

The headlamp wash is also activated **if the dipped beam headlamps are on.**

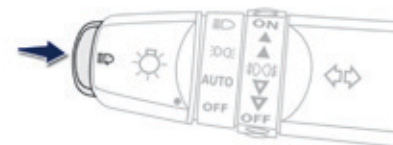


Headlamp wash

Press the end of the lighting stalk to activate the headlamp wash, when the dipped beam headlamps are on.

i To reduce the consumption of screenwash fluid, the headlamp washers only operate with the first operation of the screenwash.


Automatic rain sensitive wipers

The windscreen wipers operate automatically, without any action on the part of the driver, if rain is detected (sensor behind the rear view mirror), adapting their speed to the intensity of the rainfall.

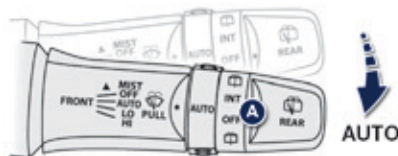

Activation

☞ Move the stalk **A** to the "AUTO" position.

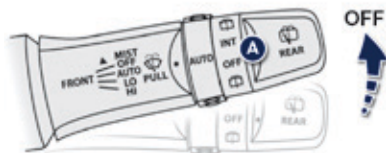

Deactivation

☞ Move the stalk **A** to the "OFF" position.


Operating fault

Do not cover the rain sensor, linked with the sunshine sensor and located in the centre of the windscreen behind the rear view mirror.

! Switch off the automatic rain sensitive wipers when using an automatic car wash.

To protect the rubber of the wiper, it is advisable to deactivate the automatic mode when the vehicle is parked and when the ambient temperature is below 0 °C.

In winter, it is advisable to wait until the windscreen is completely clear of ice before activating the automatic rain sensitive wipers.

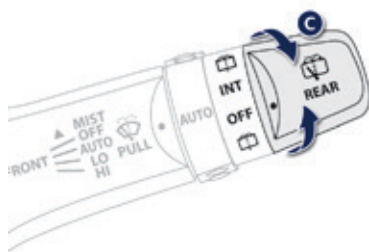

Rear wiper

C. rear wiper selection ring:

• **OFF** park.

• **INT** intermittent wipe.

The wiper wipes twice then switches to intermittent mode.

•  wipe with screen wash.

Keep the ring in this position to operate the screen wash with several wipes of the wiper.

Courtesy lamps

Front courtesy lamp



Position 1

The courtesy lamp comes on when a door or the tailgate is opened.

When the door or the tailgate is closed again, the lighting gradually dims for a few seconds before switching off.


However, the courtesy lamp is switched off automatically in the following cases:

- When the doors and the tailgate are closed and the ignition switch is placed in the "ON" position.
- When the doors and the tailgate are closed and you lock the vehicle.

Position 2

The courtesy lamp is permanently off.

Map reading lamps

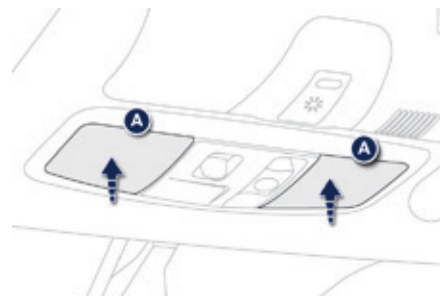

There are two map reading lamps, one on each side of the courtesy lamp.

Press the corresponding lamp lens A.

Rear courtesy lamp



Position 1 "ON"

The courtesy lamp is permanently on.

Position 2 "•"

The courtesy lamp comes on when a door or the tailgate is opened. When the door or the tailgate is closed again, the lighting gradually dims for a few seconds before switching off.

However, the courtesy lamp is switched off immediately in the following cases:

- When the doors and the tailgate are closed and the ignition switch is placed in the "ON" position.
- When the doors and the tailgate are closed and you lock the vehicle.

Position 3 "OFF"


The courtesy lamp is permanently off.

Courtesy lamps automatic switch off

With the engine off, the courtesy lamps, map reading lamps and boot lamp switch off automatically after 30 minutes to prevent discharging of the battery.

The courtesy lamps are switched on again if the ignition switch is placed in the "ON" or "ACC" position, if you open then close a door or the tailgate or if you use the remote control.

Boot lamp

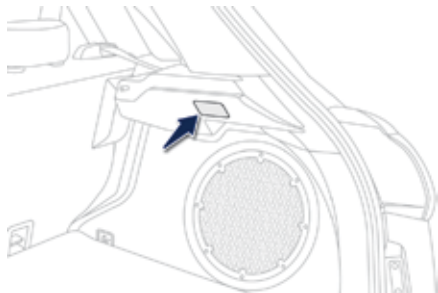

This comes on automatically when the boot is opened and goes off automatically when the boot is closed.

Panoramic roof lighting



When active, the panoramic roof lighting comes on if the ignition switch is placed in the **"ON"** or **"ACC"** position.



Deactivation

When the ignition switch is placed in position **"ON"** or **"ACC"**:


- ☞ Press this button repeatedly until the lighting goes off.

Settings

When the ignition switch is placed in position **"ON"** or **"ACC"**:

- ☞ Press this button repeatedly to obtain the desired lighting level (high, medium, low).

Direction indicators

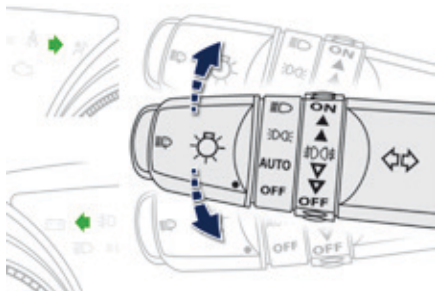

- ☞ Left: lower the lighting stalk passing the point of resistance.
- ☞ Right: raise the lighting stalk passing the point of resistance.

Three flashes of the direction indicators

- ☞ Press briefly upwards or downwards, without going beyond the point of resistance; the direction indicators will flash 3 times.

Hazard warning lamps



A visual warning by means of the direction indicators to alert other road users to a vehicle breakdown, towing or accident.

- ☞ Press this button, the direction indicators flash.

They can operate with the ignition off.


Automatic operation of hazard warning lamps

When braking in an emergency, depending on the deceleration, the hazard warning lamps come on automatically.

They switch off automatically the first time you accelerate.

- ☞ You can also switch them off by pressing the button.

Horn

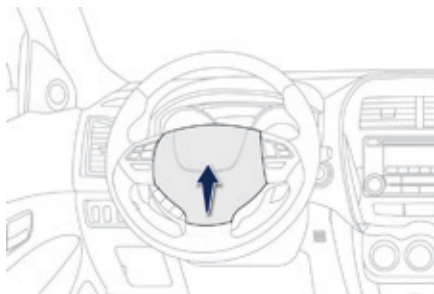

- ☞ Press the central part of the steering wheel.

Braking assistance systems

Group of supplementary systems which help you to obtain optimum braking in complete safety in emergency situations:

- anti-lock braking system (ABS),
- electronic brake force distribution (EBFD).

Anti-lock braking system and electronic brake force distribution

Linked systems which improve the stability and manoeuvrability of your vehicle when braking, in particular on poor or slippery surfaces.

Activation

The anti-lock braking system is active if the vehicle speed is higher than 6 mph (10 km/h). It is deactivated when the vehicle speed falls below 3 mph (5 km/h).

The anti-lock braking system comes into operation automatically when there is a risk of wheel lock.

Normal operation of the ABS may make itself felt by slight vibration of the brake pedal.



When braking in an emergency, press very firmly without releasing the pressure.

Operating fault



When the vehicle is stationary

If this warning lamp comes on, accompanied by the indication on the instrument panel screen, it indicates a malfunction of the anti-lock braking system which could result in a loss of control of the vehicle when braking.

The vehicle retains normal braking.

Drive carefully at moderate speed and contact a PEUGEOT dealer or a qualified workshop as soon as possible.



The warning lamp comes on for a few seconds when the ignition is switched on (ON position). If it does not switch off or does not come on, contact a PEUGEOT dealer or a qualified workshop.

When the vehicle is moving



If this warning lamp comes on continuously it indicates a malfunction of the anti-lock braking system which could result in a loss of control of the vehicle on braking.

The vehicle retains normal braking. Drive carefully at moderate speed and contact a PEUGEOT dealer or qualified workshop as soon as possible.



SERVICE REQUIRED



ABS
SERVICE REQUIRED

If these two warning lamps come on, linked with the warnings on the instrument panel screen, they indicate a malfunction of the electronic brake force distribution which could result in a loss of control of the vehicle on braking.

You must stop as soon as it is safe to do so. Contact a PEUGEOT dealer or a qualified workshop.

i The two warning lamps comes on at the same time and the two warnings are displayed alternately in the instrument panel screen. When replacing wheels (tyres and rims), ensure that they conform to the manufacturer's recommendations.

Trajectory control systems

Associated systems which guarantee the directional stability of the vehicle within the limits of the laws of physics:

- traction control (TCL),
- active stability control (ASC).

Traction control and active stability control

Traction control optimises traction to prevent wheel spin, by acting on the brakes of the driving wheels and on the engine.

Active stability control acts on the brake of one or more wheels and on the engine to keep the vehicle on the trajectory required by the driver.

Activation

These systems are activated automatically each time the vehicle is started.

Operation

They operate when the vehicle speed is higher than 10 mph (15 km/h).


They come into operation in the event of a grip or trajectory problem.



This is indicated by flashing of this symbol on the instrument panel screen.

Deactivation

In exceptional conditions (starting a vehicle which is bogged down, stuck in snow, on soft ground, ...), it may be advisable to deactivate the ASC system, so that the wheels can move freely and regain grip.

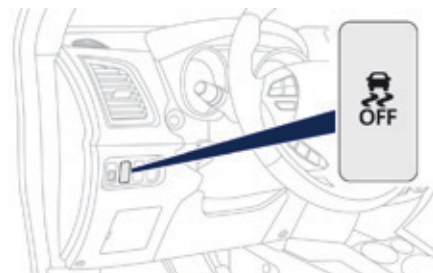

- Press this button, located to the left of the steering wheel, until the symbol appears in the instrument panel screen.



The illumination of this warning lamp in the instrument panel indicates that the ASC and TCL systems are deactivated.

Reactivation

☞ Press this button again to reactivate the ASC and TCL systems.

When the warning lamp goes off, this indicates the reactivation of the ASC and TCL systems.

Operating fault



The illumination of one of these warning lamps accompanied by a message in the instrument panel screen indicates a malfunction of these systems.

Contact a PEUGEOT dealer or a qualified workshop to have the ASC/TCL systems checked.

! The ASC/TCL systems offer exceptional safety in normal driving, but this should not encourage the driver to take extra risks or drive at high speed.

The correct functioning of these systems depends on observation of the manufacturer's recommendations on:

- wheels (tyres and rims),
- braking components,
- electronic components,
- assembly and repair procedures.

After an impact, have these systems checked by a PEUGEOT dealer or a qualified workshop.

Seat belts

Front seat belts

The front seat belts are fitted with a pretensioning and force limiting system. This system improves safety in the front seats in the event of a front or side impact. Depending on the severity of the impact, the pretensioning system instantly tightens the seat belts against the body of the occupants.

The pretensioning seat belts are active when the ignition is on.

The force limiter reduces the pressure of the seat belt on the chest of the occupant, so improving their protection.




Fastening

- ☞ Pull the strap, then insert the tongue in the buckle **A**.
- ☞ Check that the seat belt is fastened correctly by pulling the strap.

Unfastening

- ☞ Press the red button on the buckle **A**.

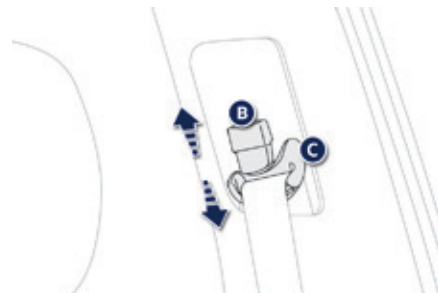

Height adjustment


- ☞ To lower the attachment point, press the control **B** and slide the fixing **C** down.
- ☞ To raise the attachment point, press the control **B** and slide the fixing **C** up.

Front seat belt not fastened / unfastened warning lamp

Driver's seat belt



When the ignition is switched on, this warning lamp comes on accompanied by an audible signal for a few seconds if the driver has not fastened their seat belt.

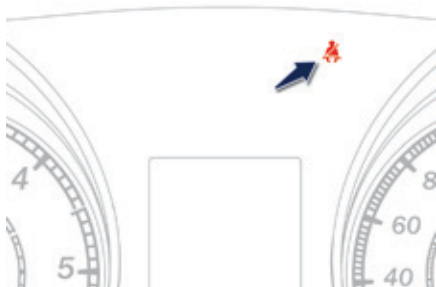

If the driver does not fasten their seat belt within one minute after switching on the ignition, the warning lamp flashes accompanied by an intermittent audible signal and a display on the instrument panel screen.

The warning lamp, the audible signal and the display stop after approximately 90 seconds and return until the driver fastens their seat belt.

If the seat belt is unfastened **while the vehicle is moving**, you are alerted by the same warnings.



Front passenger's seat belt



When the ignition is switched on, this warning lamp comes on the centre console panel.


It is accompanied by an audible signal for a few seconds if the passenger has not fastened their seat belt.

If the seat belt is unfastened **while the vehicle is moving**, you are alerted by the same warnings.

Centre rear seat belt


The seat belt for the centre rear seat is fitted in the roof.

It has three anchorage points and a reel.

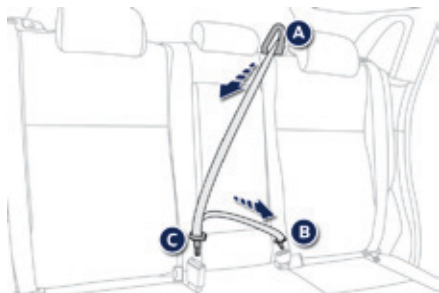

Fastening the belt

- ☞ Pull out the belt and pass it through the belt guide **A**.
- ☞ Pull on the strap and insert the tongue **B** into the left hand buckle.
- ☞ Insert the tongue **C** into the right-hand buckle.
- ☞ Check that each buckle has engaged by pulling on the strap.

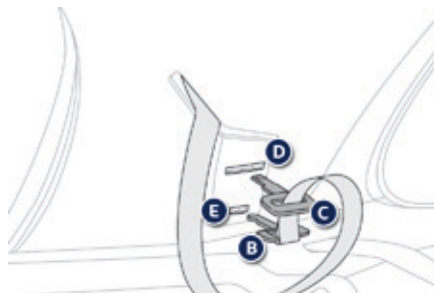

Unfastening and stowing the belt

- ☞ Press the red button on buckle **C**, and then on the red button on buckle **B**.
- ☞ Guide the belt as it reels in, passing it through the belt guide **A**.
- ☞ Stow the tongue **C** in the upper slot **D** and the tongue **B** in the lower slot **E**.

Outer rear seat belts

Each outer rear seat is fitted with a three-point inertia reel seat belt.

Fastening

- ☞ Pull the strap, then insert the tongue in the buckle.
- ☞ Check that the seat belt is fastened correctly by pulling the strap.

Unfastening

- ☞ Press the red button on the buckle.

i The driver must ensure that passengers use the seat belts correctly and that they are all restrained securely before setting off. Wherever you are seated in the vehicle, always fasten your seat belt, even for short journeys.

Do not interchange the seat belt buckles as they will not fulfil their role fully.

The seat belts are fitted with an inertia reel permitting automatic adjustment of the length of the strap to your size. The seat belt is stowed automatically when not in use.

Before and after use, ensure that the seat belt is reeled in correctly.

The lower part of the strap must be positioned as low as possible on the pelvis. The upper part must be positioned in the hollow of the shoulder.

The inertia reels are fitted with an automatic locking device which comes into operation in the event of a collision, emergency braking or if the vehicle rolls over. You can release the device by pulling the strap firmly and then releasing it so that it reels in slightly.

In order to be effective, a seat belt must:

- be tightened as close to the body as possible,
- be pulled in front of you with a smooth movement, checking that it does not twist,
- be used to restrain only one person,
- not bear any trace of cuts or fraying,
- not be converted or modified to avoid affecting its performance.

In accordance with current safety regulations, for all repairs on your vehicle's seat belts, go to a qualified workshop with the skills and equipment needed, which a PEUGEOT dealer is able to provide. Have your seat belts checked regularly by a PEUGEOT dealer or a qualified workshop, particularly if the straps show signs of damage.

Clean the seat belt straps with soapy water or a textile cleaning product, sold by PEUGEOT dealers.

After folding or moving a seat or rear bench seat, ensure that the seat belt is positioned and reeled in correctly.

Recommendations for children

Use a suitable child seat if the passenger is less than 12 years old or shorter than one and a half metres.

Never use the same seat belt to secure more than one person.

Never allow a child to travel on your lap. For more information, refer to the "Child seats" section.

In the event of an impact

Depending on the nature and seriousness of the impact, the pretensioning device may be deployed before and independently of the airbags. Deployment of the pretensioners is accompanied by a slight discharge of harmless smoke and a noise, due to the activation of the pyrotechnic cartridge incorporated in the system.

In all cases, the airbag warning lamp comes on.

Following an impact, have the seat belts system checked, and if necessary replaced, by a PEUGEOT dealer or a qualified workshop.

Airbags


System designed to contribute towards improving the safety of the occupants (with the exception of the rear centre passenger) in the event of violent collisions. The airbags supplement the action of the force-limiting seat belts (with the exception of the centre rear passenger).

If a collision occurs, the electronic detectors record and analyse the front and side impacts sustained in the impact detection zones:

- in the case of a serious impact, the airbags are deployed instantly and contribute towards better protection of the occupants of the vehicle (with the exception of the rear centre passenger); immediately after the impact, the airbags deflate rapidly so that they do not hinder visibility or the exit of the occupants,
- in the case of a minor or rear impact or in certain roll-over conditions, the airbags may not be deployed; the seat belt alone contributes towards ensuring your protection in these situations.

! The airbags do not operate when the ignition is switched off.

This equipment will only deploy once. If a second impact occurs (during the same or a subsequent accident), the airbag will not be deployed again.

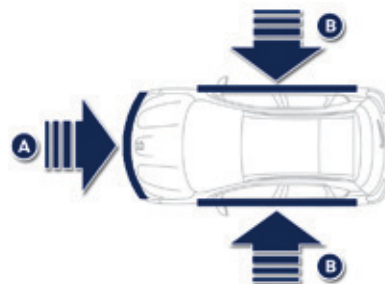

Impact detection zones

- A.** Front impact zone.
B. Side impact zone.

i Deployment of one or more of the airbags is accompanied by a slight emission of smoke and a noise, due to the activation of the pyrotechnic cartridge incorporated in the system. This smoke is not harmful, but sensitive individuals may experience slight irritation.

The noise of detonation related to the deployment of one or more airbags may result in a slight loss of hearing for a short time.

Front airbags




System which contributes toward improving protection for the head and chest of the driver and front passenger in the event of a front impact.

The driver's airbag is fitted in the centre of the steering wheel; the front passenger's airbag is fitted in the dashboard above the glove box.

Deployment

The airbags are deployed, except the passenger's front airbag if it is deactivated, in the event of a serious front impact applied to all or part of the front impact zone **A**, in the longitudinal centreline of the vehicle on a horizontal plane and directed from the front to the rear of the vehicle.

The front airbag inflates between the front occupant of the vehicle and the dashboard to cushion their forward movement.

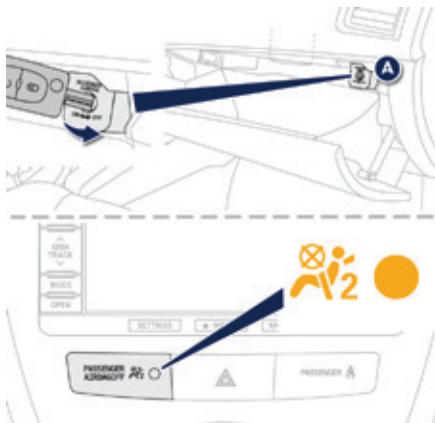

Deactivation

Only the front passenger's airbag can be deactivated:

- ☞ insert the key in the passenger airbag deactivation switch **A**,
- ☞ turn it to the "**OFF**" position,
- ☞ remove the key.



This warning lamp comes on in the centre console panel when the ignition is on and until the airbag is reactivated.



To ensure the safety of your child, the passenger's airbag must be deactivated when you install a "rearward facing" child seat on the front passenger seat. Otherwise, the child would risk being seriously injured or killed if the airbag were triggered.

Reactivation

When you remove the "rearward facing" child seat, turn switch **A** to the "**ON**" position to reactivate the airbag and so ensure the safety of your front passenger in the event of an impact.

The associated warning lamp goes off.



Operating fault




If this warning lamp comes on in the instrument panel, accompanied by a message, contact a PEUGEOT dealer or a qualified workshop without delay to have the system checked. The airbags may no longer be deployed in the event of a serious impact.



If the airbag warning lamp and the display come on continuously, do not install a "rearward facing" child seat on the front passenger seat. Contact a PEUGEOT dealer or a qualified workshop without delay.

Knee airbag*

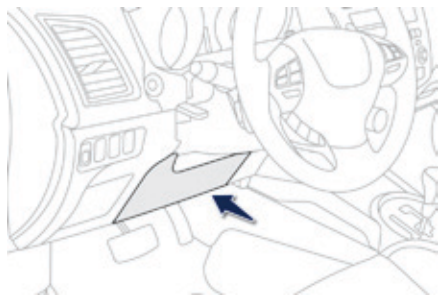

System which contributes towards improving the protection of the driver's knees in the event of a serious front impact.

This airbag is fitted in the dashboard below the steering column.

Deployment

It is deployed at the same time as the front airbags.

* According to country of sale.

Lateral airbags




System which contributes towards improving protection for the driver and passenger in the event of a serious side impact in order to limit the risk of injury to the chest.

Each lateral airbag is fitted in the front seat back frame, on the door side.

Deployment

The lateral airbag is deployed unilaterally in the event of a serious side impact applied to all or part of the side impact zone **B**, perpendicular to the longitudinal centreline of the vehicle on a horizontal plane and directed from the outside towards the inside of the vehicle.


The lateral airbag inflates between the front occupant of the vehicle and the corresponding door trim panel.

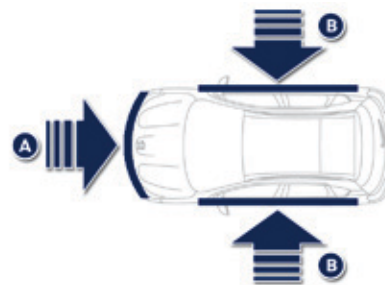

Impact detection zones

- A. Front impact zone.
- B. Side impact zone.

Curtain airbags

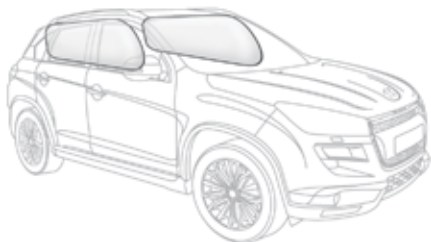

System which contributes towards improving protection for the driver and passengers (with the exception of the rear centre passenger) in the event of a serious side impact in order to limit the risk of injury to the head.

Each curtain airbag is fitted in the pillars and the upper section of the passenger compartment.

Deployment

The curtain airbag is deployed at the same time as the corresponding lateral airbag in the event of a serious side impact applied to all or part of the side impact zone **B**, perpendicular to the longitudinal centreline of the vehicle on a horizontal plane and directed from the outside towards the inside of the vehicle. The curtain airbag inflates between the front or rear occupant of the vehicle and the windows.



In the event of a minor impact or bump on the side of the vehicle or if the vehicle rolls over, the airbag may not be deployed.

In the event of a rear or front collision, the airbag is not deployed.



Operating fault

If this warning lamp comes on in the instrument panel and this display appears in the instrument panel screen, contact a PEUGEOT dealer or a qualified workshop to have the system checked. The airbags may no longer be deployed in the event of a serious impact.

! For the airbags to be fully effective, observe the following safety rules:

Sit in a normal upright position.
 Wear a correctly adjusted seat belt.
 Do not leave anything between the occupants and the airbags (a child, pet, object...). This could hamper the operation of the airbags or injure the occupants.
 After an accident or if the vehicle has been stolen or broken into, have the airbag systems checked.
 All work on the airbag system must be carried out by a PEUGEOT dealer or a qualified workshop.
 Even if all of the precautions mentioned are observed, a risk of injury or of minor burns to the head, chest or arms when an airbag is deployed cannot be ruled out. The bag inflates almost instantly (within a few milliseconds) then deflates within the same time discharging the hot gas via openings provided for this purpose.

Front airbags

Do not drive holding the steering wheel by its spokes or resting your hands on the centre part of the wheel.
 Passengers must not place their feet on the dashboard.
 Do not smoke as deployment of the airbags can cause burns or the risk of injury from a cigarette or pipe.
 Never remove or pierce the steering wheel or hit it violently.
 Do not fit or attach anything to the steering wheel or dashboard, this could cause injuries with deployment of the airbags.

Knee airbag*

Do not sit with your knees any nearer to the steering wheel than necessary.
 Avoid attaching a heavy object to the key as it could become a dangerous projectile if the airbag were deployed.

* According to country.

Lateral airbags

Use only approved covers on the seats, compatible with the deployment the lateral airbags. For information on the range of seat covers suitable for your vehicle, you can contact a PEUGEOT dealer.
 Refer to the "Accessories" section.
 Do not fix or attach anything to the seat backs (clothing...). This could cause injury to the chest or arms if the lateral airbag is deployed.
 Do not sit with the upper part of the body any nearer to the door than necessary.

Curtain airbags

Do not fix or attach anything to the roof. This could cause injury to the head if the curtain airbag is deployed.
 If fitted on your vehicle, do not remove the grab handles installed on the roof, they play a part in securing the curtain airbags.

General points relating to child seats

Although one of PEUGEOT main criteria when designing your vehicle, the safety of your children also depends on you.

For maximum safety, please observe the following recommendations:

- in accordance with European regulations, **all children under the age of 12 or less than one and a half metres tall must travel in approved child seats suited to their weight**, on seats fitted with a seat belt or ISOFIX mountings*,
- **statistically, the safest seats in your vehicle for carrying children are the rear seats**,
- **a child weighing less than 9 kg must travel in the rearward facing position both in the front and in the rear.**

- i** **PEUGEOT recommends** that children should travel on the **rear seats** of your vehicle:
- **rearward facing** up to the age of 3,
 - **forward facing** over the age of 3.

* The regulations on carrying children are specific to each country. Refer to the legislation in force in your country.

Child seat in the front*

Rearward facing




When a rearward facing child seat is installed on the **front passenger seat**, adjust the seat to the intermediate longitudinal and highest position, with the backrest straightened. The passenger airbag must be deactivated. Otherwise, **the child would risk being seriously injured or killed if the airbag were to inflate.**

Forward facing



When a forward facing child seat is installed on the **front passenger seat**, adjust the vehicle's seat to the intermediate longitudinal and highest position with seat backrest straightened and leave the passenger's airbag activated.

i Ensure that the seat belt is correctly tensioned.
For child seats with a support leg, ensure that the support leg is in stable contact with the floor. If necessary, adjust the passenger seat.

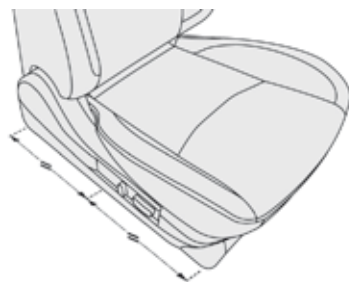

Passenger seat adjusted to the intermediate longitudinal position.

* Refer to the current legislation in your country before installing a child seat on this seat.


Deactivating the passenger's airbag

! Never install a rearward facing child restraint system on a seat protected by an active front airbag. This could cause the death of the child or serious injury.

The warning label present on both sides of the passenger's sun visor repeats this advice. In line with current legislation, the following two pages contain this warning in all of the languages required.



Passenger airbag OFF

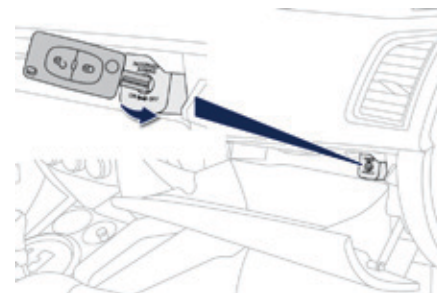

i For information on deactivating the airbag, refer to the "Airbags" section.

AR	لا يجب أبدا تركيب نظام لإجلال الطفل الوجه باتجاه الراء على مقعد سيارة مجهز بوسادة أمان هوائية أمامية مغلقة، فقد يؤدي هذا إلى التسبب بوفات الطفل أو بإصابات خطيرة لديه.
BG	НИКОГА НЕ инсталирайте детско столче на седалка с АКТИВИРАНА предна ВЪЗДУШНА ВЪЗГЛАВНИЦА. Това може да причини СМЪРТ или СЕРИОЗНО НАРАНЯВАНЕ на детето.
CS	NIKDY neumisťujte dětské zádržné zařízení orientované směrem dozadu na sedadlo chráněné AKTIVOVANÝM čelním AIRBAGEM. Hrozí nebezpečí SMRTI DÍTĚTE nebo VÁŽNÉHO ZRANĚNÍ.
DA	Brug ALDRIG en bagudvendt barnestol på et sæde, der er beskyttet af en AKTIV AIRBAG. BARNET risikerer at blive ALVORLIGT KVÆSTET eller DRÆBT.
DE	Montieren Sie auf einem Sitz mit AKTIVIERTEM Front-Airbag NIEMALS einen Kindersitz oder eine Babyschale entgegen der Fahrtrichtung, das Kind könnte schwere oder sogar tödliche Verletzungen erleiden.
EL	Μη χρησιμοποιείτε ΠΟΤΕ παιδικό κάθισμα με την πλάτη του προς το εμπρός μέρος του αυτοκινήτου, σε μια θέση που προστατεύεται από ΜΕΤΩΠΙΚΟ αερόσακο που είναι ΕΝΕΡΓΟΣ. Αυτό μπορεί να έχει σαν συνέπεια το ΘΑΝΑΤΟ ή το ΣΟΒΑΡΟ ΤΡΑΥΜΑΤΙΣΜΟ του ΠΑΙΔΙΟΥ
EN	NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur
ES	NO INSTALAR NUNCA un sistema de retención para niños de espaldas al sentido de la marcha en un asiento protegido mediante un AIRBAG frontal ACTIVADO, ya que podría causar lesiones GRAVES o incluso la MUERTE del niño.
ET	Ärge MITTE KUNAGI paigaldage "seljaga sõidusuunas" lapseistet juhi kõrvalistmele, mille ESITURVAPADI on AKTIVEERITUD. Turvapadja avanemine võib last TÕSISELT või ELUOHTLIKULT vigastada.
FI	ÄLÄ KOSKAAN aseta lapsen turvaistuinta selkää ajosuuntaan istuimelle, jonka edessä suojana on käyttöön aktivoitu TURVATYYNÄ. Sen laukeaminen voi aiheuttaa LAPSEN KUOLEMAN tai VAKAVAN LOUKKAANTUMISEN.
FR	NE JAMAIS installer de système de retenue pour enfants faisant face vers l'arrière sur un siège protégé par un COUSSIN GONFLABLE frontal ACTIVÉ. Cela peut provoquer la MORT de l'ENFANT ou le BLESSER GRAVEMENT
HR	NIKADA ne postavljati dječju sjedalicu leđima u smjeru vožnje na sjedalo zaštićeno UKLJUČENIM prednjim ZRAČNIM JASTUKOM. To bi moglo uzrokovati SMRT ili TEŠKU OZLJEDU djeteta.
HU	SOHA ne használnjon menetiránynak háttal beszerelt gyermekülést AKTIVÁLT (BEKAPCSOLT) FRONTLÉGSZÁKKAL védett ülésen. Ez a gyermek HALÁLÁT vagy SÜLYÖS SÉRÜLÉSÉT okozhatja.
IT	NON installare MAI seggiolini per bambini posizionati in senso contrario a quello di marcia su un sedile protetto da un AIRBAG frontale ATTIVATO. Ciò potrebbe provocare la MORTE o FERITE GRAVI al bambino.

LT	NIEKADA neįrenkite vaiko prilaikymo priemonės su atgal atgrežtu vaiku ant sėdynės, kuri saugoma VEIKIANČIOS priekinės ORO PAGALVĖS. Išsiskleidus oro pagalvei vaikas gali būti MIRTINAI arba SUNKIAI TRAUMUOTAS.
LV	NEKAD NEuzstādiet uz aizmuguri vērstu bērnu sēdekļīti priekšējā pasažiera sēdvietā, kurā ir AKTIVIZĒTS priekšējais DROŠĪBAS GAISA SPILVENS. Tas var izraisīt BĒRNA NĀVI vai radīt NOPIETNUS IEVAINOJUMUS.
MT	Qatt m'ghandek thalli tifel/tifla marbut f'siggu dahru lejn l-Airbag attiva, ghalix tista' tikkawza korriment serju jew anke mewt lit-tifel/tifla
NL	Plaats NOOIT een kinderzitje met de rug in de rijrichting op een zitplaats waarvan de AIRBAG is INGESCHAKELD. Bij het afgaan van de airbag kan het KIND LEVENSGEVAARLIJK GEWOND RAKEN
NO	Installer ALDRI et barnesete med ryggen mot kjøretretningen i et sete som er beskyttet med en frontal AKTIVERT KOLLISJONSPUTE, BARNET risikerer å bli DREPT eller HARDT SKADET.
PL	NIGDY nie instalować fotelika dziecięcego w pozycji "tyłem do kierunku jazdy" na siedzeniu wyposażonym w CZOŁOWĄ PODUSZKĘ POWIETRZNĄ w stanie AKTYWNYM. Może to doprowadzić do ŚMIERCI DZIECKA lub spowodować u niego POWAŻNE OBRAŻENIA CIAŁA.
PT	NUNCA instale um sistema de retenção para crianças de costas para a estrada num banco protegido por um AIRBAG frontal ACTIVADO. Esta instalação poderá provocar FERIMENTOS GRAVES ou a MORTE da CRIANÇA.
RO	Nu instalati NICIODATA un sistem de retinere pentru copii, dispus cu spatele in directia de mers, pe un loc din vehicul protejat cu AIRBAG frontal ACTIVAT. Aceasta ar putea provoca MOARTEA COPILULUI sau RANIREA lui GRAVA.
RU	ВО ВСЕХ СЛУЧАЯХ ЗАПРЕЩАЕТСЯ использовать обращенное назад детское удерживающее устройство на сиденье, защищенном ФУНКЦИОНИРУЮЩЕЙ ПОДУШКОЙ БЕЗОПАСНОСТИ, установленной перед этим сиденьем. Это может привести к ГИБЕЛИ РЕБЕНКА или НАНЕСЕНИЮ ЕМУ СЕРЬЕЗНЫХ ТЕЛЕСНЫХ ПОВРЕЖДЕНИЙ
SK	NIKDY neinštalujte detské zádržné zariadenie orientované smerom dozadu na sedadlo chránené AKTIVOVANÝM čelným AIRBAGOM. Mohlo by dôjsť k SMRTEĽNÉMU alebo VÁŽNEMU PORANENIU DIEŤATA.
SL	NIKOLI ne nameščajte otroškega sedeža s hrbtom v smeri vožnje, če je VARNOSTNA BLAZINA pred sprednjim sopotnikovim sedežem AKTIVIRANA. Takšna namestitve lahko povzroči SMRT OTROKA ali HUDE POŠKODBE.
SR	NIKADA ne koristite dečje sedišta koje se okreće unazad na sedištu zaštićenim AKTIVNIM VAZDUŠNIM JASTUKOM ispred njega, jer mogu nastupiti SMRT ili OZBILJNA POVREDA DETETA.
SV	Passagerarkrockkudden fram MÅSTE vara avaktiverad om en bakåtvänd bilbarnstol installerats på denna plats. Annars riskerar barnet att DÖDAS eller SKADAS ALLVARLIGT.
TR	KESİNLİKLE HAVA YASTIĞI AKTİF olan ön koltuğa yüzü arkaya dönük bir çocuk koltuğu yerleştirmeyiniz. Bu ÇOCUĞUN ÖLMESİNE veya ÇOK AĞIR YARALANMASINA sebep olabilir.

Child seat at the rear

"Rearward facing"

When a "rearward facing" child seat is installed **on a rear passenger seat**, move the vehicle's front seat forwards and straighten the backrest so that the "rearward facing" child seat does not touch the vehicle's front seat.

"Forward facing"

When a "forward facing" child seat is installed **on a rear passenger seat**, move the vehicle's front seat forwards and straighten the backrest so that the legs of the child in the "forward facing" child seat do not touch the vehicle's front seat.

Centre rear seat

A child seat with a support leg must never be installed on the **centre rear passenger seat**.

i Ensure that the seat belt is correctly tightened. For child seats with a support leg, ensure that the support leg is in stable contact with the floor.

Child seats recommended by PEUGEOT

PEUGEOT offers a range of recommended child seats which are secured using a **three point seat belt**:

Group 0+: from birth to 13 kg



L1

"RÖMER Baby-Safe Plus"
Installed in the rearward facing position.

Group 1: from 9 to 18 kg



L2

"FAIR G 0/1 S ISOFIX"
Installed forward facing, without the ISOFIX base.
6 positions of inclination of the shell.



L3

"RÖMER Duo Plus ISOFIX"
Installed forward facing.
Can be secured with the seat belt.
3 positions of inclination of the shell.

i These seats can also be installed using the ISOFIX mountings (see following pages).
Follow the instructions for fitting the child seat given in the seat manufacturer's installation guide.

Locations for child seats secured using the seat belt

In accordance with European regulations, this table indicates the options for installing child seats secured using a seat belt and universally approved (a) in relation to the weight of the child and the seat in the vehicle.

Weight of the child and indicative age					
Seat		Less than 13 kg (groups 0 (b) and 0+) Up to ≈ 1 year	From 9 to 18 kg (group 1) From 1 to ≈ 3 years	From 15 to 25 kg (group 2) From 3 to ≈ 6 years	From 22 to 36 kg (group 3) From 6 to ≈ 10 years
Front passenger seat (c) with passenger airbag activated		X	X	X	X
Front passenger seat (c) with passenger airbag deactivated		L1	L2, L3	X	X
Outer rear seats (row 2) (d)		U	U	U	U
Centre rear seat (row 2) (d)		L1	L2, L3	X	X

- (a) Universal child seat: child seat which can be installed in all vehicles using the seat belt.
- (b) Group 0: from birth to 10 kg. Infant car seats and "car cots" cannot be installed on the front passenger seat.
- (c) Consult the legislation in force in your country before installing your child on this seat.
- (d) To install a child seat on a rear seat, rearward or forward facing, move the front seat forward, then straighten the backrest, so as to leave sufficient space for the child seat and the child's legs.

U: seat suitable for the installation of a child seat secured using the seat belt and universally approved, "rearward facing" and/or "forward facing".

X: seat not suitable for the installation of a child seat of the weight group indicated.

L-: only the child seats indicated can be installed on the seat concerned (according to country).



i Remove and stow the head restraint before installing a child seat with a backrest on a passenger seat. Refit the head restraint once the child seat has been removed.

"ISOFIX" mountings


Your vehicle has been approved in accordance with the **latest ISOFIX regulation**.

The seats, represented below, are fitted with regulation ISOFIX mountings:

There are three rings for each seat:

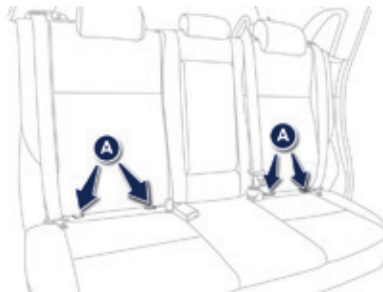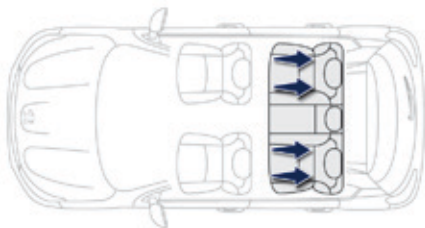

- two rings **A**, located between the vehicle seat back and cushion, indicated by a marking,

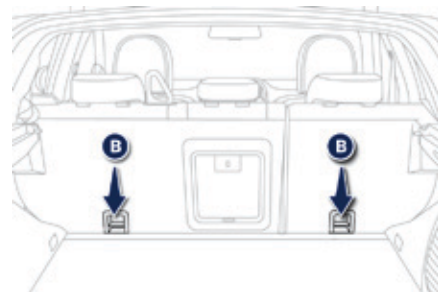

- a ring **B** behind the seat and identified by a marking, referred to as the **Top Tether** for fixing the upper strap.

This ISOFIX mounting system provides fast, reliable and safe fitting of the child seat in your vehicle.

The **ISOFIX child seats** are fitted with two latches which are secured on the two rings **A**. Some seats also have an **upper strap**, known as the **Top Tether**, which is attached to ring **B**.

To secure the child seat to the **TOP TETHER**:

- remove and stow the head restraint before installing the child seat on the seat (refit it once the child seat has been removed),
- pass the upper strap of the child seat behind the seat backrest, between the apertures for the head restraint rods,
- fix the hook of the upper strap to the ring **B**,
- tighten the upper strap.

When fitting an ISOFIX child seat to the left hand rear seat, before fitting the seat, first move the centre rear seat belt towards the middle of the vehicle, so as to avoid the seat interfering with the operation of the seat belt.



The incorrect installation of a child seat in a vehicle compromises the child's protection in the event of an accident.


Follow strictly the fitting instructions provided by with the child seat.



For information on the possibilities for installing ISOFIX child seats in your vehicle, refer to the summary table.

ISOFIX child seat recommended by PEUGEOT and approved for your vehicle

PEUGEOT offers a range of child seats secured using the ISOFIX mountings.

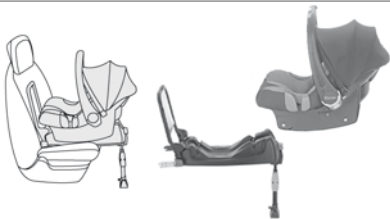Group 0+: up to 13 kg		
IL1		
RÖMER Baby-Safe Plus and its Baby-Safe plus ISOFIX base		
		Installed in the rearward facing position using its ISOFIX base, which is attached to the rings A. The base has a height-adjustable support leg.
IL2		
FAIR G 0/1 S and its RWF ISOFIX base		
		Installed in the rearward facing position using its ISOFIX base, which is attached to the rings A. The base has a support leg. 6 positions of inclination for the shell. This configuration is reserved for children weighing up to 13 kg.

i These child seats can also be used on seats which are not fitted with ISOFIX mountings. In this case, they must be attached to the vehicle seat using the three point seat belt.
Follow the instructions for fitting the child seat given in the seat manufacturer's installation guide.

Group 1: from 9 to 18 kg**IL3
RÖMER Duo Plus ISOFIX**

Installed forward facing.
Attached to the rings **A**, as well as ring **B**, known as the TOP TETHER, using an upper strap.
3 positions of inclination of the shell.

**IL4
FAIR G 0/1 S and its FWF ISOFIX base**

Installed in the rearward facing position using its ISOFIX base, which is attached to the rings **A**.
The base has a support leg.
6 positions of inclination of the shell.
This configuration is suitable for children weighing more than 13 kg.

i These child seats can also be used on seats which are not fitted with ISOFIX mountings.
In this case, they must be attached to the vehicle seat using the three point seat belt.
Follow the instructions for fitting the child seat given in the seat manufacturer's installation guide.

Locations for ISOFIX child seats

In accordance with European Regulations, this table indicates the options for installing ISOFIX child seats on seats in the vehicle fitted with ISOFIX mountings.

In the case of universal and semi-universal ISOFIX child seats, the ISOFIX size category, determined by a letter between **A** and **G**, is indicated on the child seat next to the ISOFIX logo.

	Weight of the child / indicative age									
	Less than 10 kg (group 0) Up to approx. 6 months		Less than 10 kg (group 0) Less than 13 kg (group 0+) Up to approx. 1 year			From 9 to 18 kg (group 1) From approx. 1 to 3 years				
Type of ISOFIX child seat	infant car seat		"rearward facing"			"rearward facing"		"forward facing"		
ISOFIX size category	F	G	C	D	E	C	D	A	B	B1
Universal and semi-universal ISOFIX child seats which can be installed on the outer rear seats	X		X		IL1	IL2	X	IUF		

IUF: seat suitable for the installation of an Isofix Universal seat, "Forward facing" secured using the "Top Tether" upper strap.

IL-: only the child seats indicated can be installed using the ISOFIX mountings.

For advice on securing of the "Top Tether" upper strap, refer to the "ISOFIX mountings" section.

X: seat not suitable for the installation of an ISOFIX seat of the size category indicated.

i Remove and stow the head restraint before installing a child seat with a backrest on a passenger seat. Refit the head restraint once the child seat has been removed.

Advice on child seats

! The incorrect installation of a child seat in a vehicle compromises the child's protection in the event of an accident.

Remember to fasten the seat belts or the child seat harnesses **keeping the slack** in relation to the child's body **to a minimum**, even for short journeys.

For optimum installation of the forward facing child seat, ensure that the back of the child seat is in contact with the back of the vehicle's seat and that the head restraint does not cause any discomfort.

If the head restraint has to be removed, ensure that it is stored or attached securely to prevent it from being thrown around the vehicle in the event of sharp braking.

Children at the front

The legislation on carrying a child on the front passenger seat is specific to each country. Refer to the legislation in force in your country.

Deactivate the passenger's airbag when a rearward facing child seat is installed on the front seat. Otherwise, the child would risk being seriously injured or killed if the airbag were to inflate.

Installing a booster cushion

The chest part of the seat belt must be positioned on the child's shoulder without touching the neck.

Ensure that the lap part of the seat belt passes correctly over the child's thighs. PEUGEOT recommends the use of a booster seat which has a back, fitted with a seat belt guide at shoulder level.

As a safety precaution, do not leave:

- one or more children alone and unsupervised in a vehicle,
- a child or an animal in a vehicle which is exposed to the sun, with the windows closed,
- the keys within reach of children inside the vehicle.

To prevent accidental opening of the doors, use the Child lock.

Take care not to open the rear windows by more than one third.

To protect young children from the rays of the sun, fit side blinds on the rear windows.

Child lock

Mechanical system to prevent opening of the rear doors using their interior controls.

The control is located on the edge of each rear door.



Child lock on

☞ Move the control **A** towards position **1**.

Child lock off


☞ Move the control **A** towards position **2**.

Temporary puncture repair kit

Complete system consisting of a compressor and a sealant cartridge which permits the **temporary repair** of a tyre so that you can drive to the nearest garage.

It is designed to repair most punctures which could affect the tyre, located on the tyre tread or shoulder.

Access to the kit

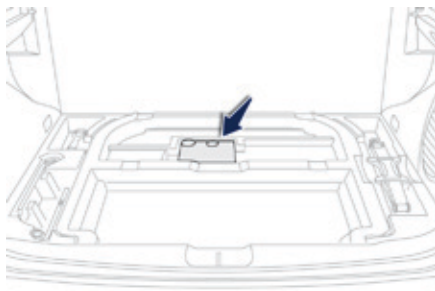

This kit is installed in the boot under the floor.

For access to it:


- ☞ Open the boot.
- ☞ Lift and remove the floor.
- ☞ Take out the kit.

! The puncture repair kit cannot be used in the following circumstances:

- the use-by date for the sealant cartridge has been exceeded (see the label on the cartridge),
- more than one tyre is punctured while you have just one sealant cartridge supplied with the kit,
- the hole in the tyre exceeds 4 mm in diameter,
- the puncture is on the sidewall of the tyre,
- you have continued to drive with a flat tyre,
- the bead of the tyre is detached from the wheel rim,
- the wheel rim is damaged.


! The vehicle's electric system allows the connection of a compressor for long enough to inflate a tyre after a puncture repair or for inflating a small inflatable accessory.

Composition of the kit

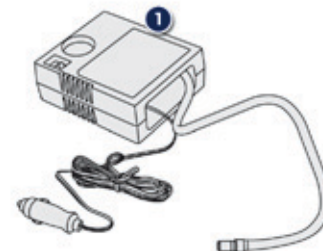

1. 12 V compressor with integral pressure gauge, to measure and adjust the tyre pressure.

! As the compressor is not sealed, keep it away from sand, dust and water.

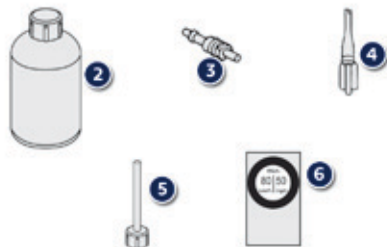

2. Sealant cartridge for the temporary repair of a tyre.
3. Replacement valve core.
4. Valve core removal/fitting tool.
5. Injection end-piece.
6. Speed limit sticker.

i After repairing the tyre, the speed restriction sticker should be affixed to the centre of vehicle's steering wheel to remind you that this wheel must only be used temporarily.
Do not exceed a speed of 50 mph (80 km/h) when driving with a tyre repaired using this type of kit.

Repair procedure

- ☞ Stop the vehicle in as safe a location as possible and on a level and stable surface. Ensure that the tyre valve is not at the bottom of the wheel, in contact with the ground.
- ☞ Apply the parking brake.
- ☞ Place the gear lever in position **R** for vehicle with a manual gearbox, or in position **P** for vehicles fitted with a CVT gearbox.
- ☞ Switch off the ignition.
- ☞ Remove the valve cap for the tyre to be repaired and keep it in a clean place.




- ☞ Insert the tyre valve core tool into the valve and press on the tool to exhaust all of the air from the tyre.



- ☞ Turn the valve core tool round, insert it in the valve and unscrew and remove the valve core.
Keep the valve core in a clean place.


i At temperatures below 0°C, the sealant product may thicken. Warm the cartridge inside the vehicle before using it.

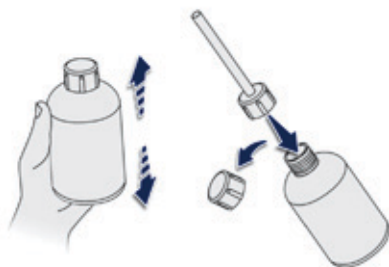


- ☞ Shake the sealant cartridge, remove the cap and screw on the injection end-piece.

i Avoid removing any foreign bodies which have penetrated into the tyre.

! Take care, this product is harmful (e.g. ethylene-glycol, colophony...) if swallowed and causes irritation to the eyes.
Keep it out of reach of children.
The use-by date of the sealant is marked on the cartridge.
After use, do not discard the empty cartridge but take it to a PEUGEOT dealer (France) or an authorised waste disposal site.
Don't forget to obtain a replacement cartridge; they are available from a PEUGEOT dealer or a qualified workshop.

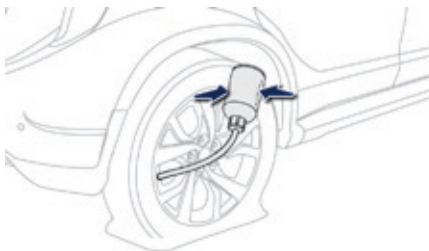

- ☞ Connect the injection end-piece to the valve of the tyre to be repaired.
- ☞ Press several times on the sealant cartridge (top down) with your hand, to inject **all of the product** into the tyre.
- ☞ Remove the injection end-piece
- ☞ Refit the valve core and tighten it using the tool provided.

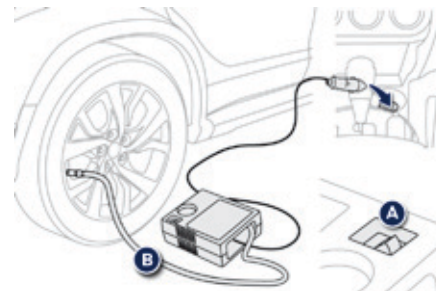


- ☞ Check that the compressor switch **A** is at the "OFF" position.
- ☞ Uncoil the compressor pipe **B**.
- ☞ Connect this pipe to the valve of the repaired wheel.
- ☞ Connect the compressor's electric plug to the vehicle's 12 V socket (ignition switch in position "ACC" or ACC mode).
- ☞ Start the compressor by turning the switch **A** to the "ON" position to inflate the tyre to the pressure indicated on the tyre pressure label (see the "Identification markings" section).

- ☞ If the specified pressure has not been reached after about 10 minutes, this means that the tyre is not repairable; contact a PEUGEOT dealer or a qualified workshop for roadside assistance.
- ☞ Remove the compressor and stow the kit.

! Do not operate the compressor for more than 10 minutes continuously. If the compressor seems extremely hot, switch it off and disconnect it immediately. Leave it to cool for at least 30 minutes.

i If the vehicle is fitted with under-inflation detection, the under-inflation warning lamp remains on until the system has been reinitialised (see the "Under-inflation detection" section).

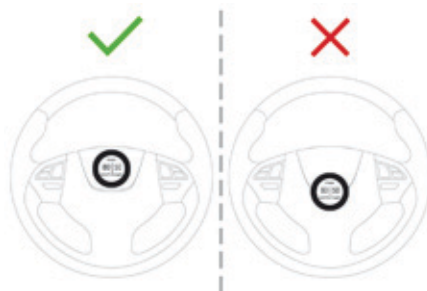

- ☞ Affix the speed limit sticker to the centre of the steering wheel.
- ☞ Drive off straight away at reduced speed (50 mph [80 km/h] max) to spread the sealant product within the tyre.


i As soon as possible after a repair using the kit, go to a PEUGEOT dealer or a qualified workshop. Tell the technician that you have used the kit. After checking, the technician will advise you whether the tyre can be repaired or must be replaced.

- ☞ After about 6 miles (10 km) or 5 minutes, stop and check the repair and the tyre pressure using the compressor. If the pressure has dropped slightly, inflate the tyre again to the specified figure. Carry out the same check after another 6 miles (10 km) or 5 minutes: if the pressure has not held at the specified figure, this indicates that the puncture repair has not sealed; contact a PEUGEOT dealer or a qualified workshop for roadside assistance. If the pressure is correct, carefully tighten the tyre valve cap. You can drive at reduced speed (50 mph - 80 km/h max) to go to a PEUGEOT dealer or a qualified workshop.

Changing a wheel

Procedure for replacing a faulty wheel with the spare wheel using the tools supplied with the vehicle.


Access to the tools

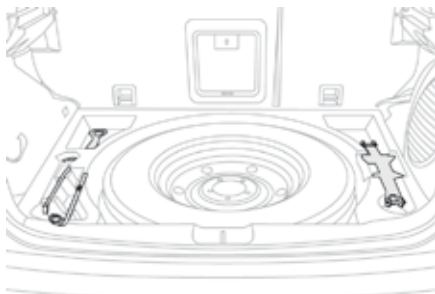

The tools are stowed in the boot under the floor.

To gain access to them:

- ☞ Open the boot.
- ☞ Lift and remove the boot floor.

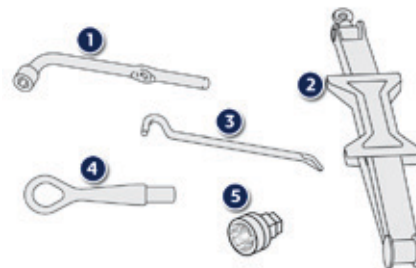

List of tools

These tools are specific to your vehicle. Do not use them for anything else.

1. Wheelbrace.
Used to remove the wheel trim and the wheel fixing bolts.
2. Jack.
Used to raise the vehicle.
3. Handle.
Used to operate the jack.
4. Removable towing eye.
See "Recovering the vehicle".
5. Socket for security wheel bolts (available as an accessory).
Used to adapt the wheelbrace to the special "security" wheel bolts.

i Wheel with trim

When removing the wheel, remove the trim first using the handle 3, pulling at the cutout.

When refitting the wheel, refit the trim starting by placing its cutout opposite the valve and press on its outer edge with the palm of your hand.

Access to the spare wheel



The spare wheel is installed in the boot under the floor.

Depending on version, the spare wheel may be a standard size steel or alloy wheel, or for some countries it is the "space saver" type.

For access to the spare wheel, see "Access to the tools".




Taking out the standard wheel

- ☞ Unscrew the central bolt A.
- ☞ Raise the spare wheel towards you from the rear.
- ☞ Take the wheel out of the boot.

Putting the standard wheel back in place

- ☞ Put the wheel back in its housing.
- ☞ Put the central bolt A in place in the centre of the wheel.
- ☞ Tighten fully to retain the wheel correctly.

Removing a wheel

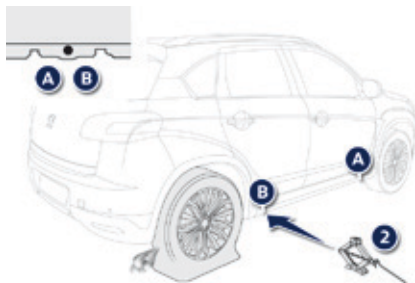


i Parking the vehicle

Immobilise the vehicle where it does not block traffic: if possible, park the vehicle on level, stable and non-slippery ground.

Apply the parking brake, switch off the ignition and engage first gear to lock the wheels.


If necessary, place a chock under the wheel diagonally opposite the wheel to be changed.

Never go underneath a vehicle raised using a jack; use a stand.

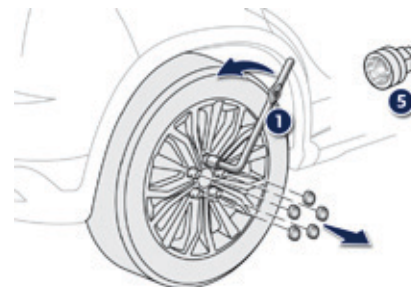


List of operations

- ☞ If your vehicle is equipped with security wheel bolts (equipment available as an accessory) fit the security socket **5** on the wheelbrace **1** to slacken the security bolt.
- ☞ Slacken the other bolts using the wheelbrace **1** only.

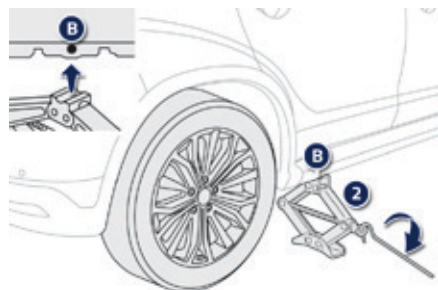


- ☞ Place the jack **2** in contact with one of the two front **A** or rear **B** locations provided on the underbody, whichever is closest to the wheel to be changed.
- ☞ Extend the jack **2** until its base plate is in contact with the ground. Ensure that the centreline of the jack base plate is directly below the location **A** or **B** used.

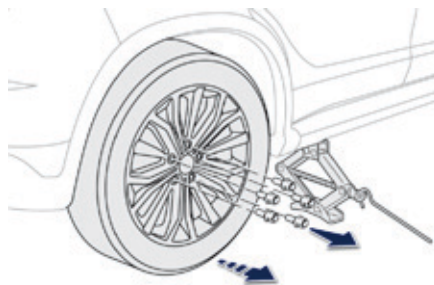


- ☞ Raise the vehicle until there is sufficient space between the wheel and the ground to admit the spare (not punctured) wheel easily.
- ☞ Remove the bolts and store them in a clean place.
- ☞ Remove the wheel.

Fitting a wheel

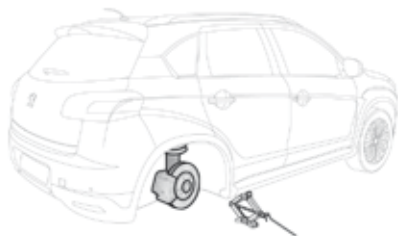

i Fitting snow tyres

If you equip your vehicle with snow tyres fitted on steel wheel rims, special bolts available from your PEUGEOT dealer or a qualified workshop **must** be used.

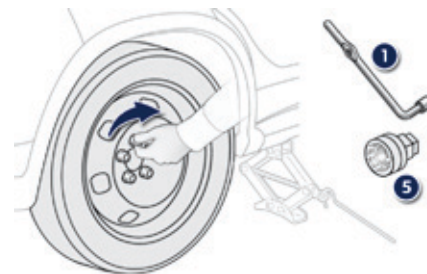

i After changing a wheel

When using the "space-saver" spare wheel, do not exceed a speed of 50 mph (80 km/h).

Have the tightening of the bolts and the pressure of the spare wheel checked by a PEUGEOT dealer or a qualified workshop without delay.


Have the punctured wheel repaired and replace it on the vehicle as soon as possible.

! If the replacement of a tyre is necessary on 4-wheel drive versions, it is recommended that all four tyres be replaced at the same time, ensuring that the same make, model and size is used on all wheels.


This is because using tyres of different sizes, structure or rate of wear could damage transmission components.

List of operations

- ☞ Put the wheel in place on the hub.
- ☞ Screw in the bolts fully by hand.
- ☞ Pre-tighten the security bolt using the wheelbrace **1** fitted with the security socket **5** (if your vehicle is equipped with security wheel bolts).
- ☞ Pre-tighten the other bolts using the wheelbrace **1** only.

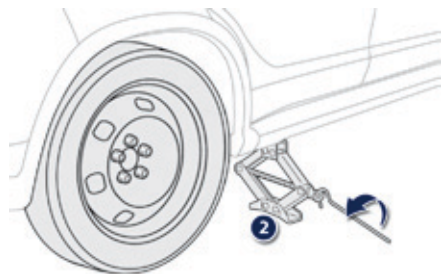

- ⌚ Lower the vehicle fully.
- ⌚ Fold the jack **2** and detach it.

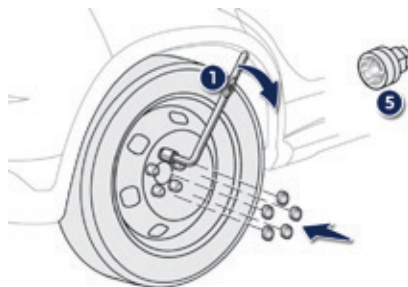

- ⌚ Tighten the security bolt using the wheelbrace **1** fitted with the security socket **5** (if your vehicle is equipped with security wheel bolts).
- ⌚ Tighten the other bolts using the wheelbrace **1** only.
- ⌚ Store the tools (refer to the paragraph "Access to the tools").

Snow chains

In wintry conditions, snow chains improve traction as well as the behaviour of the vehicle when braking.

i The snow chains must be fitted only to the front wheels. They must never be fitted to "space-saver" type spare wheels.

i Take account of the legislation in force in your country on the use of snow chains and the maximum running speed authorised.

i It is strongly recommended that before you leave, you practise fitting the snow chains on a level and dry surface.

Advice on installation

- ☞ If you have to fit the chains during a journey, stop the vehicle on a flat surface on the side of the road.
- ☞ Apply the parking brake and position any wheel chocks to prevent movement of your vehicle.
- ☞ Fit the chains following the instructions provided by the manufacturer.
- ☞ Move off gently and drive for a few moments, without exceeding 30 mph (50 km/h).
- ☞ Stop your vehicle and check that the snow chains are correctly tightened.

i Avoid driving with snow chains on roads that have been cleared of snow, to avoid damaging your vehicle's tyres and the road surface. If your vehicle is fitted with alloy wheels, check that no part of the chain or its fixings is in contact with the wheel rim.

Use only chains designed for fitment to the type of road wheels on your vehicle:

Original equipment tyre size	Maximum link size
215/70 R16	12 mm
225/55 R18	

i For more information on snow chains, contact a PEUGEOT dealer or a qualified workshop.

Changing a bulb

- !** The headlamps have polycarbonate lenses with a protective coating:
- ☞ **do not clean them using a dry or abrasive cloth, nor with a detergent or solvent product,**
 - ☞ use a sponge and soapy water,
 - ☞ when using a high pressure washer on persistent marks, do not keep the lance directed towards the lamps or their edges for too long, so as not to damage their protective coating and seals.


- ☞ Do not touch the bulb directly with your fingers, use lint-free cloths. Changing a bulb should only be done after the headlamp has been switched off for several minutes (risk of serious burns).
- It is imperative to use only anti-ultraviolet (UV) type bulbs in order not to damage the headlamp.
- Always replace a failed bulb with a new bulb with the same type and specification.

! Risk of electrocution


Replacement of the xenon bulbs (D1S-35W) must be carried out by a PEUGEOT dealer or a qualified workshop.

- i** For bulbs that have alignment lugs (H1, H7...) ensure that they are fitted correctly for the best lighting performance.

Front lamps

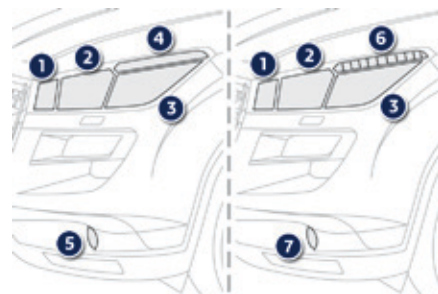


1. Direction indicators (WY21W-21W).
2. Main beam headlamps (H1-55W).
3. Dipped beam headlamps (H11-55W) or Xenon bulb (D1S-35W).
4. Sidelamps (W5W-5W).
5. Daytime running lamps (P13W-13W).
6. Daytime running lamps / sidelamps (light emitting diodes-LEDs).
7. Front foglamps (H11-55W).

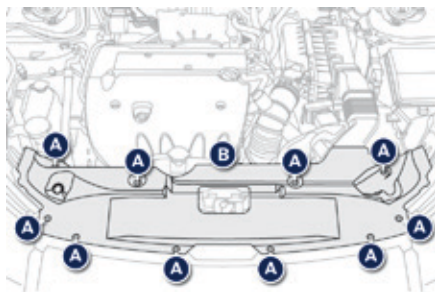

Access to bulbs

Carry out the following operations for access the bulb protective covers:

- ☞ Remove the retaining pins **A**.
- ☞ Remove the protective cover **B**.

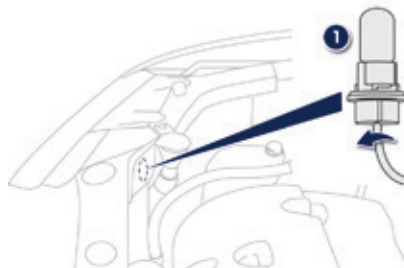


Changing direction indicator bulbs (1)

i Rapid flashing of the direction indicator warning lamp (right or left) indicates the failure of a bulb on that side.

- ☞ Turn the bulb holder a quarter of a turn to the left and pull it out.
- ☞ Pull out the bulb and change it.

i To reassemble, carry out these operations in reverse order. Amber coloured bulbs, such as the direction indicators, must be replaced with bulbs of identical specifications and colour.

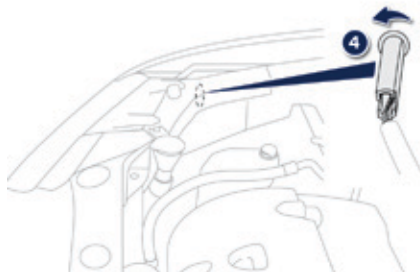


Changing sidelamp bulbs (4)

- ☞ Turn the bulb holder a quarter turn to the left and pull it out.
- ☞ Pull out the bulb and replace it.

To reassemble, carry out these operations in reverse order.

Changing the daytime running lamps / sidelamps (light-emitting diodes - LEDs) (6)

For the replacement of this type of LED lamp, contact a PEUGEOT dealer or a qualified workshop.

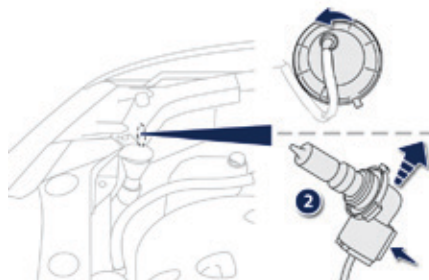

Changing main beam headlamp bulbs (2)

- ☞ Remove the protective plastic cover.
- ☞ Turn the bulb holder to the left and pull it out.
- ☞ Remove the bulb and its base by pressing on the lug at the bottom.
- ☞ Change the bulb.


For reassembly, carry out these operations in reverse order.

Changing dipped headlamp bulbs (3)

For the replacement of these bulbs, contact a PEUGEOT dealer or a qualified workshop.

Changing front foglamp bulbs (7) / daytime running lamp bulbs (5)

To replace these bulbs contact a PEUGEOT dealer or a qualified workshop.

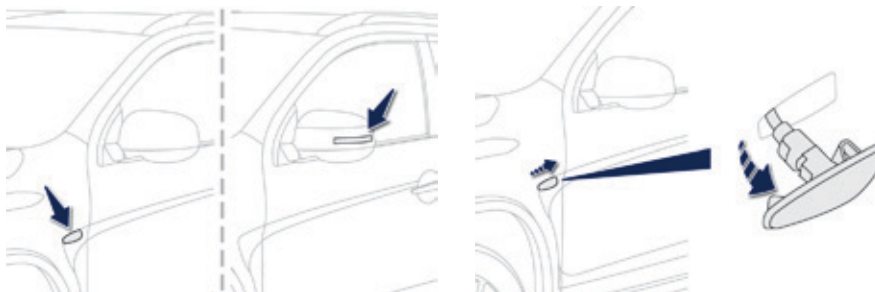

Changing direction indicator side repeaters

- ☞ Push the repeater towards the rear to disengage it.
- ☞ Disconnect the repeater connector.
- ☞ Change the repeater unit.

To reassemble, carry out these operations in reverse order.

Contact a PEUGEOT dealer or a qualified workshop to obtain replacement repeaters.

Door mirror spotlamps


You should contact a PEUGEOT dealer or a qualified workshop for the replacement of the light emitting diode - LED.

Rear lamps



1. Third brake lamp (LEDs).
2. Number plate lamps (W5W-5W).
3. Rear foglamp (W21W-21W) or reversing lamp (W16W- 16W)*.
4. Reversing lamp (W16W-16W).
5. Direction indicators (WY21W-21W).
6. Sidelamps (P21-5W).
7. Sidelamps / brake lamps (W21-5W).

i Amber coloured bulbs, such as the direction indicators, must be replaced with bulbs of identical specification and colour.

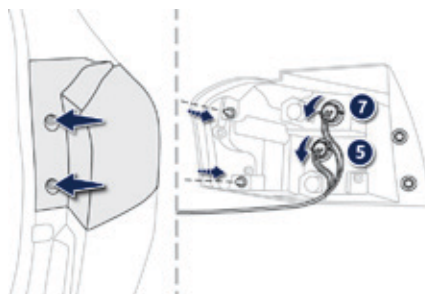


Changing sidelamp / brake lamp (7) and direction indicator (5) bulbs

These bulbs are changed from outside the boot.

- ☞ Open the boot.
- ☞ Remove the two fixing screws.
- ☞ Unclip the lamp unit carefully extract it pulling it towards the rear.
- ☞ Turn the bulb holder a quarter of a turn to the left and pull it out.
- ☞ Pull the bulb out and change it.

To reassemble, carry out these operations in reverse order.

Take care to align the pins on the lamp unit with the locations on the bodywork.

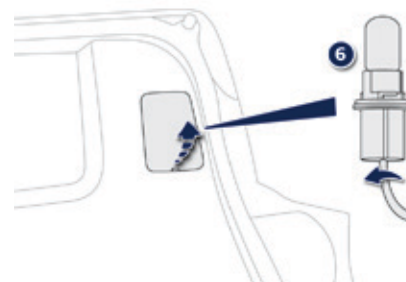


Changing sidelamp bulbs (6)

- ☞ Open the boot.
- ☞ Insert a screwdriver into the aperture of the cover and lever it open.
- ☞ Turn the bulb holder a quarter of a turn to the left.
- ☞ Pull the bulb out and change it.

To reassemble, carry out these operations in reverse order.

You can also contact a PEUGEOT dealer or a qualified workshop for the replacement of these bulbs.

* Depending on country of sale

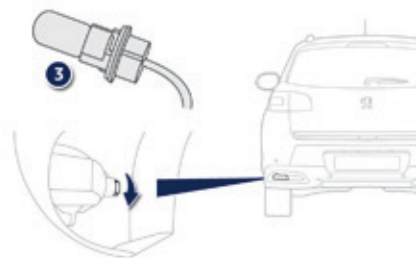


Changing a foglamp or reversing lamp bulb (3)*

Access is by passing a hand under the bumper.

- ☞ Turn the bulb holder a quarter of a turn and pull it out.
- ☞ Disconnect the connector on the bulb holder.
- ☞ Pull the bulb out and change it.

To refit, carry out these operations in reverse order.

You can also contact a PEUGEOT dealer or a qualified workshop for the replacement of this bulb.

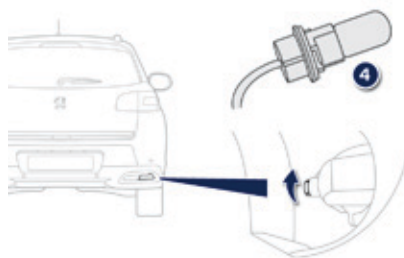


Changing a reversing lamp bulb (4)

You can also contact a PEUGEOT dealer or a qualified workshop for the replacement of this bulb.

Access is by passing your hand under the bumper.

- ☞ Turn the bulb holder a quarter of a turn and pull it out.
- ☞ Disconnect the bulb holder.
- ☞ Pull the bulb out and change it.

To reassemble, carry out these operations in reverse order.

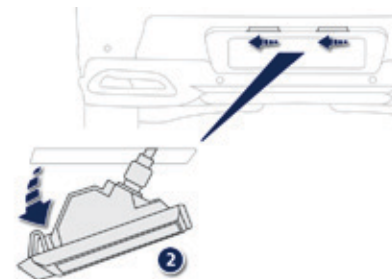

Changing number plate lamp bulbs (2)

- ☞ Push the lens to the left and then down.
- ☞ Turn the bulb holder a quarter turn to the left and pull it out.
- ☞ Remove the bulb and change it.

To refit, carry out these operations in reverse order and press on the lens to clip it in place.


Third brake lamp (light emitting diodes - LEDs) (1)

Contact a PEUGEOT dealer or qualified workshop for the replacement of this type of lamp.

* Depending on country of sale

Changing a fuse

Access to the tools

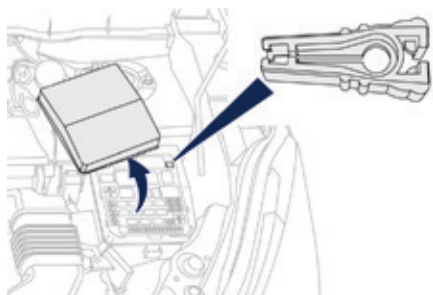

The extraction tweezers and spare fuses are fitted in the engine compartment fusebox.

To gain access to them:

- ☞ Open the bonnet (refer to the "Checks" section).
- ☞ Unclip the and remove the cover.
- ☞ Remove the tweezers.
- ☞ Carefully close the cover to ensure correct sealing of the fusebox.

Changing a fuse



Good



Failed

Before changing a fuse, the cause of the failure must be identified and rectified.


- ☞ Check that the switch is in the "**LOCK**" position or that the vehicle mode is "**OFF**".
- ☞ Identify the faulty fuse by checking the condition of its filament.
- ☞ Use the special tweezers to extract the fuse from its location.
- ☞ Always replace the faulty fuse with a fuse of the same rating.
- ☞ Check that the number etched on the box, the rating etched on the top and the tables below all agree.

! The replacement of a fuse not mentioned in the following tables may cause a serious fault on your vehicle. Contact a PEUGEOT dealer or a qualified workshop.

i Your vehicle's electrical system is designed to operate with standard or optional equipment. Before installing other electrical equipment or accessories in your vehicle, contact a PEUGEOT dealer or a qualified workshop.

! PEUGEOT will not accept responsibility for the cost incurred in repairing your vehicle or for rectifying the malfunctions resulting from the installation of accessories not supplied and not recommended by PEUGEOT and not installed in accordance with its instructions, in particular when the consumption of all of the additional equipment connected exceeds 10 milliamperes.

Dashboard fuses

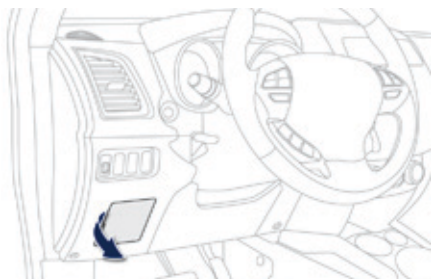


The fusebox is located in the lower dashboard (left-hand side).

Access to the fuses

- ☞ Open the cover and remove it completely by pulling it towards you.




Fuse N°	Rating	Functions
1*	30 A	Cabin fan.
2	15 A	Brake lamps, third brake lamp.
3	10 A	Rear foglamp.
4	30 A	Windscreen wiper, screenwash.
6	20 A	Central locking, electric door mirrors.
7	15 A	Audio equipment, telematics, USB unit, Bluetooth system.
8	7.5 A	Remote control key, air conditioning control unit, instrument panel, electric windows, rain and sunshine sensors, alarm, switch panel, steering mounted controls.
9	15 A	Instrument panel and interior lighting.
10	15 A	Hazard warning lamps.
11	15 A	Rear wiper.
12	7.5 A	Instrument panel, multifunction screen, parking sensors, heated seats, heated rear screen, electric blind, automatic headlamp adjustment.
13	15 A	Cigarette lighter, accessory socket.
15	20 A	Electric blind.
16	10 A	Door mirrors, audio equipment.

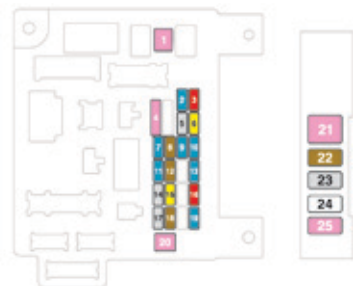

Fuse N°	Rating	Functions
18	7.5 A	Reversing lamp(s).
19	15 A	Accessory socket.
20*	30 A	Electric window controls.
21*	30 A	Heated rear screen.
22	7.5 A	Heated door mirrors.
24	25 A	Driver's and passenger's electric seat.
25	30 A	Heated seats.

! * The maxi-fuses provide additional protection for the electrical systems. All work on the maxi-fuses must be carried out by a PEUGEOT dealer or a qualified workshop.


Engine compartment fuses

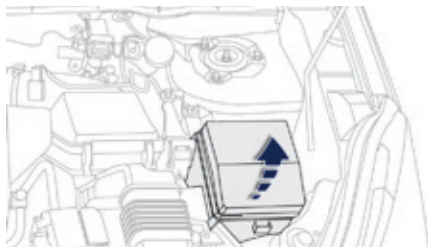


The fusebox is placed in the engine compartment (left-hand side).

Access to the fuses

☞ Unclip the cover and remove it completely.

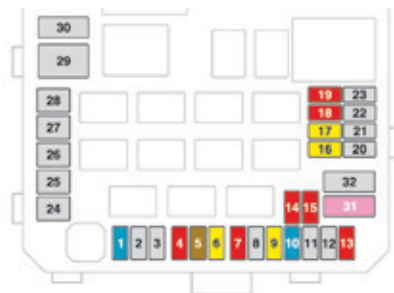

Fuse N°	Rating	Functions
1	15 A	Front foglamps.
4	10 A	Horn.
5	7.5 A	Alternator.
6	20 A	Headlamp wash.
7	10 A	Air conditioning.
9	20 A	Alarm.
10	15 A	Demisting, wipers.
11	-	Not used.
12	-	Not used.

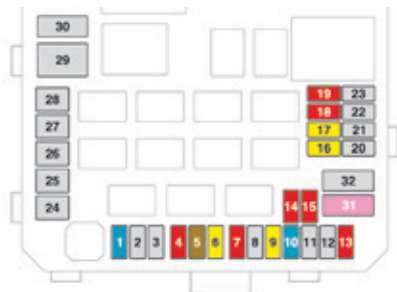

! The maxi-fuses provide additional protection for the electrical systems. All work on the maxi-fuses must be carried out by a PEUGEOT dealer or a qualified workshop.

i Carefully close the cover after replacing a fuse so as to ensure the correct sealing of the fusebox.

Fuse N°	Rating	Functions
13	10 A	Daytime running lamps.
14	10 A	Left-hand main beam headlamp.
15	10 A	Right-hand main beam headlamp.
16	20 A	Left-hand dipped beam headlamp (xenon).
17	20 A	Right-hand dipped beam headlamp (xenon).
18	10 A	Left-hand dipped beam headlamp (halogen), manual and automatic headlamp adjustment.
19	10 A	Right-hand dipped beam headlamp (halogen).
31	30 A	Audio amplifier.



Spare fuses

The spare fuses are located under the engine compartment fusebox cover.


Fuse N°	Rating
33	10 A
34	15 A
35	20 A

i The cover does not contain spare fuses with an amperage of 7.5 A, 25 A or 30 A. If one of the fuses with these amperages develops a fault, replace it with the following fuse:
 A **7.5 A fuse** must be replaced with the **10 A spare fuse**, a **25 A fuse** with a **20 A spare fuse** and a **30 A fuse** with the **audio system fuse (N° 31)**.

12 V battery

Procedure for charging your battery when it is flat or for starting the engine using another battery and jump leads.


Access to the battery

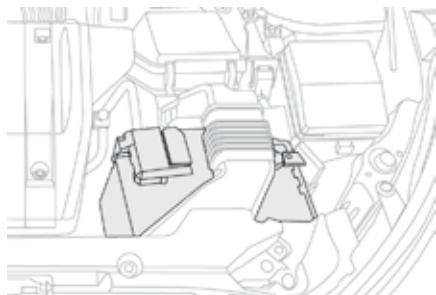


The battery is located under the bonnet.

To gain access to it:

- ☞ open the bonnet using the interior release lever, then the exterior safety catch,
- ☞ secure the bonnet stay,

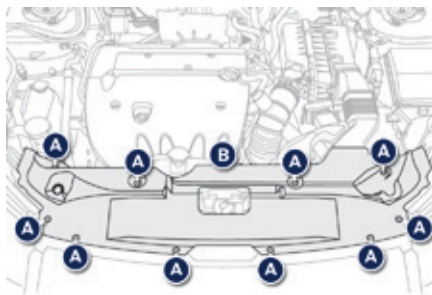


- ☞ remove the retaining pins **A**,
- ☞ remove the protective cover **B**,

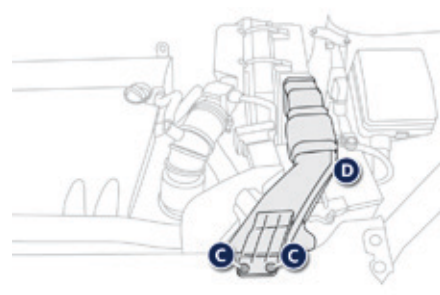


- ☞ remove the retaining pins **C**,
- ☞ remove the air duct **D**.

Starting using another battery

Check the electrolyte level and top up if necessary (see "Checking levels").

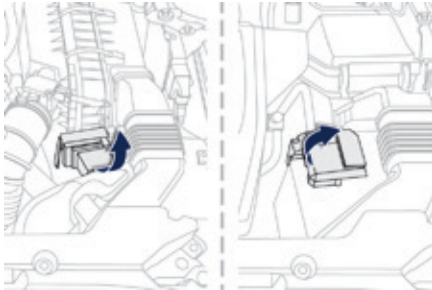

- ☞ Raise the protective cover on the (+) terminal.

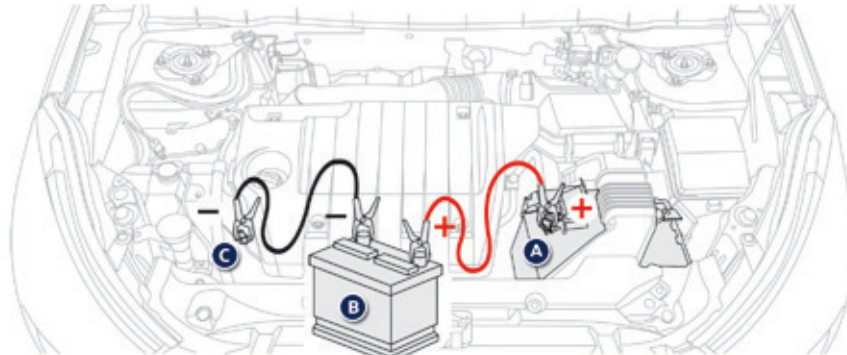

- ☞ Connect the red cable to the positive terminal (+) of the flat battery **A**, then to the positive terminal (+) of the slave battery **B**.
- ☞ Connect one end of the green or black cable to the negative terminal (-) of the slave battery **B**.
- ☞ Connect the other end of the green or black cable to the earth point **C** on your vehicle (engine mounting).
- ☞ Operate the starter, let the engine run.
- ☞ Wait until the engine returns to idle and disconnect the cables.

Charging the battery using a battery charger

- ☞ Disconnect the battery from the vehicle, if necessary.
- ☞ Follow the instructions for use provided by the manufacturer of the charger.
- ☞ Reconnect starting with the negative terminal (-).
- ☞ Check that the terminals and connectors are clean. If they are covered with sulphate (whitish or greenish deposit), remove them and clean them.



The batteries contain harmful substances such as sulphuric acid and lead. They must be disposed of in accordance with regulations and must not, in any circumstances, be discarded with household waste.

Take used remote control batteries and vehicle batteries to a special collection point.



It is advisable to disconnect the battery if the vehicle is to be left unused for more than one month.



Do not reverse the polarity and use only a 12 V charger.
Do not disconnect the terminals while the engine is running.
Do not charge the batteries without disconnecting the terminals first.
Do not push the vehicle to start the engine if it is fitted with a CVT gearbox.

Before disconnecting the battery

Wait 2 minutes after switching off the ignition before disconnecting the battery. Close the windows and the doors before disconnecting the battery.

Following reconnection of the battery

Following reconnection of the battery, switch on the ignition and wait 1 minute before starting to permit initialisation of the electronic systems. However, if problems remain following this operation, contact a PEUGEOT dealer or a qualified workshop.



Some functions are not available if the battery is not sufficiently charged.

Automatic power cut-off to accessories

After the engine has stopped, **when the ignition switch is in the "ACC" position (or the vehicle in "ACC" mode)** you can still use functions such as the audio equipment, windscreen wipers, dipped beam headlamps, courtesy lamps, etc. for about thirty minutes.

Cutting off

Once the thirty minutes have expired, the power supply to the accessories will be automatically cut off.

Restoring power

The power supply will be restored the next time the ignition is switched on.

Changing a wiper blade

Removing a front or rear wiper blade

- ☞ Raise the corresponding wiper arm.
- ☞ Remove the wiper blade, sliding it towards the outside.

Fitting a front or rear wiper blade

- ☞ At the front, check the size of the wiper blade as the shorter blade is fitted on the right-hand side of the vehicle.
- ☞ Put the corresponding new wiper blade in place and fix it.
- ☞ Fold down the wiper arm carefully.

Recovering the vehicle

! General recommendations

Observe the legislation in force in your country.

Ensure that the weight of the towing vehicle is higher than that of the towed vehicle.

The driver must remain at the wheel of the towed vehicle and must have a valid driving licence.


When towing a vehicle with all four wheels on the ground, always use an approved towing bar; rope and straps are prohibited.

When towing a vehicle with the engine off, there is no longer any power assistance for braking or steering.

In the following cases, you must always call on a professional recovery service:

- vehicle broken down on a motorway or fast road,
- 4 wheel drive vehicle,
- when it is not possible to put the gearbox into neutral, unlock the steering, or release the parking brake,
- towing with only two wheels on the ground,
- where there is no approved towing bar available...

Recovery of your vehicle

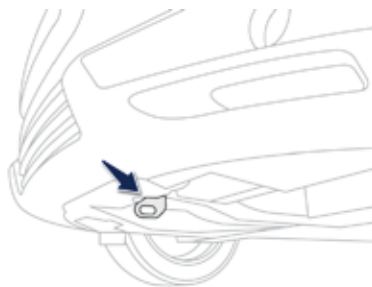

2 wheel drive (2WD) versions: towing with the wheels on the ground

- ☞ Fit the towing bar to the towing eye on the chassis, located under the front bumper.


! Towing with the wheels on the ground is only possible on 2 wheel drive (2WD) versions.

- ☞ Put the gear lever into neutral (position **N** for the CVT gearbox).
- ☞ Unlock the steering by turning the ignition switch to the "**ON**" position (or to "**ON**" mode for vehicle fitted with the "Keyless Entry and Starting" system).
- ☞ Release the parking brake.
- ☞ Switch on the hazard warning lamps on both vehicles.
- ☞ Move off gently and travel slowly for a short distance only.

4 wheel drive (4WD) versions: recovery on a flatbed




Vehicles fitted with the 4 wheel drive system must always be recovered on a flatbed.

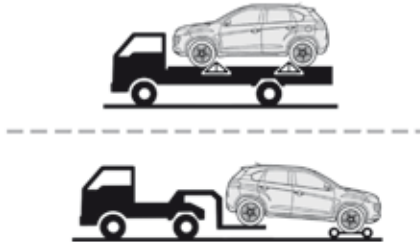

! Never have the vehicle towed with the four wheels on the ground, this could damage the transmission.
The vehicle must not be towed with the front or rear wheels on the ground even if it is in front "2WD" (2 wheel drive) mode.

Towing another vehicle

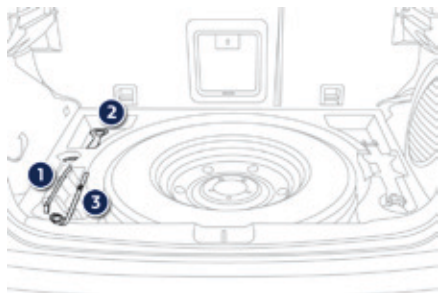

Access to the tooling


The towing eye and the tools are stored under the boot floor.

To gain access to them:


- ☞ open the boot,
- ☞ lift and remove the boot floor,
- ☞ take the towing eye and the tools required.

List of tools

1. Jack handle.
2. Towing eye.
3. Wheelbrace.

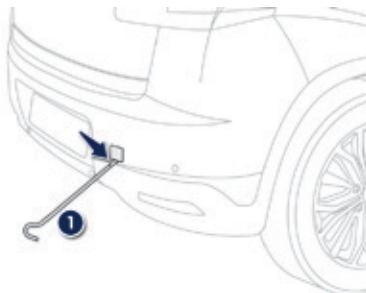

- ☞ On the rear bumper, remove the cover by pulling at the bottom using the jack handle 1.

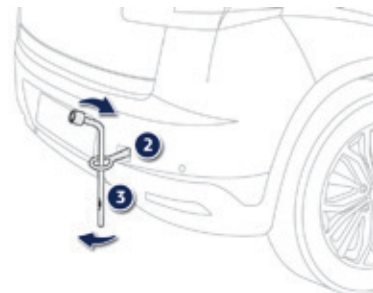

- ☞ Screw in the towing eye 2 fully using the wheelbrace 3.
- ☞ Install the towing bar.
- ☞ Switch on the hazard warning lamps on both vehicles.
- ☞ Move off gently and travel slowly for a short distance only.

Towing a trailer, a caravan...



Your vehicle is primarily designed for transporting people and luggage, but it may also be used for towing a trailer.

i We recommend the use of genuine PEUGEOT towbars and their harnesses that have been tested and approved from the design stage of your vehicle and that the fitting of the towbar is entrusted to a PEUGEOT dealer or a qualified workshop.
If the towbar is not fitted by a PEUGEOT dealer, it is imperative that it is fitted following the manufacturer's instructions.

Driving with a trailer subjects the towing vehicle to more significant stress and its driver must be particularly careful.

Driving advice

Distribution of loads

- ☞ Distribute the load in the trailer so that the heaviest items are as close as possible to the axle and the nose weight approaches the maximum permitted without exceeding it.

Air density decreases with altitude, thus reducing engine performance. Above 1 000 metres, the maximum towing load must be reduced by 10 % of the GTW and so on for every 1 000 metres of altitude.

Refer to the "Technical Data" section for details of the weights and towing loads which apply to your vehicle.

Side wind

- ☞ Take into account the increased sensitivity to side wind.

Cooling

Towing a trailer on a slope increases the temperature of the coolant.

As the fan is electrically controlled, its cooling capacity is not dependent on the engine speed.

- ☞ To lower the engine speed, reduce your speed.

The maximum towing load on a long slope depends on the gradient and the outside temperature.

In all cases, pay attention to the coolant temperature.



- ☞ If this message is displayed, **stop your vehicle as soon as it is safe to do so.**

If the message flashes slowly, wait for the engine to cool before topping up the level, if necessary.

If the message flashes rapidly, contact a PEUGEOT dealer or a qualified workshop without delay.

Braking

Towing a trailer increases the braking distance.

Tyres

- ☞ Check the tyre pressures of the towing vehicle and of the trailer, observing the recommended pressures.


Lighting

- ☞ Check the lighting and signalling on the trailer.

Fitting roof bars


For reasons of safety and to avoid damaging the roof, it is essential to use transverse bars that are approved for your vehicle.

Vehicles fitted with longitudinal bars

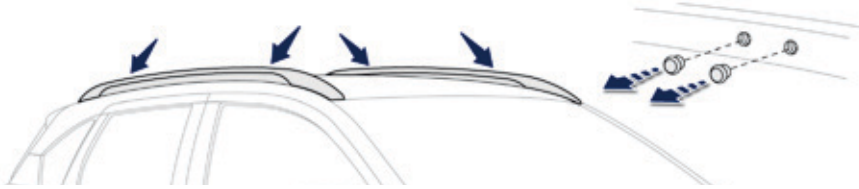

The transverse roof bars are fitted to the longitudinal bars at the 8 fixing points masked by covers. Using a small screwdriver, remove the 8 covers on the inner faces of the longitudinal bars.

Vehicles not fitted with longitudinal bars

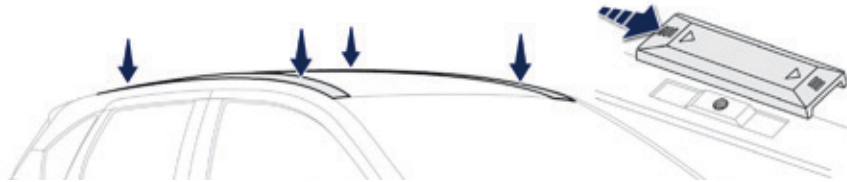

The transverse bars are fitted directly to the roof of the vehicle, at the 4 anchorage points masked by covers.


Slide the covers towards the front of the vehicle to remove them.

Retain the protective covers.

After removing the roof bars, the protective covers should be refitted:

☞ insert the fixing tongues into the apertures then slide the covers towards the rear of the vehicle.

i Use accessories recommended by PEUGEOT and follow the accessory manufacturer's fitting instructions. Maximum authorised weight on the roof bars, for a loading height not exceeding 40 cm (except bicycle carriers): 80 kg. If the height exceeds 40 cm, adapt the speed of the vehicle to the condition of the road, to avoid damaging the roof bars and the fixings on the roof. Please refer to national legislation to comply with the regulations regarding the transportation of objects which are longer than the vehicle.

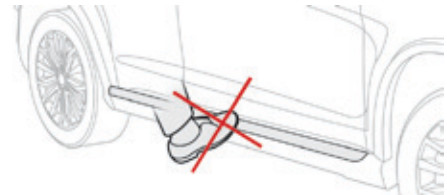

! The body sill finishers should not be used as a step when fitting roof bars.

Accessories

A wide range of accessories and genuine parts is available from the PEUGEOT dealer network.

These accessories and parts are all suitable for your vehicle and benefit from PEUGEOT's recommendation and warranty.

"Comfort":

front and rear parking sensors, smoker's kit, coat hanger on head restraint, insulated module, aluminium footrest, reading lamp, portable scented air freshener, air deflectors, sun blinds...

"Transports solutions":

towbar with quickly detachable ball, roof bars, boot liner, boot spacers, bicycle carrier for roof bars, ski carrier, canoe carrier, rigid roof boxes, flexible roof boxes, boot net...



If a towbar and its harness is fitted outside the PEUGEOT dealer network, this must be done in line with the manufacturer's instructions.

Conversion kits

You can obtain an "Enterprise" kit to convert a trade vehicle to a private car and vice-versa.

"Style":

16 inch alloy wheels, 18 inch alloy wheels, chromed door handle shells, chromed mirror shells, brushed aluminium interior trim kit, gloss black interior trim kit, parking brake lever trim, aluminium gear knob...

"Security and safety":

anti-intrusion alarm, warning triangle, high visibility vest, breathalyser, first aid kit, snow chains, anti-slip covers, wheel security bolts, child seats, fire extinguisher, foglamp kit, dog guard, stolen vehicle tracking system, accessories for pets (seat belts, seat and boot protectors, cage)...

"Protection":

mat*, boot carpet, side protective mouldings, door sill protectors, boot sill protector, vehicle cover, front and rear bumper protective mouldings...

- * To prevent any risk of jamming of the pedals:
- ensure that the mat is positioned and secured correctly,
 - never fit one mat on top of another.

"Multimedia":

semi-integral satellite navigation systems, portable satellite navigation systems, audio systems, speakers, hands-free kit, DVD player, mapping update DVD, driving assistant, Wi-Fi on board, 230V socket, head-up display system, iPhone charger, telephone carrier, rear multimedia carrier...

Installation of radio communication transmitters

Before installing any after-market radio communication transmitter, you can contact a PEUGEOT dealer for the specification of transmitters which can be fitted (frequency, maximum power, aerial position, specific installation requirements), in line with the Vehicle Electromagnetic Compatibility Directive (2004/104/EC).

 Depending on the legislation in force in the country, certain safety equipment may be compulsory: high visibility safety vests, warning triangles, breathalyzers, spare bulbs, spare fuses, fire extinguisher, first aid kit, mud flaps at the rear of the vehicle.

 The fitting of electrical equipment or accessories which are not recommended by PEUGEOT may result in a failure of your vehicle's electronic system and excessive electrical consumption.
Contact a PEUGEOT dealer for information on the range of recommended equipment and accessories.



- 208 HYbrid FE, a technology demonstrator with exceptional characteristics: 1.9 l/100 km (148.7 mpg) and 0 to 100 km/h (0 to 62 mph) in 8 seconds.

PEUGEOT & TOTAL, A PARTNERSHIP TO DELIVER BETTER PERFORMANCE!

Innovation, the key to success

The TOTAL Research and Development and PEUGEOT teams work together to develop high quality lubricants that meet the requirements of PEUGEOT vehicles. For you, this is the assurance that the performance of your engine is optimised while also ensuring its durability.

The 208 HYbrid FE demonstrates the ability of PEUGEOT and TOTAL to develop innovative technologies and provide other ways of moving towards the future.

Reduced exhaust emissions, a true reality

TOTAL lubricants are formulated to optimise the efficiency of engines and the protection of the emissions post-treatment systems. It is important to observe the servicing recommendations made by PEUGEOT to assure correct operation.



PEUGEOT




TOTAL

OFFICIAL PARTNERS


PEUGEOT RECOMMENDS TOTAL

Bonnet


Opening

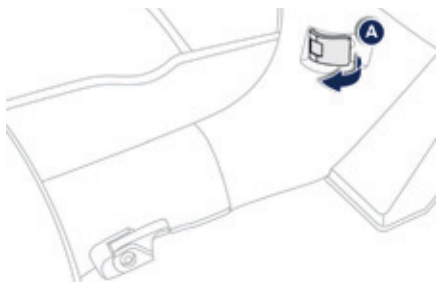

- ☞ Open the left-hand front door.
- ☞ Pull the interior bonnet release lever **A**, located at the bottom of the door aperture.

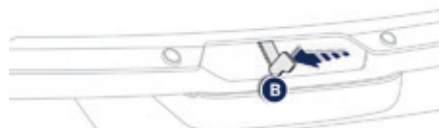

- ☞ Push the exterior safety catch **B** to the left and raise the bonnet.

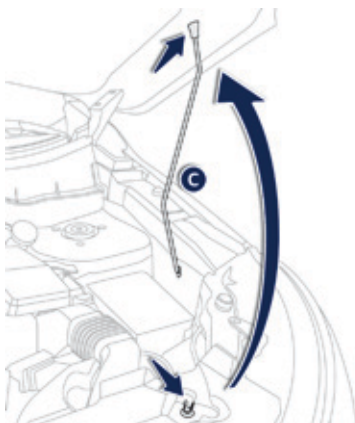

- ☞ Unclip the stay **C** from its housing on the back of the bonnet.
- ☞ Fix the stay in the notch to hold the bonnet open.

! The cooling fan may start after switching off the engine; take care with articles and clothing that might become caught by the fan blades.

i The location of the interior bonnet release lever prevents opening of the bonnet while the front left door is closed.

! Do not open the bonnet in high winds. When the engine is hot, handle the exterior safety catch and the bonnet stay with care (risk of burns).

Closing

- ☞ Take the stay out of the support notch.
- ☞ Clip the stay in its housing on the back of the bonnet.
- ☞ Lower the bonnet and release it at the end of its travel.
- ☞ Pull on the bonnet to check that it is secured correctly.



CLOSE HOOD



CLOSE HOOD


This message appears in the instrument panel screen if the bonnet is not fully closed.

! Because of the presence of electrical equipment under the bonnet, it is recommended that exposure to water (rain, washing, ...) be limited.


Petrol engines

Access for checking the levels of the various fluids and the replacement of certain components.

1. Screenwash and headlamp wash fluid reservoir.
2. Coolant header tank.
3. Brake fluid reservoir.
4. Battery.
5. Fusebox.
6. Air filter.
7. Engine oil dipstick.
8. Engine oil filler cap.

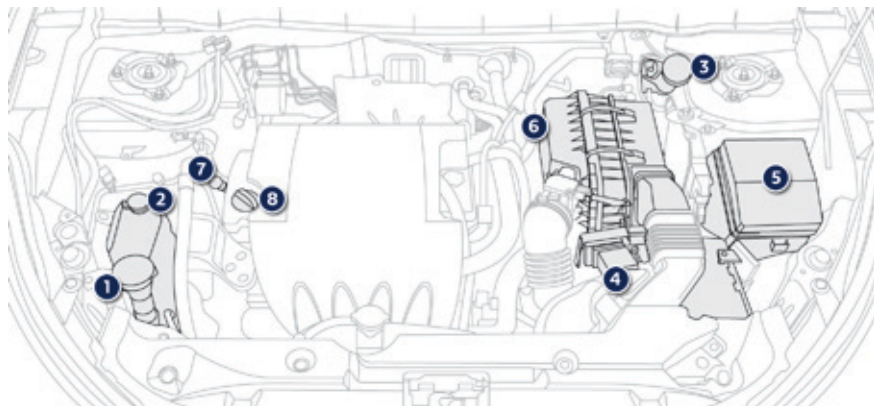

1.6 litre 115

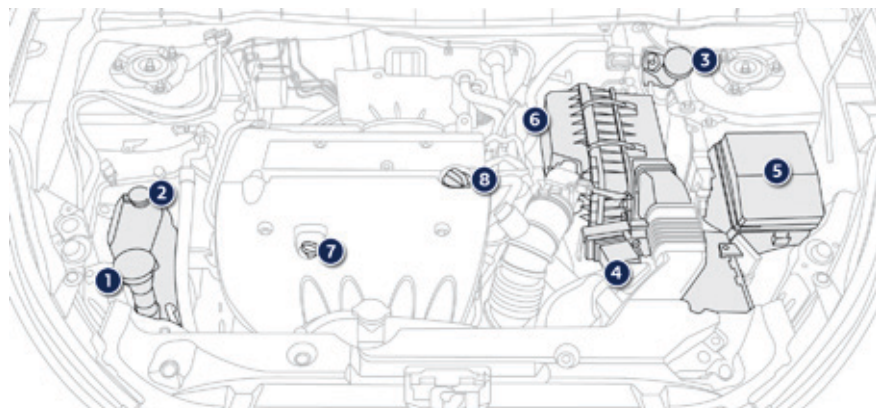


2.0 litre 150


Diesel engines

The various caps and covers allow access for checking the levels of the various fluids, for replacing certain components and for priming the fuel system.

1. Screenwash and headlamp wash fluid reservoir.
2. Coolant reservoir.
3. Brake fluid reservoir.
4. Battery.
5. Fusebox.
6. Air filter.
7. Engine oil dipstick.
8. Engine oil filler cap.
9. Priming pump*.

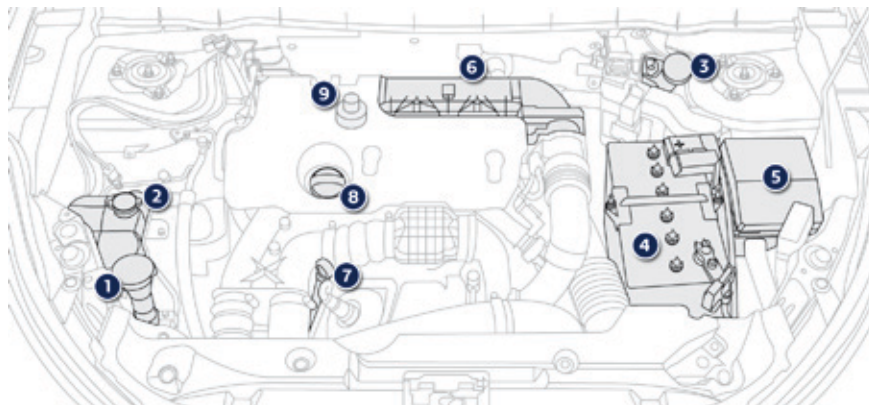

1.6 HDi 110

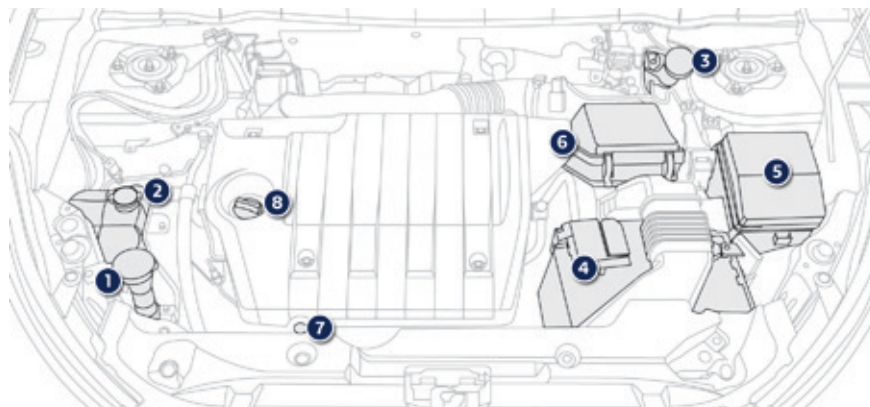

1.8 HDi 150

* According to engine.

Fuel tank

Capacity of the tank: approximately 60 litres.

Low fuel level



When the low fuel level is reached, this indication appears in the instrument panel screen. When it first comes on, you have approximately 10 litres of fuel remaining.

The symbol **flashes slowly** (approximately once per second).

! When the symbol begins to **flash rapidly** (approximately twice per second), there is not much fuel remaining in your tank (approximately 5 litres). You must fill the tank to avoid running out of fuel.

Filling

A label, affixed on the inside of the flap, reminds you of the type of fuel to be used according to your engine.

More than 5 litres of fuel must be added in order to be registered by the fuel gauge.

Location of the cap



This symbol indicates that the fuel tank cap is located on the left-hand side of the vehicle.

Opening the cap may cause an inrush of air. This vacuum, which is completely normal, is caused by the sealing of the fuel system.


To fill the tank safely:

- ☞ **the engine must be switched off,**
- ☞ pull the control **A** located at the bottom left of the driver's seat to release the fuel filler flap,
- ☞ open the fuel filler flap **B**,
- ☞ turn the filler cap **C** to the left,
- ☞ remove the filler cap **C**,
- ☞ fill the tank, but **do not continue after the 3rd cut-off of the nozzle**; this could cause malfunctions.

When you have filled the tank:

- ☞ refit the filler cap, inserting the upper part first,
- ☞ screw in the filler cap to the right,
- ☞ close the flap.

Ensure that the fuel filler flap is closed correctly.

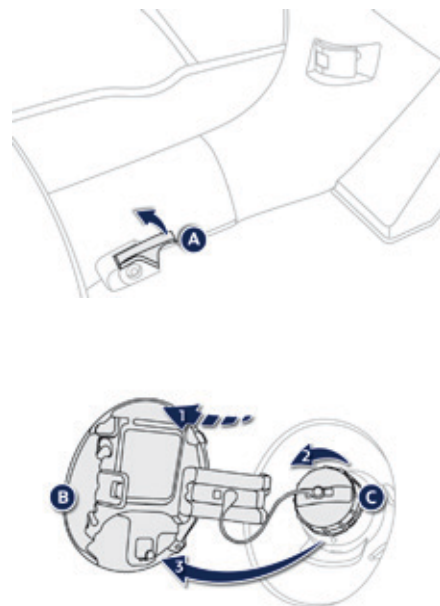

1. Opening the filler flap.
2. Removing the filler cap.
3. Hooking the filler cap.

Quality of the fuel used for petrol engines

The petrol engines are perfectly compatible with E10 type petrol biofuels (containing 10 % ethanol), conforming to European standards EN 228 and EN 15376.

E85 type fuels (containing up to 85 % ethanol) are reserved exclusively for vehicles marketed for the use of this type of fuel (BioFlex vehicles). The quality of the ethanol must comply with European standard EN 15293.

For Brazil only, special vehicles are marketed to run on fuels containing up to 100 % ethanol (E100 type).

1.6 litre petrol engines, even though they have been designed to operate on 95 RON petrol, can accept 90 RON petrol without engine adjustments, but with a slight deterioration in performance.

2.0 litre petrol engines can accept 90 RON or higher petrol.

Quality of the fuel used for Diesel engines

The Diesel engines are perfectly compatible with biofuels which conform to current and future European standards (Diesel fuel which complies with standard EN 590 mixed with a biofuel which complies with standard EN 14214) available at the pumps (containing up to 7 % Fatty Acid Methyl Ester).

The B30 biofuel can be used in certain Diesel engines; however, this use is subject to strict application of the special servicing conditions. Contact a PEUGEOT dealer or a qualified workshop.

The use of any other type of (bio)fuel (vegetable or animal oils, pure or diluted, domestic fuel...) is strictly prohibited (risk of damage to the engine and fuel system).



SP90

SP95

SP95
E10

SP98



DIESEL

Running out of fuel (Diesel)



On vehicles fitted with the 1.6 litre HDi 110 engine, the fuel system must be manually primed if you run out of fuel; refer to the corresponding Diesel engine compartment view.

1.6 litre HDi engine

- ☞ Fill the fuel tank with at least five litres of diesel.
- ☞ Open the bonnet.
- ☞ If necessary, unclip the styling cover for access to the priming pump.
- ☞ Squeeze and release the priming pump repeatedly until resistance is felt (there may be resistance at the first press).
- ☞ Operate the starter until the engine starts (if the engine does not start at the first attempt, wait around 15 seconds before trying again).
- ☞ If the engine does not start after a few attempts, operate the priming pump again then start the engine.
- ☞ Clip the styling cover back in place.
- ☞ Close the bonnet.

Checking levels

Check all of these levels regularly, in line with the warranty and maintenance record. Top them up if necessary, unless otherwise indicated. If a level drops significantly, have the corresponding system checked by a PEUGEOT dealer or a qualified workshop.

! Take care when working under the bonnet, as certain areas of the engine may be extremely hot (risk of burns) and the cooling fan could start at any time (even with the ignition off).

Oil level



The check of the the level is done out with the dipstick, located under the bonnet. Refer to the description of your engine compartment for the position of the dipstick.

This check will only be correct if the vehicle is on level ground and the engine has been off for more than 30 minutes.

It is normal to top up the oil level between two services (or oil changes). PEUGEOT recommends that you check the level, and top up if necessary, every 3 000 miles (5 000 km). After topping up the oil, the check when switching on the ignition with the oil level indicator in the instrument panel is not valid during the 30 minutes after topping up.

Engine oil change

Refer to the warranty and maintenance record for details of the interval for this operation. In order to maintain the reliability of the engine and emission control system, never use additives in the engine oil.

Oil specification

The oil must be the correct grade for your engine and conform to the manufacturer's recommendations.

Dipstick

There are two marks on the dipstick:



A = maximum

If the level is above this mark, contact a PEUGEOT dealer or a qualified workshop.

B = minimum

Top up the level through the oil filler orifice, using the correct grade of oil for your engine. The level must never be below this mark.

Brake fluid level



The brake fluid level should be close to the "MAX" mark. If it is not, check the brake pad wear.


Changing the fluid

Refer to the warranty and maintenance record for details of the interval for this operation.

Fluid specification

The brake fluid must conform to the manufacturer's recommendations and meet the DOT3 or DOT4 standard.

Coolant level

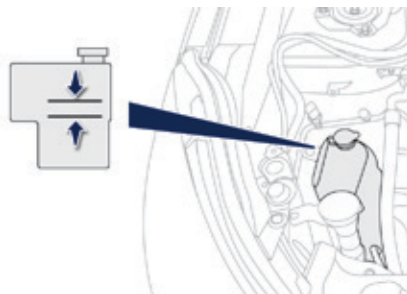

The coolant level should be between the two marks.

When the engine is warm, the temperature of the coolant is regulated by the fan.

The cooling fan may start after switching off the engine; take care with articles and clothing that might become caught by the fan blades.


In addition, as the cooling system is pressurised, wait at least one hour after switching off the engine before carrying out any work.

To avoid any risk of scalding, unscrew the cap by two turns to allow the pressure to drop. When the pressure has dropped, remove the cap and top up the level.

Fluid specification

The coolant must conform to the manufacturer's recommendations.

Screenwash and headlamp wash fluid

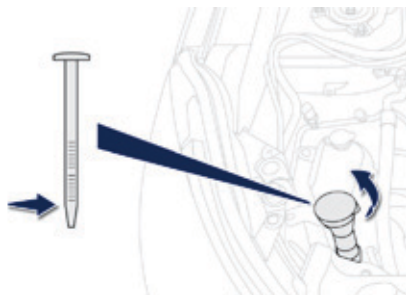

To check or top up the fluid, stop the vehicle, apply the parking brake and switch off the engine.

- ☞ Open the bonnet and secure it with the stay.
- ☞ Open the filler cap for the screenwash reservoir.
- ☞ Check the level using the gauge, then top-up if necessary.
- ☞ Refit the cap on the reservoir and close the bonnet.

Fluid specification

For optimum cleaning, this fluid must not be topped up with or replaced with plain water.

i In wintry conditions, the use of fluid with an ethyl alcohol or methanol base is recommended.

Additive level (1.6 HDi 110 Diesel versions with particle filter)



SERVICE REQUIRED



DPF SYSTEM
SERVICE REQUIRED

The additive reservoir low level is indicated by the display of this message.

Topping up

The reservoir must be topped up without delay by a PEUGEOT dealer or a qualified workshop.

Used products



Avoid prolonged contact of used oil or fluids with the skin.

Most of these fluids are harmful to health or indeed very corrosive.



Do not discard used oil or fluids into sewers or onto the ground. Take used oil to a PEUGEOT dealer or a qualified workshop (France) or to an authorised waste disposal site.

Checks

Unless otherwise indicated, check these components in accordance with the warranty and maintenance record and according to your engine. Otherwise, have them checked by a PEUGEOT dealer or a qualified workshop.


12 V battery



Electrolyte level

For access to the battery, refer to the "12V battery" section.

The electrolyte level must be between the "LOWER LEVEL" and "UPPER LEVEL" marks.

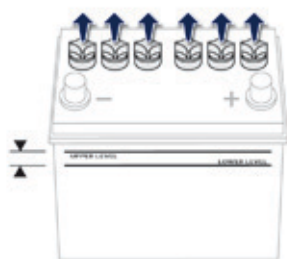

If necessary, top up using distilled water, removing the battery cap from each cell. Check the electrolyte level at least once a month.

When carrying out work on the battery, refer to "12V battery" section for details of the precautions to be taken before disconnecting the battery and following its reconnection.

Air filter and passenger compartment filter



Refer to the warranty and maintenance record for details of the replacement intervals for these components.

Depending on the environment (e.g. dusty atmosphere) and the use of the vehicle (e.g. city driving), **replace them twice as often if necessary.**

A clogged passenger compartment filter may have an adverse effect on the performance of the air conditioning system and generate undesirable odours.

Oil filter



Replace the oil filter each time the engine oil is changed.

Refer to the warranty and maintenance record for details of the replacement interval for this component.

Particle filter (Diesel)



The start of saturation of the particle filter is indicated by the temporary illumination of this warning lamp accompanied by a message in the instrument panel screen.

i As soon as the traffic conditions permit, regenerate the filter by driving at a speed of at least 25 mph (40 km/h) for about 20 minutes (with the 1.6 litre HDi engine the minimum speed is 36 mph (60 km/h)).
If the warning lamp stays on, this indicates a low additive level.

On a new vehicle, the first particle filter regeneration operations may be accompanied by a "burning" smell, which is perfectly normal.
Following prolonged operation of the vehicle at very low speed or at idle, you may, in exceptional circumstances, notice the emission of water vapour at the exhaust on acceleration. This does not affect the behaviour of the vehicle or the environment.

Manual gearbox



Refer to the warranty and maintenance record for servicing of the gearbox.

"CVT" gearbox



Refer to the warranty and maintenance record for servicing of the "CVT" gearbox.

Brake pads



Brake wear depends on the style of driving, particularly in the case of vehicles used in town, over short distances. It may be necessary to have the condition of the brakes checked, even between vehicle services.

Unless there is a leak in the circuit, a drop in the brake fluid level indicates that the brake pads are worn.

Brake disc wear



For information on checking brake disc wear, contact a PEUGEOT dealer or a qualified workshop.

Parking brake



If excessive travel or a loss of effectiveness of this system is noticed, the parking brake must be checked, even between two services.

Checking this system must be done by a PEUGEOT dealer or a qualified workshop.



Only use products recommended by PEUGEOT or products of equivalent quality and specification.

In order to optimise the operation of units as important as those in the braking system, PEUGEOT selects and offers very specific products.

After washing the vehicle, dampness, or in wintry conditions, ice can form on the brake discs and pads: braking efficiency may be reduced. Make light brake applications to dry and defrost the brakes.

Engines and gearboxes

PETROL ENGINES	1.6 litre 115	2.0 litre 150			
Model codes: BU...	NKZ7 NKZ7/S NKZ0 NKZ0/S	AFYR AFZ7	AFYV AFZM	AFYT AFZH	AFYW AFZP
Transmission mode	2WD	2WD	4WD	2WD	4WD
Cubic capacity (cc)	1 590	1 998			
Bore x stroke (mm)	75 x 90	86 x 86			
Max power*: EU standard (kW)	86	113			
Max power engine speed (rpm)	6 000	6 000			
Max torque: EU standard (Nm)	154	199			
Max torque engine speed (rpm)	4 000	4 200			
Fuel	Unleaded	Unleaded			
Catalytic converter	Yes	Yes			
GEARBOXES	Manual (5-speed)	Manual (5-speed)		CVT (6-speed)	
OIL CAPACITY (in litres)					
Engine (with filter replacement)	4.2	4.3			

.../S: model fitted with the Stop & Start (AS&G) function.

* The maximum power corresponds to the value type-approved on a test bed, under conditions defined in European legislation (Directive 1999/99/EC).

Petrol weights and towed loads (kg)

The values for maximum towed weights type approved according to the sales zone (see the tables on the following pages).

The exact values are given in your vehicle's registration document as well as on the manufacturer's plate.

They are also mentioned in sales brochures. For more details, contact a PEUGEOT dealer or a qualified workshop.

The kerb weight is equal to the unladen weight + driver (75 kg).

i The weight of the braked trailer can be increased, within the GTW limit, if the GVW of the towing vehicle is reduced by an equal amount. **Please note that towing using a lightly loaded towing vehicle may have an adverse effect on its road holding.**

The GTW and towed load values indicated are valid up to a maximum altitude of 1 000 metres; the towed load mentioned must be reduced by 10 % for each additional 1 000 metres of altitude.

The speed of a towing vehicle must not exceed 60 mph (100 km/h) (comply with the legislation in force in your country).

High ambient temperatures may result in a reduction in the performance of the vehicle to protect the engine; if the ambient temperature is above 37 °C, limit the towed load.

For zones: Europe, Turkey, French overseas dominions and territories.

PETROL ENGINES	1.6 litre 115
Gearboxes	Manual (5-speed)
Model codes: BU...	NKZ0 NKZ0/S
Transmission mode	2WD
- Unladen weight	1 310
- Kerb weight	1 385
- Gross vehicle weight (GVW)	1 870
- Gross vehicle weight (GVW) when towing	1 925
- Gross train weight (GTW) on a 12% gradient	3 025
- Braked trailer (within GTW limit) on a 10% or 12% gradient	1 100
- Unbraked trailer	685
- Recommended nose weight	55

For: Russia, Ukraine, Morocco, Argentina, Chile, French overseas dominions and territories (2.0 litre 150 engine).

PETROL ENGINES	1.6 litre 115	2.0 litre 150			
Gearboxes	Manual (5-speed)	Manual (5-speed)		CVT (6-speed)	
Model codes: BU...	NKZ7	AFZ7	AFZM	AFZH	AFZP
Transmission mode	2WD	2WD	4WD	2WD	4WD
- Unladen weight	1 315	1 355	1 420	1 385	1 450
- Kerb weight	1 390	1 430	1 495	1 460	1 525
- Gross vehicle weight (GVW)	1 870	1 970	1 970	1 970	1 970
- Gross vehicle weight (GVW) when towing	1 925	2 035	2 035	2 035	2 035
- Gross train weight (GTW) on a 12% gradient	3 025	3 335	3 335	3 335	3 335
- Braked trailer (within GTW limit) on a 10% or 12% gradient	1 100	1 300	1 300	1 300	1 300
- Unbraked trailer	685	715	745	725	750
- Recommended nose weight	55	65	65	65	65

For: Australia, New-Zealand.

PETROL ENGINES	2.0 litre 150			
Gearboxes	Manual (5-speed)		CVT (6-speed)	
Model codes: BU...	AFZ7	AFZM	AFZH	AFZP
Transmission mode	2WD	4WD	2WD	4WD
- Unladen weight	1 350	1 415	1 380	1 445
- Kerb weight	1 425	1 490	1 455	1 520
- Gross vehicle weight (GVW)	1 970	1 970	1 970	1 970
- Gross vehicle weight (GVW) when towing	2 035	2 035	2 035	2 035
- Gross train weight (GTW) on a 12% gradient	3 020	3 020	3 020	3 020
- Braked trailer (within GTW limit) on a 10% or 12% gradient	1 050	1 050	1 050	1 050
- Unbraked trailer	750	750	750	750
- Recommended nose weight	65	65	65	65

For: South Africa.

PETROL ENGINES	2.0 litre 150			
Gearboxes	Manual (5-speed)		CVT (6-speed)	
Model codes: BU...	AFYR	AFYV	AFYT	AFYW
Transmission mode	2WD	4WD	2WD	4WD
- Unladen weight	1 350	1 415	1 390	1 455
- Kerb weight	1 425	1 490	1 465	1 530
- Gross vehicle weight (GVW)	1 970	1 970	1 970	1 970
- Gross vehicle weight (GVW) when towing	2 035	2 035	2 035	2 035
- Gross train weight (GTW) on a 12% gradient	3 075	3 075	2 760	2 760
- Braked trailer (within GTW limit) on a 10% or 12% gradient	1 050	1 050	750	750
- Unbraked trailer	1 050	1 050	750	750
- Recommended nose weight	65	65	65	65

For other countries of sale.

PETROL ENGINES	2.0 litre 150			
Gearboxes	Manual (5-speed)		CVT (6-speed)	
Model codes: BU...	AFYR AFZ7	AFYV AFZM	AFYT AFZH	AFYW AFZP
Transmission mode	2WD	4WD	2WD	4WD
- Unladen weight	1 340	1 405	1 370	1 435
- Kerb weight	1 415	1 480	1 445	1 510
- Gross vehicle weight (GVW)	1 970	1 970	1 970	1 970
- Gross vehicle weight (GVW) when towing	2 035	2 035	2 035	2 035
- Gross train weight (GTW) on a 12% gradient	2 655	2 655	-*	-*
- Braked trailer (within GTW limit) on a 10% or 12% gradient	650	650	-*	-*
- Unbraked trailer	650	650	-*	-*
- Recommended nose weight	65	65	-*	-*

* Vehicle not for towing.

Engines and gearboxes

DIESEL ENGINES	1.6 HDi 110		1.8 HDi 150	
Model codes: BU...	9HD8/S	9HDB/S	6HZ8/S	6HZB 6HZB/S
Transmission mode	2WD	4WD	2WD	4WD
Cubic capacity (cc)	1 560		1 798	
Bore x stroke (mm)	77 x 88.3		83 x 83.1	
Max power*: EU standard (kW)	84		110	
Max power engine speed (rpm)	3 600		4 000	
Max torque: EU standard (Nm)	270		300	
Max torque engine speed (rpm)	1 750		2 000 to 3 000	
Fuel	Diesel		Diesel	
Catalytic converter	Yes		Yes	
Particle filter (FAP)	Yes		Yes	
GEARBOXES	Manual (6-speed)		Manual (6-speed)	
OIL CAPACITY (in litres)				
Engine (with filter replacement)	3.75		5.3	

...**JS**: model fitted with the Stop & Start (AS&G) function.

* The maximum power corresponds to the value type-approved on a test bed, under conditions defined in European legislation (Directive 1999/99/EC).

Diesel weights and towed loads (kg)

The values for maximum towed weights type approved according to the sales zone (see the tables on the following pages).

The exact values are given in your vehicle's registration document as well as on the manufacturer's plate.

They are also mentioned in sales brochures. For more details, contact a PEUGEOT dealer or a qualified workshop.

The kerb weight is equal to the unladen weight + driver (75 kg).

i The weight of the braked trailer can be increased, within the GTW limit, if the GVW of the towing vehicle is reduced by an equal amount. **Please note that towing using a lightly loaded towing vehicle may have an adverse effect on its road holding.**

The GTW and towed load values indicated are valid up to a maximum altitude of 1 000 metres; the towed load mentioned must be reduced by 10 % for each additional 1 000 metres of altitude.

The speed of a towing vehicle must not exceed 60 mph (100 km/h) (comply with the legislation in force in your country).

High ambient temperatures may result in a reduction in the performance of the vehicle to protect the engine; if the ambient temperature is above 37 °C, limit the towed load.

For zones: Europe, Turkey, French overseas dominions and territories.

DIESEL ENGINES	1.6 HDi 110		1.8 HDi 150	
Gearboxes	Manual (6-speed)		Manual (6-speed)	
Model codes: BU...	9HD8/S	9HDB/S	6HZ8/S	6HZB/S
Transmission mode	2WD	4WD	2WD	4WD
- Unladen weight	1 315	1 425	1 430	1 495
- Kerb weight	1 390	1 500	1 505	1 570
- Gross vehicle weight (GVW)	2 060	2 060	2 060	
- Gross vehicle weight (GVW) when towing	2 130	2 130	2 130	
- Gross train weight (GTW) on a 12% gradient	3 260	3 260	3 530	
- Braked trailer (within GTW limit) on a 10% or 12% gradient	1 130	1 130	1 400	
- Braked trailer (with transfer of load within the GTW limit)	1 300	1 300	-	
- Unbraked trailer	695	750	750	
- Recommended nose weight	70	70	70	

For: Russia, Ukraine, Morocco, Argentina, Chile.

DIESEL ENGINES	1.6 HDi 110		1.8 HDi 150	
Gearboxes	Manual (6-speed)		Manual (6-speed)	
Model codes: BU...	9HD8/S	9HDB/S	6HZ8/S	6HZB/S
Transmission mode	2WD	4WD	2WD	4WD
- Unladen weight	1 410	1 475	1 480	1 545
- Kerb weight	1 485	1 550	1 555	1 620
- Gross vehicle weight (GVW)	2 060	2 060	2 060	
- Gross vehicle weight (GVW) when towing	2 130	2 130	2 130	
- Gross train weight (GTW) on a 12% gradient	3 260	3 260	3 530	
- Braked trailer (within GTW limit) on a 10% or 12% gradient	1 130	1 130	1 400	
- Braked trailer (with transfer of load within the GTW limit)	1 300	1 300	-	
- Unbraked trailer	695	750	750	
- Recommended nose weight	70	70	70	

For: Australia, New Zealand.

DIESEL ENGINES	1.6 HDi 110		1.8 HDi 150
Gearboxes	Manual (6-speed)		Manual (6-speed)
Model codes: BU...	9HD8/S	9HDB/S	6H2B 6H2B/S
Transmission mode	2WD	4WD	4WD
- Unladen weight	1 410	1 475	1 530
- Kerb weight	1 485	1 550	1 605
- Gross vehicle weight (GVW)	2 060	2 060	2 060
- Gross vehicle weight (GVW) when towing	2 130	2 130	2 130
- Gross train weight (GTW) on a 12% gradient	3 110	3 110	3 110
- Braked trailer (within GTW limit) on a 10% or 12% gradient	1 050	1 050	1 050
- Unbraked trailer	750	750	750
- Recommended nose weight	70	70	70

For: South Africa.


DIESEL ENGINES	1.6 HDi 110	
Gearboxes	Manual (6-speed)	
Model codes: BU...	9HD8/S	9HDB/S
Transmission mode	2WD	4WD
- Unladen weight	1 420	1 485
- Kerb weight	1 495	1 560
- Gross vehicle weight (GVW)	2 060	2 060
- Gross vehicle weight (GVW) when towing	2 130	2 130
- Gross train weight (GTW) on a 12% gradient	3 321	3 321
- Braked trailer (within GTW limit) on a 10% or 12% gradient	1 200	1 200
- Unbraked trailer	750	750
- Recommended nose weight	70	70

For other countries of sale.

DIESEL ENGINES	1.6 HDi 110	
Gearboxes	Manual (6-speed)	
Model codes: BU...	9HD8/S	9HDB/S
Transmission mode	2WD	4WD
- Unladen weight	1 420	1 485
- Kerb weight	1 495	1 560
- Gross vehicle weight (GVW)	2 060	2 060
- Gross vehicle weight (GVW) when towing	2 130	2 130
- Gross train weight (GTW) on a 12% gradient	2 745	2 745
- Braked trailer (within GTW limit) on a 10% or 12% gradient	650	650
- Unbraked trailer	650	650
- Recommended nose weight	70	70


Dimensions (in mm)

These dimensions have been measured on a vehicle that is not loaded.

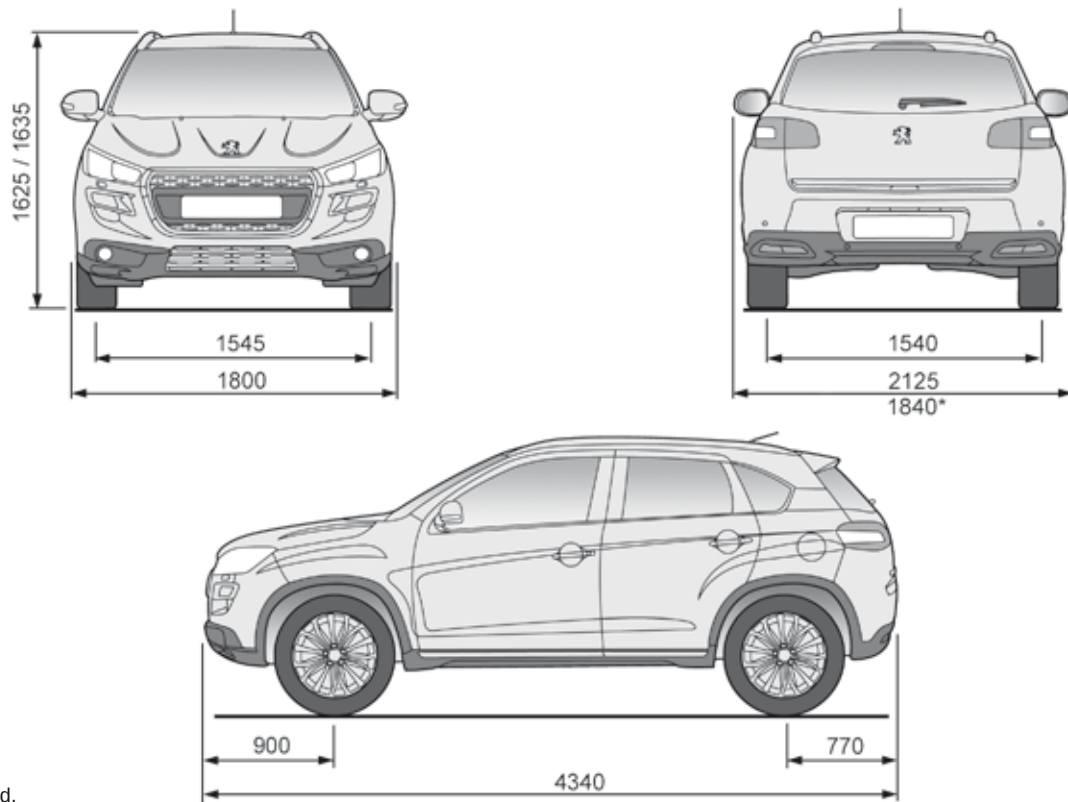

* Mirrors folded.

Off-road performance

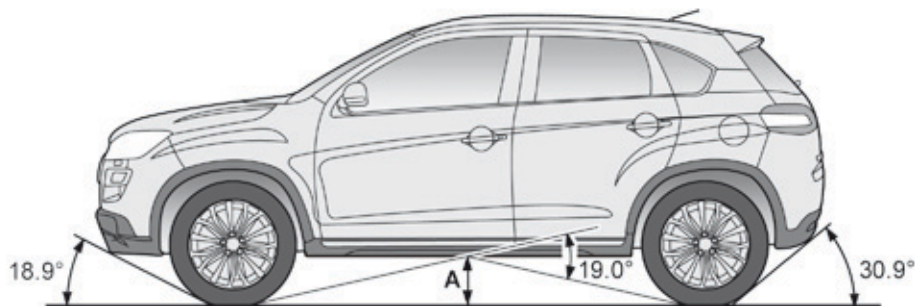


Engine	Ground clearance* A	Approach angle	Departure angle	Break-over angle
1.6 litre 115	190 mm	18.9 °	30.9 °	19.0 °
2.0 litre 150	201 mm			
1.6 litre HDi 110	178 mm			
1.8 litre HDi 150	182 mm			

* Vehicle unladen.

Identification markings

Various visible markings for the identification and tracing of your vehicle.

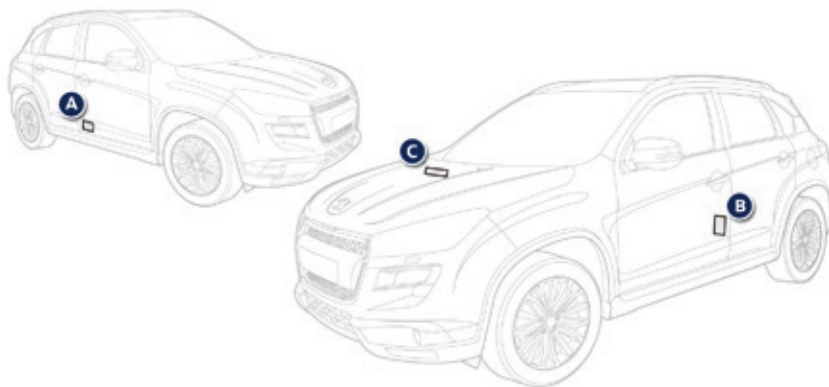

A. Manufacturer's plate.

It is riveted to the right hand middle pillar and carries the following information:

- manufacturer,
- EU type approval number,
- vehicle identification number (VIN),
- gross vehicle weight,
- gross train weight,
- maximum front axle weight,
- maximum rear axle weight.

B. Tyre label.

This label is affixed to the the driver's side middle pillar and carries the following information:

- tyre sizes,
- tyre pressures.


C. Vehicle Identification Number (VIN) under the bonnet.

This number is engraved on the bodywork near the damper support.

i The tyre pressures must be checked when the tyres are cold, at least once a month.

☘ If the tyre pressures are too low, this increases fuel consumption.

BLUETOOTH® TELEPHONE WITH VOICE RECOGNITION

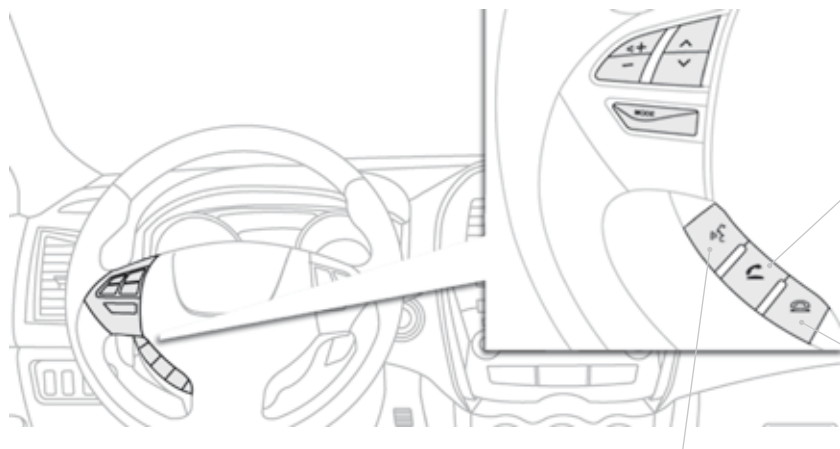

SPEAK

Press this button to activate voice recognition ("**Listening**" is displayed).
During a voice recognition, press this button briefly to put this voice recognition on hold.
Make a long press on this button to deactivate voice recognition.
Press this button briefly to activate voice recognition, even during a call.

ANSWER A CALL

Press this button to accept an incoming call.

In the event of a 2nd incoming call, press to put the 1st call on hold and speak to the second caller.

In this case, press briefly to switch from one call to the other.

To establish a three-way conversation, press on SPEAK to change from voice recognition and say "**Incorporate the call**".

END CALL

Press this button to reject an incoming call.

During a conversation, press this button to end the call.

BLUETOOTH® TELEPHONE WITH VOICE RECOGNITION



Change the voice command language



What is the Bluetooth® hands-free telephone with voice recognition?

The system uses wireless communication technology known as Bluetooth® which allows you to make hands-free telephone calls in your vehicle via your Bluetooth® compatible mobile telephone.

You can make telephone calls using a microphone located in the courtesy lamp, making use of the simple steering mounted controls or by the voice recognition function with voice commands. Five languages are available: English (the default), Spanish, French, German and Italian.



By default, the voice recognition system is in English.




If you do not start the training procedure within around 3 minutes of pressing SPEAK, the process is cancelled.

If you press SPEAK within 5 seconds following the play of a voice command, this command is saved again.

1



Press this button.

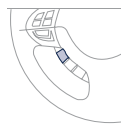

2



Say "**Setup**".

3



Say "**Language**".

4

The system says "**Select a language: English, Spanish, French, German or Italian**".

5



Say the language of your choice in English, example: say "**French**" for French.

6

The system then says "**French selected. Is this correct?**"

7



Say "**Yes**" to start the change of language process
Say "**No**" to return to steps 4 to 7.

8

The system repeats the language chosen and completes the change of language process.

BLUETOOTH® TELEPHONE WITH VOICE RECOGNITION



Training the user's voice




You can use the user voice training function to create a voice model for one person per language.
The characteristics of your voice and your pronunciation are saved in this model to provide the best voice recognition.
The vehicle must be stationary with the parking brake applied.
Switch off your telephone during the operation to avoid any interruption.

1



Press this button.

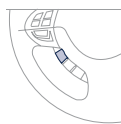

2



Say "Word training".


3

An explanation message is given.

4



When you are ready to start, press and hold this button.

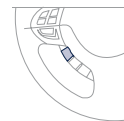

5

The system says the first of 45 standard phrases.

6



Repeat each of the phrases in the table on the following page.
The system saves your voice and moves on to the next command.
Continue the process until all of the phrases have been saved.

7

After playing all the voice commands, the system says "**The word training is complete**" and ends the process.

!

If you do not start the programming process within approximately 3 minutes after pressing the SPEAK button, the process is cancelled.
If you press the SPEAK button within 5 seconds of the play of a voice command, this command is saved again.

BLUETOOTH® TELEPHONE WITH VOICE RECOGNITION



Voice training commands

1	# 790 (for # = "Hash")	16	55 66 77 88 99	31	Home, Work, Mobile, Pager
2	* 671 (for * = "Star")	17	44 33 22 11 00	32	List of names
3	212 - 4 903	18	Call 293 - 5804	33	No
4	235 - 3 494	19	Call * 350	34	Phone book: Delete
5	315- 5 657	20	Call 1 (234) 567 - 8 901	35	Phone book: New entry
6	456 - 7 930	21	Dial 639 - 1542	36	Previous
7	793 - 5 462	22	Dial # 780	37	Phone book: Clear all
8	794 - 1 826	23	Dial (987) 654 - 3210	38	Redial
9	826 - 3 145	24	1058# 3794# Send	39	Repeat the training
10	962 - 7 305	25	27643# 4321# Send	40	Configure the confirmation requests
11	(531) 742 - 9 860	26	Cancel	41	Configure the language
12	(632) 807 - 4 591	27	Continue	42	Configure the matching options
13	(800) 222 - 5 015	28	Emergency number	43	Match a telephone
14	(888) 555 - 1 212	29	Clear all	44	Transfer the call
15	0 123 456 789	30	Help	45	Yes

BLUETOOTH® TELEPHONE WITH VOICE RECOGNITION



Pairing a Bluetooth® telephone First connection



For reasons of safety and because the sustained attention of the driver is needed, operations of matching a Bluetooth® mobile phone with the audio system's hands-free function must be done with the **vehicle stationary**.




The system can register up to 7 Bluetooth® compatible mobile telephones.
The telephone which has the highest level of priority is connected automatically.

1



Press this button.

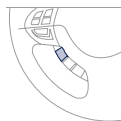

2



Say "**Configure**".

3



Say "**Pairing options**".

4

The system says "**Do you wish to pair a telephone, delete a telephone or obtain the list of paired telephones?**".

5



Say "**Pair a telephone**".

6

The systems says "**Please say the 4 digits of a pairing code**".

7



Say a 4-digit number which will be recorded as the pairing code.

8



The system confirms the validity of the number spoken, answer "**Yes**".
Say "**No**" to return to step 7.

!

Remember this pairing code as you must enter it in the telephone in one of the following steps of the matching procedure.

BLUETOOTH® TELEPHONE WITH VOICE RECOGNITION



The services available depend on the network, the SIM card and the compatibility of the Bluetooth® telephone used. Check in your telephone user manual and with your service provider for the services you have access to.

9

The system says **"Start the pairing procedure on the telephone. Consult the instructions in the telephone manual"**.

10



Consult your mobile telephone's user manual and enter the pairing code recorded in step 7 in the telephone.



If the code is incorrect, the system locks. To clear the code:

- check that the telephone's voice recognition is not activated,
- with the ignition on and the audio system active, press the END CALL button for 2 seconds, 3 times in succession.

11

When it detects a Bluetooth® compatible mobile telephone, the system says **"Please say the name of the telephone after the beep"**.

12



After the audible signal, allocate a name to the telephone by saying the name of your choice.

13

The system says **"Allocate an order of priority between 1 and 7. One is the highest level of priority"**.

14



Give a number between 1 and 7 to establish the level of priority of the mobile telephone.

15

The system says and confirms the **"name of the telephone"** and the **"number"** of its priority.

16



Answer **"Yes"**.
Say **"No"** to return to step 13.

17

The systems says **"Pairing complete"** then emits an audible signal and deactivates the voice recognition.



If the system does not detect the Bluetooth® compatible mobile telephone, the matching process stops and is accompanied by an audible signal.

If you select a level of priority which has already been allocated to another telephone, the system asks you if you wish to replace this level of priority.

BLUETOOTH® TELEPHONE WITH VOICE RECOGNITION



Using a telephone number


!

You must have first paired a Bluetooth® compatible mobile telephone with the system.

1



Press this button.

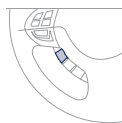

2



Say "**Dial**".

3

The system says "**Number please**".

4



Call out the telephone number.

5



The system asks you to confirm this number,
answer "**Yes**".
Say "**No**" to return to the previous step.

BLUETOOTH® TELEPHONE WITH VOICE RECOGNITION



Saving a name in the system phone book




The system has its own phone book, independent of that of the mobile telephone.
It can contain up to 32 names for each language.
Each name in the phone book is associated with 4 locations:
HOME, WORK, MOBILE and PAGER.

1



Press this button.

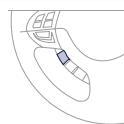

2



Say **"Phone book"**.

3

The system says **"Select one of the following items: New Entry, Change, List of names, Delete or Clear all, or say Cancel to return to the main menu"**.

4



Say **"New entry"**.

5

The system says **"Name please"**.

6



Give the name of your choice.

7

The system says **"HOME, WORK, MOBILE OR PAGER"**.

8



Give the location which corresponds to the number that you wish to record.

9

The system asks you to confirm the location.

10



Answer **"Yes"**.
Say **"No"** to return to step 7.

11

If a telephone number has already been recorded for this location, the system says **"The current number is -number-, number please"**.

12



If you do not wish to change the telephone number, repeat the original number to retain it, otherwise say the new number.

13

The system asks you to confirm the number.

14



Answer **"Yes"**.
Say **"No"** to return to step 11.

BLUETOOTH® TELEPHONE WITH VOICE RECOGNITION



Using a name in the system phone book


!

You must have first paired a compatible Bluetooth® mobile telephone with the system.

1



Press this button.

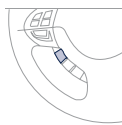

2



Say "**Call**".

3

The system says "**Name please**".

4



Give the name of the person that you wish to call.

5

If several telephone numbers have been recorded for this person, the system says "**Do you wish to call <name> {home}, {work}, {mobile} or {pager}?**"

6



Give the location corresponding to the number that you wish to call.

7

The system request confirmation of the name.

8



Answer "**Yes**".
Say "**No**" to return to step 4.

9

The system says "**Call to <name> at <location>**" and makes the call.

BLUETOOTH® TELEPHONE WITH VOICE RECOGNITION




Redial the last number called

1



Press this button.

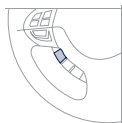

2



Say "**Redial**".

Receiving a call



The telephone ring is sent to the speaker by the front passenger's seat.


If an audio source (CD, radio, ...) is in operation when the call is received, it is placed on MUTE and only the incoming call is heard.

When the ignition switch is in the ACC or ON position, the audio system is activated automatically if an incoming call is received, even if it was originally off.

1



Press this button.

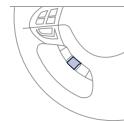

At the end of the call, the audio system returns to its previous state.

BLUETOOTH® TELEPHONE WITH VOICE RECOGNITION



Voice commands (1/2)



Press this button to start the voice recognition.

Configure	Divert the call	Home, at home
Phone book	Add a location	Work, at work
Dial	Configure the confirmation requests	Mobile, on mobile
Call	Language	Pager, on pager
Redial	New entry	Help
Emergency number	Delete	Continue
Pairing options	Change	All
Pair a telephone	Call this number	Cancel
Delete a telephone	Change another entry	Mute
List of paired telephones	Try again	Deactivate mute
Select a telephone	Clear all	Yes
Previous	List of names	No



When the system is waiting for a voice command, say "**Help**" to obtain a list of commands which can be used in the current situation.

BLUETOOTH® TELEPHONE WITH VOICE RECOGNITION



Voice commands (2/2)



Press this button to start the voice recognition.

Zero	English	Word training
One	Phone book New entry	PIN
Two	Phone book Change	Repeat training
Three	Phone book Delete	Activate
Four	Phone book Clear All	Deactivate
Five	Phone book List of names	Incorporate the call
Six	Configure the confirmation requests	<digits> Send
Seven	Configure Select a telephone	
Eight	Configure the pairing options	
Nine	Delete a name	
Star (*)	Configure the language	
Hash (#)	Configure the PIN	



When the system is waiting for a voice command, say "**Help**" to obtain a list of commands which can be used in the current situation.



TOUCH SCREEN AUDIO-TELEMATIC system



The system is protected in such a way that it will only operate in your vehicle.



For safety reasons, the driver must carry out operations which require prolonged attention while the vehicle is stationary.

When the engine is switched off and to prevent discharging of the battery, the system switches off following the activation of the energy economy mode.

CONTENTS

01	First steps - Control panel	p. 250
02	Steering mounted controls	p. 251
03	General operation	p. 253
04	Navigation	p. 254
05	Media	p. 270
06	Settings	p. 282
07	Information	p. 284
08	BLUETOOTH® streaming - telephone	p. 288

01 FIRST STEPS


PWR/VOL:

- audio system on/off.
- volume adjustment for the audio and telephone functions.

Short press: change the audio source.

Long press: CD / MP3 / USB, SD, for fast forward or back.

Long press: RADIO, automatic frequency search down/up.

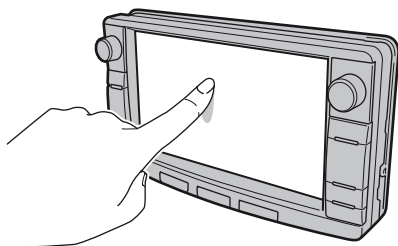

Move a finger over the screen to operate the system.

Use the buttons offered on the screen.


! For safety reasons, the driver must only carry out operations which require prolonged attention with the vehicle stationary.



FOLDER: allows selection of a folder or a manual search for a radio station.

ZOOM: zoom the map in or out.


Allows the colour map screen to be switched between day and night mode according to the state of the vehicle's lighting.

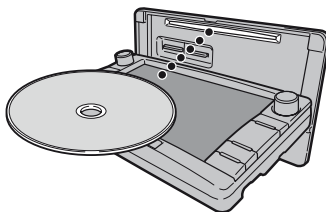


OPEN: Allows the screen panel to be opened or closed to insert or remove a CD or SD cards.


Insert the SD card containing the navigation mapping data into the left hand slot.

Insert the SD card containing the audio data into the right hand slot.

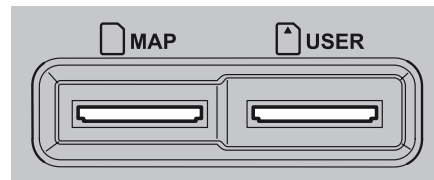

02 STEERING MOUNTED CONTROLS

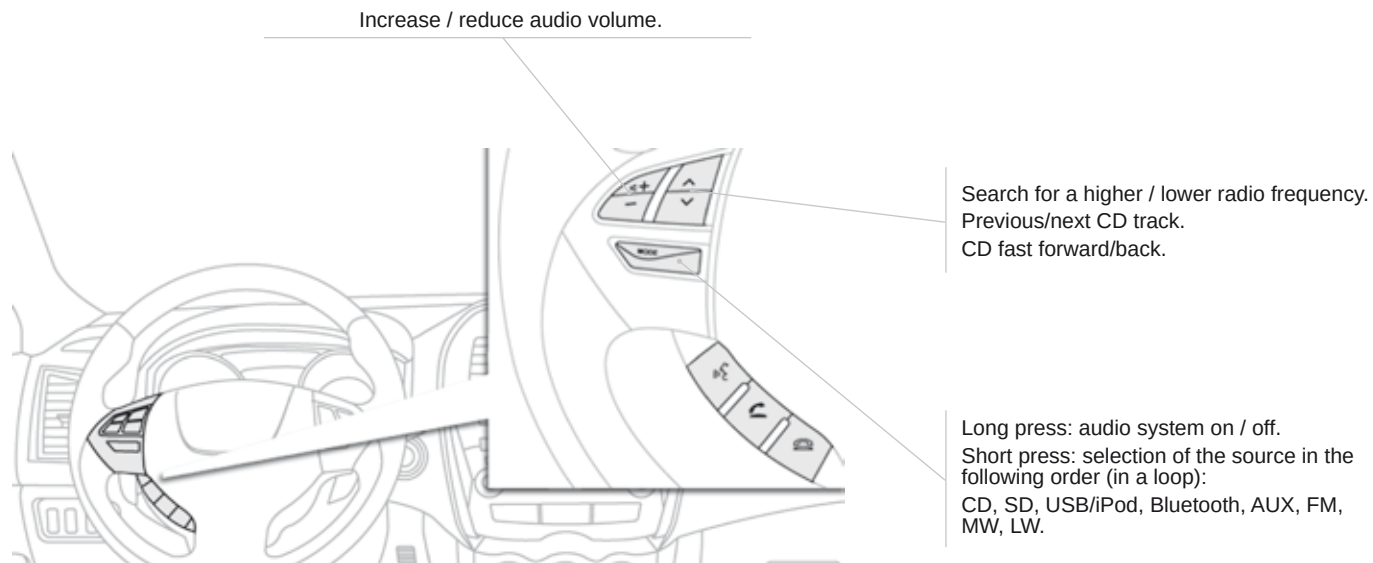

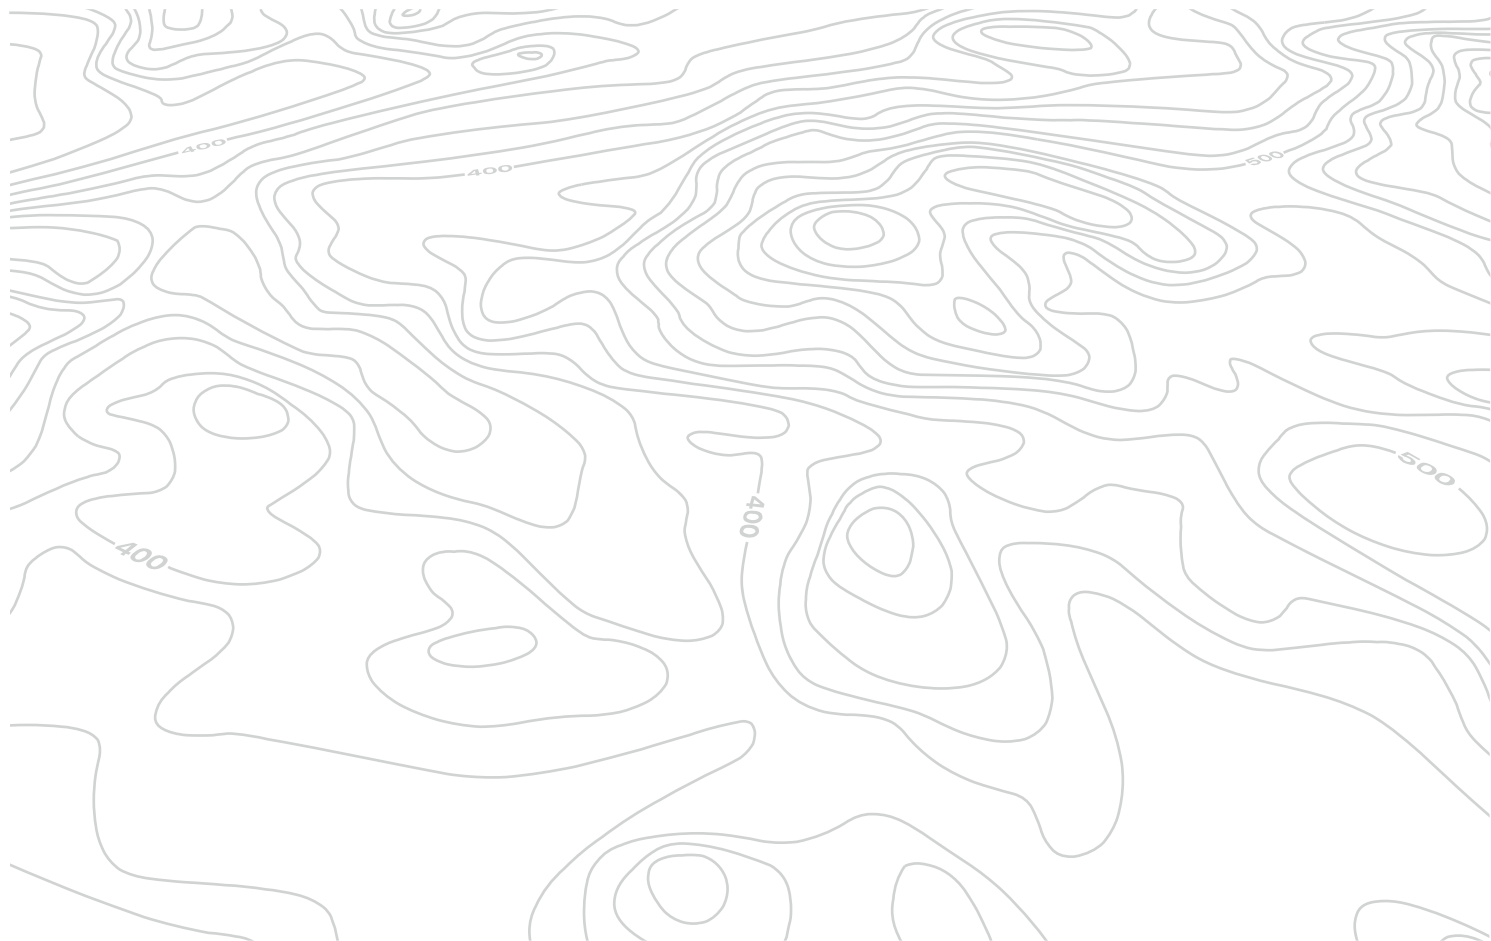

03 GENERAL OPERATION

Description of the controls - Menus



AUDIO: display the screen for the last audio source used.




MODE: used to select the audio source.




SETTINGS: used to manage the different adjustments.




INFO: used to check information.

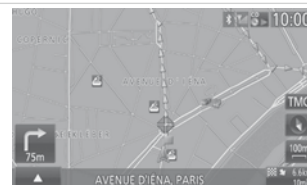

MAP: used to display the current position of your vehicle on the map.

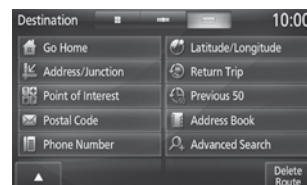

DESTINATION: used to set navigation options and select the destination.

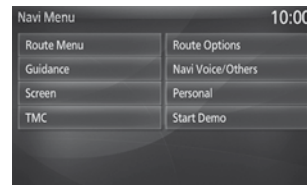


NAVI MENU: used for adjustments to the navigation system.

04 NAVIGATION

Level 1

Level 2

Level 3

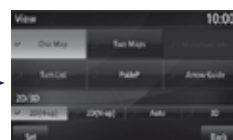


Level 1	Level 2		Level 3	Comments
		Guidance		Indicates that a turn should be made to the left or right at the next junction and the distance to this junction. Press on it to display a navigation zoom to the left of the map.
		Navigation sub-menu	Confirm Route	Press on it to modify the current navigation criteria.
			Change Route	
			Search Nearby	
			Set Location	
			Stop Guidance	
			Voice Guide ADJ	
		TMC (Traffic Message Channel)		Press on it to display traffic information transmitted in real time.
		Type of display and map orientation	"View" "2D/3D"	Indicates North. Press on it to select the type of screen display and the map orientation (2D with vehicle direction, 2D with North at the top, auto 2D according to scale or 3D perspective).
	Map scale		Indicates the scale of the map displayed. Press on it to zoom in or out	
	Information on the destination / intermediate destination		Indicates the distance and time to the destination or the intermediate destination.	

04 NAVIGATION

Level 1

Level 2

Level 3

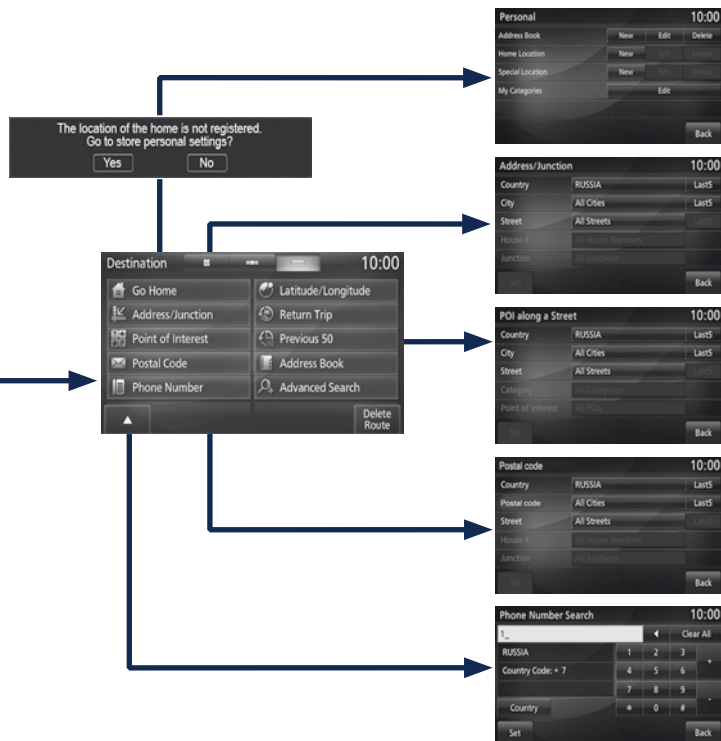





Level 1	Level 2		Level 3	Comments
		Go Home	Address Book	Select a direct return home. Press Yes to save your home location (the first time).
			Go Home	
			Special Location	
			My Categories	
		Address/Junction	Country	Select a location using the address or name of the street of the destination.
			City	
			Street	
			House #	
			Junction	
		Point of Interest	Set	Save the settings.
			Country	Select a location using the name of a point of interest (POI).
			City	
			Point of Interest	
			Category	
		Postal Code	Set	Save the settings.
			Country	Select a location using the post code, address or name of the street of the destination.
			Postal Code	
			Street	
			House #	
		Phone Number	Junction	Enter the information, the telephone number and confirm.
			Set	
			Country Code:	
			Country	
			Set	Save the settings.

04 NAVIGATION

Level 1

Level 2

Level 3

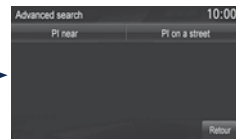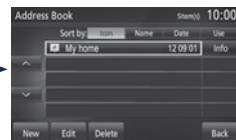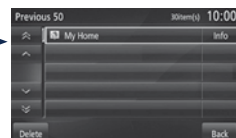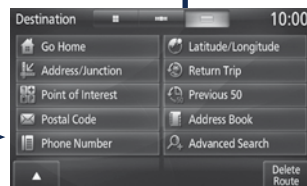




Level 1	Level 2		Level 3	Comments
		Latitude/Longitude	Latitude	Select a location using the latitude and longitude.
			Longitude	
			Set	Save the settings.
		Return Trip		Select the point of departure as a new destination.
		Previous 50	Country	Select a location using one of the 50 recent destinations.
			City	
			Point of Interest	
			Category	
			Delete	Delete a destination from the list.
		Address Book	Icon	Select a location using an address saved in the address book.
			Name	
			Date	
			Use	
			New	Create an address.
			Edit	Display an address from the list.
			Delete	Delete an address from list.
		Advanced Search	POI nearby	Select a location using an advanced search based on a POI.
			POI along a Street	

04 NAVIGATION

Level 1

Level 2

Level 3

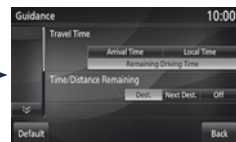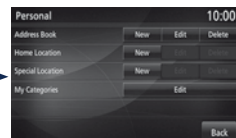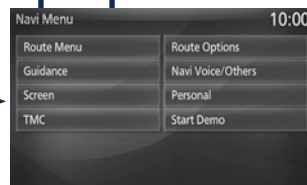



Level 1	Level 2		Level 3	Comments
NAVI MENU		Route Menu		Check and view the maps of the surroundings on a journey.
	Guidance		Travel Time	Adjust the route guidance mode and display the results of the route search.
			Time/Distance Remaining	
	Screen		3D Bldg.	Adjust the screen display settings.
			3D Polygon Landmark	
			POI Icons on Map	
	TMC		Dynamic Route Guidance	Display and select traffic information transmitted in real time, such as traffic jams and roadworks by selecting dynamic route guidance.
			TMC Icons on Map	
			Current Station	
			TMC Surveillance Map	

04 NAVIGATION

Level 1

Level 2

Level 3

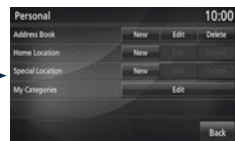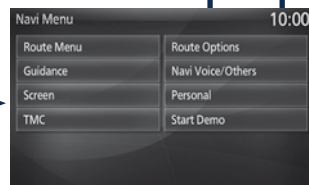

Level 1	Level 2		Level 3	Comments
NAVI MENU		Route Options	Route Priority	Adjust the roads used conditions.
			Minimize Motorways	
			Minimize Toll Roads	
		Navi Voice/Others	Beep Sound Volume	Set the voice used for navigation instructions and adjust the volume.
			Guidance Voice Volume	
			Speed Compensated Volume	
		Personal	Address Book	Save, modify or delete an entry in the address book.
			Go Home	
			Special Location	
			My Categories	
		Start Demo		Play the video to check the prepared route.

04 NAVIGATION - GUIDANCE

GPS system

What is the navigation system and GPS?

The satellite navigation system guides the driver to the destination set in accordance with a chosen route.

Initially, it searches for the destination required by the user, then it calculates the route and finally it provides the visual and vocal guidance instructions.

GPS (Global Positioning System) consists of several satellites arranged around the earth. They continuously transmit digital signals which travel at the speed of light, on 2 different frequencies.



At any given time, the system receives its position in relation to the satellites detected and the time of transmission of the signal.

This enables the telematic unit to calculate its position and therefore that of the vehicle.

A repositioning process using the map database stored on the hard disk allows the vehicle to be positioned on the road network, so improving the accuracy of the vehicle location function.

What precautions should be observed in order to make best use of the system?

Do not place anything on or near the GPS aerial.

Do not use any digital communication equipment (personal computers, etc.) near the GPS aerial.

Do not affix any reflective films or films containing carbon to the windows.

The system's measurements may be inaccurate if the vehicle is:

- in a tunnel or underground car park,
- underneath a two-level motorway,
- in an area with several very high buildings,
- surrounded by closely planted trees.

Depending on the vehicle's situation and the reception of the GPS information, the displayed information may disappear from the screen temporarily.

What is a point of interest (POI)?



A point of interest (POI) is represented by an icon on the map, it represents an airport, a station, a town hall, ...

Up to 40 different icons may be displayed (refer to the section "Points of interest icon").

They are classified in 5 groups and identified by one colour for each group:

- Shops, finance and businesses (Green),
- Vehicles and travel (Dark blue),
- Restaurants (Orange),
- Public places and emergency services (Brown),
- Entertainment and attractions (Blue).




04 NAVIGATION - GUIDANCE

Navigation SD card

Installing the navigation SD card


1

Press the open **OPEN** button to open the screen panel.
Insert the SD card containing the navigation mapping data in the left hand SD card reader.

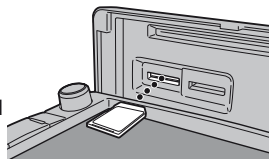


2

Push the SD card until it clicks into place.
Press the **OPEN** button to close the screen panel.

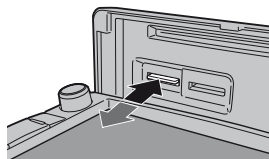


2

Insert this card into the right hand SD card reader.

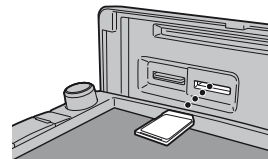

3

Push the SD card until it clicks into place.

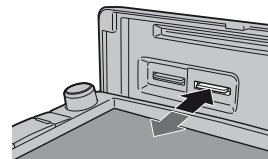

Restoring navigation data

!

In the event of a problem with the navigation data on the SD card, restore the navigation data using the restore CD for the navigation system.

1

Using a computer, copy the file "loading.kwi" from the CD to a compatible SD card.



4

To allow the copy, extract the navigation data SD card from the left hand SD card to unlock it, then insert it for the copy.

5

Turn the ignition key to the "ACC" position; the navigation data will then be copied from the new SD card to the navigation data SD card.
Once the copy is complete, extract the navigation data SD card from the left hand card reader to lock it again and then insert it.
Remove the SD card from the right hand SD card reader.

04 NAVIGATION - GUIDANCE

Selecting points of interest (POI) icons displayed on the map




Point of Interest

You can select point of interest icons which are displayed on your map screen.
Press **DESTINATION** then "**Point of Interest**".



Press "**All Categories**" then choose between "**My Categories**", "**Last 5**" and "**Show All**".

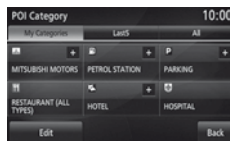

Press each POI required.

General

	Town centre
	Locality

Shops, finance and businesses (Green)

	Major companies
	Shopping centre

Vehicles and travel (Dark blue)

	PEUGEOT
	Airport
	Bus stop
	Vehicle hire
	Suburban / main line station
	Ferry terminal
	Hotel
	Park and ride
	Car park (press +)
	Service station
	Rest area
	Toll booth
	Tourist information
	Railway station

Restaurant (Orange)

	Night life / night club
	Restaurant

Public places and emergency services (Brown)

	Town Hall
	Community centre
	Convention / exhibition centre
	Hospital
	University / college

Entertainment and attractions (Blue)

	Theme park
	Bowling alley
	Casino
	Cinema
	Golf course
	Historical monument
	Skating rink
	Marina
	Museum
	Flying club
	Leisure area
	Ski station
	Sports centre
	Theatre / opera
	Tourist attraction
	Vineyard / wine and spirit store

04 NAVIGATION - GUIDANCE

Selecting a destination

Towards a new destination

1



Press the **DESTINATION** button.

2



Press "**Address/Junction**".

3



Press "**Country**" and enter the name of the country using the touch keypad.

4



Press "**All Cities**" and enter the name of the city using the touch keypad.



Postal code

You can select a city using the post code.
Press "**Postal Code**" and enter the number.

5



Press "**All Streets**" and enter the name of the street using the touch keypad.



Last5

You can select one of the 5 most recently selected countries, cities or streets cities by pressing **Last 5** in the line.

i

When a character of the name of the country, city and road is entered, and if 5 cities or streets or fewer are recognised, you can select a country, city or street from a list which is displayed or press "**List**".

6



Press "**All House Numbers**" and enter the street number using the touch keypad.

7



You can enter the name of a junction instead of the street number. Press "**All Junctions**" and select the name from the list displayed.

8

Set

If you agree with the information, press "**Set**", otherwise press one of the buttons to correct.

9



Press "**Start**" to start the navigation.

04 TRAFFIC

Set the filtering and display of TMC messages

TMC messages (Traffic Message Channel) on the Navigation-GPS system give traffic information transmitted in real time.



The navigation system suggests a detour route, if dynamic guidance has been activated by pressing the **NAVI MENU** button, then **"TMC"**.

1



Press on the pull-down secondary menu.

2

Confirm Route ▶

Select **"Confirm Route"** then **"Entire Route"** or **"Remaining Route"** to validate or add to the route.

3

Change Route ▶

Select **"Change Route"**, then **"Alternative Route"** or **"Delete Route"** to modify or delete the route.

4

Search Nearby ▶

Select **"Search Nearby"**, then **"POI nearby"** to add a point of interest to the route.

5

Stop Guidance

Select **"Stop Guidance"** to suspend navigation guidance.

6

Voice Guide ADJ

Select **"Voice Guide ADJ"** to modify the volume for the voice or adapt the volume to the speed of the vehicle.

1

Black and blue triangle: general information, for example:



Weather reports



Wind



Parking



Traffic reports



Fog



Snow / ice

2

Red and yellow triangle: traffic information, for example:



Modified signage



Slippery surface



Delay



Risk of explosion



Demonstration



No entry



Narrow carriageway



Accident



Roadworks




Road closed



Danger



Traffic jam


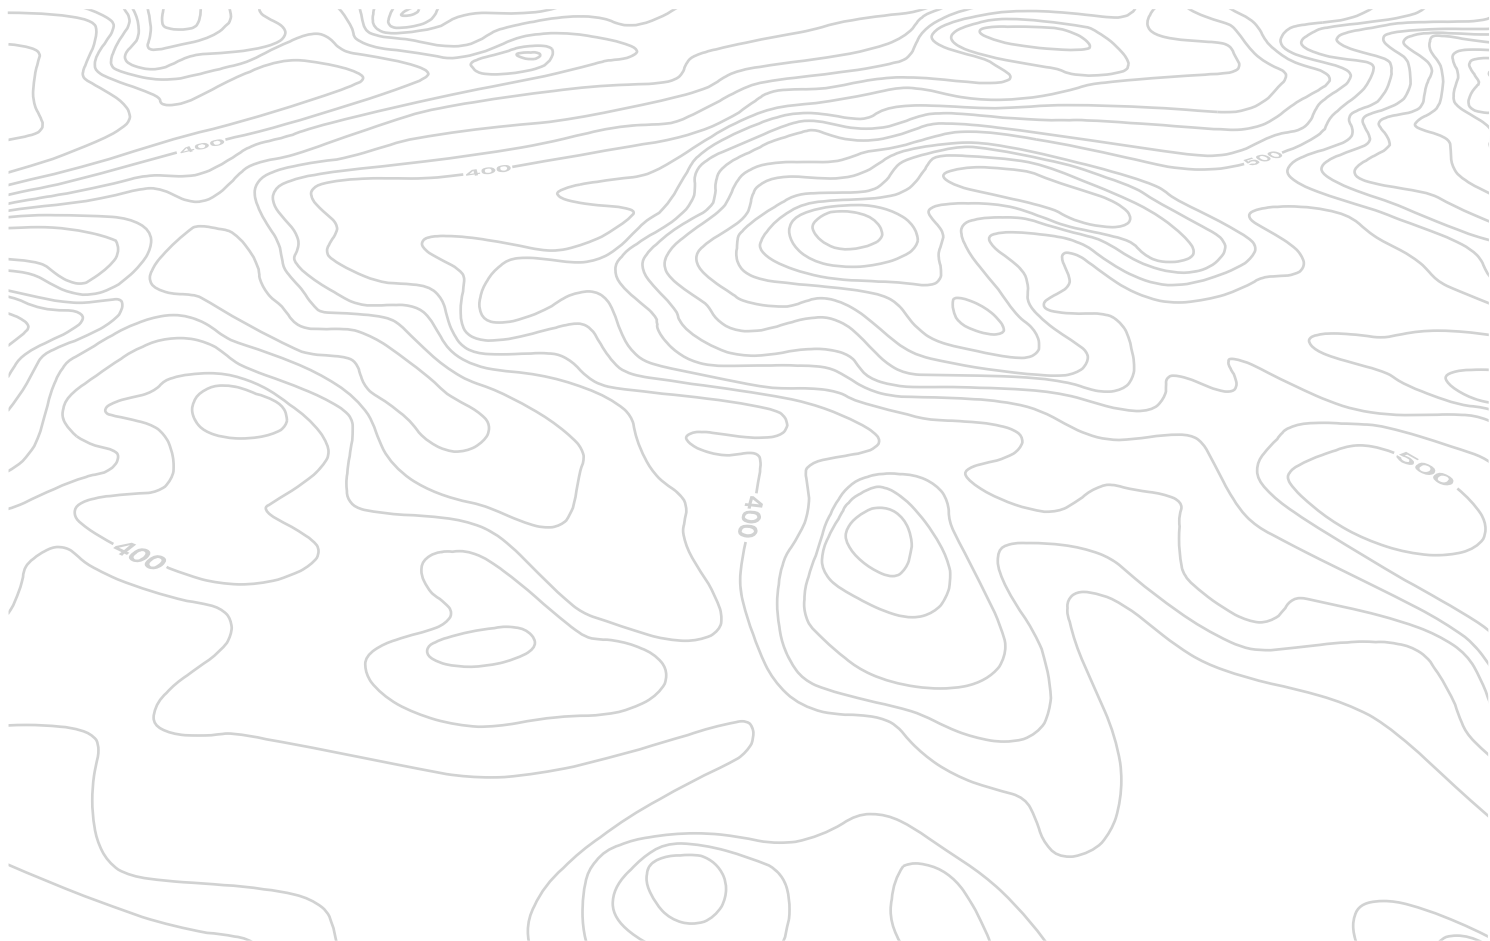


05 MEDIA

Level 1

Level 2

Level 3

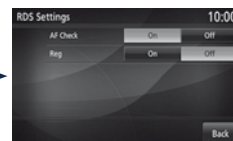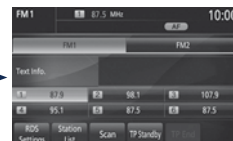


Level 1	Level 2		Level 3	Comments
AUDIO	RDS Settings	RDS Settings	AF Check	The name of the station is displayed while RDS data is received. If the name is not transmitted, the frequency is displayed.
			Reg	
	Station List	List of stations		To display in the screen the list of stations received. PTY (programme type) is displayed if the RDS data received is displayed, to display in the screen programmes by type, e.g.: sport, rock, classical, information, ... Press PTY again to quit.
	Scan	Scan		To search for stations that can be received in the current location, until a station is found.
	TP Standby	TP Standby		Choose to activate or deactivate traffic announcements (TP).

05 MEDIA








Level 1

Level 2

Level 3

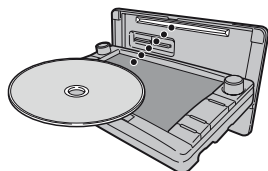

OPEN: Opens or closes the screen panel to insert or remove a CD or SD card.

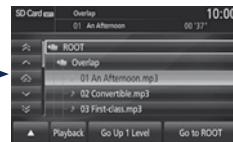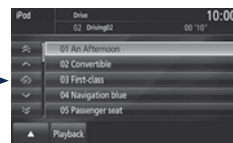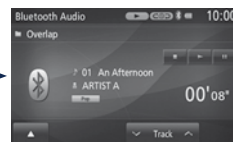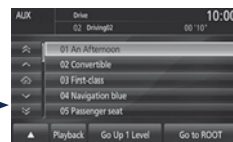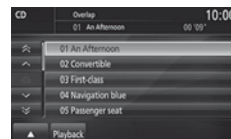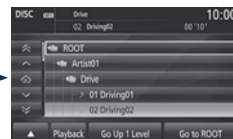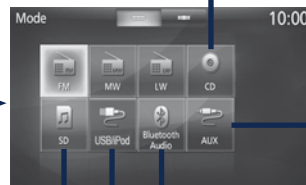

Level 1	Level 2		Level 3		Comments
		CD		Repeat	Press to play the track repeatedly.
				Scan	Press to play the start of each track for around 9 seconds.
				Random	Press to play the tracks in random order.
			Playback		Press to start play of the selected track.
			Go Up 1 Level		Press to go up one level.
			Go to ROOT		Press to open the folder structure.
		SD		Repeat	Press to play the track repeatedly.
				Scan	Press to play the start of each track for around 9 seconds.
				Random	Press to play the tracks in random order.
			Playback		Press to start play of the selected track.
			Go Up 1 Level		Press to go up one level.
			Go to ROOT		Press to open the folder structure.
		USB/iPOD		Repeat	Press to play the track repeatedly.
				Scan	Press to play the start of each track for around 9 seconds.
				Random	Press to play the tracks in random order.
			Playback		Press to start play of the selected track.
		Bluetooth Audio		REPEAT	Press to play the track repeatedly.
				Scan	Press to play the start of each track for around 9 seconds.
				Random	Press to play the tracks in random order.
			Track		Press to start play of the selected track.
		AUX			Manage play from the portable device.

05 RADIO

RDS, AF, TP, PTY

What is RDS?

RDS

The Radio Data System (RDS) function on the FM waveband permits:

- automatic retuning to alternative frequencies carrying the same station while travelling through different regions (if the transmitters of this station cover the area through which you are travelling),
- temporary tuning to traffic information announcements,
- display of the name of the station, etc...

Most FM stations use RDS.

These stations transmit non-audible data in addition to their programmes.

The data transmitted in this way allows you access to various functions, mainly displaying of the name of the station, temporary tuning to traffic information announcements or automatic retuning to alternative frequencies.

RDS allows you to continue listening to the same station automatically by means of alternative frequencies. However, alternative frequencies may not be provided throughout the country. Radio stations do not cover the whole country, which explains the loss of reception of the station during a journey.

RDS alternative frequencies

AF

Your radio automatically checks and selects the best frequency for the radio station to which it is tuned (if the station broadcasts on several transmitters or frequencies).

The frequency of a radio station covers approximately 30 miles (50 km). The change from one frequency to another explains the loss of reception during a journey.

If the station to which you are listening does not have several frequencies in the region in which you are currently located, you can deactivate automatic alternative frequencies.

Traffic information function

TP

The Traffic Programme (TP) function permits automatic and temporary switching to an FM station broadcasting traffic information.

The radio station or the source that you are listening to at this point is placed on hold.

Once the traffic information has ended, the system switches back to the radio station or the source that you were listening to initially.

Programme types

PTY

Some stations offer the option of listening to a themed type of programme as a priority, selected from the list available below:
NEWS, AFFAIRS, INFOS, SPORT, EDUCATE, DRAMA, CULTURE, SCIENCE, VARIED, POP M, ROCK M, EASY M, LIGHT M, CLASSICS, OTHER M, WEATHER, FINANCE, CHILDREN, SOCIAL, RELIGION, PHONE IN, TRAVEL, LEISURE, JAZZ, COUNTRY, NATION M, OLDIES, FOLK M, DOCUMENT.

05 RADIO

Selecting an FM station and presetting

1



Press the **AUDIO** button.
By default the screen displays the stations on FM1.

2



Turn the **FOLDER / TUNE SOUND** knob to select a station.

3



Press "**Scan**" to search for stations that can be received in the current location, until a station is found.



You can also start a search by type of programme by pressing "**PTY Filter**".

4



Press **SEEK TRACK** for a manual search up or down. The frequency is modified in step of 0.1 MHz. Press and hold to find a station automatically.

5



Once the frequency has been selected, a long press on the station until a "Beep" is heard will preset it. The name of the station is displayed if it is available.

RDS settings

1



 
Press the **AUDIO** button.
By default the screen displays the stations on FM1.

2



Press "**RDS Settings**".

3




Press "**On**" or "**Off**" to activate or deactivate the functions:

- "**AF Check**": automatic search for the best frequency,
- "**Reg**": switch to the regional frequencies.

05 MUSIC

General notes on files

 Playing an MP3/WMA CD



When the MP3/WMA CD is inserted in the player, playing of the tracks is automatic.

The tracks cannot be recorded onto the music server.

You can play CDs with up to 8 levels, 100 folders and 255 files maximum.

MP3 and WMA audio file formats

REC MP3 MP3 is the abbreviation of MPEG-1 Audio Layer 3 and MPEG is the abbreviation of Motion Pictures Experts Group. This is a digital audio compression standard that reduces the size of audio files by eliminating frequencies that are inaudible to the human ear.

This compression divides the size of the content of a conventional audio CD by approximately 10, which means that the content of 10 audio CDs can be recorded onto a single CD-R or CD-RW.

WMA is the abbreviation of Windows Media Audio, another audio data compression standard offered by Microsoft.

It can be used to create and save audio files at a compression rate lower than that of the MP3 format, with an equivalent file size.

Windows Media and Microsoft Corporation are trademarks registered in the United States and/or other countries.

File handling

Some blank CDs may not be played by your equipment (quality, recording speed...).

When you burn a CD-R or CD-RW, select the ISO 9660 level 1.2 or Joliet burning standard.

To obtain the best acoustic quality possible, select the lowest burning speed.

The MPEG1 and MPEG2 standards are accepted.

Transmission speeds between 32 and 320 kbits/s and scans between 16 kHz and 48 kHz are accepted.

To display the title information (the name of the artist, the title of the album, etc...), the information contained in the ID3 Tags or the WMA Tags must be included in the MP3/WMA files burned onto the disc.

Copyright

Your audio system may allow you to listen to music which is usually protected by copyright in accordance with current national and international standards. Please consult these standards and comply with them.

05 MUSIC

Playing a file

1



Press the **MODE** button then "**CD**", if the player already contains a CD.
Otherwise, insert a CD in the player, play begins automatically.

2



You can move by one level at a time.
Press on the name of a folder and at each press the list of folders of the level below is displayed.

3



Press on "**Go Up 1 Level**" to move up a level and/or select a level.

4



Press on "**Go to ROOT**" to go up to the root level.

5



Press these buttons to select the next or previous track or return to the beginning of the track currently being played.

6



Press these buttons for fast forward or back in the current track.

7



Press this button for access to the secondary menu.

8



Press "**Repeat**" to play the selected track repeatedly in a loop.
Press "**Repeat**" again to play all of the tracks in the selected folder repeatedly in a loop.
Press again to stop.

9



Press "**Scan**" to play the beginning of each track in each folder for approximately 10 seconds (scanning).
Press "**Scan**" again the play the beginning of each track in the selected folder in a loop.
Press again to stop or press on the current track (during the 10 seconds) and play begins.

10




Press "**Random**" to play all of the tracks in the selected folder in random order.
Press "**Random**" again to play all of the tracks on the CD in random order.
Press again to stop.

05 MUSIC

Using the USB port



The USB port is used to connect a portable device (MP3 player, Apple® player, ...). The files are sent from the player to your audio system and heard through the vehicle's speakers.

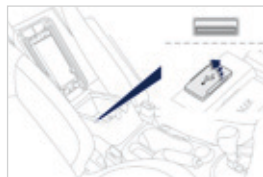

Models supported:


- iPod® 5th generation (video).
- iPod classic® (2009).
- iPod nano® 6th generation.
- iPod nano® 3rd generation (video).
- iPod touch® 4th generation.
- iPhone 4S®.
- USB memory sticks formatted FAT32 (File Allocation Table) only.

File formats: MP3, WMA, AAC, WAV.

- Maximum number of levels (including root): 8.
- Number of folders: 100.
- Number of files: 255.


1

With the vehicle stationary, ignition switch in the **LOCK** position, connect a suitable cable to the portable player.

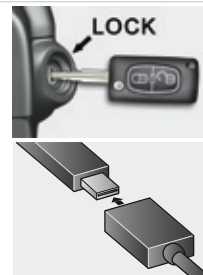

2

Then connect the cable to the vehicle's USB port.

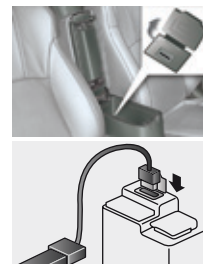

To disconnect the cable, the ignition switch must be in the **LOCK** position.
Take care not to trap the cable when closing the armrest.

05 MUSIC

Connecting APPLE® players

- 1 Connect the Apple® player to the USB port using a suitable cable (not supplied).
Play starts automatically.

- 2 Control is via the audio system.

- i** The classifications available are those of the portable device connected (artists / albums / genres / playlists / audiobooks / podcasts).
The default classification used is by artist. To modify the classification used, return to the first level of the menu then select the desired classification (playlists for example) and confirm to go down through the menu to the desired track.
The "Shuffle tracks" mode on an iPod® corresponds to the "Random" mode on the audio system.
The "Shuffle albums" mode on an iPod® corresponds to the "Random all" on the audio system.
"Shuffle tracks" is restored by default on each connection.

- i** The version of software in the audio system may not be compatible with the generation of your Apple® player.


Using the SD card reader



The SD card reader can play MP3, WMA, AAC and WAV audio files.


1

Press the **OPEN** button to open the screen panel.
Insert the SD card containing audio files into the right hand SD card reader.

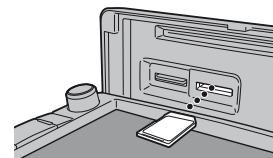

2

Push the SD card until it clicks into place.
Press the **OPEN** button to close the screen panel.

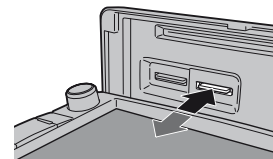

3



Press the **MODE** button, then on "**SD**".

05 MUSIC

 
USB, iPod and SD player - Playing a track

1



Press the **MODE** button then on "**USB/iPod**" or "**SD**"; you can display the sort by category at any time by pressing "**Playlist**".

2



In USB or SD mode you can move up a level at the same time.

Press on the name of a folder and at each press the list of folders in the level below is displayed.

3



Press "**Go Up 1 Level**" to go up one level and/or select a level.

4



Press "**Go to ROOT**" to go up to the root level.

5



Press these buttons to select the next or previous track or return to the beginning of the track currently being played.

6



Press these buttons for fast forward or back in the current track.

7



Press this button for access to the secondary menu.

8



Press "**Repeat**" to play the selected track repeatedly in a loop.

Press "**Repeat**" again to play all of the tracks in the selected folder repeatedly in a loop.
Press again to stop.

9



Press "**Scan**" to play the beginning of each track in each folder for approximately 10 seconds (scanning).

Press "**Scan**" again to play the beginning of each track in the selected folder in a loop.
Press again to stop or press on the current track (during the 10 seconds) and play begins.

10



Press "**Random**" to play all of the tracks in the selected folder in random order.

Press "**Random**" again to play all of the tracks in random order.
Press again to stop.

05 MUSIC

Using the auxiliary input (AUX)



The auxiliary input allows the connection of a portable device (MP3 player...).



1

Connect the portable device (MP3 player...) to the RCA sockets (red and white) using a suitable cable, not supplied.

2

First adjust the volume of your portable device (to a high level).
Then adjust the volume of your audio system.
The operation and play is controlled on the portable device.

3






Press the **MODE** button, then on "**AUX**".

06 SETTINGS

Level 1

Level 2

Level 3

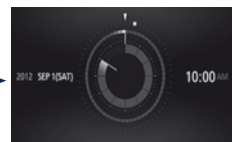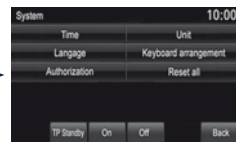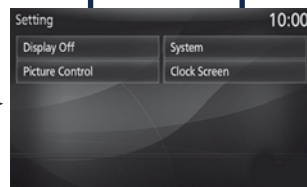



Level 1	Level 2		Level 3	Comments
SETTINGS		Display Off		Choose to switch off the screen. To switch it back on, touch the screen or press any button.
	System		Time	Choose adjustment of the time by the RDS signal, time zone, summer time.
			Language	Select the language (English, Français, Deutsch, Nederlands, Português, Español, Svenska, Italiano, Dansk, Vlaams, Polski, Norsk).
			Pairing	Select an authorisation "Select Device to Connect", "Register Device", "Set Passkey: Fixed", "Set Passcode".
			Units	Select the units for the calculation of distances (km or miles and °C or °F).
			Keyboard Layout	Select the type of input keyboard (alphabet or PC).
			Reset all	Restore factory settings. After reinitialisation, restart the system.
			TP Standby	Select the traffic information (TP) setting: on or off.
	Picture Control		Brightness	Adjust the image settings for: brightness, contrast, black level.
			Contrast	
			Black Level	
		Clock Screen		

07 INFORMATION

Level 1

Level 2

Level 3

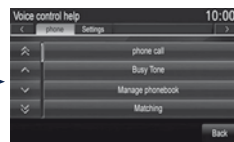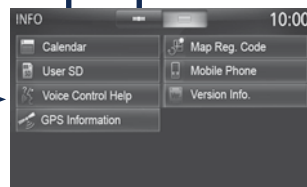




Level 1	Level 2		Level 3	Comments
		Calendar		Make a note on the calendar of special days, birthdays, ... Use the arrows to find a date and press directly on the day required to enter the event.
		User SD		Check the capacity of the SD card and the free space.
		Voice Control Help	Make a telephone call	Verify the use of voice commands.
			Busy tone	
			Manage the directory	
			Pairing	
		GPS Information	Country	View GPS information: - the satellite position chart with the direction and movement of the vehicle, - the name of the current location, - the longitude and latitude of the current location, - the status of location measurement (2D = 3 satellites or less, 3D = 4 satellites or more), - the number of satellites visible.

07 INFORMATION

Level 1

Level 2

Level 3

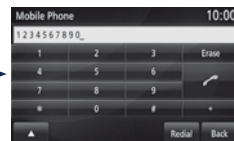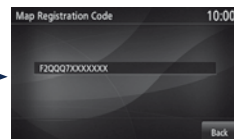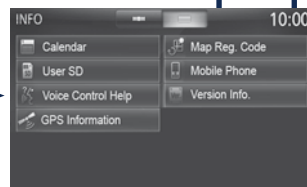

Level 1	Level 2		Level 3	Comments
● INFO		Map Reg. Code		Display the registration code for the navigation system.
		Mobile Phone		Make and receive telephone calls.
		Version Info.		View the software version and mapping data version.

08 BLUETOOTH® STREAMING - TELEPHONE

Pairing a telephone

1



Press the **MODE** button then "**Bluetooth Audio**" to start Bluetooth mode.

2



In the Bluetooth menu on your telephone, select the system name in the list of devices detected.
Enter the code "**1212**" in the telephone and confirm.

3

SETTINGS

Press **SETTINGS**.

4

System

Press "**System**" then "**Pairing**".

5

Select the device to connect

Press "**Select Device to Connect**".
Wait until the telephone detected is displayed.

6



Select the telephone to connect then press this button.

7

Edit

Press "**Edit**" to connect the telephone.

!

You can register or delete a device in the list.



TOUCH SCREEN AUDIO-CD system



The system is protected in such a way that it will only operate in your vehicle.



For safety reasons, the driver must carry out operations which require prolonged attention while the vehicle is stationary.

When the engine is switched off and to prevent discharging of the battery, the system switches off following the activation of the energy economy mode.


Contents

01	First steps - Control panel	p. 290
02	Steering mounted controls	p. 291
03	General operation	p. 293
04	Radio	p. 300
05	Music	p. 303
06	Bluetooth® telephone	p. 308

01 FIRST STEPS

EJECT: eject the CD.

Use the buttons offered on the screen.

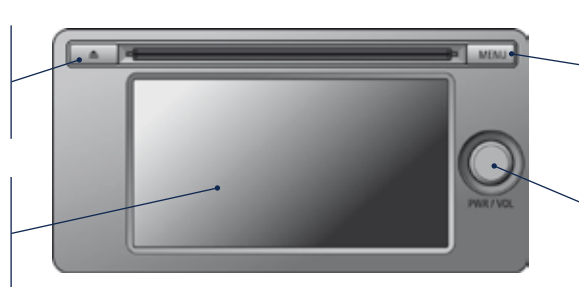


MENU: chose the audio source from the main menu.

PWR: audio system on/off.
Off: mute (with black screen).
VOL: adjust volume.





! For safety reasons, the driver must only carry out operations which require prolonged attention with the vehicle stationary.

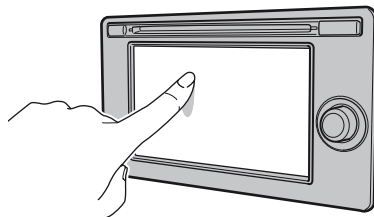

Move a finger over the screen to operate the system.

02 STEERING MOUNTED CONTROLS

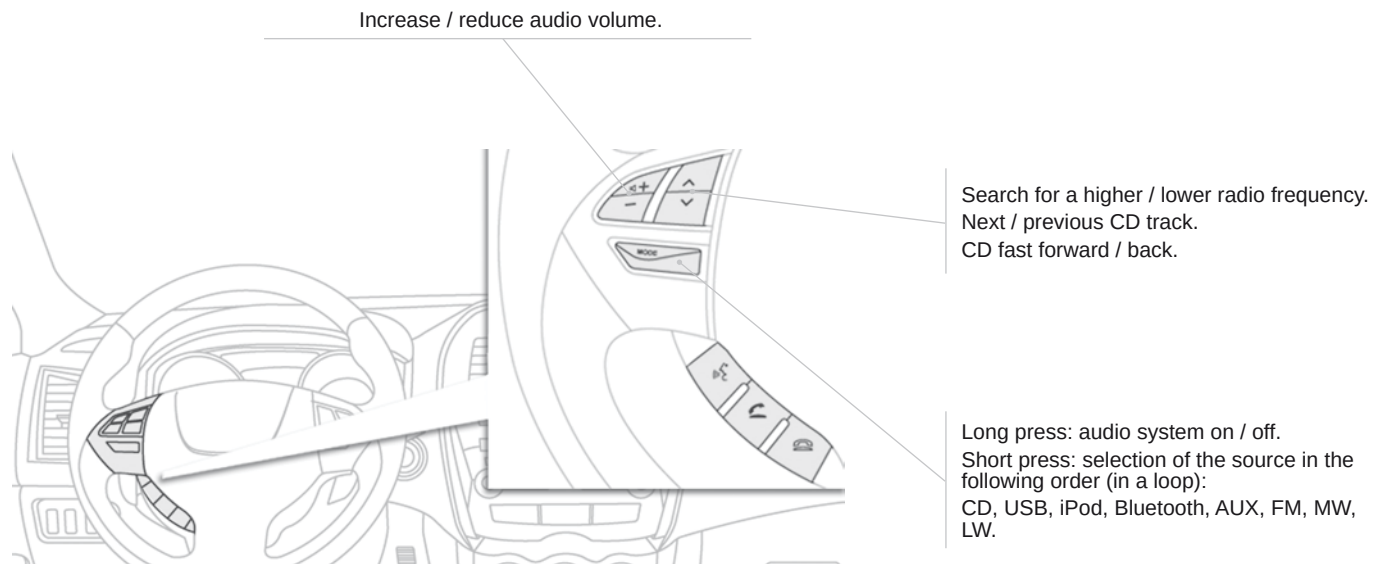

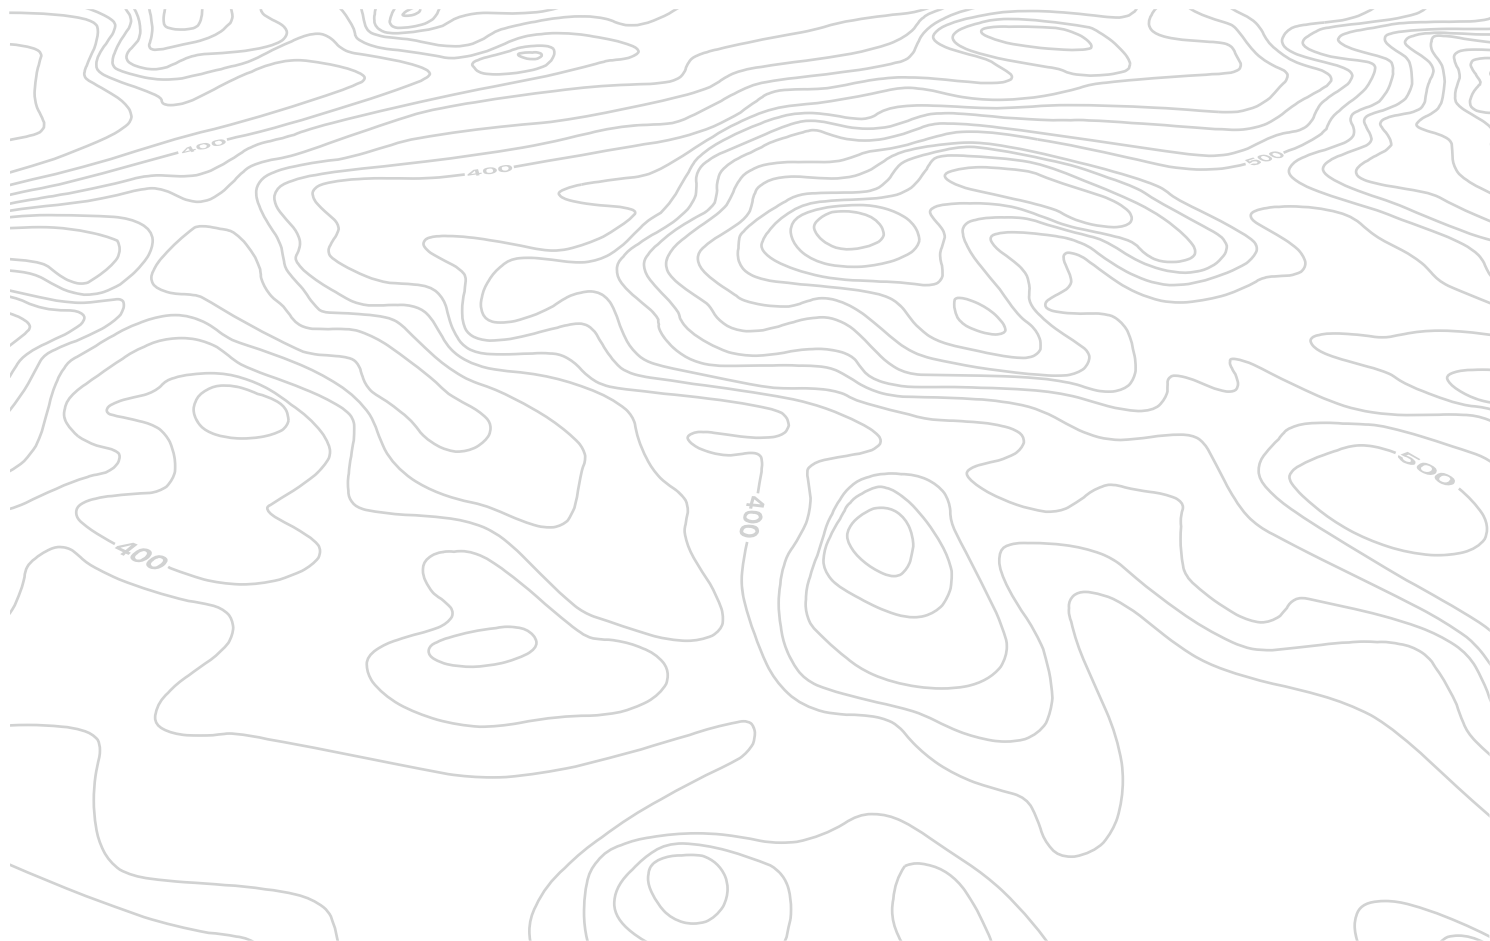

03 GENERAL OPERATION


Description of controls - Menus



FM / MW / LW: select a radio station from:

- frequency modulation (FM),
- medium wave (MW),
- long wave (LW).


CD: play the music files through the CD player (WAV, MP3, WMA, AAC).

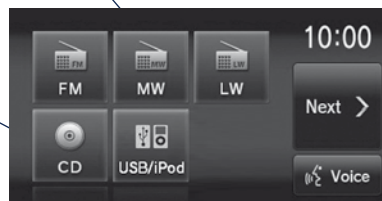

USB / iPod®: connect a portable player by USB or an iPod®, then play the music files.

BT Audio: connect a Bluetooth (2.0) telephone then play the music files by streaming.

AUX: connect a portable player to the Jack auxiliary socket then play the music files.

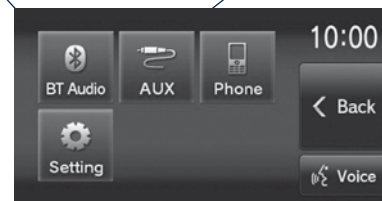

Phone: make or receive telephone calls.

Voice: use the voice commands.


 
Change from one screen to the other.

 
 
 


Setting:


- switch off the screen,
- adjust the touch beep,
- adjust the time or display it continuously,
- select the guidance voice,
- select the picture quality for the screen and reversing camera,
- select RDS.

03 GENERAL OPERATION

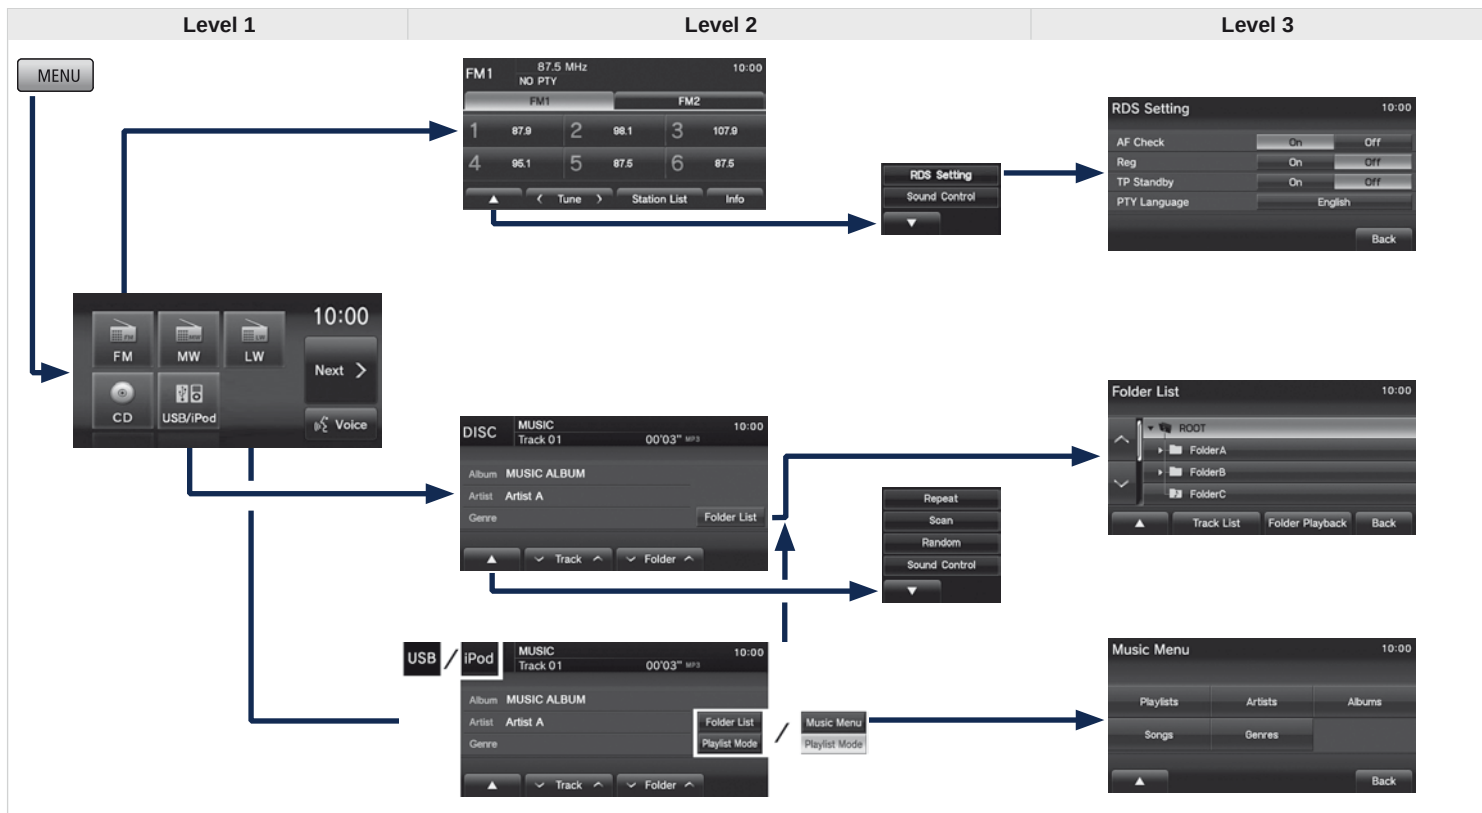


Level 1	Level 2	Level 3	Comments
			Select the tabs for access to the 6 preset stations. FM = 12 stations.
			Preset stations. After selecting a frequency, press and hold the number to preset the current station.
			Activate station tracking (automatic selection of the strongest frequency).
			Activate regional station tracking mode to track the frequency of a regional station in the network.
			Activate the temporary transfer to a station with traffic information.
			Activate station tracking according to programme/theme.
			Adjust the audio quality (balance, equaliser, ...).
			Change frequency. Maintain pressure until a beep is heard for an automatic search for the next station.
			Display the list of stations received.
			Display radio text (if there is no information, "no text" is displayed).
 			Information on the track being played.
			Repeat in a loop the track being played.
			Play the first 10 seconds of each track.
			Play all tracks in random order.
			Adjust the audio quality (balance, equaliser, ...).
			Select a track or maintain pressure for fast forward or back.
			Go down or up in the folders.
			Click on a folder or sub-folder to play the first track.
			Sort the tracks by category.
			

03 GENERAL OPERATION

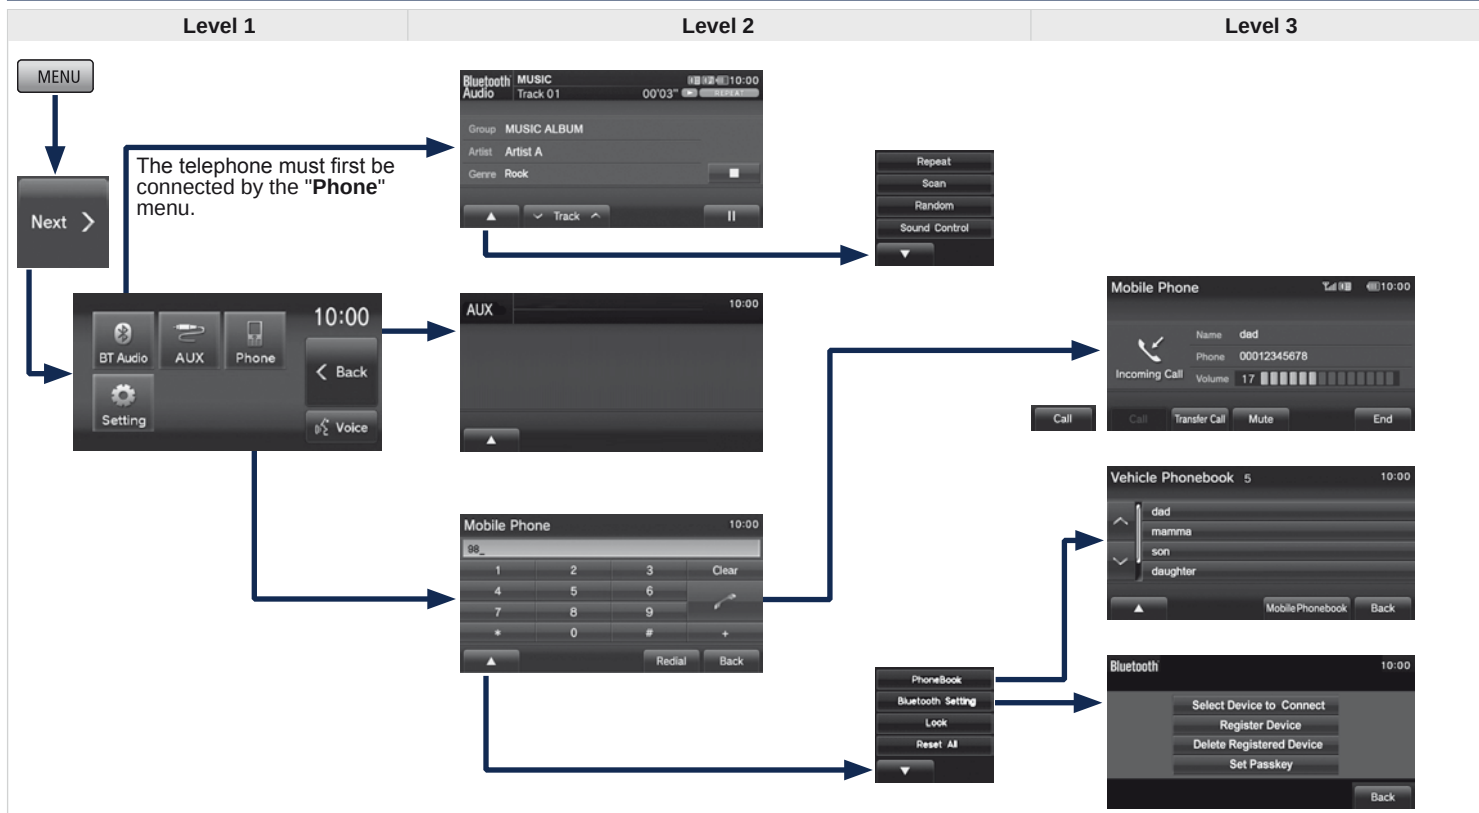

Level 1	Level 2	Level 3	Comments
 BT Audio  AUX	Album MUSIC ALBUM Artist Artist A Genre		Information on the track being played.
	 Repeat		Repeat in a loop the track being played.
	 Scan		Play the first 10 seconds of each track.
	 Random		Play all tracks in random order.
	 Sound Control		Adjust the audio quality (balance, equaliser, ...).
	 Track		Select a track or maintain pressure for fast forward or back.
			Stop play of the track.
 Phone			Play or pause the track.
	 00_		Use the keypad to enter a number then click on the telephone.
		 Call	Start the call.
		 Transfer Call	Transfer the call from the vehicle to the mobile phone.
		 Mute	Cut the vehicle microphone (the contact no longer hears your voice but stays on hold).
		 End	End the call.
	 Redial		Call back the last number.
	 PhoneBook	 Mobile PhoneBook	Select a contact in the mobile phone book.
		 mamma	Select a contact and press "Edit" to view the numbers.
	 Bluetooth Setting	 Select Device to Connect	Select a telephone from the list of connected telephones.
		 Register Device	Pair/connect a new telephone.
		 Delete Registered Device	Delete a telephone from the list of connected telephones.
		 Set Passkey	Register a code used for pairing telephones.
		 Lock	Lock the telephone keypad.
		 Reset All	Erase all registered telephones.

03 GENERAL OPERATION

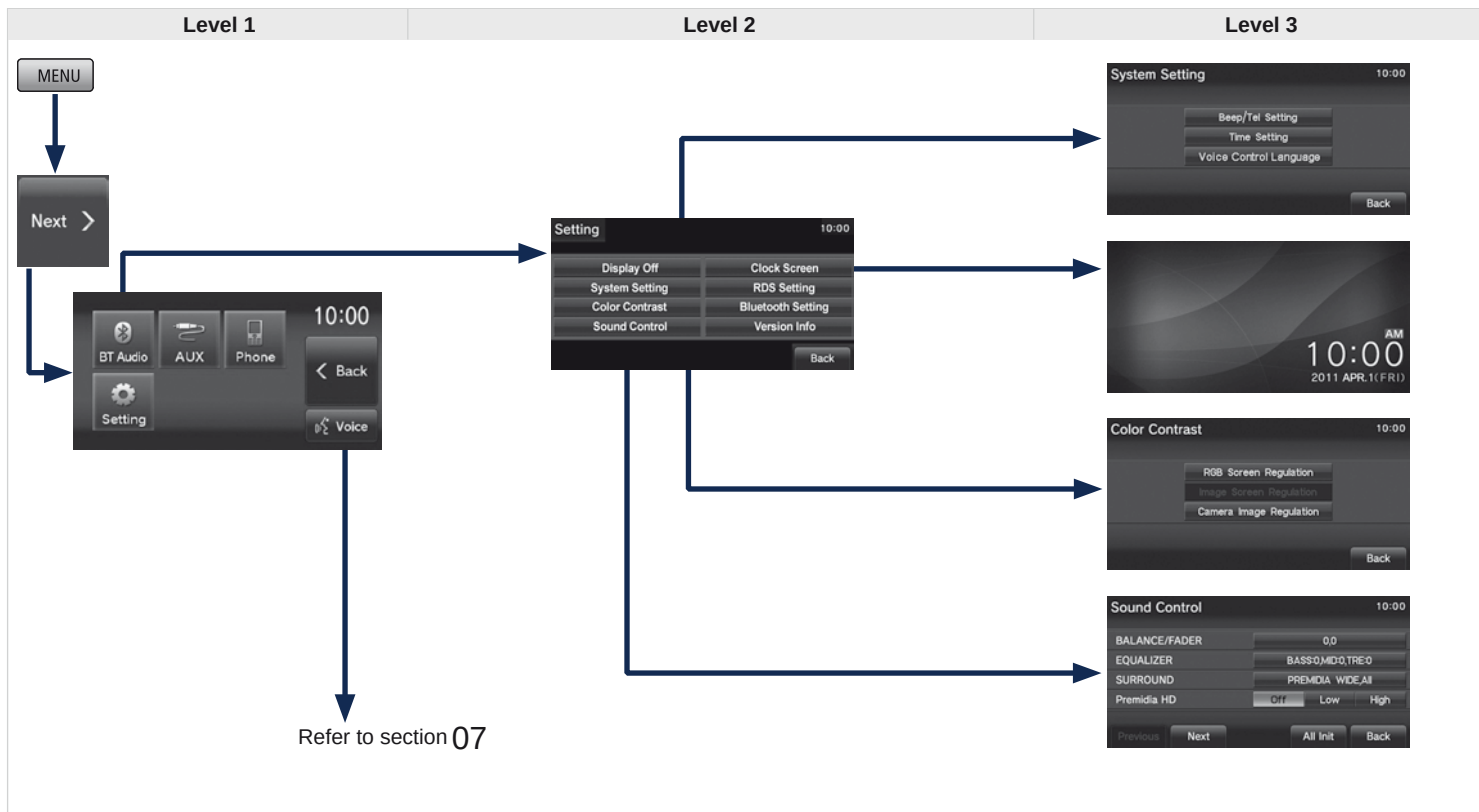

Level 1	Level 2	Level 3	Comments
	Display Off		Display a black screen. Press the screen to return to the last display.
		Beep/Tel Setting	Adjust the touch tone.
	System Setting	Time Setting	Adjust the date and time.
		Voice Control Language	Select the language for voice commands.
	Color Contrast	RGB Screen Regulation	Adjust the brightness, contrast and black level for the menu screen, ...
		Image Screen Regulation	
		Camera Image Regulation	Adjust the brightness, contrast and black level for the image from the rear camera.
	Sound Control	BALANCE/FADER 0.0	Adjust the sound level of each speaker.
		EQUALIZER BASS0/MID0/TRE0	Select the type of sound (rock, pop, hiphop, jazz, normal).
		SURROUND PREMIDIA WIDE AI	Select the type of surround (DTS, premidia wide) and the audio field.
		Premidia HD Off Low High	Adjust the depth of sound by optimising the compression of bass and treble audio data.
		SCV speed compensated volume	Adjust the volume according to the speed of the vehicle.
		Dolby Volume	Adjust the volume automatically according to audio source for clear and natural sound.
	Clock Screen		Display the time continuously.
	RDS Setting	AF Check	Activate station tracking (automatic selection of the strongest frequency).
		Reg	Activate regional station tracking mode to track the frequency of a regional station in the network.
		TP Standby	Activate the temporary transfer to stations with traffic information.
		PTY Language	Activate station tracking according to programme/theme.
	Bluetooth Setting	Select Device to Connect	Select a telephone from the list of connected telephones.
		Register Device	Connect/pair a new telephone.
		Delete Registered Device	Delete a telephone from the list of connected telephones.
		Set Passkey	Register a code used for pairing telephones.
	Version Info		Display the version of the system.

04 RADIO



Selecting an FM / MW / LW station

1



Press **MENU** to display the choice of source.

2



Select "**FM**" or "**MW**" or "**LW**".

3



Select a radio station in the list or press "**Tune**" to change the frequency.



Maintain pressure on "**Tune**" until a beep is heard, for an automatic search for the next station.



Press "**Station list**" to display the list of radio stations received locally.



A long press on one of the numbered buttons presets the current station.



Press the **arrow** to adjust the RDS or the audio settings (balance, equaliser, ...).



Preset up to 12 stations between FM1 and FM2.



The exterior environment (hills, buildings, tunnel, car park, below ground...) may prevent reception, even in RDS station tracking mode. This phenomenon is normal in the propagation of radio waves and is in no way indicative of a fault with the audio system.

04 RADIO

RDS, AF, REG, TP, PTY

RDS

RDS

The Radio Data System (RDS) function on the FM waveband permits:

- automatic retuning to alternative frequencies carrying the same station while travelling through different regions (if the transmitters of this station cover the area through which you are travelling),
- temporary tuning to traffic information announcements,
- display of the name of the station, etc...

Most FM stations use RDS.

These stations transmit non-audible data in addition to their programmes.

The data transmitted in this way allows you access to various functions, mainly displaying of the name of the station, temporary tuning to traffic information announcements or automatic retuning to alternative frequencies.

RDS allows you to continue listening to the same station automatically by means of alternative frequencies. However, alternative frequencies may not be provided throughout the country. Radio stations do not cover the whole country, which explains the loss of reception of the station during a journey.

RDS alternative frequencies

AF

Your radio automatically checks and selects the best frequency for the radio station to which it is tuned (if the station broadcasts on several transmitters or frequencies).

The frequency of a radio station covers approximately 30 miles (50 km). The change from one frequency to another explains the loss of reception during a journey.

If the station to which you are listening does not have several frequencies in the region in which you are currently located, you can deactivate automatic alternative frequencies.

Regional mode

REG

Some stations are organised in a network.

In different regions, they broadcast different or shared programmes depending on the time of day.

You can follow:

- a regional station only,
- the entire network, with the possibility that you will be listening to a different programme.

Traffic information function

TP

The Traffic Programme (TP) function permits automatic and temporary switching to an FM station broadcasting traffic information.

The radio station or the source that you are listening to at this point is paused.

Once the traffic information has ended, the system switches back to the radio station or the source that you were listening to initially.

Programme types

PTY

Some stations offer the option of listening to a themed type of programme as a priority, selected from the list available below:

NEWS, AFFAIRS, INFOS, SPORT, EDUCATE, DRAMA, CULTURE, SCIENCE, VARIED, POP M, ROCK M, EASY M, LIGHT M, CLASSICS, OTHER M, WEATHER, FINANCE, CHILDREN, SOCIAL, RELIGION, PHONE IN, TRAVEL, LEISURE, JAZZ, COUNTRY, NATION M, OLDIES, FOLK M, DOCUMENT.

04 RADIO

RDS settings: AF, Reg, TP, PTY

or

1



Press the **MENU** button then select the radio source (**FM / MW / LW**).

2



Select the **arrow**.

1



Press the **MENU** button, then "**Next**".

2



Select "**Setting**" then "**RDS Setting**".

RDS Setting

then

3



Activate or not the settings.

05 MUSIC



 
Playing a CD (CD-DA/CD-TEXT or MP3/WMA/AAC)

1




Press the **MENU** button to display the choice of source.

2



Inset a CD then select "CD".

 3



Use the "**Track**" button to select the previous / next track.



Press and hold "**Track**" for fast back or forwards.



Press the **arrow** to modify the track play mode:
"Repeat": plays the current track repeatedly in a loop.

"Scan": plays the start of each track for around 10 seconds.

"Random/Shuffle": plays all of the tracks in the current folder in random order.

 
"Sound control": settings for balance, the equaliser, ...



Track List



Press "**Track List**" to display the complete list of tracks.



With an MP3/WMA/AAC CD, press "**Folder**" to move up and down in the folders.




05 MUSIC



Using the USB port



The USB port is used to connect a portable device (MP3 player, Apple® player, ...). The files are sent from the player to your audio system and heard through the vehicle's speakers.

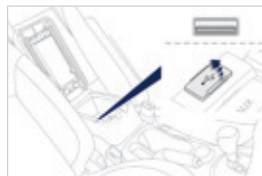

Models supported :


- iPod® 5th generation (video).
- iPod classic® (2009).
- iPod nano® 6th generation.
- iPod nano® 3rd generation (video).
- iPod touch® 4th generation.
- iPhone 4S®.
- USB memory sticks formatted FAT32 (File Allocation Table) only.

File formats : MP3, WMA, AAC, WAV.

- Maximum number of levels (including root) : 8.
- Number of folders : 100.
- Number of files : 255.


1

With the vehicle stationary, ignition switch in the **LOCK** position, connect a suitable cable to the portable player.

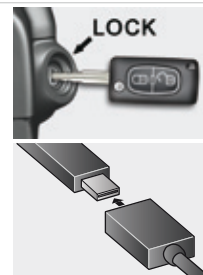

2

Then connect the cable to the vehicle's USB port.

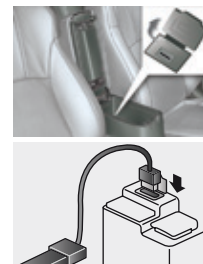

!

To disconnect the cable, the ignition switch must be in the **LOCK** position.
Take care not to trap the cable when closing the armrest.

05 MUSIC



Using the auxiliary input (AUX)



The auxiliary input allows the connection of a portable device (MP3 player...).



1

Connect the portable device (MP3 player...) to the RCA sockets (red and white) using a suitable cable, not supplied.

2

First adjust the volume of your portable device (to a high level). Then adjust the volume of your audio system. The operation and play is controlled on the portable device.

3

MENU

Next >



Press the **MENU** button, then the "**Next**" button for access to the secondary screen, then on "**AUX**".

05 MUSIC



Playing a track on an iPod®

1



 
Press the **MENU** button to display the choice of source.

2



Connect the iPod® then select "**iPod**".

3



Use the "**Track**" button to select the previous / next track.



Press and hold "**Track**" for fast back or forwards.



Press the **arrow** to modify the track play mode: "**Repeat**": plays the current track repeatedly in a loop.

"**Random/Shuffle**": plays all of the tracks in the current folder in random order.

"**Playback Speed**": adjustment of the play speed (slow, normal, fast).

"**Sound control**": settings for balance, the equaliser, ...



 
Track List



Press "**Chapter List**" to display the complete list of audio book chapters.



iPod Menu



Press "**iPod Menu**" to display the list of categories, then sort.

The choice of tracks will then be from the category chosen.

05 MUSIC



Playing the tracks on a portable player (USB)

1



 
Press the **MENU** button to display the choice of source.

2



Connect the portable player, then select "**USB**".

3



Use the "**Track**" button to select the previous / next track.



Press and hold "**Track**" for fast back or forwards.



Press "**Folder**" to move up and down in the folders.



 
Press the **arrow** to modify the track play mode: "**Repeat**": plays the current track repeatedly in a loop.

"**Scan**": plays the start of each track for around 10 seconds.

"**Random / Shuffle**": plays all of the tracks in the current folder in random order.

"**Sound control**": settings for balance, the equaliser, ...

"**Database**": checks the version of "**Gracenote**".



Press "**Folder List**" to display the list of folders. Press on a folder to run through the tracks.



Press "**Playlist Mode**", "**Music Menu**" is displayed. This allows tracks to be sorted by category.

* The Gracenote music database is a service that supplies the names of albums, the track titles, ...

06 BLUETOOTH® TELEPHONE

Pairing a Bluetooth® telephone from the audio system

! For reasons of safety and because the sustained attention of the driver is needed, operations of matching a Bluetooth® mobile phone with the audio system's hands-free function must be done with the **vehicle stationary**.

1



Activate the Bluetooth function on the telephone and ensure that it is "visible to all" (refer to the configuration instructions for your telephone).

2



Press the **MENU** button, then "**Next**" to display the choice of source.

3



Press "**Phone**".

4



Press the **arrow**.

5

Bluetooth Setting

Press "**Bluetooth Setting**".

6

Register Device

Press "**Register Device**".

7



"**Hands Free system**" should be displayed on your telephone. Select it and then enter the code displayed in the audio system.



Your telephone is added to the list in the audio system.

If necessary, refer to the instructions for your mobile telephone.

!

The services available depend on the network, the SIM card and the compatibility of the Bluetooth® telephone used.

Refer to the instructions for your telephone and to your service provider for the services you have access to.

06 BLUETOOTH® TELEPHONE

Making a call

1   Press the **"MENU"** button, then **"Next"** to display the choice of source.

2  Press **"Phone"**.

3  Enter the number then press the telephone.

 Use of the telephone is not recommended while driving. We recommended that you park safely or make use of the steering mounted controls.

Managing paired telephones

1   Press the **MENU** button, then **"Next"** to display the choice of source.

2  Press **"Phone"**.

3  Press the **arrow** then press **"Bluetooth Setting"**.



Select Device to Connect


Select or change a telephone already paired.


Register Device

Pair/register a new telephone

Delete Registered Device

Delete a paired telephone

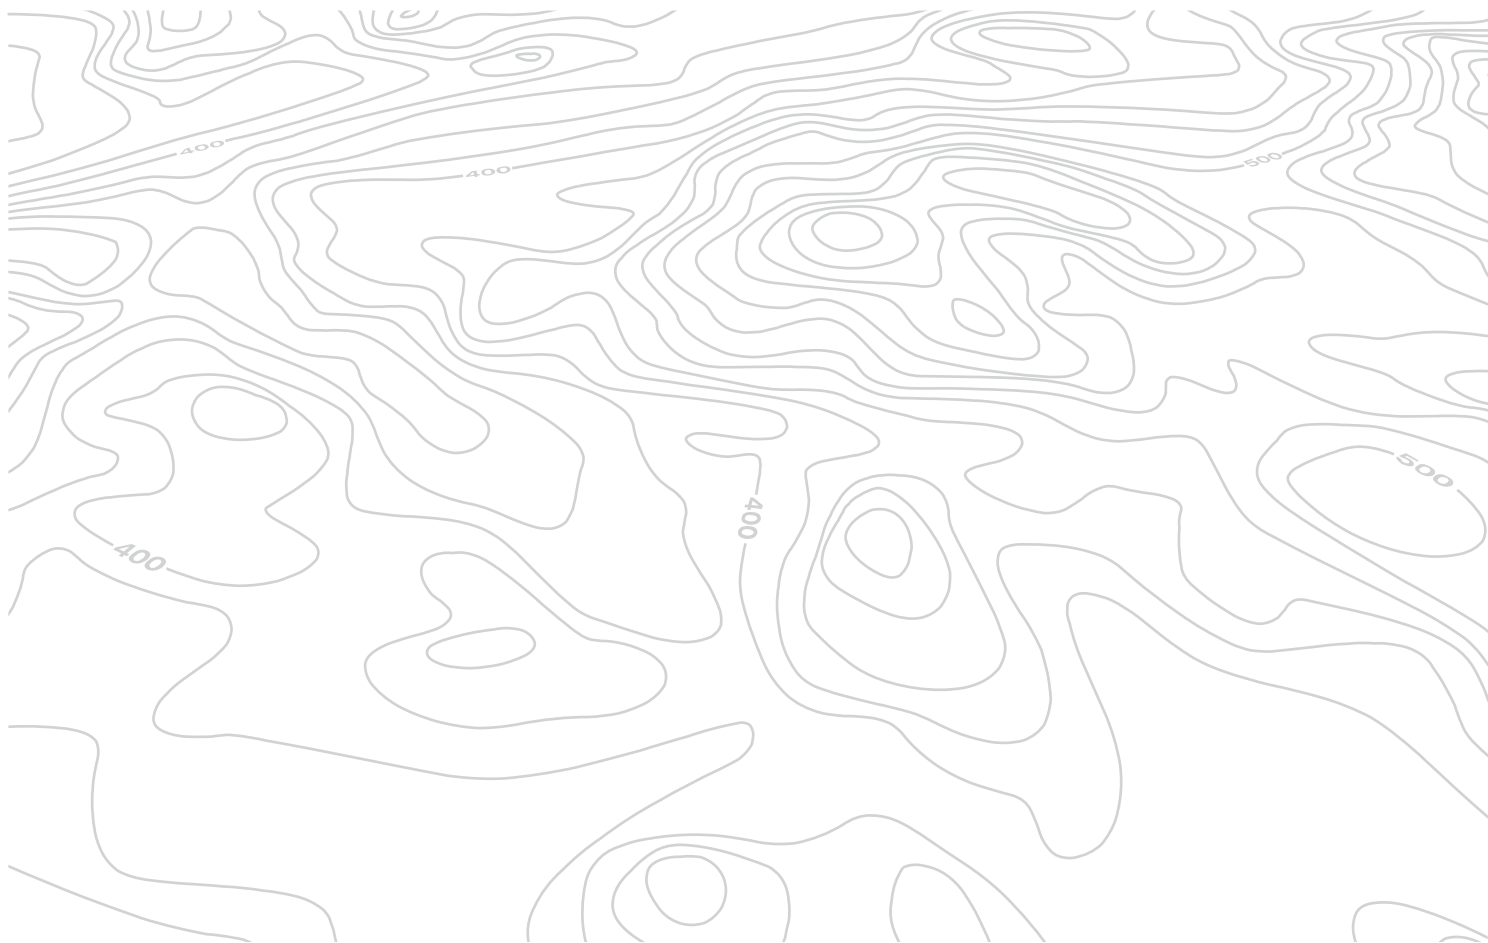

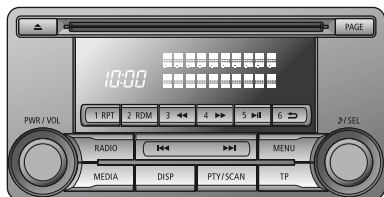

AUDIO-CD system



The system is protected in such a way that it will only operate in your vehicle.




For safety reasons, the driver must carry out operations which require prolonged attention while the vehicle is stationary.

When the engine is switched off and to prevent discharging of the battery, the system switches off following the activation of the energy economy mode.

CONTENTS


01 First steps - Control panel	p. 312
02 Steering mounted controls	p. 314
03 General operation	p. 315
04 Radio	p. 317
05 Music media players	p. 323
06 USB player	p. 328
07 BLUETOOTH® streaming	p. 330
Error messages	p. 332

01 FIRST STEPS

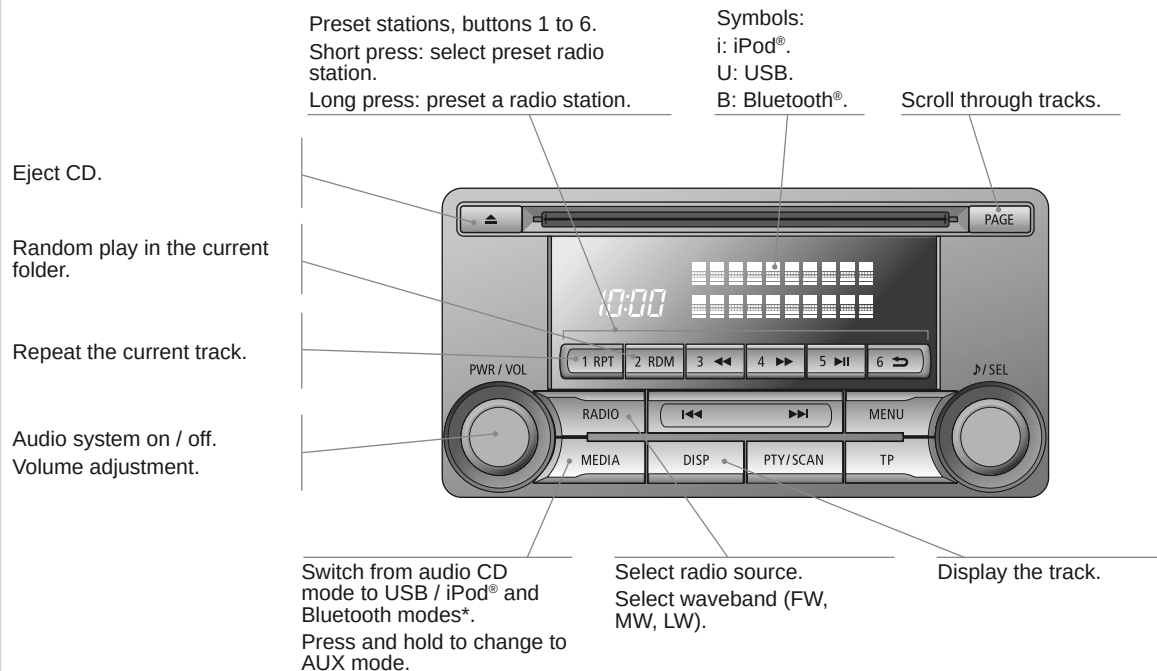


* Available according to version.

01 FIRST STEPS

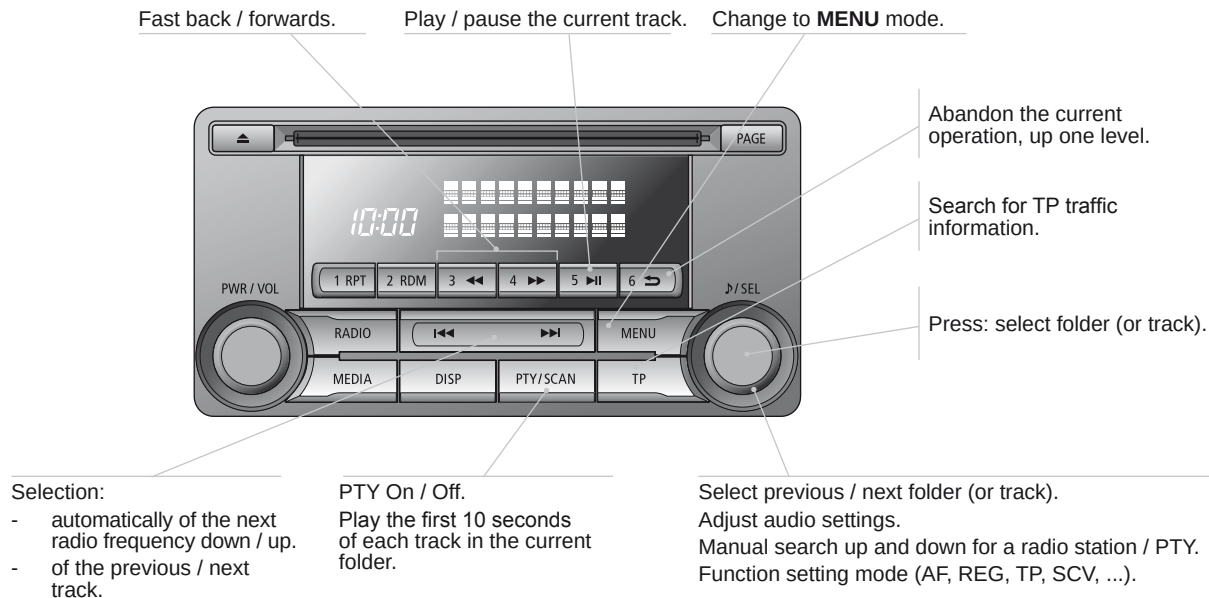

02 STEERING MOUNTED CONTROLS

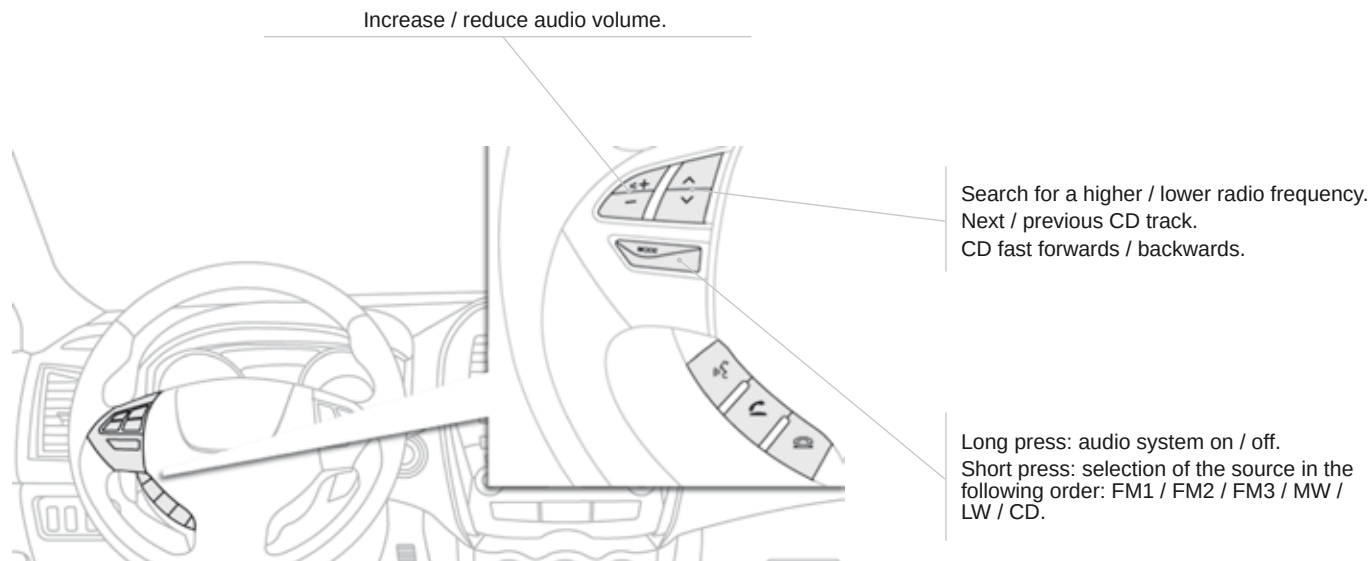

03 GENERAL OPERATION

Switching on / off

1



Press the **PWR/VOL** button.
The last source selected before switching off resumes operation.
The audio system functions can be used when the ignition switch is in the "ON" or "ACC" position.
To switch off, press the **PWR/VOL** button again.



Setting the audio modes

1

 


Press the **SEL** knob repeatedly; the audio mode changes in the following order: **BASS / TREBLE / FADER / BALANCE / SCV** and cancel.



Adjusting the volume

1




Turn the **PWR/VOL** knob to the left to decrease the volume or to the right to increase it.



Adjusting the audio modes

 1



Turn the **SEL** knob to the left or right to adjust the audio setting.

 


The audio adjustment mode is deactivated, during operation of the radio or a CD or after around 10 seconds with no action.

03 GENERAL OPERATION

"BASS" setting

1



Turn the **SEL** knob to set the required bass value.



"BALANCE" left/right sound distribution setting

1

 


Turn the **SEL** knob to set the balance of the volume of the right and left speakers.



"TREBLE" setting

1




Turn the **SEL** knob to set the required treble value.



"FADER" front/rear sound distribution setting

 1



Turn the **SEL** knob to set the balance of the volume of the front and rear speakers.



"SCV" automatic volume adjustment

 
!

This allows automatic adjustment of the settings in relation to the vehicle speed.

1



Press the **SEL** knob repeatedly to select "SCV" mode.



2



Turn the **SEL** knob for access to the settings (OFF, LOW, MID, HIGH).

 


04 RADIO


Selection / Presetting

Selecting radio source

1



 Press the **RADIO** button to switch on the radio.




Automatic station search

1



Press the "◀" or "▶" button to search the lower frequencies or the higher frequencies respectively.

 The search begins automatically and stops at the first station found.




Selecting the waveband

1



 Press the **RADIO** button repeatedly to select the waveband; it changes in the following order: FM1 / FM2 / FM3 / MW / LW / FM1...



Manual station search

1



Turn the **SEL** knob to the left to search the lower frequencies or to the right to search the higher frequencies.



04 RADIO

Manual station presetting

You can preset up to six stations on each waveband. Presetting a new station replaces the previous station.

 
1



Press one of the six buttons "1" to "6" until an audible signal is heard.

The sound cuts out then becomes audible again when the station has been preset.

The number of the button and the associated radio frequency appear in the screen.



!

To recall the pre-set stored setting, press the button and release it within two seconds.

Automatic station presetting

Stations can only be preset automatically on wavebands FM1, FM2 and FM3.

Presetting new stations replaces the previous stations.

This presetting can be activated automatically irrespective of the waveband selected.

1



Press the **RADIO** button for more than two seconds.

The six stations offering the best reception are preset and classified from the weakest to the strongest on the six corresponding buttons.

 


Recalling preset stations

1



Press one of the six buttons "1" to "6". The station corresponding to the waveband selected appears on the screen.



!

Disconnecting the battery terminals clears the preset radio stations.

04 RADIO

RDS

The "**Radio Data System**" (RDS) function on the FM waveband permits:

- access to the display of information, such as the name of the station, ...
- listening to the same station while travelling through different regions,
- temporary tuning to traffic information announcements.

Most FM stations use RDS. These stations transmit non-audible data in addition to their programmes.

 
The data transmitted in this way allows you access to various functions, mainly displaying of the name of the station, automatic retuning to alternative frequencies or temporary retuning to traffic information announcements.

RDS allows you to continue listening to the same station by means of alternative frequencies that carry the same station. However, in certain conditions, RDS alternative frequencies may not be provided throughout the country. Radio stations do not cover the whole country, which explains the loss of reception of the station during a journey.

1



Press the **MENU** button.



2



Press the **SEL** knob repeatedly to select the **RDS** mode: "AF", "REG" and "TP" then turn the knob to select the desired value.



"AF" alternative frequencies

Your radio automatically checks and selects the best frequency for the radio station to which it is tuned (if the station broadcasts on several transmitters or frequencies).

The frequency of a radio station covers approximately 30 miles (50 km). The change from one frequency to another explains the temporary loss of reception during a journey.

If the station to which you are listening does not have several frequencies in the region in which you are currently located, you can deactivate alternative frequencies.

REG regional mode

Some stations are organised in a network.

In different regions, they broadcast different or shared programmes depending on the time of day.

You can follow:

- a regional station only,
- the entire network, with the possibility that you will be listening to a different programme.



On long distance journeys, when the stored station becomes weak, the radio searches first for another frequency for the same station (AF). Then, if this fails, it searches for a frequency broadcasting the regional programme (REG). If this also fails, the radio returns to the stored station.

04 RADIO

 
"TP" traffic information

The "**Traffic Programme**" (TP) function permits automatic and temporary switching to an FM station broadcasting traffic information.

The radio station or the source that you are listening to at this point is put on hold.


Once the traffic information has ended, the system switches back to the radio station or the source that you were listening to initially.

1



Press the **TP** button.

 "TP" appears in the screen. If the station is compatible, "RDS" also appears.



If the radio detects traffic information, "TRAF INF" appears on the display, followed by the frequency of the broadcasting station, then its name.

The volume is different from that of the previous source.

Following the broadcasting of the traffic information, the volume returns to that of the source prior to the interruption.



When "TP" appears in the screen, the radio stops only at RDS stations broadcasting traffic information.

"ALERT" emergency broadcasts

An emergency broadcast automatically and temporarily interrupts the FM station or the source that you are listening to.

The message "ALERT" appears in the screen and the volume is different from that of the previous source.

Following the emergency broadcast, the message disappears and the volume returns to that of the source prior to the interruption.

"PTY" themed type of programme

Some stations offer the option of listening to a themed type of programme as a priority, selected from the list available below:
NEWS, AFFAIRS, INFO, SPORT, EDUCATE, DRAMA, CULTURE, SCIENCE, VARIED, POP M, ROCK M, EASY M, LIGHT M, CLASSICS, OTHER M, WEATHER, FINANCE, CHILDREN, SOCIAL, RELIGION, PHONE IN, TRAVEL, LEISURE, JAZZ, COUNTRY, NATION M, OLDIES, FOLK M, DOCUMENT.

04 RADIO

Search for a "PTY" broadcast

1



Press the **PTY/SCAN** button.



2



 
Turn the **SEL** knob to select **PTY** mode; the symbol flashes and an automatic search is made.
Once the station has been found, its name appears in the screen.



3



Press the "**◀**" or "**▶**" buttons to find another station.



!

Ten seconds after reception, the **PTY** mode is cancelled.

 
Presetting a "PTY" programme

You can preset up to six PTY programmes.
Each new programme stored replaces the previous one.

1



Press the **PTY/SCAN** button.



2



Turn the **SEL** knob to select **PTY** mode, then press one of the six buttons "1" to "6" to define the preset location.



3



Press one of the six buttons "1" to "6" for more than two seconds.

The sound cuts out then becomes audible again when the programme has been stored.

The number of the button and the associated PTY programme appear in the screen.



04 RADIO

Changing the display language of the "PTY" programme

1



Press the **MENU** button.



 
2



Press the **SEL** knob repeatedly to select the **PTY lang** mode.



3



Turn the **SEL** knob to select the language (ENGLISH, FRANCAIS, DEUTSCH, SVENSK, ESPAGNOL, ITALIANO).

 


Functions setting mode


1



Press then **MENU** button.




2

 

This permits activation or deactivation of the functions below.
Press the **SEL** knob repeatedly; the setting mode for the functions changes in the following order : GRACENOTE DB / AF / REG / TP-S / PI-S / PTY (languages) / PH setting / CT / OFF.



 3



Turn the **SEL** knob to the left to deactivate the function ("OFF") or to the right to activate it ("ON").



!

The functions setting mode is deactivated after approximately 10 seconds without any action.

05 MUSIC MEDIA PLAYERS

 
CD player

This can play audio CDs (CD-DA, CD-Text, CD-R/RW) or MP3 CDs.

Selecting CD mode

After inserting a disc, printed face upwards, the player starts automatically.

1



If the player already contains a disc, press the **MEDIA** button. "MEDIA", the track number and the playing time appear in the screen.



!

Insert circular compact discs only.
8 cm compact discs must be inserted in the centre of the player slot.

Ejecting a disc

1



Press this button to remove the disc from the player. The system automatically switches to radio mode.



!

Once ejected, if the compact disc is not removed within fifteen seconds, it is reloaded into the player.

05 MUSIC MEDIA PLAYERS

Audio CD

Fast search

1



Press and hold the "◀◀" or "▶▶" button to carry out a fast backwards or forwards search respectively. Play begins when the button is released.

 


Selecting a track

1



Press the "◀◀" or "▶▶" button to select the previous or next track respectively.




Repeating a track

1



 Press the **RPT** button to repeat the play of the current track. "RPT" appears in the screen. To exit this mode, press this button again.



Random playing of a disc

1



Press the **RDM** button to start random play of the tracks on the disc. "RDM" appears in the screen. To exit this mode, press this button again.

 


Playing the beginning of each track

1



Press the **PTY/SCAN** button to start playback of the first ten seconds of each track on the disc. "SCAN" appears in the screen and the corresponding track number flashes. To exit this mode, press this button again.




On CD-R/RWs, the quality of the playback sound depends on the encoding software, the burning device and the burning speed used.

05 MUSIC MEDIA PLAYERS

CD-TEXT display

The CD player is compatible with the display of CD-Text information.

 1



Press the **DISP** button repeatedly; the CD-Text information appears in the following order:

DISC NAME / TRACK NAME /
NORMAL DISPLAY MODE.



2



If the information exceeds 12 characters, press the **PAGE** button to see the rest.

In the absence of CD-Text information to be displayed, "NOTITLE" appears on the screen.



MP3 / ID3 Tag CD

The CD player and the CD changer are compatible with the playing of MP3 files.

These must be recorded in ISO-8859 Level 1 / Level 2, Joliet or Romeo format on CD ROMs, CD-Rs or CD-RWs. The CDs can contain a maximum of 255 files and 100 folders on 16 levels.

The ID3 version 1.0, 1.1, 2.2, 2.3 and 2.4 Tag can be displayed while playing MP3 files.

!

In the case of compact discs containing both CD-DA and MP3 files, play automatically begins with the CD-DA files.

To switch play between the two types of file, press the **CD** button for more than two seconds until an audible signal is heard.

 
While using these compact discs, the "Repeat", "Random play" and "Playing of the beginning of the tracks" functions are only applied to files of the same format.

Selecting an MP3 folder

1



Turn the **SEL** knob to the right to select a folder in ascending order or to the left to select a folder in descending order.




05 MUSIC MEDIA PLAYERS

Repeating the tracks in a folder

1



 Press the **RPT** button for more than two seconds to repeat the playing of the tracks contained in the current folder. "D-RPT" appears in the screen. To exit this mode, press this button again.



Playing the beginning of each track

1



Press the **PTY/SCAN** button to start playing the first ten seconds of each track in all of the folders. "SCAN" appears in the screen and the corresponding track number flashes. To exit this mode, press this button again.



Random playing of a folder

1



Press the **RDM** button to start random playing of the tracks in the current folder. "RDM" appears in the screen. To exit this mode, press this button again.



MP3 / ID3 Tag display

When play begins, "READING" appears in the screen then disappears to make way for the folder number, the track number, the playing time and "MP3".

Random playing of a disc

1



Press the **RDM** button for more than two seconds to start random playing of the tracks in all of the folders. "D-RDM" appears in the screen. To exit this mode, press this button again.



1

 


Press the **DISP** button repeatedly; the MP3 information appears in the following order:
FOLDER NAME / TRACK NAME /
NORMAL DISPLAY MODE.



05 MUSIC MEDIA PLAYERS

2



Press the **DISP** button for more than two seconds to activate the ID3 Tag information. "TAG" appears in the screen.

Press the **DISP** button repeatedly; the Tag ID3 information appears in the following order:

ALBUM NAME / TRACK NAME / ARTIST NAME / NORMAL DISPLAY MODE.

To deactivate this information, press the **DISP** button again for more than two seconds.



3



If the information exceeds 12 characters, press the **PAGE** button to see the rest.

In the absence of MP3 or ID3 Tag information to be displayed, "NOTITLE" appears in the screen.



!

On CD-R/RWs, the quality of the playing sound depends on the encoding software, the burning device and the burning speed used. Depending on the flow chart of the MP3 folders and files on the disc, play may not begin immediately.

Using the auxiliary input (AUX)



The auxiliary socket allows the connection of a portable device (MP3 player...).



!

Connect the portable device (MP3 player...) to the RCA audio sockets (red and white) using a suitable cable, not supplied.

1

First adjust the volume on your portable device (to a high level). Then adjust the volume on the audio system.

Operation and play is done using the controls on your portable device.

2



Press the **MEDIA** button for more than two seconds.

"AUX" appears in the screen and the external mode is activated.

Press **MEDIA** again to deactivate the **AUX** mode and change to another mode.




06 USB PLAYER

Using the USB port



The USB port is used to connect a portable device (MP3 player, Apple® player, ...). The files are sent from the player to your audio system and heard through the vehicle's speakers.

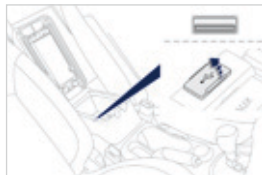

Models supported:


- iPod® 5th generation (video).
- iPod classic® (2009).
- iPod nano® 6th generation.
- iPod nano® 3rd generation (video).
- iPod touch® 4th generation.
- iPhone 4S®.
- USB memory sticks formatted FAT32 (File Allocation Table) only.

File formats: MP3, WMA, AAC, WAV.

- Maximum number of levels (including root): 8.
- Number of folders: 100.
- Number of files: 255.


1

With the vehicle stationary, ignition switch in the **LOCK** position, connect a suitable cable to the portable player.

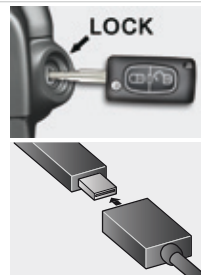

2

Then connect the cable to the vehicle's USB port.

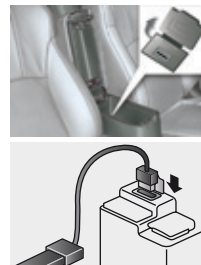

!

To disconnect the cable, the ignition switch must be in the **LOCK** position.
Take care not to trap the cable when closing the armrest.

06 USB PLAYER

Managing a track (or folder)

Play

1



Once the portable player / iPod® is connected, make several successive presses on the **MEDIA** button and select USB, the source selected is displayed.
Once the player is selected, play starts.



Stop

1



Press **MEDIA** to change mode or on **RADIO**.

 


Select a track

1




Press the "◀" or "▶" button to select the previous or next track respectively. Press and hold to go faster.



Select a folder (or track)

1

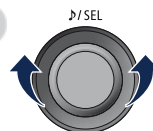

Turn the knob to select a previous or next track.



2



Press the knob to select the folder and go down or up one level.



 
The knob can also be used for tracks.

Playing the start of each track

1



Press the **PTY/SCAN** button to start the play of the first ten seconds of each track in all folders. "SCAN" appears in the screen and the corresponding track number flashes.
Press this button again to quit this mode.




07 BLUETOOTH® STREAMING



Managing a track

 1



Press the **MEDIA** button repeatedly and select Bluetooth® (the source selected is displayed).



Play

1



Press this button to start play.



Pause / Stop / Resume*

1



Press and hold the "II" button to pause the play.



Press the "Back" button to stop play.



Streaming allows music files on a telephone to be heard via the vehicle's speakers.

The telephone must support the appropriate Bluetooth® profiles (profiles A2DP / AVRCP).

 
Connect the telephone: see the "BLUETOOTH® TELEPHONE WITH VOICE RECOGNITION" section.

Select a track*

1



Press the "◀" or "▶" button to select the previous or next track respectively.



Repeat play*

1



Press this button during play. Press again to exit this mode.



Random play*

1



Press this button during play. Press again to exit this mode.



 
* If the function is supported by the device.

07 BLUETOOTH® STREAMING



Play the start of each track*

1



Press this button.

"PTY/SCAN" appears in the screen and the start of each track on the telephone connected via Bluetooth® is played for around 10 seconds. Press again to exit this mode.



 
The screen displays a maximum of 11 characters at a times. If the end of the title is cut off, press the **PAGE** button. The next characters are displayed each time the button is pressed.

If no title is stored: "NO TITLE" appears in the screen.

Characters that cannot be displayed are replaced by ".".

Changing the display*

1



Press and hold this button until an audible signal is heard and "TAG" is displayed.

Press this button to change the display.

Make a new long press to exit this mode.



* If the function is supported by the device.


ERROR MESSAGES

If an error message appears on the screen, refer to the table below to find out what it means and the solution to be applied in order to rectify it.

MESSAGE	DESCRIPTION	SOLUTION
CD		
CHECK DISC	Disc not inserted correctly. Disc has condensation on its surface.	Insert the disc with the printed face upwards. Clear the dampness off the disc.
DISC ERROR	Disc dirty, scratched or distorted.	Clean or replace the disc.
INTERNAL	The player has malfunctioned for some reason.	Check that there is no problem with the disc and insert another disc. If the problem persists, contact a PEUGEOT dealer.
HEAT ERROR	The temperature inside the unit is too high.	Remove the disc and wait until the temperature of the unit returns to normal.
USB		
FILE ERROR	The files selected cannot be read.	Select files that can be read: MP3/WMA/AAC.
USB BUS PWR	External power supply fault.	Switch the system off and on again. If the problem persists, contact a PEUGEOT dealer.
LSI ERROR	Communication error between the the audio system and the external device.	
UNSUPPORTED FORMAT	The files selected cannot be read.	Select files that can be read: MP3/WMA/AAC.
UNSUPPORTED DEVICE	An unsupported USB device has been connected.	Use a suitable USB cable.

ERROR MESSAGES

MESSAGE	DESCRIPTION	SOLUTION
APPLE PLAYERS		
NO SONG	An iPod / iPhone has been connected but contains no titles.	Connect an iPod / iPhone containing tracks.
VER ERROR	The iPod / iPhone software version is not supported.	Connect a version of iPod / iPhone with a software version compatible with the system.
OTHER		
ERROR DC	An abnormal direct current has been sent to the speakers.	Switch the system off and on again. If the problem persists, contact a PEUGEOT dealer.

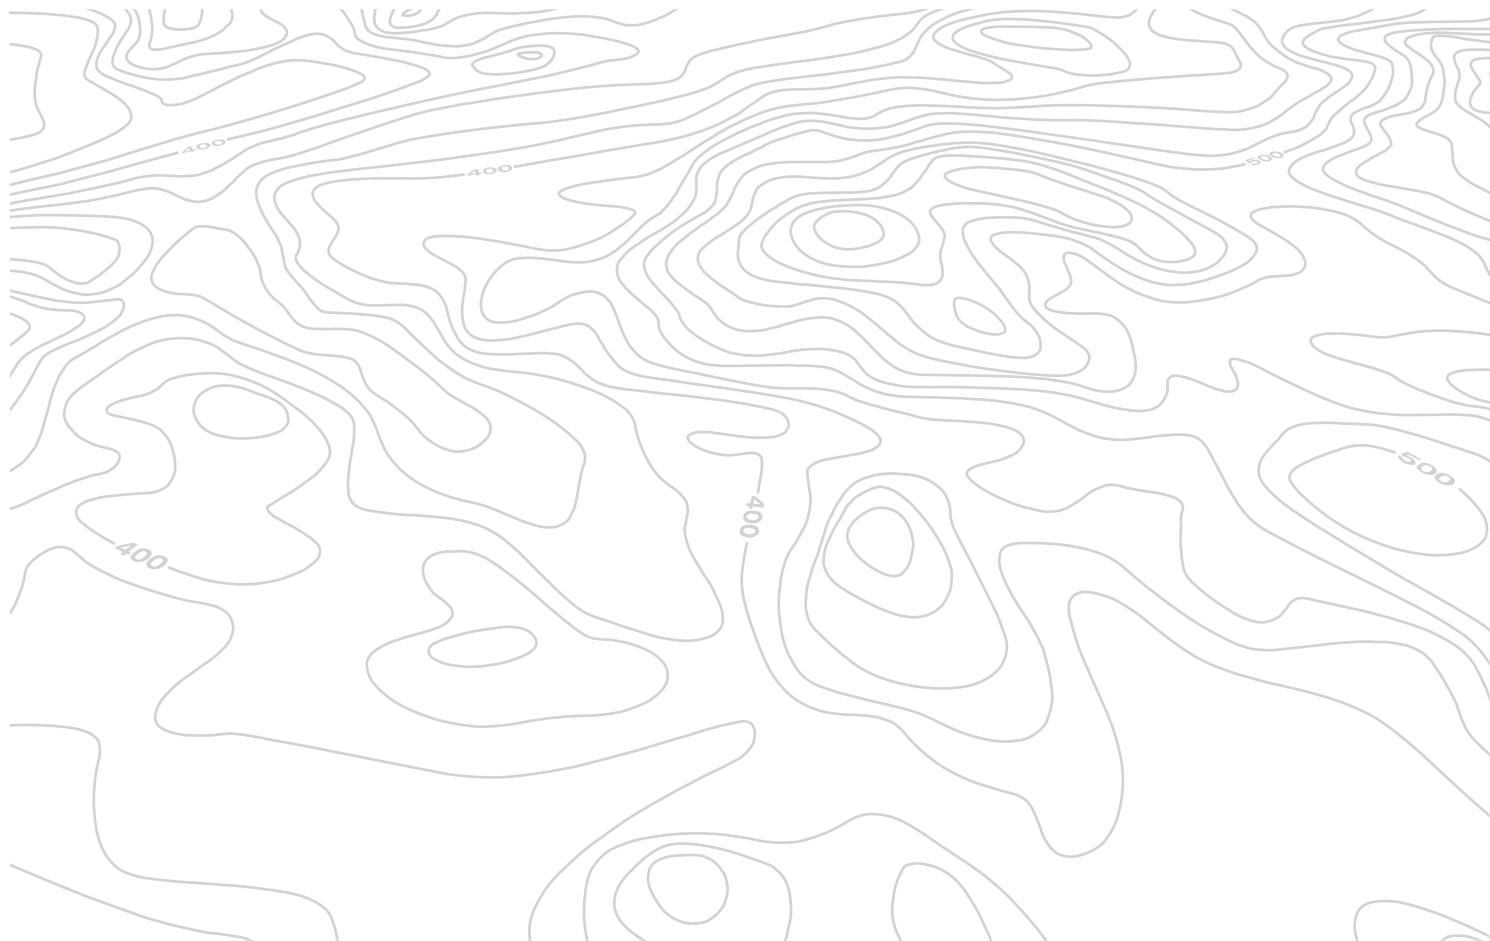

A

ABS and EBD systems 142
 Accessories 204
 Accessory socket, 12V 90, 92, 93
 Access to bulbs 183
 Active stability control (ASC) 144
 Adjusting headlamps 133
 Adjusting head restraints 73
 Adjusting seat belt height 146
 Adjusting the steering wheel 79
 Airbag, knee 152, 154
 Airbags 150
 Airbags, curtain 153, 154
 Airbags, front 150, 154
 Airbags, lateral 152, 154
 Air conditioning 10, 81
 Air conditioning,
 automatic 81, 84
 Air conditioning, manual 81, 82
 Air filter 216
 Air flow 80
 Air intake 83, 86
 Air vents 80
 Alarm 65
 Anti-lock braking system (ABS) 142
 Anti-theft 61, 102
 Apple® player 278, 279, 280, 304, 306
 Armrest, front 74, 90, 93
 Armrest, rear 76
 ASC 144
 Ashtray, portable 90, 92
 Audible warning 141
 Audio-CD 276, 303, 323
 Audio file formats 276
 Audio streaming
 (Bluetooth) 330, 331
 Audio systems 249, 289, 311
 Audio-telematics 249
 Automatic illumination
 of headlamps 128, 130

Automatic operation of hazard
 warning lamps 141
 Automatic rain sensitive
 windscreen wipers 136
 Automatic switching off
 of lighting 130
 Auxiliary
 sockets 94, 278-281, 304-308, 328-329

B

Battery 194, 216
 Battery, charging 196
 Battery, remote control 60, 61
 Bluetooth (telephone) 237, 288, 308
 Bluetooth telephone
 with voice recognition 237-248
 Bonnet 207
 Bonnet stay 207
 Boot 63
 Boot lamp 140
 Bottle holder 90
 Brake discs 218
 Brake lamps 186
 Brake pads 218
 Braking assistance
 system 142
 Bulbs (changing, type) 182-187

C

Capacity, fuel
 tank 210
 CD changer 325
 CD MP3 276, 303, 325
 Central locking 52-59
 Changing a bulb 182-187
 Changing a fuse 188-193
 Changing a wheel 175-178
 Changing a wiper
 blade 197
 Changing the remote control
 battery 60
 Changing the time 44, 46, 49
 Checking levels 213-215
 Checking the engine
 oil level 213
 Checks 207-218
 Children 149, 151, 155-170
 Child lock 170
 Child seats 156, 156,
 160-162, 169
 Child seats, ISOFIX 166
 Cigarette lighter 92
 Closing the boot 63
 Closing the doors 62
 Colour screen 250, 253, 290, 293
 Connectors, audio 94, 278-281,
 304, 305, 328-329
 Controls for
 air conditioning 82, 84
 Coolant 35
 Coolant level 214
 Courtesy lamp,
 front 138
 Courtesy lamp, rear 139
 Cruise control 120
 Cup holder 90
 CVT gearbox 105, 217

D

Daytime running lamps	130, 184
Deactivating ASC	144
Deactivating the passenger airbag	150
Deactivation of the passenger and rear window control switches	68
Deadlocking	55, 57
Demisting-Defrosting	77, 88, 89
Dials	12
Diesel additive level	215
Dimensions	233
Dipped beam	182, 184
Dipstick	213
Direction indicators	141, 182, 183, 186
Doors	62
Driving economically	10

E

Eco-driving	10
Electronic brake force distribution (EBFD)	142
Electronic engine immobiliser	61, 102
Emergency boot release	63
Emergency warning lamps	141
Engine compartment	208, 209
Engine compartment fusebox	191
Engine, Diesel	209, 211, 212, 226-232
Engine oil	213
Engine oil level dipstick	213
Engine, petrol	208, 211, 219
Environment	10, 60, 81, 196, 215
Error messages (audio equipment)	332, 333

F

Filling with fuel	210, 211
Fitting a wheel	179
Fittings, boot	96
Fittings, rear	95
Fitting the mat	91
Flashing indicators	141, 182, 183, 185, 186
Folding/unfolding the door mirrors	78
Four-wheel drive system	118
Frequency (radio)	275, 300, 317
Front foglamps	129, 182, 184
Front seats	71, 72, 74
Fuel	10, 210, 211
Fuel consumption	10
Fuel filler cap	210
Fuel filler flap	210
Fuel gauge	12
Fuel tank	210
Fusebox, dashboard	189
Fuses	188

G

Gearbox, manual	103, 104, 111, 217
Gear lever, manual gearbox	103
Gear shift indicator	104
Glove box	90, 91
G.P.S.	254-267
Grab handles	95
Guidance	254-267

H

Hazard warning lamps	141
Headlamp adjustment	133
Headlamp wash	135
Headlamp wash reservoir	215
Head restraints, front	73
Head restraints, rear	75
Heated seats	74
Heating	10, 82, 84
Height and reach adjustment, steering wheel	79
Hill start assist	110

I

Identification plates	235
Indicators, direction	141, 183
Inflating tyres	10
Inputs for audio system	94, 278-281, 304-305, 328-329
Instrument panel	12
Instrument panel screen	12, 19-31, 104
Interior fittings	90, 91
iPhone	280, 306
iPod	280, 306
ISOFIX mountings	164, 165, 168

J

Jack	175
------------	-----

K

Keeping children safe 149, 151, 155-170
 Key 52-61
 Key, electronic 56-61
 Key in ignition warning 98
 Keyless Entry and
 Starting 56-61, 99
 Key with remote
 control 52-55, 102

L

Labels, identification 235
 Lamps, front 182
 Lamps, rear 186
 Lamps, warning and indicator 13-18
 LED daytime running lamps 184
 Level, brake fluid 214
 Level, headlamp wash 215
 Levels and checks 208, 209, 213-218
 Lighting bulbs
 (replacement) 182-187
 Lighting control stalk 127
 Lighting dimmer 51
 Lighting, guide-me home 131
 Lighting, interior 140
 Lighting on reminder 129
 Loading 10
 Long objects, transporting 76
 Low fuel level 210
 Luggage retaining strap 96

M

Main beam 182, 184
 Maintenance 10
 Map (colour screen) 266
 Map reading lamps 138
 Markings, identification 235
 Mat 91
 Menu 253, 294
 Mirror, rear view 79
 Mirrors, door 77
 Mountings for ISOFIX seats 164, 165, 168
 MP3 CD 276, 303, 325

N

Navigation 254-267
 Navigation data 265
 Number plate lamps 186, 187

O

Oil filter 216
 Oil level 213
 Opening the bonnet 207
 Opening the boot 52, 56, 63
 Opening the doors 52, 56, 62
 Opening the fuel filler flap 210
 Operation indicator lamps 13-18

P

Pair telephone 288, 308
 Panoramic glass sunroof 70
 Parcel shelf, rear 97
 Parking brake 102, 218
 Parking sensors, front 125
 Parking sensors, rear 123, 124
 Particle filter 215, 217
 Passenger compartment
 filter 216
 Player, CD MP3 276, 303, 325
 Port, USB 94, 278, 304, 328
 Priming the fuel system 212
 Protecting children 149, 151, 155-170
 Puncture 171, 175

R

Radio 275, 300, 301
 Range 32, 35
 RCA sockets 94, 278, 304, 328
 RDS 302
 Rear foglamp 129, 186
 Rear screen (demisting) 89
 Recharging the battery 194
 Recirculation / exterior
 air intake 84
 Regeneration of the particle
 emissions filter 217
 Remote control 52-61
 Removing a wheel 177
 Removing the mat 91

Repair kit, puncture.....	171
Replacing bulbs	182-187
Replacing fuses	188-193
Replacing the air filter.....	216
Replacing the oil filter	216
Replacing the passenger compartment filter	216
Replacing wiper blades.....	197
Rev counter	12
Reversing camera.....	126
Reversing lamps	186, 187
Roof bars.....	203
Roof blind	70
Routine checks	216, 218
Running out of fuel (Diesel)	212

S

Screen (audio equipment)	44, 46, 48
Screen, instrument panel	19-31
Screen menu.....	253, 294
Screenwash, front	135
Screen-wash reservoir	215
SD card	265, 279, 280
Seat adjustment	71, 72
Seat back storage pockets	95
Seat belts	146-149
Seat belts warning lamp	146

Seats, electric	72
Seats, rear	75
Serial number, vehicle.....	235
Service indicator	33
Servicing	10
Setting the clock	44, 46, 48
Sidelamps	182, 184, 186
Side repeater	185
Ski flap	76
Snow chains.....	181
Spare wheel	114, 176
Speedometer	12
Spotlamps, side	185
Starting the vehicle.....	98, 99
Steering mounted controls, audio	251, 291, 314
Stopping the vehicle	98, 99
Stop & Start system (Auto Stop Go).....	111
Storage.....	76, 91, 96
Stowing rings	96, 97
Sun visor	91
System, ABS.....	142
System, audio-CD.....	311-333
System, audio-telematics	249-288

T

Table of weights	220-225, 227-232
Tables of engines.....	219, 226
Tables of fuses	188

TCL.....	144
Technical data.....	219-232
Telephone	308, 309
Telephone,with voice recognition	237-248
Temperature adjustment.....	82, 84
Temperature, coolant.....	35
Temporary puncture repair kit	171
Third brake lamp	186, 187
Three flashes function (direction indicators)	141
TMC (Traffic info)	268
Tools.....	175
Total distance recorder	32
Touch screen audio-CD system	289
Touch screen audio-telematic system	249
Towbar.....	201
Towed loads	220-225, 227-232
Towing another vehicle	200
TP (Traffic information)	274, 301, 320
Traction control (TCL)	144
Traffic information (TMC).....	268
Trajectory control systems.....	144
Tyre pressures	114, 235
Tyres.....	10, 114
Tyre under-inflation detection	15, 114

U

Under-inflation (detection)	15, 114
Unlocking	52, 56
USB.....	94, 278-281, 304-305, 328-329

V

Vehicle identification.....235
Ventilation 80-87
Voice commands 237-248

W

Warning lamp, low fuel level.....210
Warning lamps 13-18
Weights 220-225, 227-232
Welcome lighting.....58, 132
Wheelbrace.....175
Wheel, changing 175-180
Window controls 68
Wiper control stalk.....134, 136

EC-Declaration of Conformity

Manufacturer / responsible person Johnson Controls Interior Experience

Address: 915 E. 32nd Street

Holland Michigan USA 49423

Declares that the product:

type: BlueTooth Hands Free for Automotive

model: 1351524

Intended use: Hands free cellphone interface to vehicle audio system

complies with the essential requirements of Article 3 of the R&TTE 1999/5/EC Directive, if used as intended and that the following standards has been applied:

- 1 Safety (Article 3.1 a of the R&TTE Directive)
applied standard(s) EN 60 950-1 issue 2001
+ A 11 issue 2004
- 2 Electromagnetic compatibility (Article 3.1 b of the R&TTE Directive)
applied standard(s) ETSI EN 301 489-1 V1.6.1 issue 2005-09
ETSI EN 301 489-17 V1.2.1 issue 2002-08
- 3 efficient use of the radio frequency spectrum (Article 3.2 of the R&TTE Directive)
applied standard(s) ETSI EN 300 328 V1.7.1 issue 2006-10

Holland, MI 7/30/2007
(Place and date of the declaration of conformity)

John D. Spencer
(Name and signature)

English	Hereby, <i>Johnson Controls Automotive</i> , declares that this Hands-free Bluetooth cellular phone interface system with voice recognition is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.
Finnish	<i>Johnson Controls Automotive</i> vakuuttaa täten että Hands-free Bluetooth cellular phone interface system with voice recognition tyyppinen laite on direktiivin 1999/5/EY oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.
Dutch	Hierbij verklaart <i>Johnson Controls Automotive</i> dat het toestel Hands-free Bluetooth cellular phone interface system with voice recognition in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG.
French	Par la présente, <i>Johnson Controls Automotive</i> déclare que ce Hands-free Bluetooth cellular phone interface system with voice recognition est conforme aux exigences essentielles et aux autres dispositions de la directive 1999/5/CE qui lui sont applicables.
Swedish	Härmed intygar <i>Johnson Controls Automotive</i> att denna Hands-free Bluetooth cellular phone interface system with voice recognition står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 1999/5/EG.
Danish	Undertegnede <i>Johnson Controls Automotive</i> erklærer herved, at følgende ubstyr Hands-free Bluetooth cellular phone interface system with voice recognition overholder de væsentlige krav og øvrige relevante krav i direktiv 1999/5/EF
German	Hiermit erkläre <i>Johnson Controls Automotive</i> , dass sich dieses Hands-free Bluetooth cellular phone interface system with voice recognition in Übereinstimmung mit den grundlegenden Anforderungen und den anderen relevanten Vorschriften der Richtlinie 1999/5/EG befindet".
Greek	<i>ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ Johnson Controls Automotive ΔΗΛΩΝΕΙ ΟΤΙ Hands-free Bluetooth cellular phone interface system with voice recognition ΕΥΜΟΡΦΟΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΑΛΛΕΣ ΕΞΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΜΗΤΙΑΣ 1999/5/ΕΚ</i>
Italian	Con la presente <i>Johnson Controls Automotive</i> dichiara che questo Hands-free Bluetooth cellular phone interface system with voice recognition è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE.
Spanish	Por medio de la presente <i>Johnson Controls Automotive</i> declara que el Hands-free Bluetooth cellular phone interface system with voice recognition cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE
Portuguese	<i>Johnson Controls Automotive</i> declara que este Hands-free Bluetooth cellular phone interface system with voice recognition está conforme com os requisitos essenciais e outras disposições da Directiva 1999/5/CE.

EC-Declaration of Conformity

Manufacturer / responsible person Johnson Controls Interior Experience

Address: 815 E. 32nd Street

Holland Michigan USA 49423

Declares that the product:

type: Bluetooth Hands Free for Automotive

model: 1872689, 1872721

Intended use: Hands Free cellphone interface to vehicle audio system

complies with the essential requirements of Article 3 of the R&TTE 1999/5/EC Directive, if used as intended and that the following standards has been applied:

- | | | | |
|---|--|----------------------------------|-------------------------|
| 1 | Safety (Article 3.1.a of the R&TTE Directive) | | |
| | applied standard(s) | <u>EN 60 950-1</u> | <u>2001</u>
issue |
| | | <u>+ A 11</u> | <u>2004</u>
issue |
| | | <u>EN 50371</u> | <u>2008</u>
issue |
| 2 | Electromagnetic compatibility (Article 3.1.b of the R&TTE Directive) | | |
| | applied standard(s) | <u>ETSI EN 301 489-1 V1.6.1</u> | <u>2005-09</u>
issue |
| | | <u>ETSI EN 301 489-17 V1.2.1</u> | <u>2002-08</u>
issue |
| 3 | Efficient use of the radio frequency spectrum (Article 3.2 of the R&TTE Directive) | | |
| | applied standard(s) | <u>ETSI EN 300 328 V1.7.1</u> | <u>2006-10</u>
issue |

Holland, MI USA 8/30/2009
(Place and date of the declaration of conformity)

John D. Spencer
(Name and signature)

Česky [Czech]:	Toto zařízení je v souladu se základními požadavky a ostatními odpovídajícími ustanoveními Směrnice 1999/5/EC.
Dansk:	Dette udstyr er i overensstemmelse med de væsentlige krav og andre relevante bestemmelser i Direktiv 1999/5/EF.
Deutsch:	Dieses Gerät entspricht den grundlegenden Anforderungen und den weiteren entsprechenden Vorgaben der Richtlinie 1999/5/EU.
[German]:	
Eesti:	See seade vastab direktiivi 1999/5/EÜ olulistele nõuetele ja teistele asjakohastele sätetele.
[Estonian]:	
English:	This equipment is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.
Español:	Este equipo cumple con los requisitos esenciales así como con otras disposiciones de la Directiva 1999/5/CE.
[Spanish]:	
Ελληνική:	Αυτό το εξοπλισμός είναι σε συμμόρφωση με τις ουσιαστικές απαιτήσεις και άλλες σχετικές διατάξεις της Οδηγίας 1999/5/ΕΚ.
[Greek]:	
Français:	Cet appareil est conforme aux exigences essentielles et aux autres dispositions pertinentes de la Directive 1999/5/EC.
[French]:	
Íslenska:	Þetta tæki er samkvæmt grunnkröfum og öðrum viðeigandi ákvæðum Þelskipunar 1999/5/EC.
[Icelandic]:	
Italiano:	Questo apparato è conforme ai requisiti essenziali ed agli altri principi sanciti dalla Direttiva 1999/5/CE.
[Italian]:	
Latviski:	Šī iekārta atbilst Direktīvas 1999/5/EK būtiskajām prasībām un citiem ar to saistītajiem noteikumiem.
[Latvian]:	
Lietuvių:	Šis įrenginys tenkina 1999/5/EB Direktivos esminius reikalavimus ir kitas šios direktyvos nuostatas.
[Lithuanian]:	
Nederlands:	Dit apparaat voldoet aan de essentiële eisen en andere van toepassing zijnde bepalingen van de Richtlijn 1999/5/EC.
[Dutch]:	
Malti:	Dan l-apparat huwa konformi mal-hiġġiet essenzjali u l-provvedimenti l-oħra rilevanti tad-Direttiva 1999/5/EC.
[Maltese]:	
Magyar:	Ez a készülék teljesíti az alapvető követelményeket és más 1999/5/EK irányelvben meghatározott vonatkozó rendelkezéseket.
[Hungarian]:	
Norsk:	Dette utstyret er i samsvar med de grunnleggende krav og andre relevante bestemmelser i EU-direktiv 1999/5/EF.
[Norwegian]:	
Polski [Polish]:	Urządzenie jest zgodne z ogólnymi wymaganiami oraz szczegółowymi warunkami określonymi Dyrektywą UE: 1999/5/EC.
Português:	Este equipamento está em conformidade com os requisitos essenciais e outras provisões relevantes da Directiva 1999/5/EC.
[Portuguese]:	
Slovensko:	Ta naprava je skladna z bistvenimi zahtevami in ostalimi relevantnimi pogoji Direktive 1999/5/EC.
[Slovenian]:	
Slovensky:	Toto zariadenie je v zhode so základnými požiadavkami a inými príslušnými nariadeniami direktiv: 1999/5/EC.
[Slovak]:	
Suomi:	Tämä laite täyttää direktiivin 1999/5/EY olennaiset vaatimukset ja on siinä asetettujen muiden laiteita koskevien määräysten mukainen.
[Finnish]:	
Svenska:	Denna utrustning är i överensstämmelse med de väsentliga kraven och andra relevanta bestämmelser i Direktiv 1999/5/EC.
[Swedish]:	



OMRON Automotive Electronics Co. Ltd.
6368 NENJO-ZAKA, OKUSA, KOMAKI-CITY,
AICHI 485-0802 JAPAN
PHONE:+81-568-78-6159
FAX :+81-568-78-7659

DECLARATION of CONFORMITY

We, OMRON Automotive Electronics Co. Ltd. hereby declare, at our sole responsibility, that the following product conforms to the Essential Requirements of the Radio and Telecommunications Terminal Equipment Directive 1999/5/EC in accordance with the tests conducted to the appropriate requirements of the relevant standards, as listed herewith.

Product

: Keyless Entry System for vehicle

: G8C-930M, G8C-931M, G8C-932M for receiver and immobilizer

: G8D-571M-A, G8D-635M-A for transmitter

Model/ Type Number

CE 1731 CE 0891

Directive and Standards used as appropriate :

Model	Standard used for comply
G8C-930M	EN 60665: 2002 + Amd 1: 2006 + Amd 11: 2008 + Amd 2: 2010 + Amd 12: 2011
	R&TTE Directive (Article 3.1(a) Safety)
	EN301 489-1 V1.8.1
	EN301 489-3 V1.4.1
	EN 300 220-1 V2.1.1
G8C-931M	EN 300 220-2 V2.1.2
	EN 300 330-1 V1.7.1
	EN 300 330-2 V1.5.1
	EN 60665: 2002 + Amd 1: 2006 + Amd 11: 2008 + Amd 2: 2010 + Amd 12: 2011
	EN301 489-1 V1.8.1
G8C-932M	EN301 489-3 V1.4.1
	EN 300 220-1 V2.1.1
	EN 300 220-2 V2.1.2
	EN 300 330-1 V1.7.1
	EN 300 330-2 V1.5.1
G8D-571M-A	EN 60665: 2002 + Amd 1: 2006 + Amd 11: 2008 + Amd 2: 2010 + Amd 12: 2011
	EN301 489-1 V1.8.1 : 2008-04
	EN301 489-3 V1.4.1 : 2002-08
	EN 300 220-1 V2.1.1
	EN 300 220-2 V2.1.2
G8D-635M-A	EN 60665: 2002 + Amd 1: 2006 + Amd 11: 2008 + Amd 2: 2010 + Amd 12: 2011
	EN 301 489-1 V1.8.1 (2008-04)
	EN 301 489-3 V1.4.1 (2002-08)
	EN 300 220-1 V2.1.1 (2006-04)
	EN 300 220-2 V2.1.2 (2007-06)

Signature

: Shinya Takenouchi

Name

: Shinya Takenouchi

Title and position

: Manager
Development & Design Division

Date

: April 16, 2012

Receiver Category of this radio equipment is Category 3, which is referred to EN 300 220-1.

[Czech]	OMRON Corporation limito prohlašuje, že tento [G8D-407M-A*, G8D-410M-B*, G8D-520M-A*, G8C-500M*, G8D-581M-B*, G8D-571M-A*, G8D-518M-A*, G8C-507M*, G8C-223M-3C, G8C-541M*, G8D-621M-A*, G8C-519M*, G8C-527M*, G8C-546M*, G8C-930M*, G8C-931M*, G8C-932M*, G8D-635M-A] je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 1999/5/ES.
[Danish]	Underliggende OMRON Corporation erklærer herved, at følgende udstyr [G8D-407M-A*, G8D-410M-B*, G8D-520M-A*, G8C-500M*, G8D-581M-B*, G8D-571M-A*, G8D-518M-A*, G8C-507M*, G8C-223M-3C, G8C-541M*, G8D-621M-A*, G8C-519M*, G8C-527M*, G8C-546M*, G8C-930M*, G8C-931M*, G8C-932M*, G8D-635M-A] overholder de væsentlige krav og øvrige relevante krav i direktiv 1999/5/EF.
[German]	Hiermit erklärt OMRON Corporation, dass sich das Gerät [G8D-407M-A*, G8D-410M-B*, G8D-520M-A*, G8C-500M*, G8D-581M-B*, G8D-571M-A*, G8D-518M-A*, G8C-507M*, G8C-223M-3C, G8C-541M*, G8D-621M-A*, G8C-519M*, G8C-527M*, G8C-546M*, G8C-930M*, G8C-931M*, G8C-932M*, G8D-635M-A] in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 1999/5/EG befindet.
[Estonian]	Käesolevaga kirjalikult OMRON Corporation seadma [G8D-407M-A*, G8D-410M-B*, G8D-520M-A*, G8C-500M*, G8D-581M-B*, G8D-571M-A*, G8D-518M-A*, G8C-507M*, G8C-223M-3C, G8C-541M*, G8D-621M-A*, G8C-519M*, G8C-527M*, G8C-546M*, G8C-930M*, G8C-931M*, G8D-635M-A] vastavust direktiivi 1999/5/EÜ põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele.
[English]	Hereby, OMRON Corporation, declares that this [G8D-407M-A*, G8D-410M-B*, G8D-520M-A*, G8C-500M*, G8D-581M-B*, G8D-571M-A*, G8D-518M-A*, G8C-507M*, G8C-223M-3C, G8C-541M*, G8D-621M-A*, G8C-519M*, G8C-527M*, G8C-546M*, G8C-930M*, G8C-931M*, G8C-932M*, G8D-635M-A] is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.
[Spanish]	Por medio de la presente OMRON Corporation declara que el [G8D-407M-A*, G8D-410M-B*, G8D-520M-A*, G8C-500M*, G8D-581M-B*, G8D-571M-A*, G8D-518M-A*, G8C-507M*, G8C-223M-3C, G8C-541M*, G8D-621M-A*, G8C-519M*, G8C-527M*, G8C-546M*, G8C-930M*, G8C-931M*, G8C-932M*, G8D-635M-A] cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE.
[Greek]	ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ ΟΜΡΟΝ Corporation ΔΗΛΩΝΕΙ ΟΤΙ [G8D-407M-A*, G8D-410M-B*, G8D-520M-A*, G8C-500M*, G8D-581M-B*, G8D-571M-A*, G8D-518M-A*, G8C-507M*, G8C-223M-3C, G8C-541M*, G8D-621M-A*, G8C-519M*, G8C-527M*, G8C-546M*, G8C-930M*, G8C-931M*, G8C-932M*, G8D-635M-A] συμμορφώνεται προς τις ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΥΝΕΤΙΚΕΣ ΔΑΤΑΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 1999/5/ΕΚ.
[French]	Par la présente OMRON Corporation déclare que l'appareil [G8D-407M-A*, G8D-410M-B*, G8D-520M-A*, G8C-500M*, G8D-581M-B*, G8D-571M-A*, G8D-518M-A*, G8C-507M*, G8C-223M-3C, G8C-541M*, G8D-621M-A*, G8C-519M*, G8C-527M*, G8C-546M*, G8C-930M*, G8C-931M*, G8C-932M*, G8D-635M-A] est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE.
[Italian]	Con la presente OMRON Corporation dichiara che questo [G8D-407M-A*, G8D-410M-B*, G8D-520M-A*, G8C-500M*, G8D-581M-B*, G8D-571M-A*, G8D-518M-A*, G8C-507M*, G8C-223M-3C, G8C-541M*, G8D-621M-A*, G8C-519M*, G8C-527M*, G8C-546M*, G8C-930M*, G8C-931M*, G8C-932M*, G8D-635M-A] è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE.
[Lithuanian]	At šio OMRON Corporation deklarė, kad šis [G8D-407M-A*, G8D-410M-B*, G8D-520M-A*, G8C-500M*, G8D-581M-B*, G8D-571M-A*, G8D-518M-A*, G8C-507M*, G8C-223M-3C, G8C-541M*, G8D-621M-A*, G8C-519M*, G8C-527M*, G8C-546M*, G8C-930M*, G8C-931M*, G8C-932M*, G8D-635M-A] atitinka esminius reikalavimus ir kitas 1999/5/EB Direktyvos nuostatas.
[Lithuanian]	Šiuo OMRON Corporation deklaruoja, kad šis [G8D-407M-A*, G8D-410M-B*, G8D-520M-A*, G8C-500M*, G8D-581M-B*, G8D-571M-A*, G8D-518M-A*, G8C-507M*, G8C-223M-3C, G8C-541M*, G8D-621M-A*, G8C-519M*, G8C-527M*, G8C-546M*, G8C-930M*, G8C-931M*, G8C-932M*, G8D-635M-A] atitinka esminius reikalavimus ir kitas 1999/5/EB Direktyvos nuostatas.
[Dutch]	Hierbij verklaart OMRON Corporation dat het toestel [G8D-407M-A*, G8D-410M-B*, G8D-520M-A*, G8C-500M*, G8D-581M-B*, G8D-571M-A*, G8D-518M-A*, G8C-507M*, G8C-223M-3C, G8C-541M*, G8D-621M-A*, G8C-519M*, G8C-527M*, G8C-546M*, G8C-930M*, G8C-931M*, G8C-932M*, G8D-635M-A] in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG.
[Maltese]	Hawnhekk, OMRON Corporation, jidhergħa li dan [G8D-407M-A*, G8D-410M-B*, G8D-520M-A*, G8C-500M*, G8D-581M-B*, G8D-571M-A*, G8D-518M-A*, G8C-507M*, G8C-223M-3C, G8C-541M*, G8D-621M-A*, G8C-519M*, G8C-527M*, G8C-546M*, G8C-930M*, G8C-931M*, G8C-932M*, G8D-635M-A], jikkonforma mal-hugġijiet essenzjali u ma provvedimenti oħrajn relevanti li hemm fid-Direttiva 1999/5/EC.

[Hungarian]	Alulírott OMRON Corporation nyilatkozik, hogy a [G8D-407M-A*, G8D-410M-B*, G8D-520M-A*, G8C-500M*, G8D-581M-B*, G8D-571M-A*, G8D-518M-A*, G8C-507M*, G8C-223M-3C, G8C-541M*, G8D-621M-A*, G8C-519M*, G8C-518M*, G8C-527M*, G8C-546M*, G8C-930M*, G8C-931M*, G8C-932M*, G8C-933M-A] megfelel a vonatkozó alapvető követelményeknek és az 1999/5/EC irányelv egyeb előírásainak.
[Polish]	[OMRON Corporation] niniejszym oświadczam, że [G8D-407M-A*, G8D-410M-B*, G8D-520M-A*, G8C-500M*, G8D-581M-B*, G8D-571M-A*, G8D-518M-A*, G8C-507M*, G8C-223M-3C, G8C-541M*, G8D-621M-A*, G8C-519M*, G8C-518M*, G8C-527M*, G8C-546M*, G8C-930M*, G8C-931M*, G8C-932M*, G8D-635M-A] spełnia zasadnicze wymogi oraz inne istotne postanowienia dyrektywy 1999/5/EC.
[Portuguese]	OMRON Corporation declara que este [G8D-407M-A*, G8D-410M-B*, G8D-520M-A*, G8C-500M*, G8D-581M-B*, G8D-571M-A*, G8D-518M-A*, G8C-507M*, G8C-223M-3C, G8C-541M*, G8D-621M-A*, G8C-519M*, G8C-518M*, G8C-527M*, G8C-546M*, G8C-930M*, G8C-931M*, G8C-932M*, G8D-635M-A] está conforme com os requisitos essenciais e outras disposições da Directiva 1999/5/CE.
[Slovenian]	OMRON Corporation izjavlja, da je ta [G8D-407M-A*, G8D-410M-B*, G8D-520M-A*, G8C-500M*, G8D-581M-B*, G8D-571M-A*, G8D-518M-A*, G8C-507M*, G8C-223M-3C, G8C-541M*, G8D-621M-A*, G8C-519M*, G8C-518M*, G8C-527M*, G8C-546M*, G8C-930M*, G8C-931M*, G8C-932M*, G8D-635M-A] skladu z bistvenimi zahtevami in ostalimi relevantnimi določili direktive 1999/5/ES.
[Slovak]	OMRON Corporation týmto vyhlasuje, že [G8D-407M-A*, G8D-410M-B*, G8D-520M-A*, G8C-500M*, G8D-581M-B*, G8D-571M-A*, G8D-518M-A*, G8C-507M*, G8C-223M-3C, G8C-541M*, G8C-931M*, G8D-621M-A*, G8C-519M*, G8C-518M*, G8C-527M*, G8C-546M*, G8C-930M*, G8C-931M*, G8C-932M*, G8D-635M-A] spĺňa základné požiadavky a všetky príslušné ustanovenia Smernice 1999/5/ES.
[Finnish]	OMRON Corporation vakuuttaa täten että [G8D-407M-A*, G8D-410M-B*, G8D-520M-A*, G8C-500M*, G8D-581M-B*, G8D-571M-A*, G8D-518M-A*, G8C-507M*, G8C-223M-3C, G8C-541M*, G8D-621M-A*, G8C-519M*, G8C-518M*, G8C-527M*, G8C-546M*, G8C-930M*, G8C-931M*, G8C-932M*, G8D-635M-A] tyyppien lähte on direktiivin 1999/5/EEY oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.
[Swedish]	Härmed intygar OMRON Corporation att denna [G8D-407M-A*, G8D-410M-B*, G8D-520M-A*, G8C-500M*, G8D-581M-B*, G8D-571M-A*, G8D-518M-A*, G8C-507M*, G8C-223M-3C, G8C-541M*, G8D-621M-A*, G8C-519M*, G8C-518M*, G8C-527M*, G8C-546M*, G8C-930M*, G8C-931M*, G8C-932M*, G8D-635M-A] är i samstämmighet med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 1999/5/EG.
[Icelandic]	Hér með lýsir OMRON Corporation yfir því að [G8D-407M-A*, G8D-410M-B*, G8D-520M-A*, G8C-500M*, G8D-581M-B*, G8D-571M-A*, G8D-518M-A*, G8C-507M*, G8C-223M-3C, G8C-541M*, G8D-621M-A*, G8C-519M*, G8C-518M*, G8C-527M*, G8C-546M*, G8C-930M*, G8C-931M*, G8C-932M*, G8D-635M-A] er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í líkjun 1999/5/EC.
[Norwegian]	OMRON Corporation erklærer herved at utstyret [G8D-407M-A*, G8D-410M-B*, G8D-520M-A*, G8C-500M*, G8D-581M-B*, G8D-571M-A*, G8D-518M-A*, G8C-507M*, G8C-223M-3C, G8C-541M*, G8D-621M-A*, G8C-519M*, G8C-518M*, G8C-527M*, G8C-546M*, G8C-930M*, G8C-931M*, G8C-932M*, G8D-635M-A] er i samsvar med de grunnleggende krav og øvrige relevante krav i direktiv 1999/5/EF.
[Turkish]	İşbu belge ile OMRON Corporation, bu [G8D-407M-A*, G8D-410M-B*, G8D-520M-A*, G8C-500M*, G8D-581M-B*, G8D-571M-A*, G8D-518M-A*, G8C-507M*, G8C-223M-3C, G8C-541M*, G8D-621M-A*, G8C-519M*, G8C-518M*, G8C-527M*, G8C-546M*, G8C-930M*, G8C-931M*, G8C-932M*, G8D-635M-A] in 1999/5/EC Yönetmeliği esas gereksinimlerine ve diğer şartlarına uygun olduğunu beyan eder.
[Romania]	„Noi OMRON Corporation declarăm că aparatură [G8D-407M-A*, G8D-410M-B*, G8D-520M-A*, G8C-500M*, G8D-581M-B*, G8D-571M-A*, G8D-518M-A*, G8C-507M*, G8C-223M-3C, G8C-541M*, G8D-621M-A*, G8C-519M*, G8C-518M*, G8C-527M*, G8C-546M*, G8C-930M*, G8C-931M*, G8C-932M*, G8D-635M-A] în 1999/5/EC este în conformitate cu cerințele esențiale și cu alte prevederi relevante ale Hotărârii Guvernului nr 88/2003 și Directivei 1999/5/EC.
[Bulgarian]	С настоящия документ OMRON Corporation декларира, че [G8D-407M-A*, G8D-410M-B*, G8D-520M-A*, G8C-500M*, G8D-581M-B*, G8D-571M-A*, G8D-518M-A*, G8C-507M*, G8C-223M-3C, G8C-541M*, G8D-621M-A*, G8C-519M*, G8C-518M*, G8C-527M*, G8C-546M*, G8C-930M*, G8C-931M*, G8C-932M*, G8D-635M-A] е в съответствие с основните изисквания и съответните постановления на Директива 1999/5/EC.

OMRON

OMRON Automotive Electronics Co. Ltd.
 6368 NENJO-ZAKA, OKUSA, KOMAKI-CITY,
 AICHI 485-0802 JAPAN
 PHONE:+81-568-78-6159
 FAX :+81-568-78-7659

DECLARATION of CONFORMITY

We, **OMRON Automotive Electronics Co. Ltd.**, hereby declare, at our sole responsibility, that the following product conforms to the Essential Requirements of the Radio and Telecommunications Terminal Equipment Directive 1999/5/EC in accordance with the tests conducted to the appropriate requirements of the relevant standards, as listed herewith.

Product
Model/ Type Number

: FOB / WCM / Transmitter
 : FOB : GSD-644M-KEY-E
 : WCM : GSD-646M , GSD-649M
 : Transmitter : GSD-635M-A

CE 1731

Directive and Standards used as appropriate :

Model	Standard used for comply
GSD-644M-KEY-E	EN60965:2002+Amd1:2006+Amd11:2008+Amd2:2010+Amd12:2011
	EN301 489-1 V1.8.1 (2008)
	EN301 489-3 V1.4.1 (2002)
	EN300 330-1 V1.2.1 (2010)
	EN300 330-2 V1.1.1 (2010)
	EN300 220-1 V2.1.1 (2006)
GSD-646M	EN300 220-2 V2.1.2 (2007)
	R&TTE Directive (Article 3.1(a) Safety) Amd12: 2011
	EN 301 489-1 V1.8.1 (2008-04)
	EN 301 489-3 V1.4.1 (2002-08)
	EN 300 220-1 V2.1.1 (2006-04)
	EN 300 220-2 V2.1.2 (2007-06)
GSD-649M	EN 300 330-1 V1.7.1 : 2010-02
	EN 300 330-2 V1.5.1 : 2010-02
	EN 60965: 2002 + Amd 1: 2006 + Amd 11: 2008 + Amd 2: 2010 + Amd 12: 2011
	R&TTE Directive (Article 3.1(a) Safety)
	EN301489-1 V1.8.1 : 2008-04
	EN301489-3 V1.4.1 : 2002-08
GSD-635M-A	EN 300 220-1 V2.1.1
	EN 300 220-2 V2.1.1
	EN 300 330-1 V1.7.1 : 2010-02
	EN 300 330-2 V1.5.1 : 2010-02
	EN 60965: 2002 + Amd 1: 2006 + Amd 11: 2008 + Amd 2: 2010 + Amd 12: 2011
	R&TTE Directive (Article 3.1(a) Safety)
	EN 301 489-1 V1.8.1 (2008-04)
	EN 301 489-3 V1.4.1 (2002-08)
	EN 300 220-1 V2.1.1 (2006-04)
	EN 300 220-2 V2.1.2 (2007-06)
	EN 300 330-1 V1.7.1 : 2010-02
	EN 300 330-2 V1.5.1 : 2010-02

Signature

: *Shinya Takenouchi*

Name

: Shinya Takenouchi

Title and position

: Manager

Development & Design Division

Date

: April 16, 2012

Receiver Category of this radio equipment is Category 3, which is referred to EN 300 220-1.

[Czech]	OMRON Corporation limito prohlašuje, že tento [G8D-640M-ECU]* [G8D-640M-KEY-E]* [G8D-576M-A]* [G8D-640M-RAM-E]* [G8D-649M]* [G8D-644M-KEY-E]* [G8D-646M]* [G8D-635M-A]* [G8D-841M-ECU-E]* [G8D-841M-WCM-E]* [G8D-841M-WCM-PD]* je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 1999/5/EC.
[Danish]	Underleggende OMRON Corporation erklærer herved, at følgende udstyr [G8D-640M-ECU]* [G8D-640M-KEY-E]* [G8D-576M-A]* [G8D-649M]* [G8D-644M-KEY-E]* [G8D-646M]* [G8D-635M-A]* [G8D-841M-ECU-E]* [G8D-841M-WCM-E]* [G8D-841M-WCM-PD]* overholder de væsentlige krav og øvrige relevante krav i direktiv 1999/5/EF.
[German]	Hiermit erklärt OMRON Corporation, dass sich das Gerät [G8D-640M-ECU]* [G8D-640M-KEY-E]* [G8D-576M-A]* [G8D-649M]* [G8D-644M-KEY-E]* [G8D-646M]* [G8D-635M-A]* [G8D-841M-ECU-E]* [G8D-841M-WCM-E]* [G8D-841M-WCM-PD]* in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 1999/5/EG befindet.
[Estonian]	Käesolevaga kinnitab OMRON Corporation seadme [G8D-640M-ECU]* [G8D-640M-KEY-E]* [G8D-576M-A]* [G8D-649M]* [G8D-644M-KEY-E]* [G8D-646M]* [G8D-635M-A]* [G8D-841M-ECU-E]* [G8D-841M-WCM-E]* [G8D-841M-WCM-PD]* vastavust direktiivi 1999/5/EÜ põhinõuetele ja nimetatud direktiivist tulenevatele testidele asjakohastele sätetele.
[English]	Hereby, OMRON Corporation, declares that this [G8D-640M-ECU]* [G8D-640M-KEY-E]* [G8D-576M-A]* [G8D-649M]* [G8D-644M-KEY-E]* [G8D-646M]* [G8D-635M-A]* [G8D-841M-ECU-E]* [G8D-841M-WCM-E]* [G8D-841M-WCM-PD]* is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.
[Spanish]	Por medio de la presente OMRON Corporation declara que el [G8D-640M-ECU]* [G8D-640M-KEY-E]* [G8D-576M-A]* [G8D-649M]* [G8D-644M-KEY-E]* [G8D-646M]* [G8D-635M-A]* [G8D-841M-ECU-E]* [G8D-841M-WCM-E]* [G8D-841M-WCM-PD]* cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE.
[Greek]	ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ ΟΜΡΟΝ Corporation ΔΗΛΩΝΕΙ ΟΤΙ [G8D-640M-ECU]* [G8D-640M-KEY-E]* [G8D-576M-A]* [G8D-649M]* [G8D-644M-KEY-E]* [G8D-646M]* [G8D-635M-A]* [G8D-841M-ECU-E]* [G8D-841M-WCM-E]* [G8D-841M-WCM-PD]* ΣΥΜΜΟΡΦΩΝΕΙΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΕΚΤΕΤΕΙΝΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 1999/5/ΕΚ.
[French]	Par la présente OMRON Corporation déclare que l'appareil [G8D-640M-ECU]* [G8D-640M-KEY-E]* [G8D-576M-A]* [G8D-649M]* [G8D-644M-KEY-E]* [G8D-646M]* [G8D-635M-A]* [G8D-841M-ECU-E]* [G8D-841M-WCM-E]* [G8D-841M-WCM-PD]* est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE.
[Italian]	Con la presente OMRON Corporation dichiara che questo [G8D-640M-ECU]* [G8D-640M-KEY-E]* [G8D-576M-A]* [G8D-649M]* [G8D-644M-KEY-E]* [G8D-646M]* [G8D-635M-A]* [G8D-841M-ECU-E]* [G8D-841M-WCM-E]* [G8D-841M-WCM-PD]* è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE.
[Latvian]	Ar šo OMRON Corporation deklarē, ka [G8D-640M-ECU]* [G8D-640M-KEY-E]* [G8D-576M-A]* [G8D-649M]* [G8D-644M-KEY-E]* [G8D-646M]* [G8D-635M-A]* [G8D-841M-ECU-E]* [G8D-841M-WCM-E]* [G8D-841M-WCM-PD]* atbilst Direktīvas 1999/5/EK būtiskajām prasībām un citiem ar to saistītajiem noteikumiem.
[Lithuanian]	Šiuo OMRON Corporation deklaruojame, kad šis [G8D-640M-ECU]* [G8D-640M-KEY-E]* [G8D-576M-A]* [G8D-649M]* [G8D-644M-KEY-E]* [G8D-646M]* [G8D-635M-A]* [G8D-841M-ECU-E]* [G8D-841M-WCM-E]* [G8D-841M-WCM-PD]* atitinka esminius reikavimus ir kitas 1999/5/EB direktyvos nuostatas.
[Dutch]	Hierbij verklaart OMRON Corporation dat het toestel [G8D-640M-ECU]* [G8D-640M-KEY-E]* [G8D-576M-A]* [G8D-649M]* [G8D-644M-KEY-E]* [G8D-646M]* [G8D-635M-A]* [G8D-841M-ECU-E]* [G8D-841M-WCM-E]* [G8D-841M-WCM-PD]* in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG.
[Maltese]	Hawnhekk, OMRON Corporation, jidherlika li dan [G8D-640M-ECU]* [G8D-640M-KEY-E]* [G8D-576M-A]* [G8D-649M]* [G8D-644M-KEY-E]* [G8D-646M]* [G8D-635M-A]* [G8D-841M-ECU-E]* [G8D-841M-WCM-E]* [G8D-841M-WCM-PD]* jikkonforma mal-kijijiet essenzjali u ma provvedimenti oħrajn relevanti li hemm fid-Direttiva 1999/5/EC.
[Hungarian]	Aulitolt, OMRON Corporation nyilatkozik, hogy a [G8D-640M-ECU]* [G8D-640M-KEY-E]* [G8D-576M-A]* [G8D-649M]* [G8D-644M-KEY-E]* [G8D-646M]* [G8D-635M-A]* [G8D-841M-ECU-E]* [G8D-841M-WCM-E]* [G8D-841M-WCM-PD]* megfelel a vonatkozó alapvető követelményeknek és az 1999/5/EK irányelv egyéb előírásainak.
[Polish]	[OMRON Corporation] niniejszym oświadczam, że [G8D-640M-ECU]* [G8D-640M-KEY-E]* [G8D-576M-A]* [G8D-649M]* [G8D-644M-KEY-E]* [G8D-646M]* [G8D-635M-A]* [G8D-841M-ECU-E]* [G8D-841M-WCM-E]* [G8D-841M-WCM-PD]* spełnia zasadnicze wymagania oraz inne istotne postanowienia dyrektywy 1999/5/EC.

[Portuguese]	OMRON Corporation declara que este [G8D-640M-ECU*, G8D-640M-KEY-E*, G8D-576M-A*, G8D-640M-RAM-E*, G8D-649M*, G8D-644M-KEY-E*, G8D-635M-A*, G8D-841M-ECU-E*, G8D-841M-WCM-E*, G8D-841M-WCM-PD*] está conforme com os requisitos essenciais e outras disposições de Directiva 1999/5/CE.
[Slovenian]	OMRON Corporation izjavlja, da je ta [G8D-640M-ECU*, G8D-640M-KEY-E*, G8D-576M-A*, G8D-640M-RAM-E*, G8D-649M*, G8D-644M-KEY-E*, G8D-635M-A*, G8D-841M-ECU-E*, G8D-841M-WCM-E*, G8D-841M-WCM-PD*] v skladu z bistvenimi zahtevami in ostalimi relevantnimi določili direktive 1999/5/EC.
[Slovak]	OMRON Corporation týmto vyhlasuje, že [G8D-640M-ECU*, G8D-640M-KEY-E*, G8D-576M-A*, G8D-640M-RAM-E*, G8D-649M*, G8D-644M-KEY-E*, G8D-635M-A*, G8D-841M-ECU-E*, G8D-841M-WCM-E*, G8D-841M-WCM-PD*] spĺňa základné požiadavky a všetky príslušné ustanovenia Smernice 1999/5/ES.
[Finnish]	OMRON Corporation vakuuttaa täten että [G8D-640M-ECU*, G8D-640M-KEY-E*, G8D-576M-A*, G8D-640M-RAM-E*, G8D-649M*, G8D-644M-KEY-E*, G8D-635M-A*, G8D-841M-ECU-E*, G8D-841M-WCM-E*, G8D-841M-WCM-PD*] täyttävät kaikki sen direktiivissä 1999/5/EY oleelliset vaatimukset ja sitä koskevien direktiivin muuten ehtojen mukaiset.
[Swedish]	Härmed intygar OMRON Corporation att denna [G8D-640M-ECU*, G8D-640M-KEY-E*, G8D-576M-A*, G8D-640M-RAM-E*, G8D-649M*, G8D-644M-KEY-E*, G8D-646M*, G8D-635M-A*, G8D-841M-ECU-E*, G8D-841M-WCM-E*, G8D-841M-WCM-PD*] står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 1999/5/EG.
[Icelandic]	Hér með lýsir OMRON Corporation yfir því að [G8D-640M-ECU*, G8D-640M-KEY-E*, G8D-576M-A*, G8D-640M-RAM-E*, G8D-649M*, G8D-644M-KEY-E*, G8D-646M*, G8D-635M-A*, G8D-841M-ECU-E*, G8D-841M-WCM-E*, G8D-841M-WCM-PD*] er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 1999/5/EC.
[Norwegian]	OMRON Corporation erklærer herved at utstyret [G8D-640M-ECU*, G8D-640M-KEY-E*, G8D-576M-A*, G8D-640M-RAM-E*, G8D-649M*, G8D-644M-KEY-E*, G8D-646M*, G8D-635M-A*, G8D-841M-ECU-E*, G8D-841M-WCM-E*, G8D-841M-WCM-PD*] er i samsvar med de grunnleggende krav og øvrige relevante krav i direktiv 1999/5/EF.
[Turkish]	İşbu belge ile OMRON Corporation, bu [G8D-640M-ECU*, G8D-640M-KEY-E*, G8D-576M-A*, G8D-640M-RAM-E*, G8D-649M*, G8D-644M-KEY-E*, G8D-646M*, G8D-635M-A*, G8D-841M-ECU-E*, G8D-841M-WCM-E*, G8D-841M-WCM-PD*] in 1995/5/EC Yönetmeliği esas gereksinimlerine ve diğer şartlarına uygun olduğunu beyan eder.
[Romania]	„Noi OMRON Corporation declarăm că aparatul [G8D-640M-ECU*, G8D-640M-KEY-E*, G8D-576M-A*, G8D-640M-RAM-E*, G8D-649M*, G8D-644M-KEY-E*, G8D-646M*, G8D-635M-A*, G8D-841M-ECU-E*, G8D-841M-WCM-E*, G8D-841M-WCM-PD*] este în conformitate cu cerințele esențiale și cu alte prevederi relevante ale Hotărârii Guvernului nr. 88/2003 și Directivei 1999/5/EC.
[Bulgarian]	С настоящия документ OMRON Corporation декларира, че [G8D-640M-ECU*, G8D-640M-KEY-E*, G8D-576M-A*, G8D-640M-RAM-E*, G8D-649M*, G8D-644M-KEY-E*, G8D-646M*, G8D-635M-A*, G8D-841M-ECU-E*, G8D-841M-WCM-E*, G8D-841M-WCM-PD*] е в съответствие с основните изисквания и съответните постановления на Директива 1999/5/EC.

DECLARATION of CONFORMITY

We, **OMRON Automotive Electronics Co. Ltd.** hereby declare, at our sole responsibility, that the following product conforms to the Essential Requirements of the Radio and Telecommunications Terminal Equipment Directive 1999/5/EC in accordance with the tests conducted to the appropriate requirements of the relevant standards, as listed herewith.

Product : **KOS / FOB / WCM / Transmitter**

Model/ Type Number

: **KOS** : **G8D-841M-ECU-E**
 : **FOB** : **G8D-644M-KEY-E**
 : **WCM** : **G8D-841M-WCM-PD**, **G8D-841M-WCM-E**
 : **Transmitter** : **GSD-576M-A**, **GSD-635M-A**

Directive and Standards used as appropriate :

Model	Standard used for comply
GSD-841M-ECU-E	EN 60965:2002 + Amd.1:2006 + Amd.11:2008 + Amd.2:2010 + Amd.12:2011
	R&TTE Directive (Article 3.1(a) Safety)
	EN300 489-1 V1.8.1:2008 EN300 489-3 V1.4.1:2002
	R&TTE Directive (Article 3.1(b) EMC)
GSD-644M-KEY-E	EN300 330-1 V1.7.1:2010 EN300 330-2 V1.5.1:2010 EN300 220-1 V2.1.1:2006 EN300 220-2 V2.1.2:2007
	R&TTE Directive (Article 3.2 Spectrum)
	EN60965:2002 + Amd.1:2006 + Amd.11:2008 + Amd.2:2010 + Amd.12:2011
	R&TTE Directive (Article 3.1(a) Safety)
GSD-841M-WCM-PD	EN300 489-1 V1.8.1:2008 EN300 489-3 V1.4.1:2002
	R&TTE Directive (Article 3.1(b) EMC)
	EN300 330-1 V1.7.1:2010 EN300 330-2 V1.5.1:2010 EN300 220-1 V2.1.1:2006 EN300 220-2 V2.1.2:2007
	R&TTE Directive (Article 3.2 Spectrum)
GSD-841M-WCM-E	EN 60965:2002 + Amd.1:2006 + Amd.2:2010 + Amd.12:2011
	R&TTE Directive (Article 3.1(a) Safety)
	EN300 489-1 V1.8.1:2008 EN300 489-3 V1.4.1:2002
	R&TTE Directive (Article 3.1(b) EMC)
GSD-576M-A GSD-635M-A	EN300 330-1 V1.7.1:2010 EN300 330-2 V1.5.1:2010 EN300 220-1 V2.1.1:2006 EN300 220-2 V2.1.2:2007
	R&TTE Directive (Article 3.2 Spectrum)
	EN60965:2002 + Amd.1:2006 + Amd.11:2008 + Amd.2:2010 + Amd.12:2011
	R&TTE Directive (Article 3.1(a) Safety)
GSD-576M-A GSD-635M-A	EN300 489-1 V1.8.1:2008 EN300 489-3 V1.4.1:2002
	R&TTE Directive (Article 3.1(b) EMC)
	EN300 330-1 V1.7.1:2010 EN300 330-2 V1.5.1:2010 EN300 220-1 V2.1.1:2006 EN300 220-2 V2.1.2:2007
	R&TTE Directive (Article 3.2 Spectrum)

Receiver Category of this radio equipment is Category 3, which is referred to EN 300 220-1.

Signature : *Shinya Takenouchi*

Name : Shinya Takenouchi
 Title and position : Manager
 Development & Design Division
 Date : April 16, 2012

CE 1731

[Czech]	OMRON Corporation limito prohlašuje, že tento [G8D-640M-ECU]* [G8D-640M-KEY-E]* [G8D-576M-A]* [G8D-640M-RAM-E]* [G8D-644M-KEY-E]* [G8D-646M]* [G8D-635M-A]* [G8D-841M-ECU-E]* [G8D-841M-WCM-E]* [G8D-841M-WCM-PD]* je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 1999/5/EC.
[Danish]	Underleggende OMRON Corporation erklærer hermed, at følgende udstyr [G8D-640M-ECU]* [G8D-640M-KEY-E]* [G8D-576M-A]* [G8D-640M-RAM-E]* [G8D-644M-KEY-E]* [G8D-646M]* [G8D-635M-A]* [G8D-841M-ECU-E]* [G8D-841M-WCM-E]* [G8D-841M-WCM-PD]* overholder de væsentlige krav og øvrige relevante krav i direktiv 1999/5/EF.
[German]	Hiermit erklärt OMRON Corporation, dass sich das Gerät [G8D-640M-ECU]* [G8D-640M-KEY-E]* [G8D-576M-A]* [G8D-640M-RAM-E]* [G8D-644M-KEY-E]* [G8D-646M]* [G8D-635M-A]* [G8D-841M-ECU-E]* [G8D-841M-WCM-E]* [G8D-841M-WCM-PD]* in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 1999/5/EG befindet.
[Estonian]	Käesolevaga kinnitab OMRON Corporation seadme [G8D-640M-ECU]* [G8D-640M-KEY-E]* [G8D-576M-A]* [G8D-640M-RAM-E]* [G8D-644M-KEY-E]* [G8D-646M]* [G8D-635M-A]* [G8D-841M-ECU-E]* [G8D-841M-WCM-E]* [G8D-841M-WCM-PD]* vastavust direktiivi 1999/5/EÜ põhinõuetele ja nimetatud direktiivi tüvetele testidele asjakohastele sätetele.
[English]	Hereby, OMRON Corporation, declares that this [G8D-640M-ECU]* [G8D-640M-KEY-E]* [G8D-576M-A]* [G8D-640M-RAM-E]* [G8D-644M-KEY-E]* [G8D-646M]* [G8D-635M-A]* [G8D-841M-ECU-E]* [G8D-841M-WCM-E]* [G8D-841M-WCM-PD]* is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.
[Spanish]	Por medio de la presente OMRON Corporation declara que el [G8D-640M-ECU]* [G8D-640M-KEY-E]* [G8D-576M-A]* [G8D-640M-RAM-E]* [G8D-644M-KEY-E]* [G8D-646M]* [G8D-635M-A]* [G8D-841M-ECU-E]* [G8D-841M-WCM-E]* [G8D-841M-WCM-PD]* cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE.
[Greek]	ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ ΟΜΡΟΝ Corporation ΔΗΛΩΝΕΙ ΟΤΙ [G8D-640M-ECU]* [G8D-640M-KEY-E]* [G8D-576M-A]* [G8D-640M-RAM-E]* [G8D-644M-KEY-E]* [G8D-646M]* [G8D-635M-A]* [G8D-841M-ECU-E]* [G8D-841M-WCM-E]* [G8D-841M-WCM-PD]* ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΑΝΟΙΞΤΕΣ ΕΚΤΕΤΕΙΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 1999/5/ΕΚ.
[French]	Par la présente OMRON Corporation déclare que l'appareil [G8D-640M-ECU]* [G8D-640M-KEY-E]* [G8D-576M-A]* [G8D-640M-RAM-E]* [G8D-644M-KEY-E]* [G8D-646M]* [G8D-635M-A]* [G8D-841M-ECU-E]* [G8D-841M-WCM-E]* [G8D-841M-WCM-PD]* est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE.
[Italian]	Con la presente OMRON Corporation dichiara che questo [G8D-640M-ECU]* [G8D-640M-KEY-E]* [G8D-576M-A]* [G8D-640M-RAM-E]* [G8D-644M-KEY-E]* [G8D-646M]* [G8D-635M-A]* [G8D-841M-ECU-E]* [G8D-841M-WCM-E]* [G8D-841M-WCM-PD]* è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE.
[Latvian]	Ar šo OMRON Corporation deklarē, ka [G8D-640M-ECU]* [G8D-640M-KEY-E]* [G8D-576M-A]* [G8D-640M-RAM-E]* [G8D-644M-KEY-E]* [G8D-646M]* [G8D-635M-A]* [G8D-841M-ECU-E]* [G8D-841M-WCM-E]* [G8D-841M-WCM-PD]* atbilst Direktīvas 1999/5/EK būtiskajām prasībām un citiem ar to saistītajiem noteikumiem.
[Lithuanian]	Šiuo OMRON Corporation deklaruojame, kad šis [G8D-640M-ECU]* [G8D-640M-KEY-E]* [G8D-576M-A]* [G8D-640M-RAM-E]* [G8D-644M-KEY-E]* [G8D-646M]* [G8D-635M-A]* [G8D-841M-ECU-E]* [G8D-841M-WCM-E]* [G8D-841M-WCM-PD]* atitinka esminius reikavimus ir kitas 1999/5/EB direktyvos nuostatas.
[Dutch]	Hierbij verklaart OMRON Corporation dat het toestel [G8D-640M-ECU]* [G8D-640M-KEY-E]* [G8D-576M-A]* [G8D-640M-RAM-E]* [G8D-644M-KEY-E]* [G8D-646M]* [G8D-635M-A]* [G8D-841M-ECU-E]* [G8D-841M-WCM-E]* [G8D-841M-WCM-PD]* in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG.
[Maltese]	Hawnhekk, OMRON Corporation, jidherkijara li dan [G8D-640M-ECU]* [G8D-640M-KEY-E]* [G8D-576M-A]* [G8D-640M-RAM-E]* [G8D-644M-KEY-E]* [G8D-646M]* [G8D-635M-A]* [G8D-841M-ECU-E]* [G8D-841M-WCM-E]* [G8D-841M-WCM-PD]* jikkonforma mal-kijijiet essenzjali u ma provvedimentli oħrajn rilevanti li hemm fid-Direttiva 1999/5/EC.
[Hungarian]	Aulitolt, OMRON Corporation nyilatkozik, hogy a [G8D-640M-ECU]* [G8D-640M-KEY-E]* [G8D-576M-A]* [G8D-640M-RAM-E]* [G8D-644M-KEY-E]* [G8D-646M]* [G8D-635M-A]* [G8D-841M-ECU-E]* [G8D-841M-WCM-E]* [G8D-841M-WCM-PD]* megfelel a vonatkozó alapvető követelményeknek és az 1999/5/EK irányelv egyéb előírásainak.
[Polish]	[OMRON Corporation] niniejszym oświadczam, że [G8D-640M-ECU]* [G8D-640M-KEY-E]* [G8D-576M-A]* [G8D-640M-RAM-E]* [G8D-644M-KEY-E]* [G8D-646M]* [G8D-635M-A]* [G8D-841M-ECU-E]* [G8D-841M-WCM-E]* [G8D-841M-WCM-PD]* spełnia zasadnicze wymagania oraz inne istotne postanowienia dyrektywy 1999/5/EC.

[Portuguese]	OMRON Corporation declara que este [G8D-640M-ECU*, G8D-640M-KEY-E*, G8D-576M-A*, G8D-640M-RAM-E*, G8D-649M*, G8D-644M-KEY-E*, G8D-635M-A*, G8D-841M-ECU-E*, G8D-841M-WCM-E*, G8D-841M-WCM-PD*] está conforme com os requisitos essenciais e outros disposições de Directiva 1999/5/CE.
[Slovenian]	OMRON Corporation izjavlja, da je ta [G8D-640M-ECU*, G8D-640M-KEY-E*, G8D-576M-A*, G8D-640M-RAM-E*, G8D-649M*, G8D-644M-KEY-E*, G8D-635M-A*, G8D-841M-ECU-E*, G8D-841M-WCM-E*, G8D-841M-WCM-PD*] v skladu z bistvenimi zahtevami in ostalimi relevantnimi določili direktive 1999/5/EC.
[Slovak]	OMRON Corporation týmto vyhlasuje, že [G8D-640M-ECU*, G8D-640M-KEY-E*, G8D-576M-A*, G8D-640M-RAM-E*, G8D-649M*, G8D-644M-KEY-E*, G8D-635M-A*, G8D-841M-ECU-E*, G8D-841M-WCM-E*, G8D-841M-WCM-PD*] spĺňa základné požiadavky a všetky príslušné ustanovenia Smernice 1999/5/ES.
[Finnish]	OMRON Corporation vakuuttaa täten että [G8D-640M-ECU*, G8D-640M-KEY-E*, G8D-576M-A*, G8D-640M-RAM-E*, G8D-649M*, G8D-644M-KEY-E*, G8D-635M-A*, G8D-841M-ECU-E*, G8D-841M-WCM-E*, G8D-841M-WCM-PD*] täyttävät kaikki sen direktiivissä 1999/5/EY oleelliset vaatimukset ja sitä koskevien direktiivin muuten ehtojen mukaisesti.
[Swedish]	Härmed intygar OMRON Corporation att denna [G8D-640M-ECU*, G8D-640M-KEY-E*, G8D-576M-A*, G8D-640M-RAM-E*, G8D-649M*, G8D-644M-KEY-E*, G8D-646M*, G8D-635M-A*, G8D-841M-ECU-E*, G8D-841M-WCM-E*, G8D-841M-WCM-PD*] står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 1999/5/EG.
[Icelandic]	Hér með lýsir OMRON Corporation yfir því að [G8D-640M-ECU*, G8D-640M-KEY-E*, G8D-576M-A*, G8D-640M-RAM-E*, G8D-649M*, G8D-644M-KEY-E*, G8D-646M*, G8D-635M-A*, G8D-841M-ECU-E*, G8D-841M-WCM-E*, G8D-841M-WCM-PD*] er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 1999/5/EC.
[Norwegian]	OMRON Corporation erklærer herved at utstyret [G8D-640M-ECU*, G8D-640M-KEY-E*, G8D-576M-A*, G8D-640M-RAM-E*, G8D-649M*, G8D-644M-KEY-E*, G8D-646M*, G8D-635M-A*, G8D-841M-ECU-E*, G8D-841M-WCM-E*, G8D-841M-WCM-PD*] er i samsvar med de grunnleggende krav og øvrige relevante krav i direktiv 1999/5/EF.
[Turkish]	İşbu belge ile OMRON Corporation, bu [G8D-640M-ECU*, G8D-640M-KEY-E*, G8D-576M-A*, G8D-640M-RAM-E*, G8D-649M*, G8D-644M-KEY-E*, G8D-646M*, G8D-635M-A*, G8D-841M-ECU-E*, G8D-841M-WCM-E*, G8D-841M-WCM-PD*] in 1995/5/EC Yönetmeliği esas gereksinimlerine ve diğer şartlarına uygun olduğunu beyan eder.
[Romania]	„Noi OMRON Corporation declarăm că aparatul [G8D-640M-ECU*, G8D-640M-KEY-E*, G8D-576M-A*, G8D-640M-RAM-E*, G8D-649M*, G8D-644M-KEY-E*, G8D-646M*, G8D-635M-A*, G8D-841M-ECU-E*, G8D-841M-WCM-E*, G8D-841M-WCM-PD*] este în conformitate cu cerințele esențiale și cu alte prevederi relevante ale Hotărârii Guvernului nr. 88/2003 și Directivei 1999/5/EC.
[Bulgarian]	С настоящия документ OMRON Corporation декларира, че [G8D-640M-ECU*, G8D-640M-KEY-E*, G8D-576M-A*, G8D-640M-RAM-E*, G8D-649M*, G8D-644M-KEY-E*, G8D-646M*, G8D-635M-A*, G8D-841M-ECU-E*, G8D-841M-WCM-E*, G8D-841M-WCM-PD*] е в съответствие с основните изисквания и съответните постановления на Директива 1999/5/EC.

Connection and use of this communications
equipment is permitted by the Nigerian
Communications Commission



Labels are fitted in various areas of your vehicle. They carry safety warnings as well as vehicle identification information. Do not remove them: they form an integral part of your vehicle.

Automobiles PEUGEOT declares, by application of the provisions of the European regulation (Directive 2000/53) relating to End of Life Vehicles, that it achieves the objectives set by this regulation and that recycled materials are used in the manufacture of the products that it sells.

Reproduction or translation of all or part of this document is prohibited without written authorisation from Automobiles PEUGEOT.

Anglais

Printed in the EU

05-14



PEUGEOT

AUTOMOBILES PEUGEOT - Siège Social : 75, avenue de la Grande-Armée 75016 Paris - France

Tél. : +33 (0)1 40 66 55 11 - Fax : +33 (0)1 40 66 54 14 - Téléc : 645 700 F

<http://www.peugeot.com>

Société anonyme au capital de 172.711.770 € - R.C.S. : 552 144 503 R.C.S. Paris - SIRET : 552 144 503 00018 - APE : 2910Z

Warning/indicator lamp		is on	Cause	Action / Observations
CRUISE	Cruise control	fixed	This comes on when the cruise control has been activated.	Press the "ON/OFF" button to activate/deactivate the cruise control.
	 Diesel engine pre-heating	fixed.	The engine is cold and: - the ignition switch is at the ON position (ignition on), or - the START/STOP starting button has been pressed (ignition on).	With key starting, wait until the warning lamp has gone off before starting. With the Keyless Entry and Starting system, the engine will only start after the warning lamp has gone off. The duration for which the warning lamp is on is determined by the climatic conditions (up to 30 seconds in severe weather). If the engine does not start, switch the ignition off and then on again and wait again until the warning lamp goes off, then start the engine.
	Active stability control and traction control (ASC/TCL)	flashing.	Operation of the ASC/TCL systems.	The systems optimise traction and improve the directional stability of the vehicle. Adapt your driving and moderate your speed.
		fixed.	Fault in the ASC/TCL systems.	Have it checked by a PEUGEOT dealer or a qualified workshop.
AS&G	Stop & Start (Auto Stop & Go) system	fixed.	When the vehicle stops (red lights, traffic jams, ...) the Stop & Start (AS&G) function has put the engine into STOP mode.	The warning lamp goes off and the engine restarts automatically in START mode, as soon as you want to move off.
		flashes for a few seconds, then goes off.	STOP mode is temporarily unavailable.	See "Stop & Start (AS&G) system" for special cases with STOP mode and START mode.

Deactivation indicator lamps

If one of the following indicator lamps comes on, this confirms that the corresponding system has been switched off intentionally. This may be accompanied by an audible signal and a message in the screen.

Warning/indicator lamp	is on	Cause	Action / Observations
 ASC/TCL	fixed.	The ASC/TCL off switch, located at the bottom of the dashboard (driver's side) has been pressed. ASC/TCL is deactivated. ASC: active stability control TCL: traction control.	Press the button to activate the ASC/TCL. The ASC/TCL system is automatically activated on starting the vehicle.
 Stop & Start (Auto Stop & Go) system	fixed.	The off switch for the Stop & Start (AS&G) system, located at the bottom of the dashboard (driver's side) has been pressed. The Stop & Start (AS&G) system is deactivated.	Press the switch again to activate the Stop & Start (AS&G) system.
	flashing.	Fault with the Stop & Start system.	Have it checked by a PEUGEOT dealer or a qualified workshop.

Stop & Start (Auto Stop & Go) system

The Stop & Start (Auto Stop & Go) system puts the engine temporarily into standby during stops in the traffic (red lights, traffic jams, or other...).

The engine restarts automatically as soon as you want to move off. The restart takes place instantly, quickly and silently.

Perfect for urban use, the Stop & Start (Auto Stop & Go) function reduces fuel consumption and exhaust emissions as well as the noise level when stationary.

Operation

Going into engine STOP mode

AS&G The **"AS&G"** warning lamp comes on in the instrument panel or the instrument panel screen and the engine goes into standby after a few seconds:

- **with a manual gearbox**, with the vehicle stationary and your foot on the brake, when you put the gear lever into neutral and release the clutch pedal.

i If you move the gear lever, the **"AS&G"** warning lamp flashes, accompanied by an audible signal.
The alert stops as soon as the gear lever is returned to the neutral position.

! When the engine is stopped automatically, the operation of certain vehicle systems, such as for example, braking, power steering... are modified.
Take care.

! Never refuel with the engine in STOP mode; you must switch off the ignition with the key or the START/STOP button.

Special cases: STOP mode not available

STOP mode is not invoked when:

- the driver's seat belt is not fastened,
- the driver's door is open,
- the bonnet is open,
- the minimum time period of 30 seconds since starting the engine has not elapsed,
- the vehicle has not exceeded 3 mph (5 km/h) since the last engine start,
- the vehicle has restarted less than 10 seconds ago,
- the engine is needed to maintain a comfortable temperature in the passenger compartment,
- demisting is active,
- some special conditions (battery charge, engine temperature, braking assistance, ambient temperature...) where the engine is needed to assure control of a system.

AS&G - the **"AS&G"** warning lamp is flashing in the instrument panel.

This operation is perfectly normal.

Going into engine START mode

AS&G The **"AS&G"** warning lamp goes off and the engine starts automatically:

- **with a manual gearbox**, when you **fully** depress the clutch pedal.

i If the bonnet is opened while the engine is in standby, the **"AS&G"** warning lamp flashes, accompanied by an audible signal. The engine will not restart automatically.

To restart the engine with the bonnet open, use the ignition key or press the START/STOP button, while pressing fully on the brake and clutch pedals.

Special cases: START invoked automatically


For safety reasons or to ensure smooth operation, START mode is invoked automatically when:

- the speed of the vehicle exceeds 2 mph (3 km/h) ,
- you open the driver's door,
- you unfasten the driver's seatbelt,
- some special conditions (battery charge, engine temperature, braking assistance, ambient temperature...) where the engine is needed to assure control of a system.

AS&G In this case the **"AS&G"** warning lamp flashes for few seconds, then goes off.

This operation is perfectly normal.

Deactivation

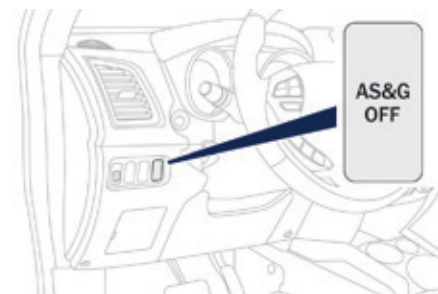

At any time, press the **"AS&G OFF"** switch to deactivate the system.

AS&G OFF This is confirmed by the **"AS&G OFF"** warning lamp coming on in the instrument panel or instrument panel screen.

i If the system has been deactivated in STOP mode, the engine will not start.

Reactivation

Press the **"AS&G OFF"** switch again.

The system is active again; this is confirmed by the **"AS&G OFF"** warning lamp going off in the instrument panel or instrument panel screen.

- i** The system is reactivated automatically at every new start using the key or the START/STOP button.

Operating fault



In the event of a malfunction with the system, the **"AS&G OFF"** warning lamp flashes in the instrument panel or instrument panel screen, and the system no longer operates. Have it checked by a PEUGEOT dealer or a qualified workshop.

In the event of a fault in STOP mode, the vehicle may stall. The following warning lamps come on in the instrument panel or instrument panel screen:



It is then necessary to switch off the ignition, then restart the engine using the key or the START/STOP button.

Maintenance

- !** This system requires a specific battery with a special specification and technology (reference numbers available from a PEUGEOT dealer or a qualified workshop).


Fitting a battery not listed by PEUGEOT introduces the risk of malfunction of the system.

- !** The "Auto Stop & Go" system makes use of advanced technology. All work on this type of battery must be done only by a PEUGEOT dealer or a qualified workshop.

Changing a wheel

Procedure for replacing a faulty wheel with the spare wheel using the tools supplied with the vehicle.


Access to the vehicle's tools

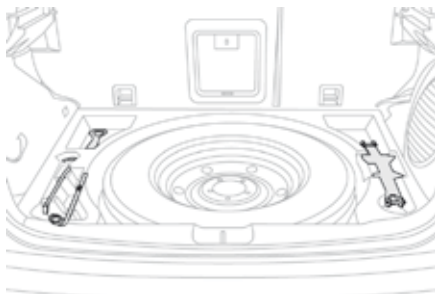

The tools are stowed in the boot under the floor.

To gain access to them:

- ☞ Open the boot.
- ☞ Lift and remove the boot floor.

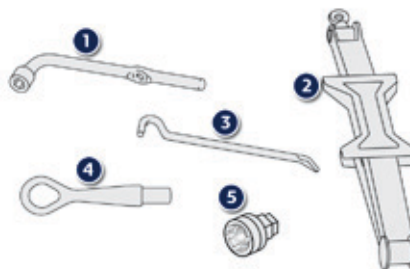

List of tools

These tools are specific to your vehicle. Do not use them for anything else.

1. Wheelbrace.
Used to remove the wheel trim and the wheel fixing bolts.
2. Jack.
Used to raise the vehicle.
3. Handle.
Used to operate the jack.
4. Removable towing eye.
See "Recovering the vehicle".
5. Socket for security wheel bolts (available as an accessory).
Used to adapt the wheelbrace to the special "security" wheel bolts.

i The jack must only be used to change a wheel with a damaged tyre. The jack does not require any maintenance.

i The jack meets the European standard as defined in Directive 2006/42/CE on machinery. The declaration of conformity can be found at the end of this document. The name and complete address of the manufacturer or, as appropriate, their representative, together with the designation of the jack are given in this certificate of conformity.

Removing a wheel


i Parking the vehicle

Immobilise the vehicle where it does not block traffic; the ground must be level, stable and not slippery.

Apply the parking brake, switch off the ignition and engage first gear to block the wheels.


Never go underneath a vehicle raised using a jack; use an axle stand.

! Never use a jack other than the one provided by the manufacturer.

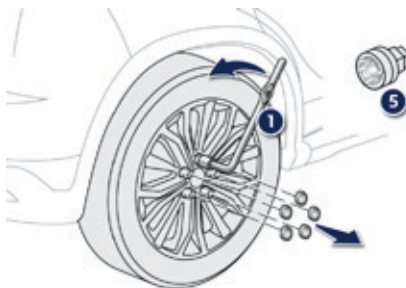

List of operations

- ☞ If your vehicle has security bolts (available as an accessory), fit the security bolt socket **5** to the wheelbrace **1** to slacken the security bolt.
- ☞ Slacken the other bolts using the wheelbrace **1** only.

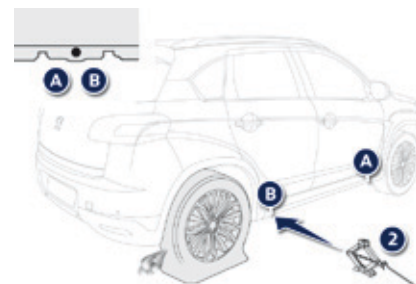


- ☞ Place the foot of the jack **2** on the ground and ensure that it is directly below the front **A** or rear **B** jacking point provided on the underbody, whichever is closest to the wheel to be changed.


i Wheel with trim

When removing the wheel, remove the trim first using the handle **3**, pulling at the cutout.


When refitting the wheel, refit the trim starting by placing its cutout opposite the valve and press on its outer edge with the palm of your hand.

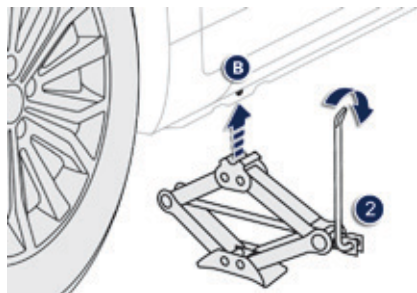

- ☞ Extend the jack **2** until it comes into contact with the jacking point **A** or **B** used; the contact area **A** or **B** on the vehicle must be correctly inserted into the central part of the head of the jack.

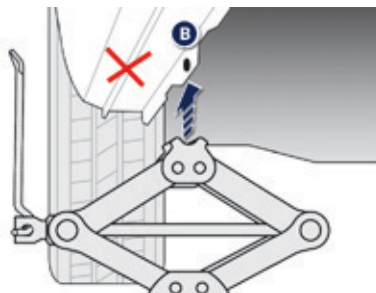


- ☞ Raise the vehicle until there is sufficient space between the wheel and the ground to admit the spare (not punctured) wheel easily.

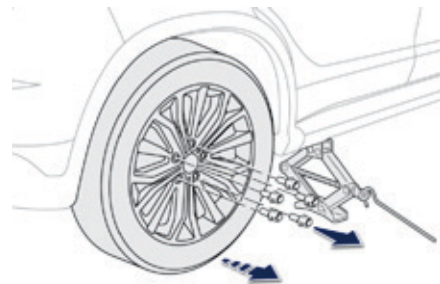

- ☞ Remove the bolts and store them in a clean place.
- ☞ Remove the wheel.

! Ensure that the jack is stable. If the ground is slippery or loose, the jack may slip or drop - Risk of injury! Ensure that the jack is positioned only at the jacking point **A** or **B** under the vehicle, ensuring that the contact area on the vehicle is well centred on the head of the jack. Otherwise there is a risk of damage to the vehicle and/or of the jack dropping or slipping - Risk of injury!

Screenwash and headlamp wash fluid

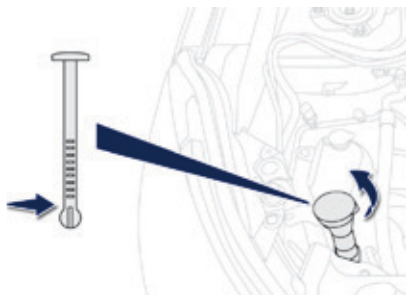

To check or top up the fluid, stop the vehicle, apply the parking brake and switch off the engine.

- ☞ Open the bonnet and secure it with the stay.
- ☞ Open the filler cap for the screenwash reservoir.
- ☞ Check the level using the gauge, then top-up if necessary.
- ☞ Refit the cap on the reservoir and close the bonnet.

Fluid specification

For optimum cleaning, this fluid must not be topped up with or replaced with plain water.

i In wintry conditions, the use of fluid with an ethyl alcohol or methanol base is recommended.

Additive level (1.6 HDi 110 Diesel versions with particle filter)



The additive reservoir low level is indicated by the display of this message.

Topping up

The reservoir must be topped up without delay by a PEUGEOT dealer or a qualified workshop.

Used products



Avoid prolonged contact of used oil or fluids with the skin.

Most of these fluids are harmful to health or indeed very corrosive.



Do not discard used oil or fluids into sewers or onto the ground. Take used oil to a PEUGEOT dealer or a qualified workshop (France) or to an authorised waste disposal site.

Engines and gearboxes

PETROL ENGINES	1.6 litre 115		2.0 litre 150			
Model codes: BU...	NKZ0 NKZ0/S	NKZ9 NKZ9/S	AFYR AFZ7	AFYV AFZM	AFYT AFZH AFZ9	AFYW AFZP AFZC
Transmission mode	2WD	2WD	2WD	4WD	2WD	4WD
Cubic capacity (cc)	1 590		1 998			
Bore x stroke (mm)	75 x 90		86 x 86			
Max power*: EU standard (kW)	86		113			
Max power engine speed (rpm)	6 000		6 000			
Max torque: EU standard (Nm)	154		199			
Max torque engine speed (rpm)	4 000		4 200			
Fuel	Unleaded		Unleaded			
Catalytic converter	Yes		Yes			
GEARBOXES	Manual (5-speed)	CVT (6-speed)	Manual (5-speed)		CVT (6-speed)	
OIL CAPACITY (in litres)						
Engine (with filter replacement)	4.2		4.3			

.../S: model fitted with the Stop & Start (AS&G) function.

* The maximum power corresponds to the value type-approved on a test bed, under conditions defined in European legislation (Directive 1999/99/EC).

Petrol weights and towed loads (kg)

The values for maximum towed weights type approved according to the sales zone (see the tables on the following pages).

The exact values are given in your vehicle's registration document as well as on the manufacturer's plate.

They are also mentioned in sales brochures. For more details, contact a PEUGEOT dealer or a qualified workshop.

The kerb weight is equal to the unladen weight + driver (75 kg).

i The weight of the braked trailer can be increased, within the GTW limit, if the GVW of the towing vehicle is reduced by an equal amount. **Please note that towing using a lightly loaded towing vehicle may have an adverse effect on its road holding.**

The GTW and towed load values indicated are valid up to a maximum altitude of 1 000 metres; the towed load mentioned must be reduced by 10 % for each additional 1 000 metres of altitude.

The speed of a towing vehicle must not exceed 60 mph (100 km/h) (comply with the legislation in force in your country).

High ambient temperatures may result in a reduction in the performance of the vehicle to protect the engine; if the ambient temperature is above 37 °C, limit the towed load.

For zones: Europe, Turkey, French overseas dominions and territories.

PETROL ENGINES	-
Gearboxes	-
Model codes: BU...	-
Transmission mode	-
- Unladen weight	-
- Kerb weight	-
- Gross vehicle weight (GVW)	-
- Gross vehicle weight (GVW) when towing	-
- Gross train weight (GTW) on a 12% gradient	-
- Braked trailer (within GTW limit) on a 10% or 12% gradient	-
- Unbraked trailer	-
- Recommended nose weight	-

For: Russia, Ukraine, Morocco, Argentina, Chile, French overseas territories.

PETROL ENGINES	1.6 litre 115	2.0 litre 150			
Gearboxes	Manual (5-speed)	Manual (5-speed)		CVT (6-speed)	
Model codes: BU...	NKZ7 NKZ0	AFZ7	AFZM	AFZH AFZ9	AFZP AFZC
Transmission mode	2WD	2WD	4WD	2WD	4WD
- Unladen weight	1 310	1 355	1 420	1 385	1 450
- Kerb weight	1 385	1 430	1 495	1 460	1 525
- Gross vehicle weight (GVW)	1 870	1 970	1 970	1 970	1 970
- Gross vehicle weight (GVW) when towing	1 925	2 035	2 035	2 035	2 035
- Gross train weight (GTW) on a 12% gradient	3 025	3 335	3 335	3 335	3 335
- Braked trailer (within GTW limit) on a 10% or 12% gradient	1 100	1 300	1 300	1 300	1 300
- Unbraked trailer	685	715	745	725	750
- Recommended nose weight	55	65	65	65	65

For: Australia, New-Zealand.

PETROL ENGINES	2.0 litre 150			
Gearboxes	Manual (5-speed)		CVT (6-speed)	
Model codes: BU...	AFZ7	AFZM	AFZH	AFZP
Transmission mode	2WD	4WD	2WD	4WD
- Unladen weight	1 350	1 415	1 380	1 445
- Kerb weight	1 425	1 490	1 455	1 520
- Gross vehicle weight (GVW)	1 970	1 970	1 970	1 970
- Gross vehicle weight (GVW) when towing	2 035	2 035	2 035	2 035
- Gross train weight (GTW) on a 12% gradient	3 020	3 020	3 020	3 020
- Braked trailer (within GTW limit) on a 10% or 12% gradient	1 050	1 050	1 050	1 050
- Unbraked trailer	750	750	750	750
- Recommended nose weight	65	65	65	65

For: South Africa.

PETROL ENGINES	2.0 litre 150			
Gearboxes	Manual (5-speed)		CVT (6-speed)	
Model codes: BU...	AFYR	AFYV	AFYT	AFYW
Transmission mode	2WD	4WD	2WD	4WD
- Unladen weight	1 350	1 415	1 390	1 455
- Kerb weight	1 425	1 490	1 465	1 530
- Gross vehicle weight (GVW)	1 970	1 970	1 970	1 970
- Gross vehicle weight (GVW) when towing	2 035	2 035	2 035	2 035
- Gross train weight (GTW) on a 12% gradient	3 075	3 075	2 760	2 760
- Braked trailer (within GTW limit) on a 10% or 12% gradient	1 050	1 050	750	750
- Unbraked trailer	1 050	1 050	750	750
- Recommended nose weight	65	65	65	65

For other countries of sale.

PETROL ENGINES	2.0 litre 150			
Gearboxes	Manual (5-speed)		CVT (6-speed)	
Model codes: BU...	AFYR AFZ7	AFYV AFZM	AFYT AFZH AFZ9	AFYW AFZP AFZC
Transmission mode	2WD	4WD	2WD	4WD
- Unladen weight	1 340	1 405	1 370	1 435
- Kerb weight	1 415	1 480	1 445	1 510
- Gross vehicle weight (GVW)	1 970	1 970	1 970	1 970
- Gross vehicle weight (GVW) when towing	2 035	2 035	2 035	2 035
- Gross train weight (GTW) on a 12% gradient	2 655	2 655	-*	-*
- Braked trailer (within GTW limit) on a 10% or 12% gradient	650	650	-*	-*
- Unbraked trailer	650	650	-*	-*
- Recommended nose weight	65	65	-*	-*

* Vehicle not for towing.

Engines and gearboxes

DIESEL ENGINES	e-HDi 115		1.8 HDi 140
Model codes: BU...	9HD5/S 9HD5/1S	9HDK/S 9HDK/1S	6HYG
Transmission mode	2WD	4WD	4WD
Cubic capacity (cc)	1 560		1 798
Bore x stroke (mm)	77 x 88.3		83 x 83.1
Max power*: EU standard (kW)	84		103
Max power engine speed (rpm)	3 600		4 000
Max torque: EU standard (Nm)	270		290
Max torque engine speed (rpm)	1 750		2 000 to 3 000
Fuel	Diesel		Diesel
Catalytic converter	Yes		Yes
Particle filter (FAP)	Yes		Yes
GEARBOXES	Manual (6-speed)		Manual (6-speed)
OIL CAPACITY (in litres)			
Engine (with filter replacement)	3.75		5.3

.../S and .../1S: model fitted with the Stop & Start (AS&G) function.

* The maximum power corresponds to the value type-approved on a test bed, under conditions defined in European legislation (Directive 1999/99/EC).

Diesel weights and towed loads (kg)

The values for maximum towed weights type approved according to the sales zone (see the tables on the following pages).

The exact values are given in your vehicle's registration document as well as on the manufacturer's plate.

They are also mentioned in sales brochures. For more details, contact a PEUGEOT dealer or a qualified workshop.

The kerb weight is equal to the unladen weight + driver (75 kg).

i The weight of the braked trailer can be increased, within the GTW limit, if the GVW of the towing vehicle is reduced by an equal amount. **Please note that towing using a lightly loaded towing vehicle may have an adverse effect on its road holding.**

The GTW and towed load values indicated are valid up to a maximum altitude of 1 000 metres; the towed load mentioned must be reduced by 10 % for each additional 1 000 metres of altitude.

The speed of a towing vehicle must not exceed 60 mph (100 km/h) (comply with the legislation in force in your country).

High ambient temperatures may result in a reduction in the performance of the vehicle to protect the engine; if the ambient temperature is above 37 °C, limit the towed load.

For zones: Europe, Turkey, French overseas dominions and territories.

DIESEL ENGINES	e-HDi 115	
Gearboxes	Manual (6-speed)	
Model codes: BU...	9HD5/S 9HD5/1S	9HDK/S 9HDK/1S
Transmission mode	2WD	4WD
- Unladen weight	1 315	1 425
- Kerb weight	1 390	1 500
- Gross vehicle weight (GVW)	2 060	2 060
- Gross vehicle weight (GVW) when towing	2 130	2 130
- Gross train weight (GTW) on a 12% gradient	3 260	3 260
- Braked trailer (within GTW limit) on a 10% or 12% gradient	1 130	1 130
- Braked trailer (with transfer of load within the GTW limit)	1 300	1 300
- Unbraked trailer	695	750
- Recommended nose weight	70	70

For: Russia, Ukraine, Morocco, Argentina, Chile.

DIESEL ENGINES	e-HDi 115	
Gearboxes	Manual (6-speed)	
Model codes: BU...	9HD5/S 9HD5/1S	9HDK/S 9HDK/1S
Transmission mode	2WD	4WD
- Unladen weight	1 410	1 475
- Kerb weight	1 485	1 550
- Gross vehicle weight (GVW)	2 060	2 060
- Gross vehicle weight (GVW) when towing	2 130	2 130
- Gross train weight (GTW) on a 12% gradient	3 260	3 260
- Braked trailer (within GTW limit) on a 10% or 12% gradient	1 130	1 130
- Braked trailer (with transfer of load within the GTW limit)	1 300	1 300
- Unbraked trailer	695	750
- Recommended nose weight	70	70

For: Australia, New Zealand.

DIESEL ENGINES	-
Gearboxes	-
Model codes: BU...	-
Transmission mode	-
- Unladen weight	-
- Kerb weight	-
- Gross vehicle weight (GVW)	-
- Gross vehicle weight (GVW) when towing	-
- Gross train weight (GTW) on a 12% gradient	-
- Braked trailer (within GTW limit) on a 10% or 12% gradient	-
- Unbraked trailer	-
- Recommended nose weight	-

For: South Africa.

DIESEL ENGINES	e-HDi 115	
Gearboxes	Manual (6-speed)	
Model codes: BU...	9HD5/S 9HD5/1S	9HDK/S 9HDK/1S
Transmission mode	2WD	4WD
- Unladen weight	1 420	1 485
- Kerb weight	1 495	1 560
- Gross vehicle weight (GVW)	2 060	2 060
- Gross vehicle weight (GVW) when towing	2 130	2 130
- Gross train weight (GTW) on a 12% gradient	3 321	3 321
- Braked trailer (within GTW limit) on a 10% or 12% gradient	1 200	1 200
- Unbraked trailer	750	750
- Recommended nose weight	70	70

For other countries of sale.

DIESEL ENGINES	e-HDi 115		1.8 HDi 140
Gearboxes	Manual (6-speed)		Manual (6-speed)
Model codes: BU...	9HD5/S 9HD5/1S	9HDK/S 9HDK/1S	6HYG
Transmission mode	2WD	4WD	4WD
- Unladen weight	1 420	1 485	1 520
- Kerb weight	1 495	1 560	1 595
- Gross vehicle weight (GVW)	2 060	2 060	2 060
- Gross vehicle weight (GVW) when towing	2 130	2 130	2 130
- Gross train weight (GTW) on a 12% gradient	2 745	2 745	2 745
- Braked trailer (within GTW limit) on a 10% or 12% gradient	650	650	650
- Unbraked trailer	650	650	650
- Recommended nose weight	70	70	70

**MANUFACTURERS DECLARATION
OF CONFORMITY**



For



Pantagraph Car Jack

Models PJM700, PJM800, PJM1000 & PJM1200

Manufactured by

Taihei Industrial Co.,Ltd.
No.49-1, Kagekatsu-Cho,
Fushimi-Ku,
Kyoto 612-8307
Japan

**Technical File compiled and held in the
EU, on behalf of the manufacturer by**

TRac Global Ltd
100 Frobisher Business Park,
Leigh Sinton Road, Malvern,
Worcestershire, WR14 1BX
United Kingdom

**Standards used as guidance
Machinery Directive**

**Annex I of 2006/42/EC with reference to :
EN 1494:2000/A1:2008**

Means of Conformity

The Product is in conformity with EC law as approximated by the Machinery Directive 2006/42/EC,
As detailed in Technical Documentation File No 2136 Revision 2, March 2012

Signature of Responsible Person:

Mr. Masato Nasu
President
Taihei Industrial Co., Ltd.

**Signature of the person in the EU holding
the Technical File:**

Mr Neil Roche
EMC Product Manager
TRac Global Ltd.

MACHINE SERIAL No.

Date:

13th March 2012

Certificate No.

17-0074-1 DofC Issue 3

