

POWER SOURCE LOCATION

6804U-01

ENGINE:**3ZZ-FE:****1ZZ-FE:****2AZ-FSE:****1AZ-FSE:****1AZ-FE:**

Engine Room No.2 Relay Block

Engine Room Relay Block

Engine Room No.3 Relay Block

w/o Discharge headlamp:

Headlamp Cleaner Control Relay

w/ Discharge headlamp:

Headlamp Cleaner Control Relay Assy

ENGINE:**1CD-FTV:**

Engine Room No.2 Relay Relay

Glow Plug Relay Assy

Engine Room No.3 Relay Block

Engine Room Relay Block

w/o Discharge headlamp:

Headlamp Cleaner Control Relay



w/ Discharge headlamp:

Headlamp Cleaner Control Relay Assy

P


I35269

cardmagn.com

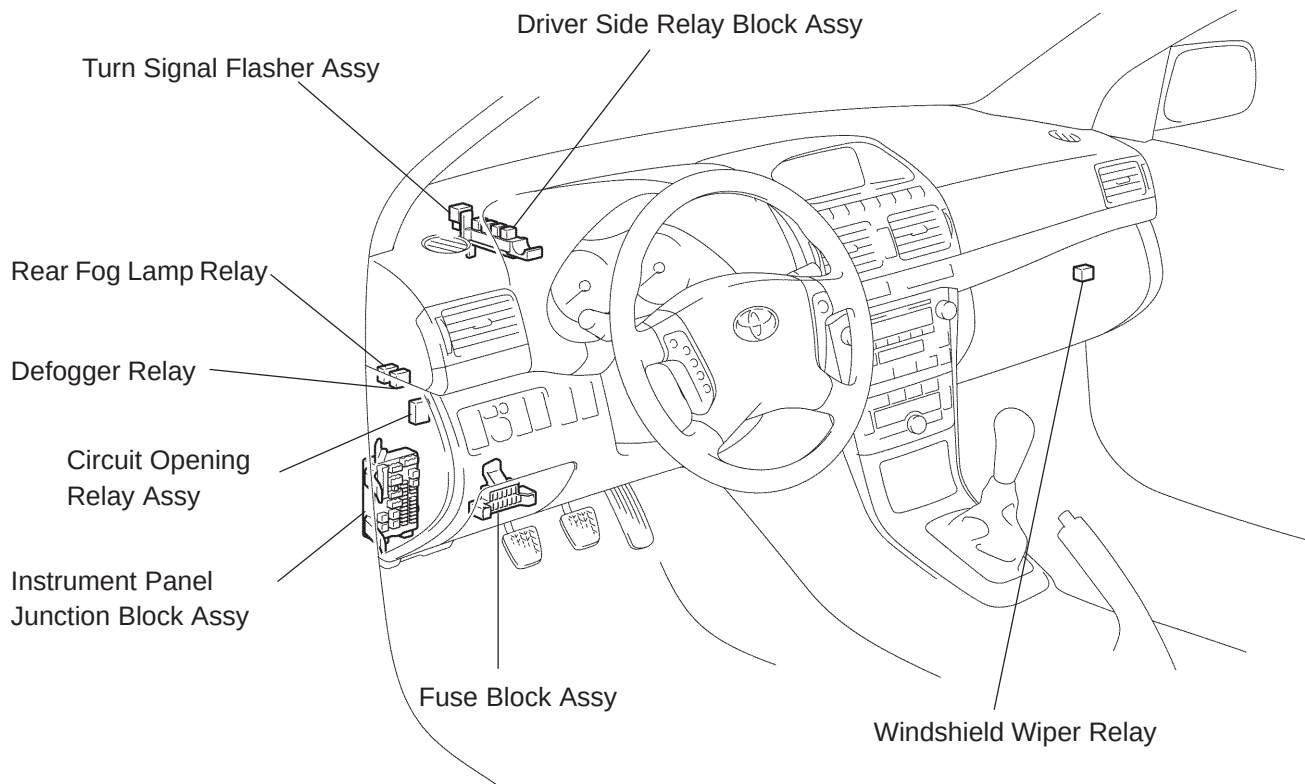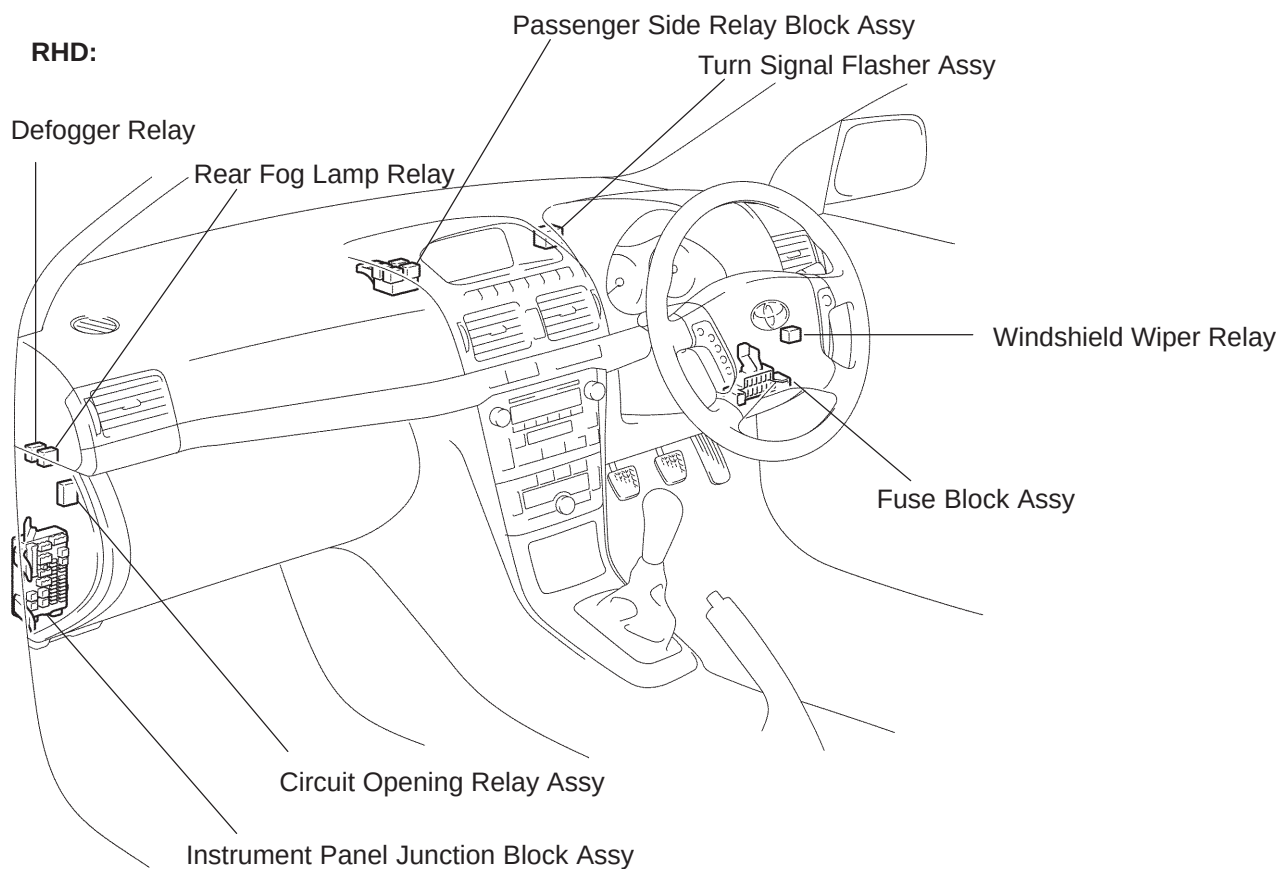LHD:**RHD:**

ENGINE:
 3ZZ-FE:
 1ZZ-FE:
 2AZ-FSE:
 1AZ-FSE:
 1AZ-FE:

Engine Room Relay Block

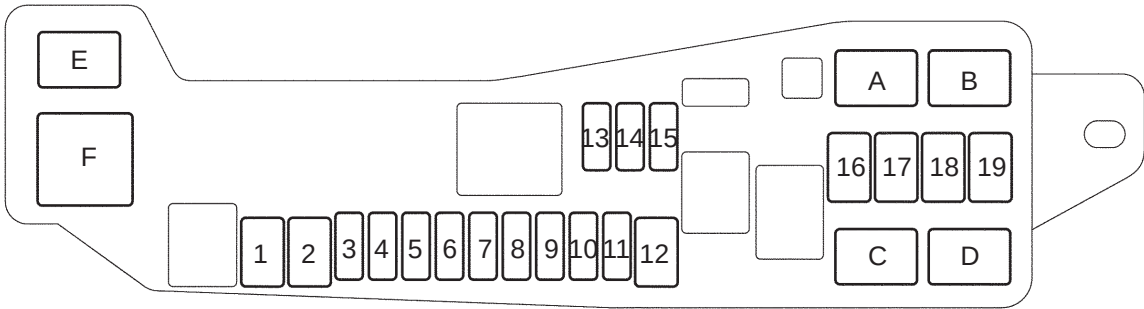


RELAY

FUSE

A. FAN No.2	1. EMPS	50A	6. HAZARD	10A	11. AM2	30A	16. RR DEF	30A
B. FAN No.1	2. -		7. ALT-S	7.5A	12. MAIN	40A	17. HTR	40A
C. FAN No.3	3. A/F	20A	8. IG2	15A	13. -		18. RDI	30A
D. -	4. THROTTLE	10A	9. EFI	20A	14. -		19. CDS	30A
E. -	5. HORN	15A	10. DCC	30A	15. -			
F. EMPS								

ENGINE:
 1CD-FTV:

Engine Room Relay Block

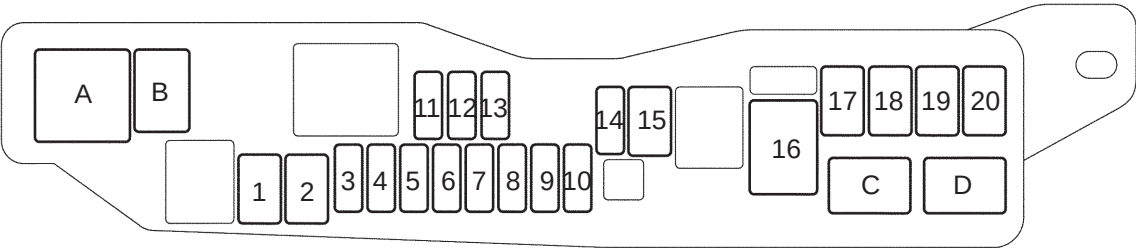

RELAY

FUSE


A. FAN No.1	1. MAIN	40A	6. F-HTR	25A	11. -	16. RDI	40A
B. FAN No.3	2. RR DEF	30A	7. HAZARD	10A	12. -	17. CDS	30A
C. EDU	3. PWR HTR	25A	8. AM2	30A	13. -	18. HTR	40A
D. EFI MAIN	4. EFI	20A	9. DCC	30A	14. *1	19. H/CLN	30A
	5. HORN	15A	10. ALT-S	7.5A	15. *2	20. AM1 No.1	50A

*1 VSC 25A (w/ VSC)
 ABS 25A (w/o VSC)

*2 VSC 50A (w/ VSC)
 ABS 40A (w/o VSC)

ENGINE:
3ZZ-FE:
1ZZ-FE:
2AZ-FSE:
1AZ-FSE:
1AZ-FE:

Engine Room No.2 Relay Block

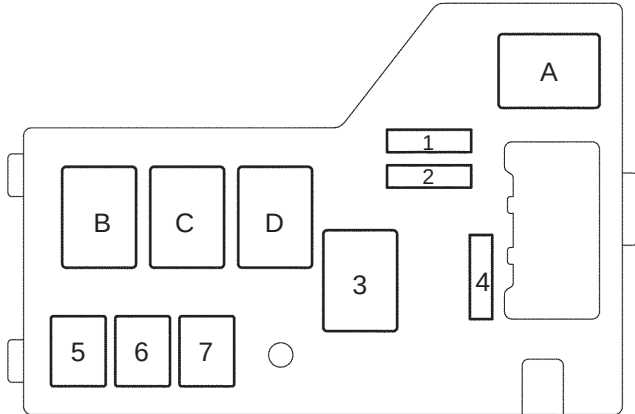

*1 ALT 120A
2AZ-FSE
1AZ-FSE
1AZ-FE

ALT 100A
3ZZ-FE
1ZZ-FE

RELAY
A. INJ
B. A/F
C. IG2
D. EFI


FUSE
1. EFI No.1 10A
2. EFI No.2 7.5A
3. *1
4. *2
5. H-LP CLN 30A
6. AM1 No.1 50A
7. *3

*2 VSC 25A (w/ VSC)
ABS 25A (w/o VSC)

*3 VSC 50A (w/ VSC)
ABS 40A (w/o VSC)

ENGINE:
ICD-FTV:

Engine Room No.2 Relay Block

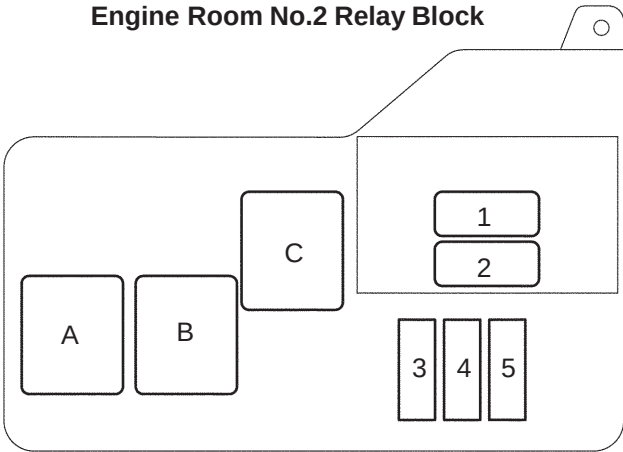


RELAY
A. HTR1
B. HTR2
C. HTR3

FUSE
1. ALT 140A
2. GLOW 80A
3. HTR1 50A
4. HTR2 50A
5. HTR3 50A

Instrument Panel Junction Block Assy


RELAY

- A. -
 B. HTR
 C. SEAT HTR
 D. IG1
 E. TAIL

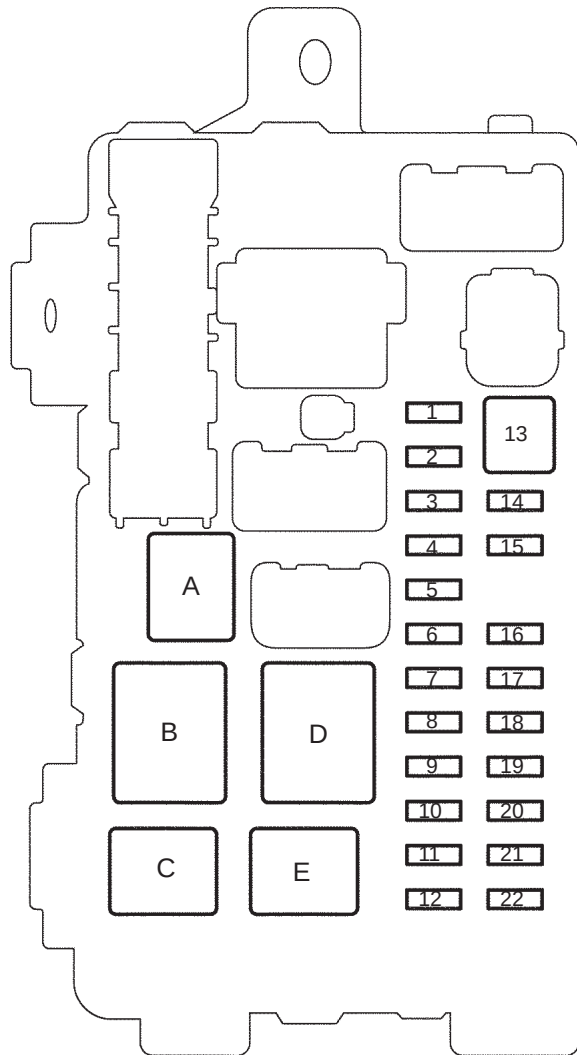**FUSE**

- | | |
|--------------|------|
| 1. IGN | 10A |
| 2. S/ROOF | 20A |
| 3. RR FOG | 7.5A |
| 4. FR FOG | 7.5A |
| 5. AM1 | 25A |
| 6. PANEL | 7.5A |
| 7. RR WIP | 20A |
| 8. GAUGE2 | 7.5A |
| 9. CIG | 15A |
| 10. HTR | 10A |
| 11. - | |
| 12. RAD No.1 | 7.5A |
| 13. PWR SEAT | 30A |
| 14. TAIL | 10A |
| 15. OBD2 | 7.5A |
| 16. P/POINT | 15A |
| 17. DOOR | 25A |
| 18. WIP | 25A |
| 19. EGU-IG | 7.5A |
| 20. S-HTR | 20A |
| 21. GAUGE1 | 10A |
| 22. STOP | 15A |

Engine Room Relay No.3 Block

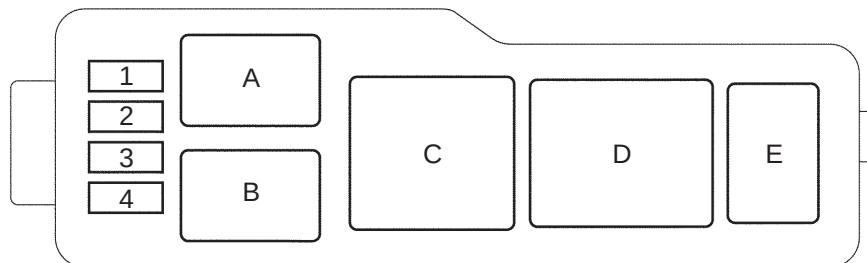**RELAY**


- A. HORN
 B. F-HTR
 C. H-LP
 D. DIM
 E. FAN No.2

FUSE

- | | |
|---------------|-----|
| 1. H-LP HI LH | 10A |
| 2. H-LP HI RH | 10A |
| 3. H-LP LH | 15A |
| 4. H-LP RH | 15A |

LHD:

Fuse Block Assy

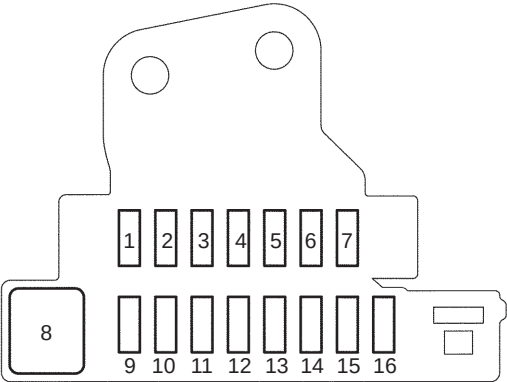


FUSE

1. -		6. DOME	7.5A	11. P-FR P/W	20A
2. DEF I/ UP	7.5A	7. ECU-B2	7.5A	12. D-RR P/W	20A
3. ST	7.5A	8. PWR SEAT	30A	13. D-FR P/W	20A
4. MIR HTR	7.5A	9. -		14. ECU-B1	7.5A
5. RAD No.2	15A	10. P-RR P/W	20A	15. FUEL OPN	10A
				16. FR DIC	20A

Drive Side Relay Block Assy


RELAY

- A. ST
- B. FR FOG
- C. P/POINT
- D. FR DEICER

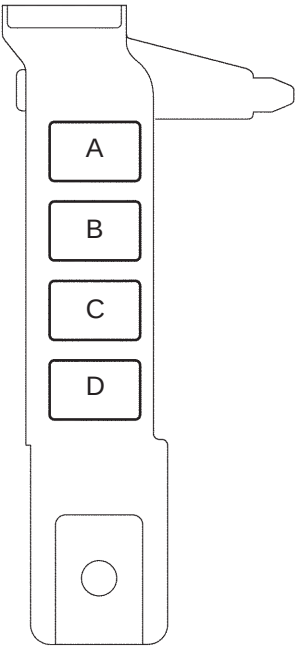

RHD:

Fuse Block Assy

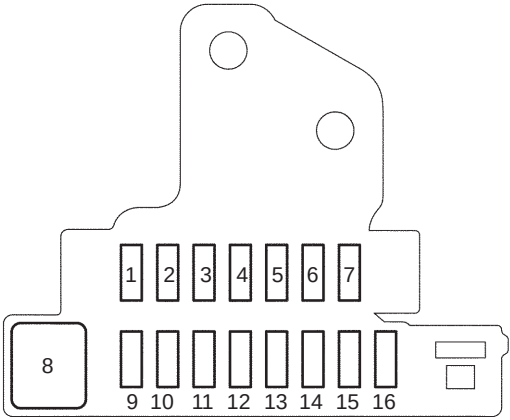

FUSE

1. -		6. DOME	7.5A	11. D-FR P/W	20A
2. DEF I/ UP	7.5A	7. ECU-B2	7.5A	12. P-RR P/W	20A
3. ST	7.5A	8. PWR SEAT	30A	13. P-FR P/W	20A
4. MIR HTR	10A	9. -		14. ECU-B1	7.5A
5. RAD No.2	15A	10. P-RR P/W	20A	15. FUEL OPN	10A
				16. FR DIC	20A

Passenger Side Relay Block Assy

RELAY

- A. P/POINT
- B. FR FOG
- C. ST
- D. FR DEICER

