


Pontiac Pursuit 2006 fuse box diagram

Floor Console Fuse Block

The floor console fuse box is located on the passenger's side of the floor console under the instrument panel.

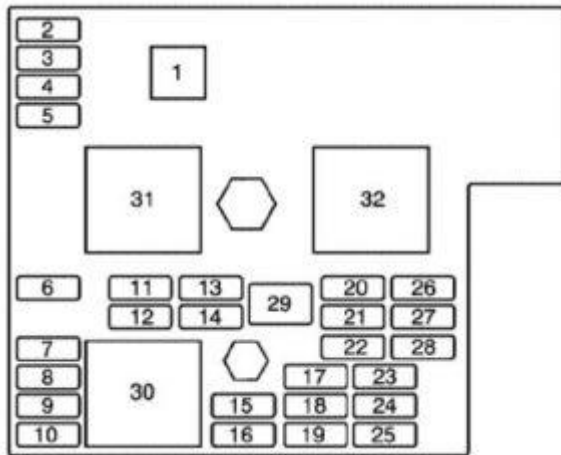

Pontiac Pursuit – fuse box diagram –

floor console

Fuses	Usage
1	Fuse Puller
2	Spare
3	Spare
4	Spare
5	Spare
6	Amplifer
7	Cluster

8	Ignition Switch, PASS-Key III+
9	Stoplamp
10	Heating, Ventilation, Air Conditioning, PASS-Key III+
11	—
12	Spare
13	Airbag
14	Spare
15	Windshield Wiper
16	Climate Control System, Cluster
17	—
18	—
19	Electric Power Steering, steering Wheel control
20	Sunroof
21	Spare
22	—

23	Audio System
24	Sensing and Diagnostic Module (Airbag)
25	Engine Control Module, Transmission Control Module
26	Door Locks
27	Interior Lights
28	—
29	Power Windows

Relays	Usage
30	Climate Control System
31	—
32	Retained Accessory Power

Engine Compartment Fuse Block

The engine compartment fuse block is located on the driver's side of the vehicle.

BCM2	Body Control Module 2
FOG LP	Fog Lamps
HORN	Horn
RH HI BEAM	Passenger's Side High Beam
LH HI BEAM	Driver's Side High Beam
RH LO BEAM	Passenger's Side Low Beam
LH LO BEAM	Driver's Side Low Beam
Blank	—
FUEL PUMP	Fuel Pump
EMISN	Emissions
Blank	—
INJ	Injectors
Blank	—
ABS	Anti-lock Brake System
PCM/ECM	Powertrain control Module/Engine Control Module

EPS	Electric Power Steering
PRK LPS	Park Lamps
WPR	Windshield Wiper
IP IGN	Ignition
A/C CLTCH	Air Conditioning Clutch
AIR SOL	Air Solenoid
ABS2	Anti-lock Brake System 2
PRK/NEUT	Park, Neutral
ECM/TRANS	Engine Control Module, Transmission
BCK UP	Back-Up Lamps
TRUNK/OUTLET	Trunk, Accessory Power Outlet
Blank	—
Blank	—
S BAND/ONSTAR	Audio, OnStar
Blank	—

LTR	Cigarette Lighter
MIR(S)	Mirrors
HTD SEATS	Heated Seats
CNSTR VENT	Canister Vent

Relays	Usage
RDFG	Rear Defogger
COOL/FAN2	Cooling Fan 2
WPR2	Windshield Wiper 2
CRNK	Starter
COOL/FAN1	Cooling Fan 1
FUEL PMP	Fuel Pump
WPR1	Windshield Wiper 1
PWR/TRN	Powertrain
AIR PMP	Air Pump

A/C CLTCH	Air Conditioning Clutch
AIR SOL	Air Solenoid
RUN/CRANK	Run, Crank