

Chevrolet Venture 1997 fuse box diagram

Instrument Panel Fuse Block

The instrument panel fuse block is to the right of the glove box.



Chevrolet Venture – fuse box – instrument panel

Circuit breaker	Usage
FRT HVAC HI BLWR	Blower Motor Resistor
HEADLAMP	DRL Control Module, Headlamp Dimmer Switch and Headlamp Switch
PWR SEATPSD	6-way Power Seat(s) and Rear Side Door Actuator Moto
PWR WDO/RR VENT	Front Power Windows
Fuses	Usage
ABS MDL BATT	Electronic Brake Traction Control Module (EBTCM)
ABS SOL	LH and RH Front Brake Solenoid Valve
ABS/TC IGN	Electronic Brake Control Relay and EBTCM
BCM PRGRM	Body Control Module (BCM)
CIGAR/DLC	Cigarette Lighter and Data Link Connector (DLC)
CTSY LAMP	BCM
DRL	DRL Control Module
ELC	Electronic Level Control (ELC) Air Compressor and ELC Relay
ELEC PRNDL	Instrument Cluster to PRNDL Indicators
FRT HVAC LOW/MED BLWR	Heater-A/C Control
FRT PWR SCKT	Front Electric Accessory Plug Housing
FRT WPR/WSHR	Windshield Wiper/Washer Motor and Switch
HAZARD	Turn Signal Switch
HVAC/DRL	Air Recirculation Motor, DRL Control Module, Heater-A/C Control, Temperature Door Actuator (Front) and Rear Window Defogger Rela
IGN 1	ELC Sensor, BCM, Electronic Brake Control Indicator Lamp Driver Module, Instrument Panel Cluster, Rear Side Door Actuator Motor, Rear Window Wipermasher and Multifunction Switch (Foglamp

	Switch/TCS Enable Switch) and Stoplamp/Torque Converter Clutch (TCC) Switch
MALL/RADIO/CDIC	BCM, Driver Information Display, Radio and Radio Rear Speaker Amplifier
PCM	IGN MAIN Relay and PC
PSD	Rear Side Door Actuator Motor
PWR LOCK	BCM
PWR MIRROR	Power Remote Control Mirror Switch
PWR QTR VENT	Interior Lamps and Multifunction Switch (Power Vent Switch)
RR HVAC	Rear Blower Motor, Rear Heater-A/C Control, and Temperature Door Actuator (Rear)
RR DEFOG	Rear Window Defogger Relay
RR PWR SCKT	Rear Electric Accessory Plug Housing
RR WPWSHR	Rear Window Wiper Motor, Rear Window Wiper/Masher and Multifunction Switch (Rear Window Wiper/Masher Switch)
SIR	Inflatable Restraint Control Module
STOP LAMP	Stoplamp Switch to Stoplamps
SUNROOF	Sunroof Control Module
SWC ACCY	Steering Wheel Radio Control Switches
SWC BACKLIGHT	Steering Wheel Radio Control Switches (Illumination)
T/SIG	Turn Signal Switch

Underhood Fuse and Relay Center

This fuse and relay center is located in the engine compartment, in front of the windshield washer fluid reservoir. The fuses marked spare are available if a replacement fuse is needed.



Chevrolet Venture – fuse box – engine

compartment

Maxi fuses		Usage
1	COOL FAN 2	Coolant Fans
3	HEADLAMPS	Circuit Breakers: FRT HVAC HI BLWR, and HEADLAMP Fuses (UP): HAZARD and STOPLAMP
4	BATT MAIN 2	Circuit Breaker: PWR SEATRSD. Fuses (UP): ELC and RR DEFOG
5	IGN MAIN 1	Ignition Switch to Fuses (W): ABSECS IGN, CRUISE, DRL, ELEC PRNDL, TGN 1, PSD, SIR, T/SIG and PCM [IGN MAIN Relay

		(Underhood Electrical Center Fuses: A/C CLU, ELEK IGN, IGN I-U/H, INJ, TCC)I
6	COOL FAN 1	Coolant Fans
7	BATT MAIN 1	Fuses (UP): ABS MDL BATT, CIGARDLC, CTSY LAMP, FRT PWR SCKT, PWR LOCK, PWR MIRROR and RR PWR SCKT

Mini fuses		Usage
18	INJ	Fuel Injectors 1-6
21	IGN1-UH	Evaporative Emissions (EVAP) Canister Purge Valve, EVAP Canister Vacuum Switch, Heated Oxygen Sensors #1 and #2, Linear Exhaust Gas Recirculation (EGR) Valve, Mass Air Flow (MAF) Sensor and Powertrain Control Module (PCM)
25	ELEK IGN	Ignition Control (IC) Module
27	B/U LAMP	Transaxle Range Switch to Back-up Lamps
28	A/C CLU	A/C CLU to A/C Compressor Clutch Oil
29	RADIO	Driver Information Display, Heater A/C Control, Radio, Rear Side Door Actuator Motor, Remote Control Door Lock Receiver (RCDLR), Security Indicator Lamp and Theft Deterrent Shock Sensor
30	ALT SENSE	Generator
31	TCC	Automatic Transaxle (Torque Converter Clutch Solenoids) Stoplamp Switch to PCM
32	FUEL PUMP	Fuel Pump Relay
33	ECM SENSE	Powertrain Control Module (PCM)
35	FOG LP	Fog Lamp Relay
36	HORN	Horn Relay
37	PARK LP	Daytime Running Lamps (DRL) Control Module, Headlamps Switch Theft Deterrent Relay to Headlamps