

TM BARINA

OWNER'S HANDBOOK



GM Holden Ltd, ABN 84 006 893 232 (hereinafter Holden)

Change of name, address or ownership

If you drive a pre-owned Holden, have moved house or changed any of your details, we'd like to hear from you!

Holden uses your details to keep your vehicle's factory provided Roadside Assistance and Warranty details up to date.

It also helps us let you know if there is an existing safety recall or rework on your vehicle. To update your details, please take a few minutes to fill in and mail the form at the back of the Service/Warranty booklet or visit Holden's website at: www.holden.com.au/forms/change-of-owner-details

GM Holden Ltd (Holden) is collecting the new owner's personal information in order to process the request for transfer for the specified vehicle. We may disclose your personal information to our related companies and third parties who provide us with (or help us provide) products and services, including to overseas locations such as the USA, and other countries in Europe, Oceania and Asia. Holden's privacy policy (available at: www.holden.com.au/privacypolicy) states how you can seek to access or correct any personal information Holden holds about you, how to complain about a privacy breach by Holden and how Holden will deal with a privacy complaint.

You can contact Holden on 1800 033 349 or alternatively, you may prefer to email Holden at: holdencustomer@gm.com

Note: Please refer to the inside front cover of the Service/Warranty booklet for the Vehicle Identification Certificate.

Printed in Australia

Part No. 92283759

December 2015

(MY16 TM Barina. Print 2)

© 2015 GM Holden Ltd

Reproduction in whole or part is
prohibited without written approval from
GM Holden Ltd, ABN 84 006 893 232

Introduction.....	2
In brief.....	4
Keys, doors, and windows.....	16
Seats, restraints.....	29
Storage	46
Instruments and controls	50
Lighting	73
Infotainment system	78
Climate control.....	175
Driving and operating	180
Vehicle care	203
Service and maintenance	248
Technical data.....	250
Customer information	255
Index.....	258

Introduction

We thank you for choosing Holden and want to assure you of our continuing interest in your driving pleasure and satisfaction.

This handbook applies to the current Barina model. Therefore, due to different models and options, you may find reference in this Handbook to some equipment not fitted to your own vehicle.

Please note that all information, illustrations and specifications in this Handbook are based on the latest production information available at the time of printing. Holden reserves the right to make changes at any time without notice and without incurring any obligation.

Introduction

Your vehicle is a designed combination of advanced technology, safety, environmental friendliness and economy.

This Owner's Handbook provides you with all the necessary information to enable you to drive your vehicle safely and efficiently.

Make sure your passengers are aware of the possible risk of accident and injury which may result from improper use of the vehicle.

Using this manual

- The In brief section will give you an initial overview.
- The table of contents at the beginning of this manual and within each chapter shows where the information is located.
- The index will enable you to search for specific information.

- Directional data, e.g. left or right, or front or back, always relate to the direction of travel.
- Depending on the model variant, integrated special equipment and accessories, the scope of equipment of your vehicle can differ from the descriptions in this Owner's Handbook.
- The *Bluetooth*® word mark and logo are registered trademarks and are owned by the Bluetooth SIG, Inc.
- iPod® and iPhone® are registered trademarks of Apple Inc.
- Pandora® is a registered trademark of Pandora Media, Inc.
- Stitcher SmartRadio™ is a registered trademark of Stitcher, Inc.
- DivX®, DivX Certified® and associated logos are registered trademarks of Rovi Corporation or its subsidiaries and are used under licence.

Danger, warnings and cautions

Danger

Text marked  **Danger** provides information on risk of fatal injury. Disregarding this information may endanger life.

Warning

Text marked  **Warning** provides information on risk of accident or injury. Disregarding this information may lead to injury.

Caution

Text marked **Caution** provides information on possible damage to the vehicle. Disregarding this information may lead to vehicle damage.

In brief

Initial drive information

Locking/unlocking the vehicle

Remote keyless entry



Hatch shown

The key operates all doors and the ignition.

- Press  to unlock the doors and the tailgate.
The hazard lamps flash twice.
- Press  to lock the doors and the tailgate.
The hazard lamps flash once.



Sedan shown

The key operates all doors and the ignition.

- Press  to unlock the doors.
The hazard lamps flash twice.
- Press  to lock the doors.
The hazard lamps flash once.
- Press  to unlock the boot.

Central locking system, see page 19.

Tailgate, see page 22.

Seat adjustment

Seat positioning



1. Move the seat forwards or backwards by lifting the handle at the front and sliding the seat.
2. Release the handle to engage the latch.

Try to move the seat back and forth to ensure the seat is locked in place.

Seat adjustment, see page 31.

Seat position, see page 30.

Seat backrests



1. Recline the seatback by pulling the lever.
2. Adjust the angle and release the lever.
3. Allow the seat to engage.

Note

Do not lean on the seat when adjusting.

Seat adjustment, see page 31.


Seat height



- To lower the seat cushion, push the lever down several times.
- To raise the seat cushion, pull the lever up several times.

Seat adjustment, see page 31.

Head restraint adjustment

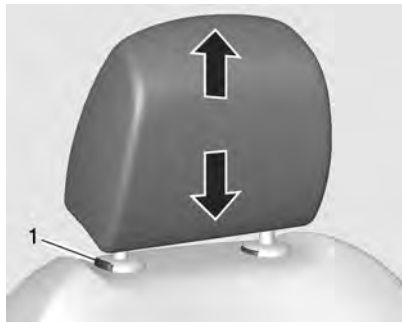

- To raise the head restraint, pull the head restraint upwards.
- To lower the head restraint, press (1) and push the head restraint downwards.

Head restraints, see page 29.

Seat belts



1. Withdraw the belt from the reel.
2. Pull the metal tongue across your body into the buckle, until it clicks into place.
3. Tension the lap belt regularly while driving by tugging the shoulder belt.

Seat belts, see page 33.

Mirror adjustment

Interior mirrors



To reduce headlamp glare from following vehicles, pull the lever towards the rear of the vehicle.

Rear view mirror, see page 25.


Steering wheel adjustment



1. To unlock, move the lever down.
2. Adjust the steering wheel.
3. To lock, move the lever up.
4. Ensure the steering wheel is locked in position before driving.


Steering wheel adjustment, see page 50.

Instrument panel overview

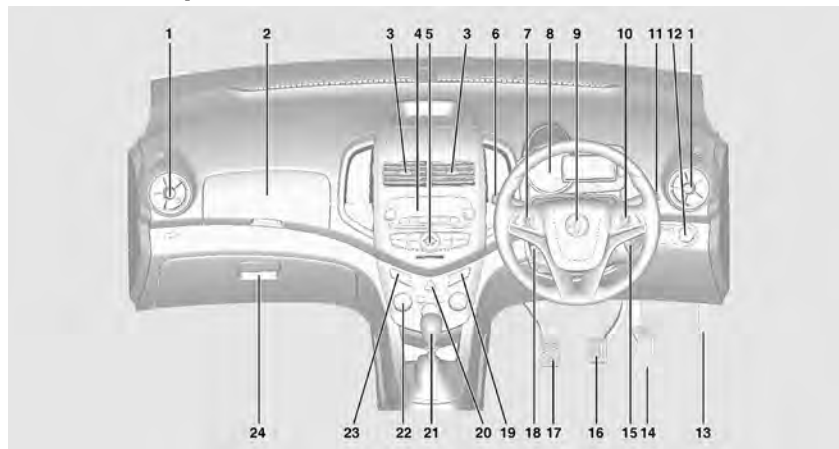

1. Side air vents
2. Storage (AUX, USB port)
3. Central air vents
4. Information display
5. Infotainment system
6. Wiper and washer lever
7. Cruise control
8. Instrument cluster
9. Horn, driver's airbag
10. Steering wheel remote controls
11. Turn signals
12. Exterior lamp switch
13. Bonnet release lever
14. Accelerator pedal
15. Ignition switch/lock
16. Brake pedal
17. Clutch pedal
18. Steering wheel adjustment
19. Central locking button
20. Hazard warning flasher
21. Shift lever
22. Climate control system
23. Passenger seat belt reminder light
24. Glove box

Exterior lighting

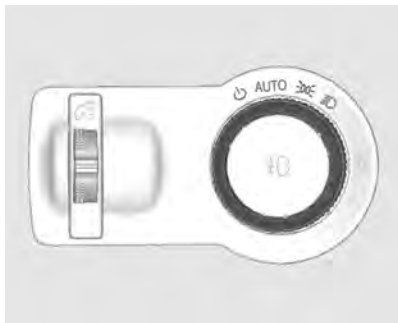

ⓘ (OFF): Rotate to turn all lamps and lights off.


AUTO: Exterior lamps and instrument panel lights turn on or off automatically, depending on the ambient light.

↔ (Park lamps): Turns on the park lamps, number plate lamps and instrument panel lights.

↔D (Headlamps): Turns on the headlamps and all park lamps.

Exterior lighting, see page 73.

High/low beam

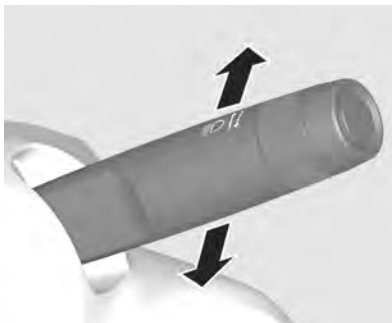

- To switch from low to high beam, push the lever.
- To switch to low beam, push again or pull the lever.

Exterior lighting, see page 73.


Hazard warning flashers



Press  to turn the hazard warning flasher on or off, when the ignition is in any position.

Exterior lighting, see page 73.

Turn and lane-change signals

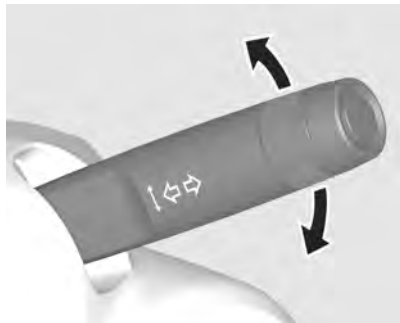

- Push the lever in the direction the steering wheel is turned.
- A green arrow on the instrument cluster flashes when the lamps are in operation.

Exterior lighting, see page 73.


Horn



Press .

Washer and wiper systems

Windscreen wiper

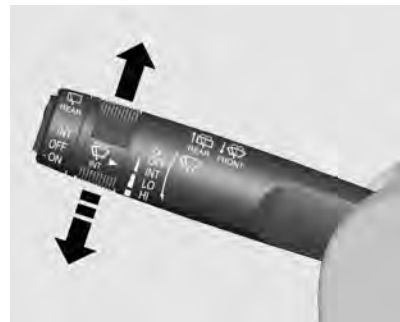

1x: Misting function

OFF: Off

INT: Intermittent operation


LO: Continuous wipe, slow speed

HI: Continuous wipe, fast speed

For a single wipe when the windscreen wipers are off, lightly move the lever up and release it.

Windscreen wiper/washer, see page 51.

Windscreen washer

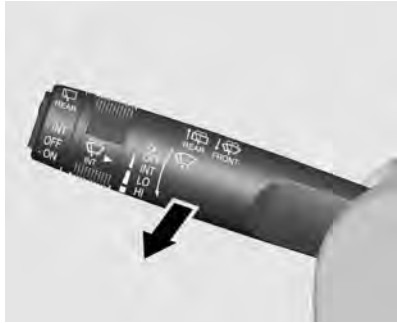

Pull the lever rearwards to wash the windscreen.

Washer fluid is sprayed onto the windscreen and the wipers cycle once.

Windscreen washer, see page 52.

Washer fluid, see page 213.

Rear window wiper/washer (Hatch)

Wiper




- **INT**: Intermittent wipes, push in at the top of the button.

OFF: To turn the wipers off, place the switch in the neutral position.

- **ON**: Continuous wipes, push in at the bottom of the button.

Rear window wiper/washer, see page 53.

Washer

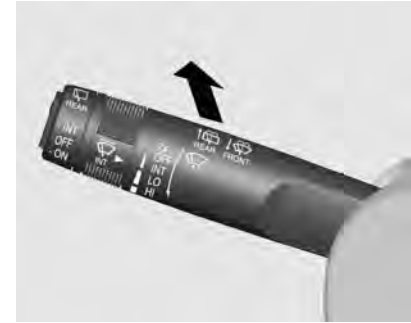

Push the lever forwards.

Washer fluid is sprayed onto the rear window and the wiper cycles for a few strokes.

Rear window wiper/washer, see page 53.

Washer fluid, see page 213.

Climate control

Heated rear window



Press .

Note

The engine must be running.

Heated rear window, see page 26.

Demisting and defrosting the windows



Rotate to select .

Windscreen demister, see page 176.

Transmission

Manual transmission



Select reverse gear while the vehicle is stationary:

1. Press the clutch pedal to the floor.
2. Pull the ring upwards.
3. Move the shift lever to position **R**.

If the gear does not engage:

1. Return the shift lever to neutral.
2. Release the clutch pedal.
3. Push the clutch pedal again and repeat gear selection.


Manual transmission, see page 189.

Automatic transmission



- P:** (park) In park position, the front wheels are locked. Select **P** only when the vehicle is stationary and the park brake is applied.
- R:** (reverse) Place in reverse only when the vehicle is stationary.
- N:** (neutral)
- D:** (drive) Used for general driving. Allows the transmission to be shifted into any of the six forward gears.
- M:** (manual)

Movement between certain gear positions requires pressing the release button on the shift lever and/or depressing the brake pedal.

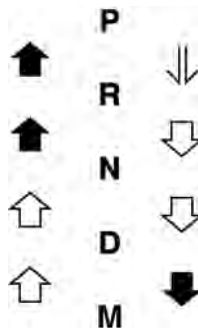


Follow the descriptions as indicated by the arrows when moving the shift lever.



Press the release button to select a gear.



 Depress the brake pedal and press the release button to select a gear.



Shift freely to select a gear.
Automatic transmission, see page 184.


Getting started

1. Check that windows, mirrors and lamps are clean.
2. Visually check tyre inflation. Check tyre pressures weekly.
3. Close and secure all doors.
4. Position the seat for comfortable driving.
5. Adjust rear view mirrors.
6. Fasten seat belts.
7. Check that warning indicators illuminate when turning the ignition on.

Warning lights, gauges and indicators, see page 55.

Driving and operating, see page 180.

Starting the engine

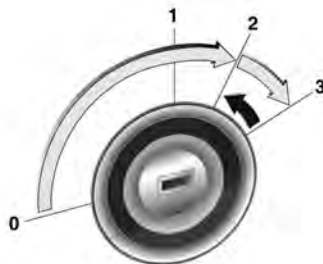

Warning

Do not turn the engine off while the vehicle is moving as there will not be any power assist for brakes or steering.

Never remove the key while the vehicle is moving, as this will lock the steering.

0: (LOCK) The key can only be inserted and removed from this position.

1: (ACC) When the key is in this position, the audio system operates.

2: (ON) When the key is in this position, the engine is ready to start and all electrical systems are active.

Do not leave the switch in this position for a long time, unless the engine is running, otherwise the vehicle's battery will discharge.

3: (START) Turn the key to this position and release when the engine is running.

Ignition positions, see page 181.

Parking

1. Apply the park brake.
2. Automatic transmission: Select position **P**.
Manual transmission: If facing uphill or on flat ground, select 1st gear. If facing downhill, select reverse gear.
3. Shut all windows.
4. Turn the ignition off and remove the key.
5. Press  on the key to lock all doors.

Driving and operating, see page 180.

Keys, doors and windows

Keys and locks	16
Doors	21
Vehicle security.....	23
Exterior mirrors	24
Interior mirrors	25
Windows.....	25
Roof.....	27

Keys and locks

Keys



Hatch shown

The key operates all doors and the ignition.

- Press  to unlock the doors and the tailgate.
The hazard lamps flash twice.
- Press  to lock the doors and the tailgate.

The hazard lamps flash once.

See Tailgate on page 22.



Sedan shown

The key operates all doors and the ignition.

- Press  to unlock the doors.
The hazard lamps flash twice.
- Press  to lock the doors.
The hazard lamps flash once.
- Press  to unlock the boot.

See Boot lid on page 23.

See Central locking system on page 19.

Foldaway key blade

The vehicle may have a foldaway key blade.



1. Press button to extend the key blade.
2. To retract the key blade, press the button and fold the blade into the key.

About the keys

- The remote control has a range of up to 30 metres.
- The range depends on the charge of the key battery, on ambient conditions, the key's location and the area between them.
- Take care that no button is pressed unintentionally, especially when the vehicle is out of sight.
- Protect from moisture and high temperatures.

The key buttons may not work if:

- More than 30 metres from the vehicle.
- Battery voltage is too low. See Battery replacement on page 18.
- The key buttons are operated repeatedly while not in range of the vehicle.

- The central locking system is operated at frequent intervals.
- The power supply is interrupted for a short time.
- The vehicle is parked near strong radio activity.

Replacement keys

If a key is lost, a replacement can be ordered through any Holden Dealer by quoting the key code number. The number is printed on a detachable tag supplied with the key.

Radio remote control

Battery replacement

As soon as the range of the remote control reduces, replace the battery:

Foldaway key



Fixed key



Use CR2032 (or equivalent) battery.

1. Open the cover.
2. Remove the used battery.
Avoid touching the circuit board to other components.
3. Install the new battery.
Place the negative side (-) down towards the base.
4. Close the cover.
5. Check the key operation.

Note

- Batteries do not belong in household waste. Dispose of at an appropriate recycling collection point.
- Avoid dropping the transmitter.
- Do not place heavy objects on the transmitter.
- Keep the transmitter away from water and direct sunlight.

If the transmitter gets wet, wipe it with a soft cloth.

Caution

Avoid touching the flat surfaces of the battery, the circuit board and other components inside the remote control with bare fingers. Handling will shorten battery life.

Central locking system

Doors may be locked and unlocked by pushing buttons on:

- The driver's door
- The key from inside or outside the vehicle
- The central locking button inside the vehicle

Note

The driver's door must be closed for the driver's door to lock.

To customise features, see Vehicle personalisation on page 69.

Central locking button



Locks and unlocks all doors, the tailgate/boot and fuel filler door.

- Press  to lock.
- Press  to unlock.

If the driver's door is open, the driver's door and fuel filler door cannot be locked.

To customise features, see Vehicle personalisation on page 69.

Unlocking



- Press .
All doors unlock.
The hazard lamps flash twice.
To unlock the driver's door only or to change the unlock feedback, see Vehicle personalisation on page 69.

Locking



- Press button .
- All doors lock.
- The hazard lamps flash once.

To change the lock feedback,
see Vehicle personalisation on
page 69.

Unlocking the boot (Sedan)



- Press .
- The boot lid unlocks and opens
while all doors remain locked.

Automatic door locks

The doors may be locked, at any time from within the vehicle by pressing  on the central locking button.

Automatic transmission

Moving the shift lever from **P** to any other position locks the doors, tailgate/boot and fuel filler door automatically.

To unlock, press  on the central locking button or move the shift lever to position **P**.

To customise features, see Vehicle personalisation on page 69.

Manual transmission

When vehicle speed is above 13 km/h, the doors, tailgate/boot and fuel filler door are automatically locked.

To customise features, see Vehicle personalisation on page 69.

Warning

Do not unlock the vehicle while driving.

Doors

Manual door locks



1. Insert the key in the driver's door.
2. Turn the key towards the rear of the vehicle to lock the doors.
3. Turn the key towards the front of the vehicle to unlock the driver's door.

Note

Tap the key slot or heat the key if the door does not open in cold weather.

Child security rear door locks



Warning

Use the child security door locks whenever children are occupying the rear seats.

Caution

Do not pull the inside door handle while the child security door is locked. Damage may occur.

The child security rear door locks prevent the rear doors from being opened from the inside.

Rotate the switch using a key or suitable screwdriver.

To activate:

- Rotate the switch to the horizontal position.

To open a door when the child security rear door lock is activated:

- Open the door from the outside.

Tailgate/boot lid

Remote unlocking/locking

Warning

Do not drive with the tailgate/boot open or ajar, e.g. when transporting bulky objects. Dangerous exhaust fumes may enter the vehicle.

To avoid injury and/or damage to the vehicle, check each time, before the tailgate/boot is closed, that the contact area is unobstructed.

Caution

Before opening the tailgate/boot, check the area above and behind for obstructions, to avoid damage to the tailgate/boot.

Note

Adding heavy accessories to the tailgate/boot may affect its ability to remain open.

Tailgate




Unlocking:

1. Press .
2. Push the touchpad on the tailgate.

Locking:

1. Push down so it latches securely.
2. Press .

Boot lid

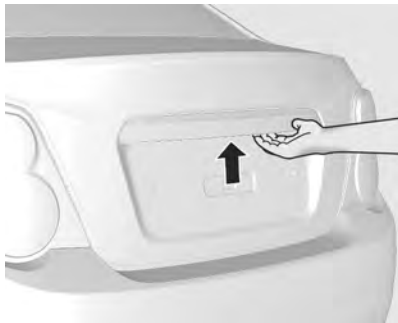

Unlocking:

1. Press .
2. Push the touchpad on the boot or press  on the key.

Locking:

1. Push down so it latches securely.
2. Press .

Vehicle security

Auto door lock

When unlocking the doors with the remote key, all doors will lock automatically after approximately 3 minutes if:

- The doors remain closed.
- The ignition key is not in the ACC or ON positions.

To customise features, see Vehicle personalisation on page 69.

Auto door unlock

In the event of an accident, the doors will automatically unlock if the ignition is on.

Note

The doors may not unlock if damage occurs to the door lock system or battery.

Immobiliser

The immobiliser prevents unauthorised engine starting.

- If an invalid key is inserted into the ignition switch/lock, an indicator on the instrument cluster will flash.

The vehicle will not start.

- The engine is automatically immobilised after the key is turned to LOCK and has been removed from the ignition switch/lock.
- Only valid ignition keys can be used to start the engine.

Have the vehicle checked by a Holden Dealer.

Exterior mirrors

Convex mirror

The convex exterior mirrors provide a wider view of the road and traffic.

Note

Objects appear smaller than their actual size.

Power mirrors



L: Left side mirror selected

R: Right side mirror selected

O: No mirrors selected

To adjust an exterior rear view mirror:

1. Rotate the switch to **L** or **R**.
2. Swivel the switch to adjust the mirror.

Folding mirrors



When the vehicle is parked, the mirrors may be folded flat against the side of the vehicle.

Warning

Always extend mirrors outwards for driving to increase visibility.

Do not drive while either exterior mirror is folded against the vehicle.

Interior mirrors

Rear view mirror



To reduce headlamp glare from following vehicles, pull the lever towards the rear of the vehicle.

Note

The rear view clarity is reduced when the mirror is set to the anti-glare position.

Return the lever back to its original position as soon as the glare has disappeared.

Windows

Power windows

Warning

Before operating the power windows, check they are free of obstructions and that passengers and pets are not in the proximity of the moving window.



The power windows can be operated when the ignition is turned on.

Operation

- To open a window, press the switch down.
- To close a window, lift the switch up.
- The window stops moving up as soon as the button is released.

Danger

Do not leave keys or children unattended in the vehicle.

Children may operate the switches and become trapped in the windows.

Serious injury or death may occur from misuse of power windows.

Auto up/down

The driver's window has an auto up/down function.

- To open the window automatically, press the switch down.
- To close the window automatically, pull the switch up.
- The window will open or close fully when the switch is released.
- Press or pull the switch to interrupt automatic operation.

Anti-pinch function

If the window encounters any resistance during closing, it will stop immediately and open again.

Child safety switch



Press  to activate/deactivate the rear door power window switches.

Heated rear window



- Press .

The heated rear window:

- Operates when the ignition is turned on.
- Switches off automatically after a few minutes or by pressing  again.

Caution

Do not use sharp objects or abrasive window cleaners on the rear window.

Do not scratch or damage the wires.

Sun visors

- The sun visors can be folded down or folded outwards over the side window, to prevent glare.
- Close the mirror cover before driving.

** Warning**

Do not place the sun visor in such a position that it reduces visibility of the roadway, traffic or other objects.

Roof**Sunroof**

The vehicle may have a sunroof.

** Warning**

Always observe the following precautions:

Do not place fingers or objects near the sunroof when operating.

Do not place heavy objects on or around the sunroof.

Remove debris from the outside of the sunroof.

When leaving the vehicle unattended, close the sunroof fully.

As at all other times, all occupants must wear their seat belts whether the sunroof is open or closed.

Failure to observe these precautions may result in personal injury or damage to your vehicle.

Fitting an aftermarket sunroof may void the New Vehicle Voluntary Warranty on your vehicle and could result in injury to the vehicle occupants in the event of an accident.

The sunroof:

- Will operate with the ignition key in the ON position.
- Can be raised or can slide back into the roof.

The sunroof switch is located between the sun visors.



Open or close

To open the sunroof:

- Press  (1).
- To stop movement, press any of the switches again.
- To open to a specific position, press and hold  (1).

Release the switch when the required position has been reached.

To close the sunroof:

- Press and hold  (2).

Tilt or close

To tilt the sunroof:

- Press and hold  (2).

Release the switch when the required position has been reached.

To close the sunroof:

- Press and hold  (1).

Sunblind

- The sunblind opens automatically with the sunroof or can be manually operated.
- Close or open the sunblind by sliding.

Seats, restraints

Head restraints	29
Front seats	30
Rear seats	32
Seat belts.....	33
Airbag system	37
Child restraints	41

Head restraints

⚠ Warning


This safety feature is not intended to rest the head upon. It is solely for the reduction of whiplash neck movement in an accident involving your vehicle.

The centre of the head restraint should be at eye level, never at neck level.



Height adjustment

Front head restraints

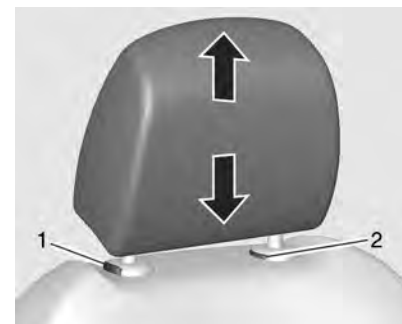


- Pull the head restraint up.
- Press the locking button (1) and push the head restraint down.

To remove:

1. Pull the head restraint up.
2. Press the locking buttons (1) and (2) at the same time.
3. Remove the head restraint.

Rear head restraints

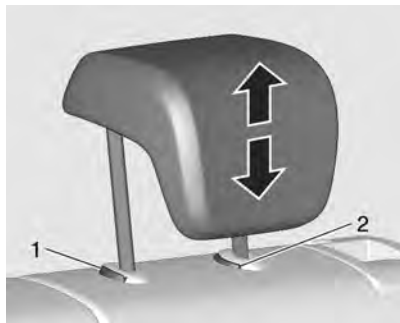

- Pull the head restraint up.
- Press the locking button (1) and push the head restraint down.

To remove:

1. Pull the head restraint up.
2. Press the locking buttons (1) and (2) at the same time.
3. Remove the head restraint.

Front seats

Seat position

Warning

To avoid reducing the effectiveness of seat belts, seatbacks should only be upright or at most semi-reclined when the vehicle is moving.



- Sit centrally in the seat.
- Use the backrest and cushion for support.

- Adjust the seat so that your legs are slightly angled when against the pedals.
- Adjust the backrest angle to easily reach the steering wheel with arms slightly bent. See Steering wheel adjustment on page 50.
- Maintain contact between shoulders and the backrest when turning the steering wheel.
- Adjust the head restraint. See Head restraints on page 29.
- Slide the passenger seat as far back as possible.


Seat adjustment

Danger

Do not sit nearer than 25 cm from the steering wheel, to allow safe airbag deployment.

Warning

Do not adjust the driver's seat when the vehicle is moving as the seat could move suddenly causing the driver to lose control.

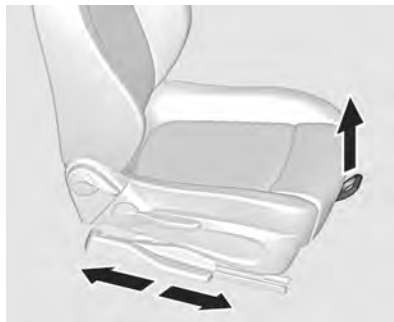

1. Move the seat forwards or backwards by lifting the handle at the front and sliding the seat.
2. Release the handle to engage the latch.


Try to move the seat back and forth to ensure the seat is locked in place.



1. Recline the seatback by pulling the lever.
2. Adjust the angle and release the lever.
3. Allow the seat to engage.

Note

Do not lean on the seat when adjusting.

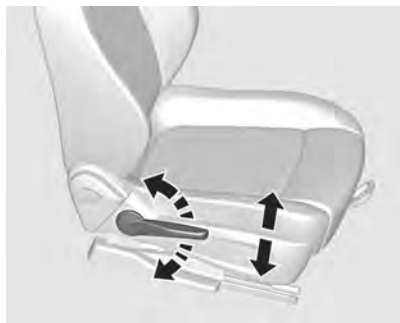

- To lower the seat cushion, push the lever down several times.
- To raise the seat cushion, pull the lever up several times.

Heated front seats



The vehicle may have heated front seats.

To warm the seat:

1. Start the engine.
2. Press or .

The light in the button illuminates.

To turn the heater off:

1. Press or again.

Note

Prolonged use of the heated seats for people with sensitive skin is not recommended.

Rear seats

Folding down rear seatbacks

Danger

Ensure the rear seatbacks are securely in place.

Do not press the release button on the top of the seatback while the vehicle is moving. This could cause damage or injuries to the occupants.


Do not allow passengers to sit on the folded seatbacks while the vehicle is in motion. Unrestrained luggage or passengers on a folded seatback could be thrown within or ejected from the vehicle in a sudden stop or accident.

Caution

Do not trap the seat belt when returning the seatback to the upright position.

To fold the rear seatbacks down:

1. Unbuckle the seat belts.
2. Push the head restraints down by pressing the locking button.
3. Slide the front seat forwards.
4. Adjust the front seatback to an upright position.

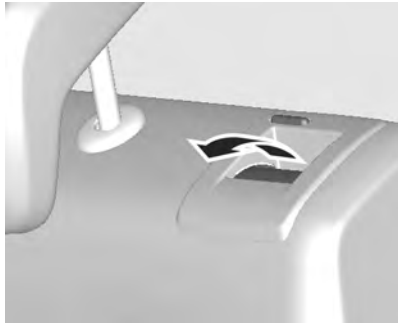

5. Pull the release lever on top of the rear seatback and fold it forwards and down.



6. Place the seat belts into the belt guides.

To return the seatback to the upright position:

1. Pull the seat belt away from the belt guides.
2. Lift the seatback upwards and push firmly back into place.

Note

- Ensure the seat belts are clear of the latch.
- The centre rear seat belt may lock when raising the seatback. Let the belt retract then extend it.

Seat belts



⚠Warning

Seat belts are designed to bear upon the bony structure of the body, and should be worn low across the front of the pelvis or the pelvis, chest and shoulders, as applicable; wearing the lap section of the belt across the abdominal area must be avoided.

Seat belts should be adjusted as firmly as possible, consistent with comfort, to provide the protection

for which they have been designed. A slack belt will greatly reduce the protection afforded to the wearer.

Care should be taken to avoid contamination of the webbing with polishes, oils and chemicals, and particularly battery acid.

Belts should not be worn with straps twisted.

Each belt assembly must only be used by one occupant. It is dangerous to put a belt around a child being carried on the occupant's lap.

No modifications or additions should be made by the user which will either prevent the seat belt adjusting devices from operating to remove slack, or prevent the seat belt assembly from being adjusted to remove slack.

The belts lock during heavy acceleration or deceleration for the safety of the occupants.

Belt force limiters

In the front seats, stress on the body is reduced by the gradual release of the belt during a collision.

Belt tensioners



In the event of a front, side or rear collision of a certain severity, the driver's and/or passengers safety belts are tightened.

Warning

Incorrect handling (e.g. removal or fitting of belts or belt buckles) can trigger the belt tensioners with risk of injury.

- When the belt tensioners have been deployed,  illuminates on the instrument cluster. See Seat belt reminders on page 58.
- Triggered belt tensioners must be replaced.
- Belt tensioners are only triggered once.

Warning

Do not attach or install objects that may interfere with the operation of the belt tensioners.

Do not make any modifications to belt tensioner components.

Three point belt

Fitting



The belt should not be twisted. It should lie flat and fit firmly across your hips.

1. Withdraw the belt from the reel.
2. Pull the metal tongue across your body into the buckle, until it clicks into place.
3. Tension the lap belt regularly while driving by tugging the shoulder belt.



Do not place objects such as handbags or mobile phones between the belt and your body.

Warning

The belt must not rest against hard or fragile objects in the pockets of your clothing.

Height adjustment



1. Press and hold the button.
2. Move up and down as required.
3. Release the button.
4. Ensure that the anchor clicks into position.

⚠Warning

Do not adjust the belt while driving.

The belt must lie across the shoulder. It must not lie across the throat or upper arm.

Removing



1. Press the red button on the buckle.
2. Allow the belt to retract.
3. Check that it fully retracts without twisting or turning.

Note

The three point belt for the rear central seat can only be withdrawn from the retractor if the backrest is in the upright position.

Seat belt use during pregnancy

⚠Warning

The lap belt must be positioned as low as possible across the pelvis to prevent pressure on the abdomen.

Seat belts work for everyone, including pregnant women. Like all occupants, they are more likely to be seriously injured if they do not wear a seat belt.

A pregnant woman should wear a three point belt with the lap portion of the belt worn as low as possible below the rounding of their stomach, throughout the pregnancy.

Seat belt care

Warning

Care should be taken to avoid contamination of the webbing with polishes, oils and chemicals, and particularly battery acid. Cleaning may safely be carried out using mild soap and water. The belt should be replaced if webbing becomes frayed, contaminated or damaged.

Replacing seat belts after a crash

Warning

It is essential to replace the entire assembly after it has been worn in a severe impact even if damage to the assembly is not obvious.

Airbag system

When triggered, airbags inflate within milliseconds. They also deflate so quickly that it is often unnoticeable during the collision.

Danger

Do not make any modifications to the airbag system.

The driver should sit back as far as possible while still maintaining control of the vehicle. Sitting too close to the airbag, can cause death or serious injury when it inflates.

Always wear a seat belt.

Warning

WARNING – EXTREME HAZARD!

Do not use a rearward facing child restraint on a seat protected by an airbag in front of it!

The child could be seriously injured if the airbag inflates, as the child's head would be very close to the inflating airbag.


Remember that it is safest for children to be seated in the rear seats. See Child restraints on page 41.



⚠Warning

Airbags are part of the supplemental restraint system (SRS) as they assist, but do not replace seat belts. Airbags do not deploy in every accident. Various factors dictate whether they deploy including speed, angle of collision and object hit. Airbags are not designed to inflate if the vehicle is hit from the rear or is involved in a rollover. Seat belts must be worn by all passengers whenever the vehicle is moving. Airbags inflate with great force. If you are too close to an inflating airbag it may cause injury. Seat belts help keep you in position for airbag inflation in the event of a collision.

See Airbag and belt tensioners light on page 59.

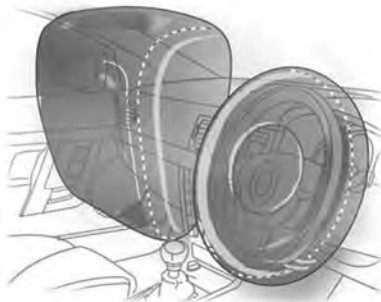Front airbag system

The front airbag system consists of one airbag in the steering wheel and one in the instrument panel on the passenger side. These are identified by the word **AIRBAG**.

⚠Warning

The horn pad must not be covered with adhesive or any other material.


The driver should adjust the seat as far rearward as possible while still maintaining control of the vehicle.

⚠Warning

Do not place any objects on or over the instrument panel or between an airbag and yourself.

Do not hang anything from the sun visor or mirror.

Passengers must not rest their feet on the instrument panel.

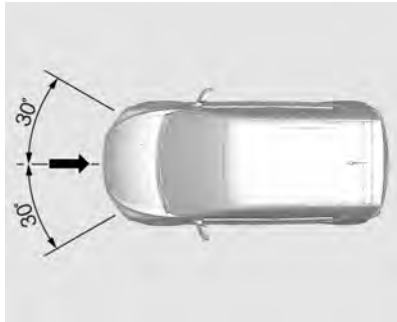


Front airbags will inflate in certain severe frontal or near frontal impacts. Front airbags are not designed to inflate if the vehicle is struck from the side, rear or in rollovers. Always wear a seat belt.

Side airbag system




Side airbags are stored in the sides of the front seats.

They can be identified by the word **AIRBAG**.

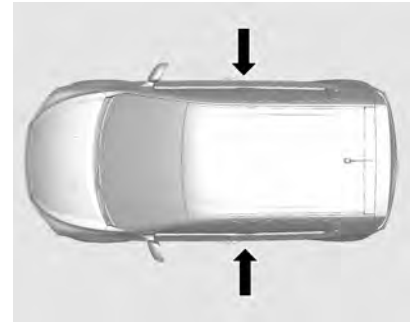

The side airbags deploy in most, but not all severe side impacts.

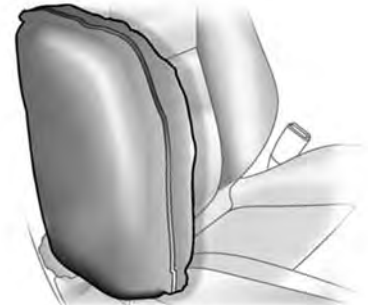

The risk of injury to the upper body and pelvis in the event of a side impact is considerably reduced.

⚠ Warning

Do not fit unauthorised seat covers as they may impair the deployment of the side airbags.

Do not position your body or any object (including pillows) between front seats and doors.


Do not lean on, or sleep against, the door. Always sit centrally in the seat.

Always wear a seat belt.


Curtain airbag system

Curtain airbags are stored in the roof on each side of the vehicle.

They can be identified by the word **AIRBAG** on the roof pillars.

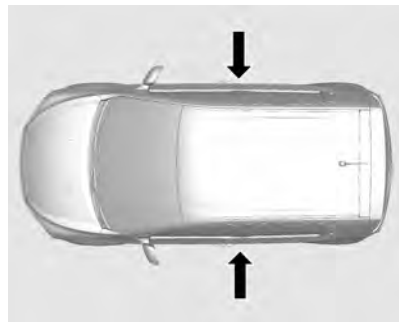

The curtain airbags deploy in most, but not all severe side impacts.

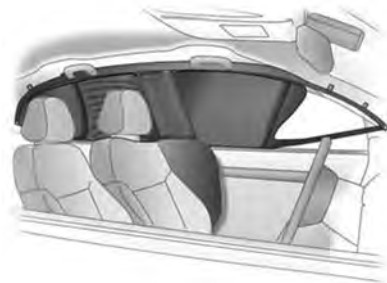

The risk of injury to the head in the event of a side impact is considerably reduced.

Warning

Do not position your body or any object (including pillows) in the area in which the airbag inflates.

There must be no objects in the area in which the airbag inflates. Refer to the illustration.

Use the hooks above the doors only to hang up light articles of clothing.

Do not place any objects in the pockets of the hanging items.

Do not hold onto the assist grips (above the doors) while seated in the vehicle.

Do not lean on, or sleep against the front or rear doors. Always sit centrally in the seat.

Always wear a seat belt.

Replacing airbag system parts after a crash

Note

After an accident where airbags have deployed, the systems, associated parts and hardware must be checked and replaced as required.

Seats, associated parts and hardware must also be checked and replaced as required.

The airbag system should also be inspected after an accident if:

- The instrument panel area or steering wheel is scratched, cracked or damaged.
- The front seats and upholstery are damaged.
- The headliner or trim panels are damaged.

It is recommended that this work be carried out by a Holden Dealer or approved repairer.

Child restraints

Warning

WARNING – EXTREME HAZARD!
Do not use a rearward facing child restraint on a seat protected by an airbag in front of it!

The child could be seriously injured if the airbag inflates, as the child's head would be very close to the inflating airbag.

Remember that it is safest for children to be seated in the rear seats.

Never carry a child while travelling in the vehicle.



⚠Warning

This manual provides you with general information concerning child restraints only.

The driver is required by law to ensure that passengers are suitably restrained. In most States and Territories of Australia and New Zealand, specific laws may exist which require children to be seated in approved child restraints.

Holden strongly recommends that you refer to your specific State or Territory regulations to determine which child restraint is suitable for your child.

⚠Warning

Always ensure that the seat belt fits firmly around the child restraint.

If a child cannot see out of the window, do not raise him/her by means of an ordinary cushion. It will not stay in place in a collision and the child can slip out of the straps and become entangled.

Selecting the right system**Infants**

Rearward facing infant capsules are designed so that in the event of a collision, impact forces will be evenly spread over the baby's back, with minimal jarring to the vulnerable head and neck area.

Young children

Forward facing child seats are for use when the child is able to sit and easily hold their head upright.

Booster seats

Booster seats are for when children outgrow a typical forward facing child seat, but are still too small for three point seat belts.

Older children

A child should use a normal three point seat belt only when:

- They can sit against the back of the rear seat with knees bent comfortably at the edge of the seat.
- The lap belt rests low and snug across the hips, not across the stomach.
- The sash belt is centred on the shoulder and chest.
- They are able to stay seated like this for the entire trip.

Where to put the restraint

Warning

Child restraint anchorages are designed to withstand only those loads imposed by correctly fitted child restraints. Under no circumstances are they to be used for adult seat belts, harnesses, or for attaching other items or equipment to the vehicle.

Only child restraints that have clips to attach to the vehicle's anchorage fittings are to be used. Earlier types of child restraints may not attach securely to this type of anchor.

Use only Standards Australia and New Zealand approved child restraints and harnesses. Only purchase a child restraint which carries the appropriate Standards Australia sticker of approval.

Where legally allowable, you may install a forward-facing child restraint in the front seat, but always move the passengers seat as far back as it will go. The forward facing child restraint must still be attached to the passenger side child restraint anchorage point, located behind the rear seat.

Remember, it is safest for children to be seated in the rear seat.

Note

If unsure about installing a child restraint, contact an approved restraint fitting station or a Holden Dealer.

ISOFIX child restraint systems



Fasten vehicle-approved ISOFIX child restraint systems to the ISOFIX mounting brackets.

Note Ensure that seat belt buckles are placed out of the way of the child seat.

ISOFIX mounting brackets are indicated by a label on the seatback, as shown. In addition to the ISOFIX mounting, fasten the top-tether straps to the top-tether anchorage points. See Top-tether child restraint systems on page 44.

Top-tether child restraint systems



A. Front of vehicle (Hatch)



Sedan shown

The child restraint tether anchors are located at the rear of the load compartment (hatch) and at the rear of the head restraints (sedan), in line with the three rear seating positions.

Note

Use the child restraint anchors for their designed purpose only.

Child restraint installation

The vehicle has been designed to accommodate child restraints on the rear seat.

When using a child restraint, read the installation instructions supplied with the child restraint and follow the directions for fitment carefully.

The child restraint system should be secured in conjunction with the vehicle's seat belt.

Secure the child in the restraint in accordance with the manufacturer's instructions.

If unsure about installing a child restraint anchor fitting, contact an approved restraint fitting station or a Holden Dealer.

Storage

Storage compartments	46
Additional storage features.....	49
Loading information	49

Storage compartments

Instrument panel storage



A storage compartment is located in the centre of the instrument panel.



A storage compartment is located in front of the shift lever.




The storage compartment above the glove box has a USB port and may have an AUX input.

- To open, lift the lid upwards. To close, push the lid firmly back into place.

See Auxiliary devices on page 101.

Glove box

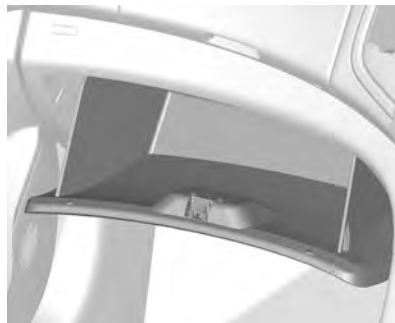


The glove box is located in the instrument panel, in front of the passenger's seat.

- To open, pull the handle towards you. To close, push the lid firmly back into place.

Warning

To reduce the risk of injury, always keep the glove box door closed when driving.

Cup holders

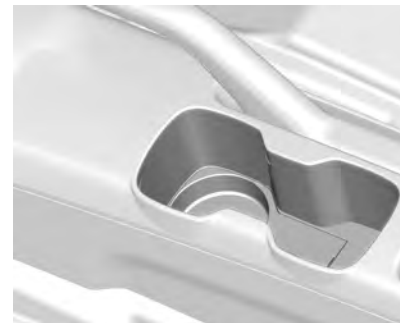

Cup holders are located in the front console and rear of the centre console.

⚠ Warning

To avoid scalding, never place hot drinks in the cup holders.

Do not place uncovered containers of liquid in the cup holder while the vehicle is in motion.


Sunglasses storage

The vehicle may have a sunglasses holder located in the roof on the driver side.

- To open, fold downwards.

Note

Do not use for storing heavy objects.

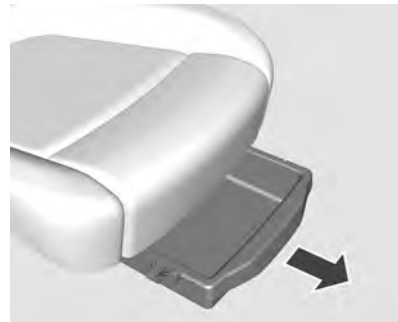
Under seat storage

The vehicle may have under seat storage beneath the passenger's seat.

- To open, pull up on the front of the tray and pull towards the front of the vehicle.
- To close, push the tray towards the rear of the vehicle.

Additional storage features

Load compartment cover

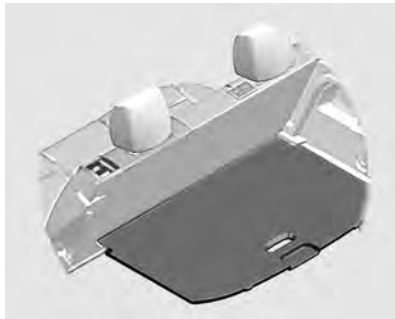

The vehicle may have a load compartment cover.

The cover provides a separated storage area within the load compartment.

Loading information

Danger

Do not stack objects higher than the front seats.

Do not allow passengers to sit on the folded seatbacks while the vehicle is in motion. Serious injuries or death can result.

For folding down rear seatbacks, see Rear seats on page 32.

- Place all heavy objects in the load compartment as far forward as possible.
- Secure objects to prevent from sliding.

Movement of heavy objects in the load compartment may change the handling of the vehicle.

- Ensure the backrests are securely engaged.

- Ensure that all cargo is lower than the rear seat backrests (hatch).
- Place heavier objects at the bottom.
- Do not place any objects on the load compartment cover or the instrument panel.
- Do not place unsecured objects in the interior.
- Do not drive with an open tailgate/boot.
- Driving with a roof load increases the sensitivity of the vehicle to cross-winds and has a detrimental effect on vehicle handling due to the vehicle's higher centre of gravity.
Distribute the load evenly and secure it properly with retaining straps. Adjust the tyre pressure and vehicle speed according to the load conditions. Check and retighten the straps frequently.

Instruments and controls

Controls	50
Warning lights, gauges and indicators	55
Information displays.....	63
Vehicle messages.....	64
Trip computer	67
Vehicle personalisation.....	69

Controls

Steering wheel adjustment

Warning

Do not attempt to adjust the steering wheel while driving.



1. To unlock, move the lever down.
2. Adjust the steering wheel.
3. To lock, move the lever up.
4. Ensure the steering wheel is locked in position before driving.

Steering wheel remote controls



The infotainment system and the cruise control may be operated by the controls on the steering wheel.

See Infotainment system on page 78.

See Cruise control on page 193.


Horn



Press .

Windscreen wiper/washer

Windscreen wiper

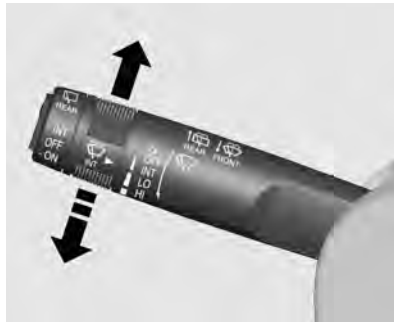

To operate the windscreen wipers, turn the ignition on and move the windscreen wiper/washer lever to one of the following positions:

Caution

Do not operate the wipers on dry glass or when covered with snow or ice, as this will damage the rubber and scratch the glass.

1x: Misting function

OFF: Off

INT: Intermittent operation

LO: Continuous wipe, slow speed


HI: Continuous wipe, fast speed

Misting function

To operate the windscreen wipers once during light rain or mist:

- Lightly lift the windscreen wiper/washer lever up and release.
- The lever returns to its usual position when released.
- The wipers cycle once.


Adjustable wiper interval

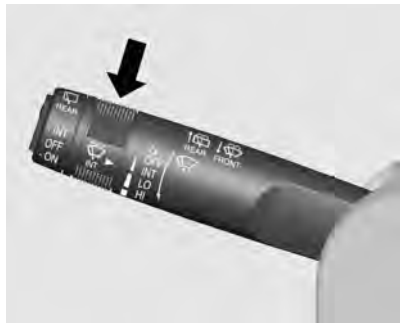

During intermittent operation, adjust the frequency of the wiper intervals:

- For frequent intervals, rotate the wheel downwards.
- For longer intervals, rotate the wheel upwards.

Windscreen washer

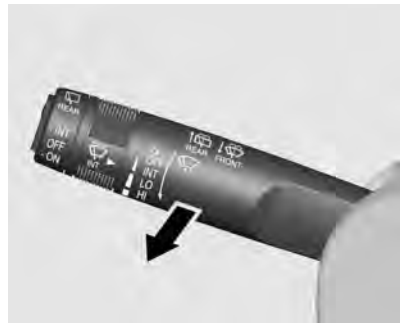

Pull the lever rearwards to wash the windscreen.

Washer fluid is sprayed onto the windscreen and the wipers cycle once.

Warning

Do not spray washer fluid on the windscreen in freezing weather.

Caution

Do not operate the windscreen washer for more than a few seconds or when the washer fluid reservoir is empty.

Rear window wiper/washer (Hatch)

Wiper



To operate the rear window wiper, push the switch at the end of the lever.


- **INT**: Intermittent wiper, push in at the top of the button.
- OFF**: To turn the wipers off, place the switch in the neutral position.
- **ON**: Continuous wiper, push in at the bottom of the button.

Caution

Do not operate the wipers on dry glass or when covered with snow or ice, as this will damage the rubber and scratch the glass.

Do not operate the windscreen washer for more than a few seconds, or when the washer fluid reservoir is empty.

Washer

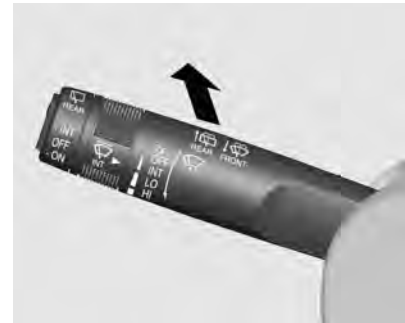


Push the lever forwards.

Washer fluid is sprayed onto the rear window and the wiper cycles for a few strokes.

Clock

Type 1

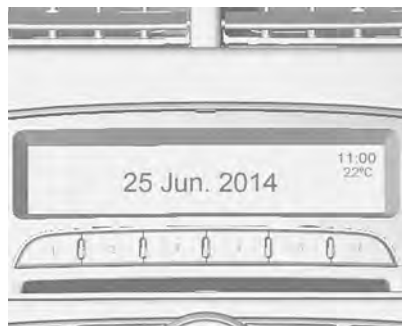

Type 2

♪ audio
🖼️ picture & movie
☎️ phone
📱 smartphone link
⚙️ settings



Time and date are shown on the infotainment display.

Adjust the settings for the time in the settings menu.

See Personalisation on pages 110 (Type 1) or 154 (Type 2).

Power outlet



A 12V power outlet is located in the centre console.

Warning

It is dangerous for the driver of a vehicle to attach or remove accessories from the power socket while driving. It may distract the driver's attention, putting the occupants of the vehicle and other road users at risk.


The power outlet is activated when the ignition is turned to ACC or ON. When the ignition is turned off, the power outlet is deactivated when any door is opened or after 10 minutes.

- The power outlet does not operate if the battery voltage is low.
- Do not exceed the maximum power consumption of 120 watts.
- Do not connect electrical charging devices or batteries.

Warning lights, gauges and indicators



Speedometer

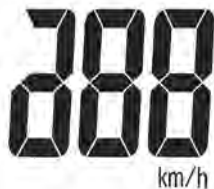

Shows vehicle speed in kilometres per hour (km/h).

Odometer




Shows distance travelled in kilometres.

- The tripmeter measures the distance travelled since the tripmeter was reset.
- Press the reset button briefly to change between odometer and tripmeter.



To reset the tripmeter to zero, press and hold the reset button for a few seconds.

Tachometer

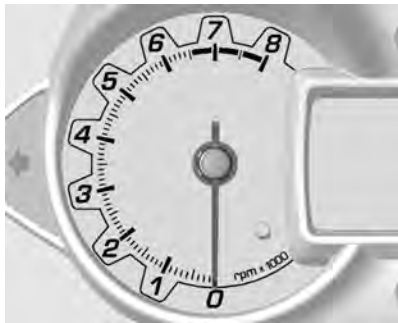

Shows engine speed in thousands of revolutions per minute (RPM).

Drive at a low engine speed/range for each gear, as much as possible.

Warning

Do not allow the needle to remain in the warning/red zone.

Fuel gauge



Shows the level of fuel in the tank (E = empty, F = full).

Movement of the fuel within the fuel tank may cause the fuel gauge indicator to move when braking, accelerating or turning.

Danger

Before refuelling, stop the vehicle and switch the engine off.

Service display

Control indicators

The vehicle may have the following indicators.

Indicators illuminate for a short time when the ignition is turned on to show that the light is working.

Red: danger, important reminder

Yellow: warning, information, fault

Green, blue, white: confirmation of activation

Note

Depending on vehicle variant, the instrument cluster appearance may differ.

Transmission display



Vehicles with automatic transmission. Indicates the selected gear or transmission mode.

Turn signal

- Push the lever in the same direction the steering wheel is turned.
-  flashes.
 also flashes when the hazard warning is activated.
- The turn signal will self cancel from larger turns.
- If  flashes quickly, see Bulb replacement on page 216.
- If the turn signals do not operate check the fuses. See Electrical system on page 222.

See Turn and lane change signals on page 75.

Seat belt reminders

: Driver's seat belt reminder



: Front passenger's seat belt reminder (if occupied)

When the ignition is turned to the ON position:

-  or  illuminates until the seat belt is fastened.

When the engine is running:

-  or  flashes for 100 seconds then illuminates until the seat belt is fastened.

If the vehicle reaches a specific distance or speed and the seat belt is unfastened,  or  will flash and the chime will sound for 100 seconds, or until the seat belt is fastened.

See Three point belt on page 35.

Airbag and belt tensioners light

The  warning light illuminates for a short time when the ignition is turned on to show that the light is working.

If the  warning light does not illuminate, does not extinguish after few seconds or illuminates while driving, there is a problem with the airbag or belt tensioner system.

Warning

Have any fault in the airbag or belt tensioner system repaired immediately by a Holden Dealer.

See Airbag system on page 37.

See Belt tensioners on page 34.

Charging system light

The  warning light illuminates for a short time when the ignition is turned on to show that the light is working.

If the  warning light illuminates while the engine is running, there is a problem with the charging system:

1. Stop and switch off the engine.
2. Contact a Holden Dealer.

Malfunction indicator light

The  warning light illuminates for a short time when the ignition is turned on to show that the light is working.

If the  warning light illuminates while driving, there is a problem with the emission monitoring system. Contact a Holden Dealer.

Service vehicle soon light

The  light illuminates when the vehicle requires a service.

Have the vehicle checked by a Holden Dealer immediately.

See Vehicle messages on page 64.

Brake system warning light

The  warning light illuminates for a short time when the ignition is turned on to show that the light is working.

The  warning light illuminates when the park brake is applied. See Park brake on page 191.

Warning

Do not drive while the brake system warning light is on.

If the  warning light does not extinguish or illuminates while driving and the park brake is released, there is a problem with the brakes:

- Stop the vehicle as soon as it is safe to do so.
- Check the brake fluid level. See Brake fluid on page 214.
- Do not proceed until satisfied that braking is possible or that the cause of the problem has been repaired.

- If necessary contact a Holden Dealer.

Antilock Brake System (ABS) warning light

The  warning light illuminates for a short time when the ignition is turned on to show that the light is working.

If the  warning light illuminates, there is a problem in the ABS.

Note

The vehicle's brake system remains operational but without ABS assistance. See Antilock Brake System (ABS) on page 190.

Contact a Holden Dealer.

Up-shift light

 illuminates to indicate when to shift to the next higher gear for best fuel economy.

See Manual transmission on page 189.

Power steering warning light

The vehicle may have electric power steering.

The  warning light illuminates for a short time when the ignition is turned on to show that the light is working.

If the  warning light does not extinguish after a few seconds, or if it illuminates while driving, there is a fault in the power steering.

Contact a Holden Dealer.

Park assist warning light

The vehicle may have park assist.

If  illuminates for a short time when the ignition is turned on to show that the light is working.

If the light does not extinguish or if  illuminates when reverse gear is selected:

- The sensors may be dirty
- The sensors may be covered by ice or snow
- There may be ultrasonic wave interference

If the light does not extinguish, contact a Holden Dealer. See Park Assist (PA) on page 195.

Electronic Stability Control (ESC) light

The  indicator light illuminates for a short time when the ignition is turned on to show that the light is working.

If the light flashes while driving, the ESC is actively helping the vehicle with road grip and stability.

If the light illuminates or does not extinguish while driving, contact a Holden Dealer immediately.

Electronic Stability Control (ESC) off light

The  indicator light illuminates for a short time when the ignition is turned on to show that the light is working.

 illuminates when the ESC is deactivated.

For more information, see Electronic Stability Control (ESC) on page 192.

Traction Control System (TCS) off light

The  indicator light illuminates for a short time when the ignition is turned on to show that the light is working.

 illuminates when the TC is deactivated.

Engine temperature warning light

The  warning light illuminates for a short time when the ignition is turned on to show that the light is working.

If the light illuminates while driving, the engine coolant temperature is excessively hot:

- Stop the vehicle as soon as it is safe to do so.
- Let the engine idle for a few minutes.
- If the light remains on, contact a Holden Dealer.

Warning

Do not continue driving with the temperature gauge needle in the red area. The engine is too hot. Continued operation of an overheated engine will result in severe engine damage.

Engine oil pressure light

The  warning light illuminates for a short time when the ignition is turned on to show that the light is working.

If the  warning light illuminates while the engine is running, the engine oil pressure or level is low:

- Stop the vehicle as soon as it is safe to do so.
- Turn the ignition off and remove the key.
- Check the engine oil level. See Engine oil on page 209.
- If necessary, contact a Holden Dealer.

Caution

Engine damage may result if you keep driving. Do not run the engine. If the oil level is normal, have the system checked by the nearest Holden Dealer.

Low fuel warning light

The  indicator light illuminates and a chime sounds when the fuel level is low:

Caution

To avoid damage to the catalytic converter, fill the fuel tank above the low fuel level.

See Catalytic converter on page 183.

Immobiliser light

The  indicator light illuminates when there is a fault in the immobiliser system.

The engine cannot be started. Contact a Holden Dealer.

High beam light

The  indicator light illuminates when headlamp high beam is on.
See Headlamp high/low beam on page 74.

Fog lamp light

The vehicle may have front fog lamps.
 illuminates when the front fog lamps are on.
See Front fog lamps on page 75.

Tail lamp light

The  indicator light illuminates when the tail lamps are on.
See Exterior lamp control on page 73.

Cruise control light

The  indicator light illuminates white when the system is on and green when cruise control is activated.
See Cruise control on page 193.


Door ajar light

The  warning light illuminates when any of the doors or the tailgate/boot are not completely closed.

Information displays

Infotainment display

Type 1

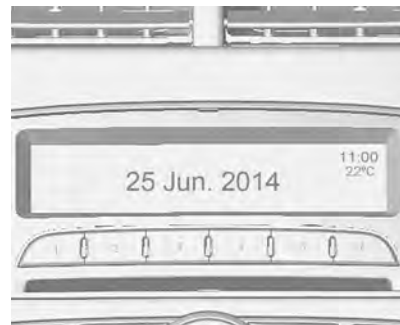

The vehicle may have a Type 1 system.

Type 2



The vehicle may have a Type 2 system. See page 82.

Displays the date, time, outside temperature and infotainment system information.

When the infotainment system is on, personalised settings are displayed.

See Personalisation on page 110 and page 154.


Vehicle messages

Messages are displayed on the instrument cluster or audible as a warning chime.

Not all messages are displayed on all vehicles.

Settings can be changed in the personalisation menu. See Vehicle personalisation on page 69.

Warning codes

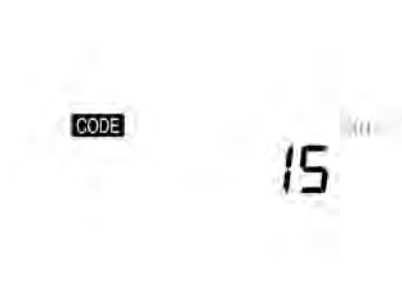

Some vehicle messages are displayed with code numbers.

Caution
Whenever a coded vehicle message is displayed, contact a Holden Dealer.

No. Vehicle message

- 15 High mounted brake lamp failure
- 16 Service brake lamps
- 18 Left low beam failure
- 20 Right low beam failure
- 21 Left front lamp failure
- 22 Right front lamp failure
- 23 Reversing lamp failure
- 24 Licence plate lamp failure
- 25 Left front turn indicator failure
- 26 Left rear turn indicator failure
- 27 Right front turn indicator failure
- 28 Right rear turn indicator failure
- 82 Change engine oil soon
- 84 Engine power is reduced
- 89 Service vehicle soon

Warning chimes

Warning chimes may be heard when starting the engine or while driving:

- If a seat belt is not fastened.
- If a certain speed is exceeded while the park brake is applied.
- If a warning code appears on the instrument cluster.

Warning chimes may be heard when the vehicle is parked and/or a door is opened:

- When the key is in the ignition switch/lock.
- When the exterior lamps are on.

Driver Information Centre (DIC)

The Driver Information Centre (DIC) is located in the instrument cluster.

The display may differ from that shown.




To select the settings menu, press **MENU**.

You can select from the following:

- Engine oil life
- Language setting

Rotate the adjuster wheel  to select.

Engine oil life

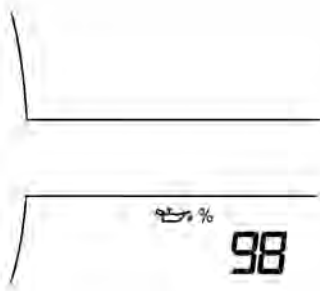

Displays an estimate of the oil's remaining useful life.


If the number 98 is displayed, it means 98% of the current oil life remains.

When the remaining oil life is low, the vehicle message Code 82 (change engine oil soon) will display in the Driver Information Centre (DIC). The engine oil should be changed as soon as possible within the next 1,000 km.

After an engine oil change, the engine oil life system will be reset by your Holden Dealer.

See Engine oil life system on page 248.

Language setting

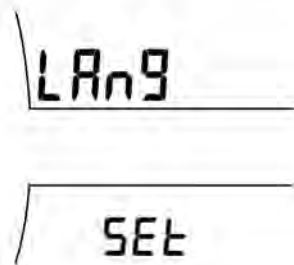

To change the language displayed:

1. Press and hold **SET/CLR**.
2. Rotate the adjuster wheel  to select one of the settings.
3. Press and hold **SET/CLR** to confirm.

Note The language display changes between setting 1 and setting 2.

Trip computer



The vehicle may have a trip computer located in the instrument cluster.

The display shows:

- Average speed
- Driving distance for remaining fuel
- Average fuel consumption
- Driving time



To select the trip computer menu, press **MENU**.

Rotate the adjuster wheel  to select the trip computer mode.

- Each time the adjuster wheel  is rotated, the mode changes in the following order:
Average speed → Driving distance for remaining fuel → Average fuel consumption → Driving time → Average speed
- Some modes can be reset by pressing and holding **SET/CLR**.

Average speed



- Average speed is calculated from the last time the computer was reset.
- To reset, press and hold **SET/CLR**.

Driving distance for remaining fuel



- Estimates driving distance to an empty fuel tank from the current fuel level.

 
The driving distance for remaining fuel may differ depending on:

- Driving conditions
- Driving pattern
- Vehicle speed

Note

Ensure the vehicle is refuelled while on level ground.

Average fuel consumption



- Average fuel consumption is calculated from the time the ignition is turned on.
- To reset, press and hold **SET/CLR**.

Driving time



- Indicates total driving time.
- Driving time is calculated from the last time the computer was reset.
- To reset, press and hold **SET/CLR** until a beep is heard.
- To start/stop, press **SET/CLR**.

Vehicle personalisation

Type 1



The vehicle may have a Type 1 system.

Type 2



The vehicle may have a Type 2 system. See page 82.

The settings can be personalised using the infotainment system controls.

Note

Depending on the vehicle variant, some of the following functions may not be available.

Settings (Type 1)



When the infotainment system is on:

- Press **CONFIG**.
Setting menu is displayed.
- To change the settings, rotate **MENU•TUNE**.
- To make a selection, press **MENU•TUNE**.
- To return to the previous screen, press **↶BACK**.

The following menus can be displayed:

- Languages
- Time date
- Radio settings
- Bluetooth® settings
- Vehicle settings

Languages settings

Only English may be selected.

Time and date settings

See Personalisation on page 110.

Radio settings

See Radio settings on page 112.

Bluetooth® settings

See Bluetooth® settings on page 112.

Vehicle settings

- **Comfort settings**

Chime volume: Change the volume of the warning chime.

Rear auto wipe in reverse:
Activate or deactivate the rear wiper while in reverse gear.

- **Exterior ambient lighting**

Exterior lighting by unlocking:
Activate or deactivate the entry lighting.

Duration upon exit of vehicle:
Activate or deactivate the exit lighting and change the lighting duration.

- **Power door locks**

Auto door unlock: Activate or deactivate the auto door unlocking function after switching off the ignition.

Unlock only the driver's door or all doors.

Auto door lock: Activate or deactivate the auto door locking function, to occur after driving off.

Stop door lock if door open:
Activate or deactivate the driver's door lock when the door is open.
If deactivated is selected:

Delayed door lock: Activate or deactivate the delayed door lock.

When pressing the central locking button on the instrument panel, three chimes are heard to signal delayed locking is in use. This function will delay the locking of the doors until 5 seconds after the last door is closed.

- **Remote locking, unlocking, starting**

Remote unlock feedback:

Activate or deactivate the light feedback while unlocking.

Remote lock feedback: Activate or deactivate the lights and/or horn feedback while locking.

Remote door unlock: Change the configuration to unlock only the driver's door or all doors while unlocking.

Auto relock doors: Activate or deactivate door locking, when a door is unopened after unlocking.

Restore factory settings

All settings are restored to initial settings.

Settings (Type 2)

When the infotainment system is on:

- Press .
- To change the settings, touch **settings**.

The settings menu is displayed.



- To scroll through the list, touch  or .
- To make a selection, touch a setting.
- To return to the previous screen, touch .

The following menus can be displayed:

- Time and date settings
- Radio settings
- Connection settings
- Vehicle settings
- Language settings

Time and date settings

See Time and date settings on page 155.

Radio settings

See Radio settings on page 155.

Connection settings

See Connection settings on page 156.

Vehicle settings

- **Comfort and convenience**
Chime volume: Change the volume of the warning chime.
Auto wipe in reverse gear: Activate or deactivate the rear wiper while in reverse gear.
- **Collision/detection**
Park Assist: Turn Park Assist on or off.
- **Lighting**
Exit lighting: Activate or deactivate the exit lighting and change the lighting duration.
Vehicle locator lights: Turns headlamps and park lamps on when unlock is pressed.
- **Power door locks**
Auto door lock: Activate or deactivate the auto door locking function, to occur after shifting out of P (park).

- **Lock, unlock settings**
Remote unlock light feedback: Activate or deactivate the light feedback while unlocking.
Remote lock light & horn feedback: Activate or deactivate the lights and/or horn feedback while locking.
Remote door unlock: Change the configuration to unlock only the driver's door or all doors while unlocking.
Remotely relock unlocked doors: Activate or deactivate door locking, when a door is unopened after unlocking.
- **Rear camera option**
Symbols: Select to display object warning symbols.
Guidelines: Select to display guidelines to assist when reversing.

- **Vehicle factory settings**

All settings are restored to initial settings.

Language


Only English is available.

Lighting

Exterior lighting.....	73
Interior lighting.....	76
Lighting features.....	77

Exterior lighting

Exterior lamp control

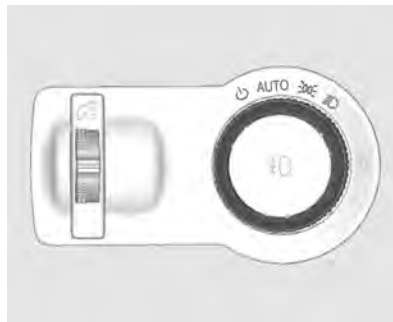


ⓘ (OFF): Rotate to turn all lamps and lights off.

AUTO: Exterior lamps and instrument panel lights turn on or off automatically, depending on the ambient light.

⌚ (Park lamps): Turns on the park lamps, number plate lamps and instrument panel lights.

⌚ (Headlamps): Turns on the headlamps and all park lamps.


Automatic light control

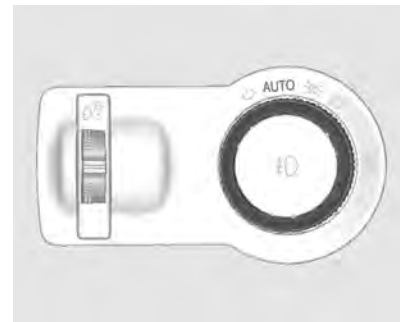

When the lamp control is in the AUTO position, the exterior lamps and instrument panel lights automatically switch on according to ambient light.

- To turn automatic lighting off, rotate to ⓘ.

Headlamp high/low beam

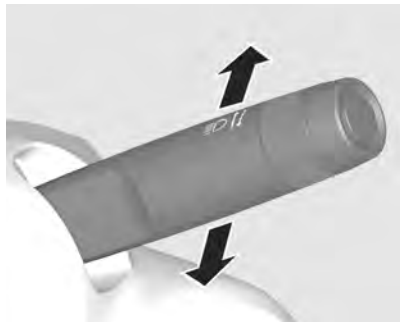

To activate high beam:

1. Turn the headlamps on.
2. Push the lever forwards.

The high beam indicator lamp  illuminates on the instrument cluster.

To return to low beam:

1. Pull the lever rearwards.

Warning

Always switch the headlamps to low beam when vehicles are approaching or when following another vehicle.

To flash the high beam lamps:

1. Pull the lever towards the rear of the vehicle and release.

The lamps stay on for as long as the lever is held.

Hazard warning flashers



Press  to turn the hazard warning flasher on or off, when the ignition is in any position.


All turn signals flash continuously.

Use the hazard warning flasher if the vehicle becomes a traffic hazard, day or night.

Note

Using hazard warning flashers while the vehicle is moving, is illegal in some States and Countries.

Turn and lane change signals

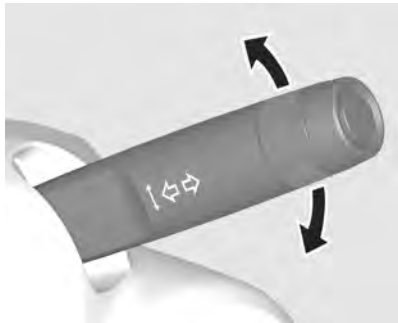

1. Push the lever in the direction the steering wheel is turned.
A green arrow on the instrument cluster flashes when the lamps are in operation.

For three flashes, e.g. when changing lanes:

1. Push the lever until the point of resistance, then release.

Front fog lamps

The vehicle may have front fog lamps.



To turn the front fog lamps on:

- Press the symbol. The symbol illuminates on the instrument cluster.

To turn the front fog lamps off:

- Press the symbol again.

Reversing lamps

The reversing lamps illuminate when the ignition is on and reverse gear is engaged.


Misted lamp covers

Caution

Condensation may temporarily appear on the inside of exterior lamp lenses after rain or washing the vehicle. Condensation occurs when there is a temperature difference between the inside and outside of the lamp allowing a fine mist on the inside surface of the lamp lens. This condensation will disappear when the vehicle is in a dry environment or the lamp is on. If water does collect in the lamp contact a Holden Dealer.

Interior lighting

Instrument panel illumination

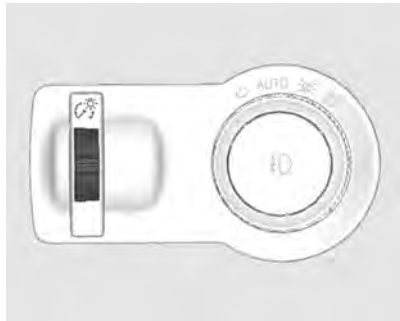

To adjust the instrument panel lighting, rotate ☀ until the desired level is reached.

Interior lamps

Courtesy lamp



Press the rocker switch:

○ (Off): Remains off when doors are opened or closed.

☺: Automatically switches on when a door is opened and turns off after doors are closed.

⌋ (On): Remains on when doors are opened or closed.

Note

To prevent the battery from discharging, turn the lamp off when the engine is not running.

Warning

Do not leave the courtesy lamp on while driving in the dark.

Lighting features

Exit lighting

Set the headlamps, side lamps and tail lamps to illuminate the way, after leaving the vehicle.

Activation, deactivation and duration of lighting can be changed in the vehicle settings. See Vehicle personalisation on page 69.

The headlamps must be in Auto mode.

1. Switch the ignition off.
2. Remove the ignition key.

If activated, the lighting remains on for the set duration.

Infotainment system

Introduction..... 78

Type 1:

Operation..... 84

Radio 88

CD player..... 94

Auxiliary devices..... 101

USB port..... 103

Bluetooth® music 108

Personalisation 110

Bluetooth® phone..... 112

Type 2:

Operation..... 127

Radio 131

Audio players..... 136

Bluetooth® music 152

Personalisation 154

Bluetooth® phone..... 159

Smartphone link..... 168

Introduction

General information

Do the following before driving:

- Read the infotainment system section to become familiar with the functions.
- Set up the audio by presetting favourite stations, setting the tone and adjusting the speaker settings.

About the system

Warning

When driving the vehicle, keep the volume of the unit set low enough to hear sounds from outside the vehicle (e.g. road and traffic conditions).

Caution

Do not place beverages close to the audio system.

Do not strike or allow anything to impact the audio system.

Damage to the system mechanisms could occur.

Theft-deterrent feature

The infotainment system is equipped with an electronic security system for the purpose of deterring thefts.

As such, it will only operate in the vehicle in which it was first installed.

Overview

The vehicle may have one of the following infotainment systems:

- Type 1

See Display (Type 1) on page 80 and Operation (Type 1) on page 84.

- Type 2


See Display (Type 2) on page 82 and Operation (Type 2) on page 127.

Become familiar with the hard keys on the faceplate and touch-sensitive screen buttons.


- Press, refers to hardkeys.
- Touch, refers to screen buttons.

Screen display (Type 1)


[Start-up Screen]

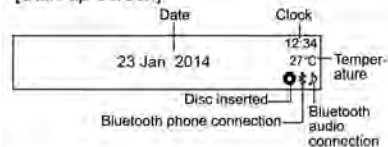

[Radio Screen]

 

[Setup Menu Screen]

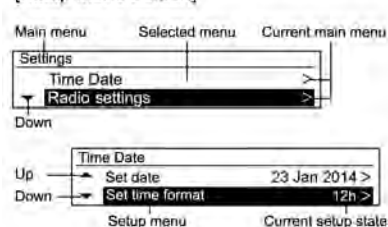

The screen display may vary depending on the vehicle specification.

Display (Type 1)



The following are the main buttons and controls for the radio, CD/MP3, AUX, USB, iPod® and Bluetooth®.

1. Information display
2. Power/volume/mute button with control
3. Preset buttons 1 to 6 (radio/CD/USB)
4. CD eject button
5. CD slot
6. Favourite selection button (radio)
7. Information display button (CD/MP3/USB/iPod®) (radio where supported)
8. Seek buttons (radio/CD/MP3/USB/iPod®/Bluetooth® music)
9. CD/AUX button (CD/AUX/MP3/USB/iPod®/Bluetooth® music)
10. Band selection button (radio/iPod®)
11. Clock button

- 12. Configuration button
- 13. Tone button
- 14. Menu-tune button with control
- 15. Auxiliary port
- 16. Back button
- 17. Phone/mute button

Steering wheel remote controls (Type 1)



- 1. Mute/hang up button:
Mute: Press when the power is on.
Bluetooth®: Press to reject calls.
- 2. Call button:
Press to answer the call or enter the redial selection mode.
Press and hold to enter the dialled call log or to move back and forth from hands-free mode and private call mode during a call.

- 3. Source button/control:
Press to select another audio source.
Rotate to change the radio station or change the track being played.
- 4. Volume buttons:
Press + to increase the volume.
Press – to decrease the volume.

Display (Type 2)



18. Information display

19. Volume buttons

20. Power button

21. Home button

Steering wheel remote controls (Type 2)



1. Mute/hang up button:

Mute: Press when the power is on.

Bluetooth®: Press to reject or end calls or to end the mobile phone's speech recognition mode.

2. Call button

Press to answer the call or enter the redial selection mode.

If the mobile phone supports speech recognition, press and hold the button.

Note

If a Bluetooth® device has not been paired to the infotainment system, Bluetooth® device connection is initiated.

3. Source button/control:

Press to select another audio source.

Rotate to play the previous or next preset radio station, file or song.

Rotate and hold to fast rewind or fast forward. Release to return to normal playback.

 
4. Volume buttons:

Press + to increase the volume.

Press – to decrease the volume.

Operation (Type 1)

Power on/off




- To turn the audio system on, press **⏻ • VOL (2)**.
The previous mode will be displayed (Bluetooth® audio may not display).
- To turn the audio system off, press **⏻ • VOL (2)**.

Note

While the ignition is off, if the audio system is turned on by pressing **⏻ • VOL (2)**, it will automatically turn off after 10 minutes, from the last operation.

 Volume control



- To adjust the volume, rotate **⏻ • VOL (2)**.
Alternatively, press + or – on the steering wheel remote controls.
- The sound volume is indicated on the display.
- When turning the audio system on, the volume level will be set to its previous selection (when it is less than the maximum starting volume). Refer to Radio settings on page 112.

Auto volume control

The audio system volume adjusts depending on the vehicle's speed.

As the vehicle's speed increases, the volume of the audio system also increases to compensate for the driving noise. See Radio settings on page 112.

Volume limit by high temperature

If the inside temperature of the audio system is very high, the maximum volume will be limited.


If necessary, the volume may automatically decrease.

Tone settings


Select and adjust the sound setup mode. Settings can be set up differently for each function (radio, CD, USB or iPod®).

Tone setup menu

- Bass: Adjust the bass level from -12 to +12.
- Midrange: Adjust the midrange level from -12 to +12.
- Treble: Adjust the treble level from -12 to +12.
- Balance: Adjust the left/right speaker balance from left 15 to right 15.
- EQ (Equaliser): Select or turn off the sound style (OFF ↔ Pop ↔ Rock ↔ Classical ↔ Talk ↔ Country).

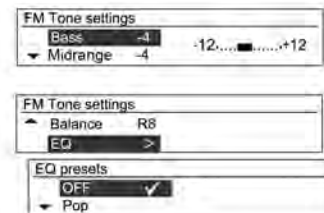

1. Press **TONE** (13).
2. Rotate **MENU•TUNE** (14) to make a selection.
3. Press **MENU•TUNE** (14) to confirm.

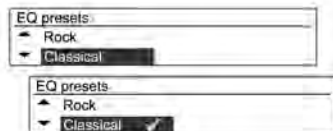

To select the tone control value:

4. Rotate **MENU•TUNE** (14) .
5. Press **MENU•TUNE** (14) to confirm.

Select function


FM/AM radio



To select between FM and AM stations:

1. Press **RADIO BAND** (10) .
 2. Press **MENU•TUNE** (14).
- The FM/AM menu is displayed.

CD/MP3/USB/iPod®/Bluetooth® audio or (AUX) input

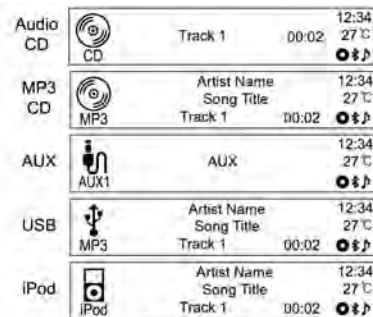


1. Repeatedly press **CD/AUX** (9) to select another audio source.

The mode changes in the following order:

CD/MP3 → AUX → USB or iPod, Bluetooth audio → CD/MP3 →....


Alternatively, press **SRC** on the steering wheel remote controls to select a different mode.

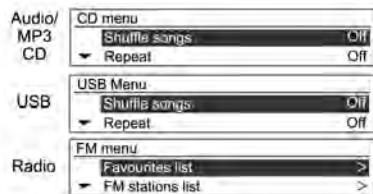

2. Press **MENU•TUNE** (14).

The menu options for the current device are displayed (except Bluetooth® audio).

 Bluetooth® hands-free phone device



To select Bluetooth® phone mode:

1. Press (17).



To display Bluetooth® options for the relevant function:

2. Press (17)

Radio (Type 1)

AM-FM radio

Main buttons and controls:

Preset buttons

- Press and hold any preset button **1 to 6** (3) to add the current radio station to the favourites page.
- Press a button to select the radio station linked to the preset.

Favourite button

- Press **FAV1-2-3** (6) to move through the pages of saved favourite radio stations.

Information button

- Press **INFO** (7) to view radio station information (where supported).

Seek buttons

- Press **I◀SEEK▶I** (8) to automatically search for available radio stations.

- Press and hold the button to continue seeking radio stations. Release the button to stop seeking.

Radio band button

- Press **RADIO BAND** (10) to toggle between FM or AM radio.

Menu-tune button with control

- Press **MENU•TUNE** (14) to access the menu screen when in another mode.
- Rotate to manually search for a radio frequency.

Back button

- Press **↶BACK** (16) to cancel input content or return to the previous menu.

Mute button

- Press and hold **🔇/🔊** (17) to turn the mute function on or off.

See Overview on page 79.

Listening to a radio station


Searching for radio stations



- To toggle between FM and AM, press **RADIO BAND** (10) repeatedly.


The previously chosen broadcasting station will be received.

Automatic station search

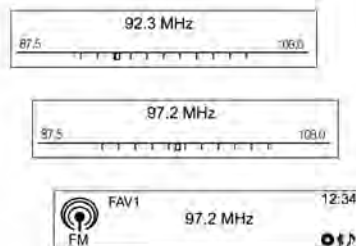

- To automatically search for available radio stations with clear reception, press I<SEEK>I (8).


Seeking

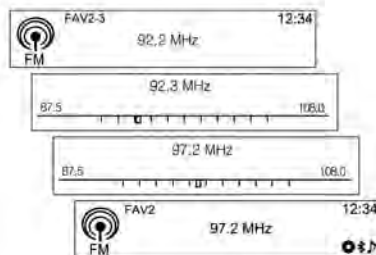

To quickly search for a radio station:


1. Press and hold I<SEEK>I (8).
2. Release the button when the radio station is reached.

Searching for a radio station manually

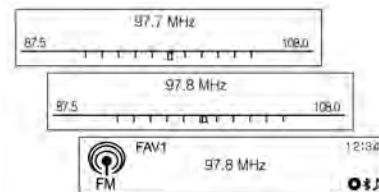

- To manually search for a radio station, rotate **MENU•TUNE** (14).

Using the preset buttons

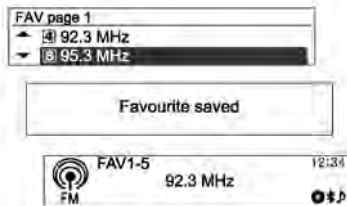


- To select a saved favourite page, press **FAV1-2-3** (6).
- To select the radio station to be added to a favourites page, press and hold a preset **1** to **6** (3).

Up to six favourite pages can be saved and each page can store up to six radio stations.


- The number of favourite pages may be setup in Radio favourites. See Radio settings on page 112.
- If a new radio station is to be added to a preset (**1-6**) (3) which has an existing radio station linked to it, the previous radio station will be deleted and replaced with the new radio station.
- When adding an FM station, wait 5 seconds after the frequency is selected to allow RDS information (if available) to display, before storing to a preset.

Listening using a preset

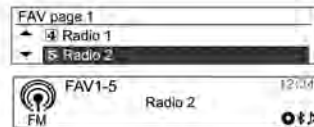

- To select a favourite preset page, press **FAV1-2-3** (6) repeatedly. Information for the selected favourite preset page will be displayed.
- To listen to the radio station saved to the preset, press a preset (**1-6**) (3).

Using the radio menu

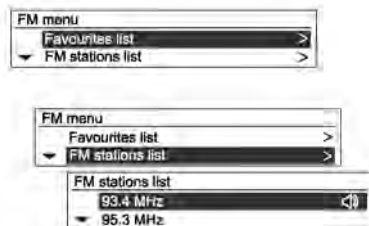

To display the radio menu:

1. Press **MENU•TUNE** (14).

To scroll through the menu:

2. Rotate **MENU•TUNE** (14).

To make a selection or to display the menu:

3. Press **MENU•TUNE** (14).

Choosing the favourites list



When in the FM/AM menu:

1. Rotate **MENU•TUNE** (14) to scroll to the Favourites list.
2. Press **MENU•TUNE** (14).
The Favourites list information will be displayed.
3. Rotate **MENU•TUNE** (14) to scroll through the Favourites list.
4. Press **MENU•TUNE** (14) to select and listen to that radio station.


Choosing FM/AM station list



When in the FM/AM menu:

1. Rotate **MENU•TUNE** (14) to scroll to the FM/AM stations list.
2. Press **MENU•TUNE** (14).
The stations list information is displayed.
3. Rotate **MENU•TUNE** (14) to scroll through the radio stations.
4. Press **MENU•TUNE** (14) to select and listen to that radio station.

Choosing FM category list

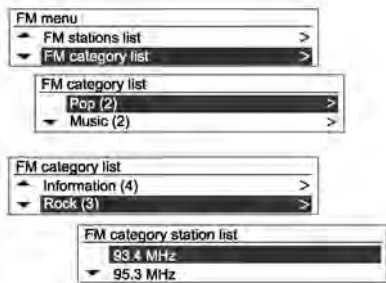


When in the FM menu:

1. Rotate **MENU•TUNE** (14) to scroll to the FM category list.
2. Press **MENU•TUNE** (14).
The FM category list will be displayed.
3. Rotate **MENU•TUNE** (14) to scroll through the list.
4. Press **MENU•TUNE** (14).
The FM category station list will be displayed.

5. Rotate **MENU•TUNE** (14) to scroll to a radio station.
6. Press **MENU•TUNE** (14) to select and listen to that radio station.

Choosing update FM/AM stations list

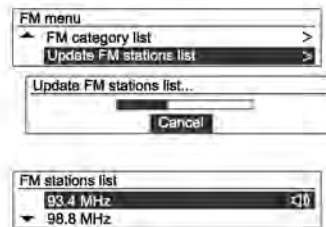

When in the FM/AM menu:

1. Rotate **MENU•TUNE** (14) to scroll to the Update FM/AM stations list.
2. Press **MENU•TUNE** (14).
The FM/AM stations list updates.
During the update, press **MENU•TUNE** (14) or **⇐BACK** (16) to stop saving changes and to Cancel.


Radio Data System (RDS)

RDS encodes information on the system's FM frequency only.



- When tuned to an RDS station, the station name is displayed.
- Many radio stations transmit RDS information but not all, so it is possible that this feature does not operate in some regions or on some stations.
- While listening to an RDS radio station, press **INFO** (7) to view RDS broadcasting information.

Fixed mast antenna

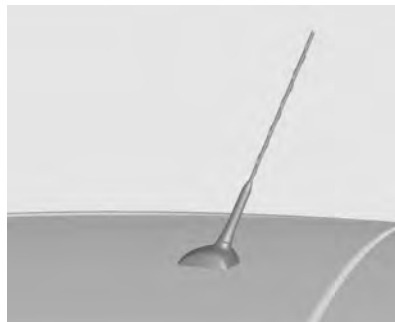

- To remove the roof antenna, rotate it anticlockwise.
- To install the roof antenna, rotate it clockwise.

Tighten and adjust to the upright position to ensure proper reception.

Caution

Remove the antenna before entering an area with a low ceiling or an automatic car wash. Damage may occur to the antenna or the roof panel.

CD player (Type 1)

General information

Caution

Do not insert DVDs or mini discs.

Use only CDs in good condition without any labels or stickers. Load one CD only and keep the CD player and the loading slot free of foreign materials, liquids and debris.

If a label is added to a CD, or more than one CD is inserted into the slot at a time or an attempt is made to play scratched or damaged CDs, the CD player could be damaged.

If a description label is required, write on the top of the CD with a CD marking pen.

Caution

Avoid inserting any foreign objects into the slot of the player. Failure to observe this may cause malfunction.

CD-R format

Sound quality may be reduced due to:

- Method of recording
- Recording quality
- CD handling

Handling CDs

- Avoid leaving fingerprints on the CD when removing it.
- Store any CDs in their protective covers.
- Ensure that CDs are clean and dry before inserting.
- Protect CDs from heat and direct sunlight.
- Insert the disc with the printed side facing up.

Audio system care

Do not clean using cleaning fluid, alcohol or other solvents. Use only a damp cloth.

CD/MP3

Main buttons and controls.

Eject button

1. Press $\triangle$ (4) to eject a disc.

Information button

1. Press **INFO** (7) to view file information for the track being played.

Seek buttons

1. Press **I<SEEK>I** (8) to play the previous or next track.
2. Press and hold to fast rewind/ fast forward through the currently playing tracks.

CD/AUX buttons

1. Press **CD/AUX** (9) to select a CD/MP3 player.

Menu-tune button with control


1. Press **MENU•TUNE** (14) to display the current selection or current mode.
2. Rotate to scroll through the track list, menu or MP3 (WMA) track information.

Mute button


- Press and hold M (17) to turn the mute function on or off.

See Overview on page 79.

Inserting a disc

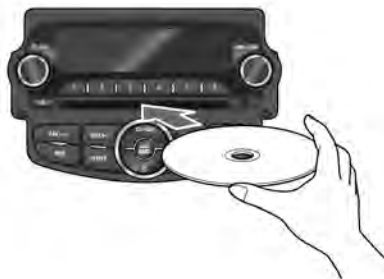


1. Insert the disc with the printed surface facing upwards.

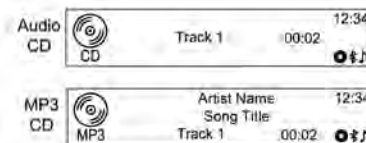

2. Track 1 will play automatically.

Note

A non-readable disc will automatically be ejected and a disc error message will be displayed. The audio system will switch to the previously used mode or FM radio.

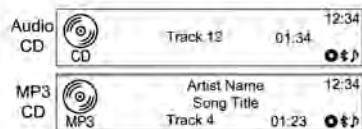

To play a CD when in a different mode:

1. Repeatedly press **CD/AUX** (9).

Note

If there is no disc inserted and no other devices are connected, **No CD inserted** will be displayed.

Ejecting a disc




1. Press $\triangle$ (4).
2. Remove the disc.

The previously used mode or FM radio plays.

Note

The disc will automatically reinsert if it is not removed.

Change a playing track

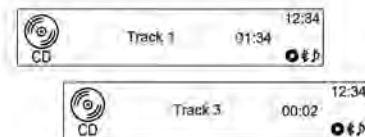

To play the previous or next track:

1. Press $\leftarrow$ SEEK $\rightarrow$ (8) during play.

Alternatively, rotate **SRC** on the steering wheel remote controls.



Alternatively for MP3 CDs:

 
 
1. Rotate **MENU•TUNE** (14) to scroll to the track list.
2. Press **MENU•TUNE** (14) to select and play a track.

Change playing position



1. Press and hold **I<SEEK>I** (8) during play to rewind or fast-forward through a track.
2. Release the button to resume playing at normal speed.
The elapsed time is displayed.

View information



To view information on the current audio CD track:

1. Press **INFO** (7).

If no information is available, **No information** will be displayed.



To view more information on the current MP3 (WMA) track:

1. Rotate **MENU•TUNE** (14) while the track information is displayed.

Note

The information displayed includes the file name, folder name and ID3 Tag information saved with the track.

If incorrect ID3 Tag information (e.g. artist, song title) was added to the MP3 (WMA) file before burning to disc, this information will be displayed.

Incorrect ID3 Tag information cannot be modified or corrected on the audio system.

Information for tracks shown in symbols or in unavailable languages may be displayed as ---- or are not displayed at all.

Using the CD menu

Shuffle and repeat




During play:

1. Press **MENU•TUNE** (14) to display the CD menu.



2. Rotate **MENU•TUNE** (14) to select shuffle or repeat.
3. Press **MENU•TUNE** (14) to turn on or off.


Track list

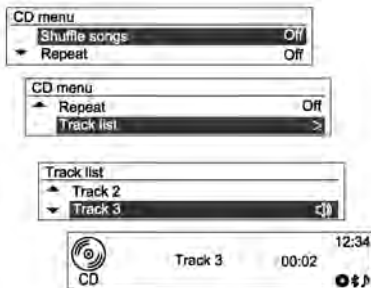

Audio CDs during play:

1. Press **MENU•TUNE** (14) to display the CD menu.
2. Rotate **MENU•TUNE** (14) to scroll to Track list.
3. Press **MENU•TUNE** (14) to select Track list.
4. Rotate **MENU•TUNE** (14) to select a track.
5. Press **MENU•TUNE** (14) to play the selected track.

Search folders

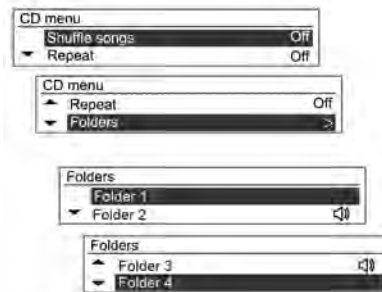


MP3 (WMA) CDs during play:

1. Press **MENU•TUNE** (14) to display the CD menu.
2. Rotate **MENU•TUNE** (14) to scroll to folders.
3. Press **MENU•TUNE** (14) to select folders.
4. Rotate **MENU•TUNE** (14) to scroll through the folders.
5. Press **MENU•TUNE** (14) to select the folder.



6. Rotate **MENU•TUNE** (14) to select a track.
7. Press **MENU•TUNE** (14) to play the selected track.

Search CD

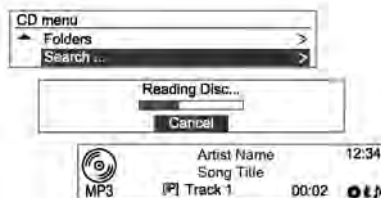

MP3 (WMA) CDs during play:

1. Press **MENU•TUNE** (14) to display the CD menu.
2. Rotate **MENU•TUNE** (14) to scroll to Search.
3. Press **MENU•TUNE** (14).

The first song of the playlist [iP] will be displayed.

If there are no music files in the playlist [iP], the first song for each artist [iA] will be displayed.

Note

It may take a while to read the disc depending on the number of music files.




4. Press **MENU•TUNE** (14) when the search items are displayed.
5. Rotate **MENU•TUNE** (14) to scroll.

The number of songs will be displayed by:

Playlist [iP], Artists [iA], Albums [iL], Songs [iS] or Genre [iG].

6. Press **MENU•TUNE** (14) to select.

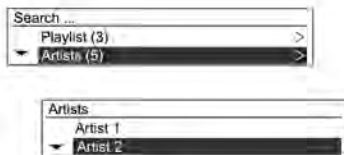

7. Rotate **MENU•TUNE** (14) to scroll.
8. Press **MENU•TUNE** (14) to make a selection.



9. Rotate **MENU•TUNE** (14) to find a track.
10. Press **MENU•TUNE** (14) to play the selected track.

Auxiliary devices (Type 1)

AUX input

Main buttons and controls:

CD/AUX buttons

1. Press **CD/AUX** (9) repeatedly when an AUX device is connected to select AUX input mode.

Power/volume/mute button

- Rotate **⏻ • VOL** (2) to adjust the volume.

Mute button

- Press and hold **🔇/🔊** (17) to turn the mute function on or off.

See Overview on page 79.

Connecting an audio device

Connect the audio output of the audio device to the AUX input terminal.



The audio system will automatically switch to AUX mode when the device is connected.



- If the AUX device is already connected, press **CD/AUX** (9) to select.

USB player

Cautions when using USB devices

- Operation cannot be guaranteed if a HDD USB mass storage device, or a CF or SD memory card is connected by using a USB adaptor. Use a USB flash memory type storage device.
- Avoid static electricity when connecting or disconnecting the USB. Avoid connecting and disconnection over a short time.
- To remove the USB device, see Removing the USB on page 105 by rotating **MENU•TUNE** (14).
- Avoid touching the USB connecting terminal with any objects or fingers.
- The USB storage device can only be recognised when it is formatted in FAT16/32 file format.
- This product displays MP3 (WMA) files with the mp3, .wma or .MP3 or .WMA file name extensions.

- Depending on the type and capacity of the USB storage device and the type of stored files, the time it takes to recognise the files may differ.
- Do not disconnect the USB storage device while it is being played.
This may damage the product or affect the performance of the USB device.
- Disconnect the USB storage device when the vehicle is turned off. If the ignition is turned on while the USB storage device is connected, the device may become damaged or may not operate normally in some cases.
- Damaged music files may be cut-off during playback or may not be played at all.
- A maximum of 64 characters can be recognised for folder or file names.

Caution

USB storage devices can only be connected to this product for the purpose of playing music files.

The USB port should not be used to charge USB accessory equipment since the heat generation using the USB terminal may cause performance issues or damage to the product.

- Music files to which DRM (Digital Right Management) is applied cannot be played.
- This product can support USB storage devices that are up to 16 Gigabytes in capacity with a limit of 999 files, 512 folders and 10 stages of folder structure. Normal usage cannot be guaranteed for storage devices that exceed this limit.

USB port (Type 1)

General information

A USB stick or iPod® can be connected to the USB/iPod® port.

Warning

Do not connect devices such as; hard discs, multi-plug USB hubs or other digital equipment to the USB/iPod® port.

Connecting other devices can cause malfunction or destroy the audio equipment.

Do not use any equipment that prevents safe driving.

Caution

In rare cases, a USB stick (thumb drive) may not be recognised by the system or may cause a malfunction.

USB

Main buttons and controls:

Information button

1. Press **INFO** (7) to view file information for the track being played.

Seek buttons

1. Press **◀SEEK▶** (8) to play the previous or next track.
2. Press and hold to fast rewind/ fast forward through the currently playing tracks.

CD/AUX buttons

1. Press **CD/AUX** (9) repeatedly when a USB device is connected to select USB play mode.

Menu-tune button with control

1. Press **MENU•TUNE** (14) to display the current selection or current mode.
2. Rotate to scroll through the track list, menu or MP3 (WMA) track information.

Back button


1. Press **↵BACK** (16) to cancel input content or return to the previous menu.

See Overview on page 79.

Connecting a USB device



1. Open the cover located above the glove box.
2. Connect the USB to the USB port.

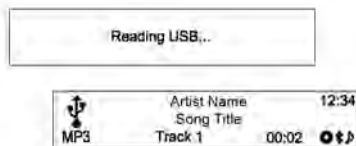

Note

- Once reading of the USB is complete, it will play automatically.
- If a non-readable USB is connected, an error message will be displayed and the previously used mode or FM radio will play.
- If the USB to be played is already connected, repeatedly press **CD/AUX** (9) to select USB. Play will begin from where it previously finished.

Using the USB menu

The USB menu operation is similar to the CD menu operation.

To shuffle and repeat tracks, select tracks, search folders and search the device using the USB menu, see Using the CD menu on page 98.

Disconnecting a USB device

1. Press the **RADIO BAND** (10) or **CD/AUX** (9) to select another mode.

Removing the USB



You can safely disconnect the device

1. Press **MENU•TUNE** (14) to display the USB menu.
2. Rotate **MENU•TUNE** (14) to scroll to Remove USB.
3. Press **MENU•TUNE** (14).

You can safely disconnect the device is displayed.

4. Remove the USB device.

The audio system will switch to the previously used mode or FM radio.

iPod®

Information button

1. Press **INFO** (7) to view file information for the track being played.

Seek buttons

1. Press **|◀SEEK▶|** (8) to play the previous or next track.
2. Press and hold to fast rewind/ fast forward through the currently playing tracks.

CD/AUX buttons

1. Press **CD/AUX** (9) repeatedly when an iPod® is connected to select iPod® play mode.

Menu-tune button with control

1. Press **MENU•TUNE** (14) to display the current selection or current mode.
2. Rotate to scroll to the track list currently playing.

Back button

1. Press **↵BACK** (16) to cancel input content or return to the previous menu.

See Overview on page 79.


Connecting an iPod® device



1. Open the cover located above the glove box.
2. Connect the iPod® to the USB port.

Note

Only connect the iPod® with connection cables that are supported by iPod® products. Other connection cables should not be used.

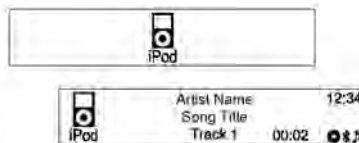

Note

- Once reading of the iPod® is complete, it will play automatically.
- If a non-readable iPod® device is connected, an error message will be displayed and the previously used mode or FM radio will play.



- If the iPod® to be played is already connected, repeatedly press **CD/AUX** (9) to select iPod®. Play will begin from where it previously finished.
- The playback functions and the information display items may differ from the iPod® in terms of play order, method and the information displayed.

Using the iPod® menu


The iPod® menu operation is similar to the CD menu operation.

To shuffle and repeat tracks, select tracks, search folders and search the device (including audio books and composers) using the iPod® menu, see Using the CD menu on page 98.

Disconnecting an iPod® device

1. Press the **RADIO BAND** (10) or **CD/AUX** (9) to select another mode.

Removing an iPod®

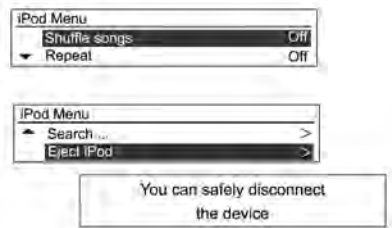

1. Press **MENU•TUNE** (14) to display the iPod® menu.
2. Rotate **MENU•TUNE** (14) to scroll to Eject iPod.
3. Press **MENU•TUNE** (14).

You can safely disconnect the device is displayed.

4. Remove the iPod® device.

The audio system will switch to the previously used mode or FM radio.

Bluetooth® music (Type 1)

General information

- A mobile phone or Bluetooth® device that supports A2DP (Advanced Audio Distribution Profile) versions over 1.2 may be paired and connected to the infotainment system. See Pairing a Bluetooth® device on page 113.
- From the mobile phone or Bluetooth® device, find the Bluetooth® device type to set/connect the item as a stereo headset if required.
- 🎵 is displayed at the bottom right of the infotainment screen, if the Bluetooth® audio device is successfully connected.
- The audio sound is delivered through the infotainment system.

- For Bluetooth® audio to play, the music must be played at least once from the phone or Bluetooth® device.

When entering play mode a second time, play will begin automatically and will stop when the audio ends.

Some devices may not automatically play in Bluetooth® audio play mode.

- Audio only operates with Bluetooth® devices that support AVRCP (Audio Video Remote Control Profile) version 1.0 or above.

Depending on the Bluetooth® device options, some devices may display AVRCP connecting for the initial connection.

- Bluetooth® audio may take some time to transmit data from the mobile phone to the infotainment system.
- The infotainment system outputs the audio from the mobile phone or Bluetooth® device as it is transmitted and transmission breaks may occur.

Main buttons and controls:

Seek buttons

- Press **I<SEEK>I** (8) while in Bluetooth® audio play mode to play the previous or next track.
- Press and hold to fast rewind/fast forward through the currently playing tracks.

CD/AUX buttons

- Press **CD/AUX** (9) repeatedly when a Bluetooth® device is connected to select Bluetooth® audio play mode.

Playing Bluetooth® audio



- Connect the Bluetooth® device
- Press **CD/AUX** (9) repeatedly to select Bluetooth® audio play mode.
- Press **I<SEEK>I** (8) to move to the previous or next track.

Alternatively, press and hold to fast rewind/fast forward.

Note

Information about the playing track and track position will not be displayed on the infotainment system screen.

Personalisation (Type 1)

Main buttons and controls:

Configuration

1. Press **CONFIG** (12) to enter the system setup menu.

Menu-tune button with control

1. Press **MENU•TUNE** (14) to enter the control screen for the current menu.
2. Rotate to scroll through the current list.


Back button

1. Press **↵BACK** (16) to cancel input content or return to the previous menu.

See Overview on page 79.

Setup menu



Setup time and date (example)

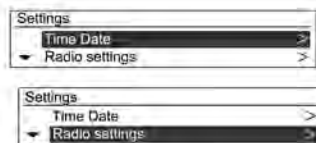

1. Press **CONFIG** (12) to enter the system setup menu.
2. Rotate **MENU•TUNE** (14) to scroll to a setup menu.
3. Press **MENU•TUNE** (14).



  - A menu list for the relevant setup menu or current state is displayed.
- If there is a sub menu list, repeat Steps 2 and 3.



4. Rotate **MENU•TUNE** (14) to go to the setup value or current state.
5. Press **MENU•TUNE** (14).

Language settings

Only English may be displayed.

Time and date settings



- **Set time:** Manually set the hours and minutes for the current time.
- **Set date:** Manually set the current year/month/date.
- **Set time format:** Select 12h or 24h time display.

 
- **Set date format:** Set the date is display format.
YYYY.MM.DD: 2014 Jan. 23
DD/MM/YYYY: 23 Jan. 2014
MM/DD/YYYY: Jan. 23, 2014

Radio settings



- **Auto volume control:** Set Off/Low/ Medium/High.
- **Maximum startup volume:** Manually set max. limit for the start-up volume.
- **Radio favourites:** Manually set the maximum number of favourite pages.

Bluetooth® settings



- **Activation:** Select on or off.
- **Device list:** Select a device and select, connect, separate or delete.
- **Add device:** Pair a new Bluetooth® device.
- **Change Bluetooth® code:** Manually change/set the Bluetooth® pairing code.

Restore factory settings

Restore the initial setup values back to the default settings.

Bluetooth® phone (Type 1)

General information

Bluetooth® allows users with a Bluetooth® enabled mobile phone to make and receive hands-free calls using the vehicle's infotainment system and controls.

The Bluetooth® enabled mobile phone must be paired to the vehicle's infotainment system before it can be used in the vehicle.

Not all phones will support all functions. For more information visit: www.holden.com.au.

Bluetooth® also allows streaming of music files from a device, if files are available. See Bluetooth® music on page 108.

Warning

Do not use a mobile phone when driving.

Make sure that Bluetooth® is activated before driving. If not stop at a safe place to use a mobile phone.

Main buttons and controls:

Menu-tune button with control

1. Press **MENU•TUNE** (14) when in Bluetooth® phone mode to display the menu.
2. Rotate to scroll through the menu.

Phone/mute button


- Press  (17) to select Bluetooth® phone mode.

See Overview on page 79.

Pairing a Bluetooth® device

- When it is not possible to connect to Bluetooth®, delete the entire device list from the Bluetooth® device to be connected, and try again. If deleting the entire device list does not work, then reinstall the device battery and reconnect.
- If there is a problem after the Bluetooth® device is connected, rotate **MENU•TUNE** (14) to scroll to Restore factory settings.
- For Bluetooth® devices that do not support stereo headsets, the Bluetooth® audio play function cannot be used.
- It is not possible to listen to the music through the Bluetooth® audio if an iPhone® is connected through a USB connector.

1. Set up the Bluetooth® device to be connected from its Bluetooth® setup menu, to enable other devices to search for the Bluetooth® device.
2. Press **CONFIG** (12).

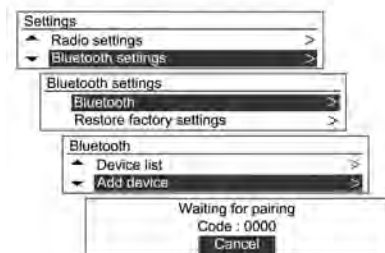

3. Rotate **MENU•TUNE** (14) to scroll to **Bluetooth settings**.
Select **Bluetooth**.
Select **Add device**.

4. Press **MENU•TUNE** (14).

If there already is a Bluetooth® device connected to the infotainment system:

Bluetooth is busy is displayed.

Connection standby is displayed with a message and a security code.

The initial value is 0000. This can be changed:

1. Select **Settings**.
2. Select **Bluetooth settings**.
3. Select **Bluetooth**.
4. Change Bluetooth® code.

The infotainment system can be found by searching on the to be connected Bluetooth® device.

1. Select **MY CAR** on your device.
2. Enter the security code for the infotainment system through the Bluetooth® device if required.

If the pairing of the device to be connected is successful, the screen will display the information for the Bluetooth® device.



The infotainment system can register up to five Bluetooth® devices.


Connecting a Bluetooth® device

1. The Bluetooth® device to be connected from the Bluetooth® setup menu, must previously have been paired with the infotainment system.


Note

If there is a Bluetooth® device already connected, that device needs to be disconnected first.

2. Press **CONFIG** (12).

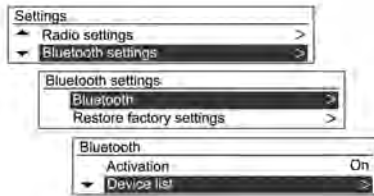

3. Rotate **MENU•TUNE** (14) to scroll to **Settings**.
4. Select **Bluetooth settings**.
5. Select **Bluetooth**.
6. Select **Device list**.
7. Press **MENU•TUNE** (14).

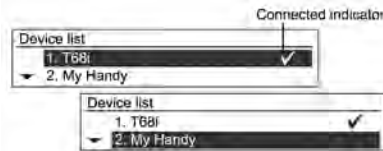

8. Rotate **MENU•TUNE** (14) to select the paired Bluetooth® device to be connected.
9. Press **MENU•TUNE** (14).


Deleting a Bluetooth® device

1. Press **CONFIG** (12).
2. Rotate **MENU•TUNE** (14) to scroll to **Settings**.
3. Select **Bluetooth settings**.
4. Select **Bluetooth**.
5. Select **Device list**.
6. Press **MENU•TUNE** (14).
7. Rotate **MENU•TUNE** (14) to select the device to delete.
8. Press **MENU•TUNE** (14).
9. Select **Delete**.
10. Press **MENU•TUNE** (14) to confirm deletion.

Device deleted is displayed.

Disconnecting a Bluetooth® device

1. Press **CONFIG** (12).
2. Rotate **MENU•TUNE** (14) to scroll to **Settings**.
3. Select **Bluetooth settings**.
4. Select **Bluetooth**.
5. Select **Device list**.
6. Press **MENU•TUNE** (14).
7. Rotate **MENU•TUNE** (14) to select the device to be disconnected.
8. Press **MENU•TUNE** (14).

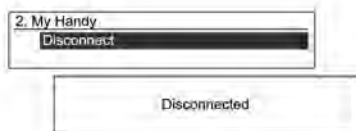

9. Select **Disconnect**.
Disconnected is displayed.
10. Press **MENU•TUNE** (14).

Bluetooth® error messages

- **Bluetooth® deactivated**
Check if Bluetooth® activation is on. The Bluetooth® function can be used when turning on Bluetooth® activation.
- **Bluetooth® is busy**
Check if there are any Bluetooth® devices connected. To connect a device, disconnect any other connected devices first, then reconnect.
- **Device list is full**
No more than five devices can be paired.
- **No phone book available**
This message will be displayed if the mobile phone does not support contacts transmission. If this message appears after several attempts, the device does not support contacts transmission.


- **Phone book is empty**

This message is displayed if no phone numbers are stored in the mobile phone.

This will also be displayed if the phone log transmission is supported, but in a way that is not supported by the infotainment system.

If a problem occurs with Bluetooth® connectivity, reset to factory settings. See Restore factory settings on page 126.


Bluetooth® settings

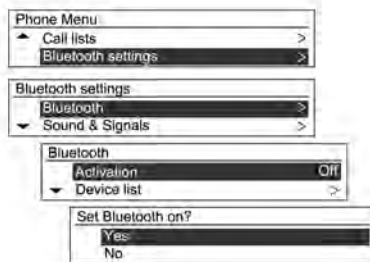

Setup Bluetooth® functions:

1. Ensure the Bluetooth® phone is connected.
2. Press / (17).
3. Rotate **MENU•TUNE** (14) to select **Phone menu**.
4. Select **Bluetooth settings**.
5. Rotate **MENU•TUNE** (14) to make a selection.

Sound and signals

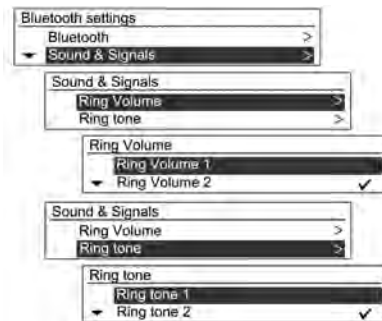

To set up the ring tone and its volume used by the Bluetooth® function:

 
1. Press / (17).
2. Rotate **MENU•TUNE** (14) to select **Bluetooth settings**.
3. Select **Sound & Signals**.
4. Select **Ring Volume** and/or **Ring tone**.

Note

For mobile phones that transfer ring tones, the volume of the ringtone will be based on the volume transmitted from the mobile phone.

Adjust the ringtone volume of the mobile phone if necessary.

Answering calls




1. Press **MENU•TUNE** (14).

Alternatively, press  on the steering wheel remote controls.

Note

- Audio transmission will stop, the phone will ring and information will display on the screen.
- The ring tone may transfer to the infotainment system speakers depending on the mobile phone used. Adjust the volume if necessary.

 Rejecting calls



1. Rotate **MENU•TUNE** (14) to select **Decline**.

Alternatively, press  on the steering wheel remote controls.

Muting calls



1. Rotate **MENU•TUNE** (14) to select **Mute Mic**.


Private calls



While talking on the phone:

1. Press and hold  on the steering wheel remote controls to change to private call mode (some phones may not support the private call mode).
2. Select **Private call** by using **MENU•TUNE** (14).

Redialling

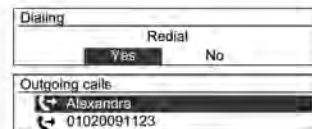


1. Press  on the steering wheel remote controls.
The redial guidance screen is displayed.
Alternatively, press and hold  to display the outgoing calls list on your phone.
2. Rotate **MENU•TUNE** (14).
3. Select **Yes** or **Contacts**.
4. Press **MENU•TUNE** (14).
Alternatively, press  on the steering wheel remote controls to make the call.

Note

- When redialling a number, the connected phone number will not be displayed.
- Depending on the mobile phone options, the call may be made through the call history of the received or missed calls instead of the redial mode.

 
Ending a call



- Rotate **MENU•TUNE** (14) to select Hang up.

Alternatively, press  on the steering wheel remote controls.

In call functions

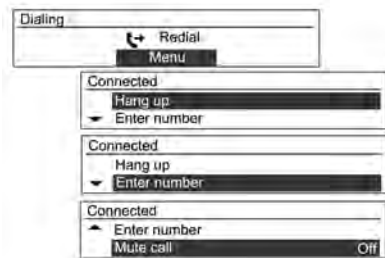

While on a call:

- Press **MENU•TUNE** (14).
- Rotate **MENU•TUNE** (14) to select from:

Hang up

Enter number

Mute call

To select Private call:

 
- Press and hold  on the steering wheel remote controls.

Calling by entering numbers



To make a call by entering the phone number:


1. Press (17).
2. Rotate **MENU•TUNE** (14) to select **Enter number**.



3. Rotate **MENU•TUNE** (14) to select the numbers/characters.
4. Press **MENU•TUNE** (14) to enter the number.
Repeat to enter all numbers.
5. Press **BACK** to delete a number one by one.
Alternatively, press and hold **BACK** to delete all content that has been entered.

To edit the input content:

 - A. Move: Move input position
- B. Delete: Delete input character
- C. Phone book: Search contacts (usable after updating the phone numbers). See Updating contacts on page 123.
- D. Dial: Begin dialling



After the phone number has been entered:

1. Rotate **MENU•TUNE** (14) to select (D) to begin dialling.
2. Press **MENU•TUNE** (14) to make a call.




To end a call:

1. Press **MENU•TUNE** (14) to select the menu.
2. Select **Hang up**.

Alternatively, press  on the steering wheel remote controls.

Using the phone book

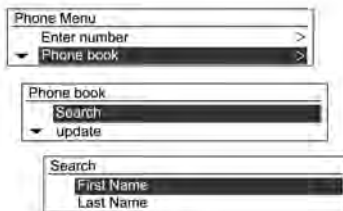


1. Press  (17).
2. Press **MENU•TUNE** (14) to select Phone Menu.
3. Rotate **MENU•TUNE** (14) to select **Phone book**.
4. Press **MENU•TUNE** (14).


Note

It is necessary to update the contacts list before searching the phone book for the first time. See Updating contacts on page 123.

5. Rotate **MENU•TUNE** (14) to select **Search**.
6. Press **MENU•TUNE** (14).
7. Rotate **MENU•TUNE** (14) to select **First Name** or **Last Name**.
8. Press **MENU•TUNE** (14).

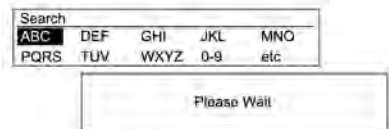


9. Rotate **MENU•TUNE** (14) to select **Search**.
10. Press **MENU•TUNE** (14).

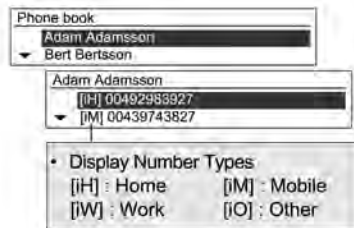

From the search results screen:

 11. Rotate **MENU•TUNE** (14) to make a selection.
12. Press **MENU•TUNE** (14) to view details.




13. Press **MENU•TUNE** (14) to make a call.

Updating contacts



To update the contacts on the mobile phone to the infotainment system contacts:

1. Rotate **MENU•TUNE** (14) to select **Phone Menu**.
2. Select **Phone book**.
3. Select **update**.
4. Press **MENU•TUNE** (14).

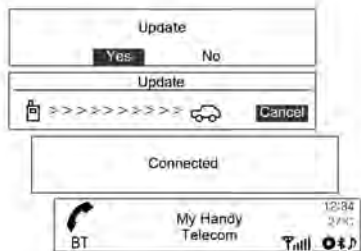

5. Rotate **MENU•TUNE** (14) to select **Yes** or **No**.
6. Press **MENU•TUNE** (14) to activate or cancel the update.

Note

Hands-free and Bluetooth® audio will stop while updating contacts is in process. Other functions can be used.

Notes on updating contacts

- This function can be used with mobile phones that support contacts update and the call history transmission function.
If the infotainment system is connected to a mobile phone that does not support these functions, the call history cannot be displayed through the infotainment system.
- Updating contacts is not supported where there are more than 1,000 contact numbers.
- If there is a problem with the stored information of the mobile phone, the contacts may not be updated.
- The infotainment system only uses information coded in UTF-8 format.

- If other operations such as, game, map search, navigation, etc. are activated during contacts updating or call history transmission progress, the update/transmission process may not work.


Do not use other functions on the mobile phone as these may affect the data transmission.

- When the contacts update or call history transmission is completed, all hands-free and Bluetooth® audio play modes will be automatically disconnected and then reconnected.
- If the infotainment system is turned off while on a call, the call will be transmitted to the mobile phone. Some phones may need to setup a call transmission function beforehand, depending on the type of phone.


- If the user disconnects the connection directly (using the infotainment or mobile phone), the auto connection function does not take place.
Auto-connection: This function automatically finds and connects the device that was last connected.
- Not all contacts may be displayed. The infotainment system only displays what has been transmitted from the mobile phone.
- The contacts update can only receive four numbers per contacts directory (mobile phone, office, home and other).
- Changing the language setup during the contacts update will delete all previous updates.
- If the Operating System (OS) of the mobile phone is updated, it may change how the phone's Bluetooth® function works.

- Special characters and unsupported languages will be displayed as “_ _ _ _”.
- Calls registered in contacts without any name will be indicated as **No number in contact**.
- The infotainment system will display contacts, call history, and redial information as it is transmitted from the mobile phone.

Call lists

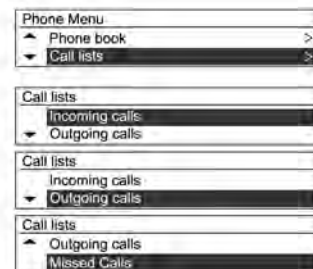


1. Press (17).
2. Rotate **MENU•TUNE** (14) to select **Phone menu**.
3. Select **Call lists**.
4. Rotate **MENU•TUNE** (14) to make a selection.

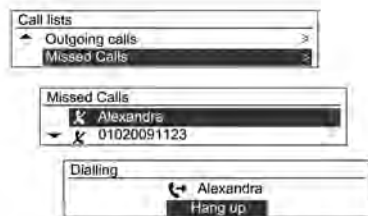

5. Rotate **MENU•TUNE** (14) to select the number to be dialled.
6. Press **MENU•TUNE** (14) to call the selected number.

Delete all contacts

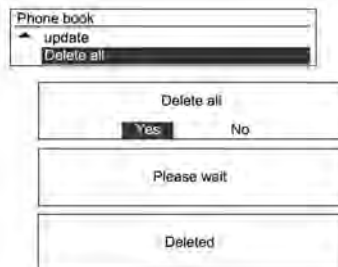


Note

All numbers stored in the infotainment system contact list will be deleted.

1. Press **PHONE** (17).
2. Rotate **MENU•TUNE** (14) to select **Phone menu**.
3. Select **Phone book**.
4. Select **Delete all**.
5. Select **Yes** or **No**.
6. Press **MENU•TUNE** (14) to confirm.

Restore factory settings

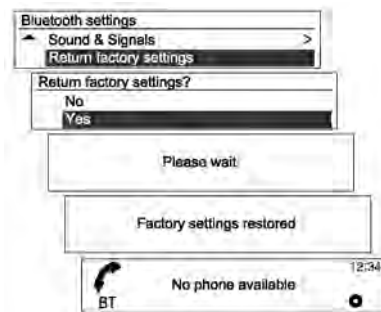

To reset the Bluetooth® setting to the default values:

1. Press **PHONE** (17).
2. Rotate **MENU•TUNE** (14) to select **Bluetooth settings**.
3. Select **Return factory settings**.
4. Select **Yes** or **No**.

Operation (Type 2)

Power on/off

- To turn the infotainment system on, press and hold $\odot$ (20).
The previous mode will be displayed.
- To turn the infotainment system off, press and hold $\odot$ (20).



12:20 AM 28°C
20/06/2014

Time, date and temperature are displayed.

Note

The temperature is only displayed when the ignition is turned on.

Automatic on/off

If the vehicle was turned off with the infotainment system on, the infotainment system turns on automatically the next time the ignition key is placed in the ACC or ON position.

When the ignition key is in the OFF position when a door is opened, the infotainment system switches off automatically.

Note

While the ignition is off, if the infotainment system is turned on by pressing and holding $\odot$ (20), it will automatically turn off 10 minutes from the last operation.

Volume control

- To adjust the volume, press $\vee$ or $\wedge$ (19).



The sound volume is indicated on the display.

- Alternatively, press + or - on the steering wheel remote controls.
- When turning the infotainment system on, the volume level will be set to its previous selection (when it is less than the maximum starting volume). Refer to Max startup volume on page 158.

- If the volume level is louder than maximum starting volume level when the infotainment system is turned on, the level is adjusted automatically to the maximum starting volume level.

Mute

- To mute the sound, press ∇ or $\wedge$ (19) then touch $\boxtimes$.
- To turn mute off, press ∇ or $\wedge$ (19).



- Alternatively, press $\boxtimes$ on the steering wheel remote controls to turn mute on or off.

Auto volume control

The volume of the infotainment system adjusts depending on the vehicle's speed.

As the vehicle's speed increases, the volume of the infotainment system also increases to compensate for the driving noise.

- Press $\boxtimes$ (21).
- Touch **settings**.
- Touch **radio settings**.
auto volume is displayed.



- Touch $<$ or $>$ to select Off, Low, Medium or High.

Using the HOME menu

- Press $\boxtimes$ (21).

audio
picture & movie
phone
smartphone link
settings



- Select from the following menu.
 - Touch **audio** to select FM/AM, USB storage device, iPod®, Bluetooth® music or auxiliary sound.
 - Touch **picture & movie** to view a picture, movie or auxiliary video.
 - Touch **phone** to activate phone features (if connected).

- Touch **smartphone link** to activate an application through a connected smartphone.
- Touch **settings** to enter the system setup menu.

Selecting function

Audio

1. Press  (21).
2. Touch **audio**.



3. Touch **Source ▼**.
Touch **AM** to select AM radio.
Touch **FM** to select FM radio.
Touch **USB** to select USB.
Touch **AUX** to select an auxiliary source.

Touch **Bluetooth** to play Bluetooth® music.

Touch **iPod** to select iPod® or iPhone®.

4. Touch  to return to the HOME menu.

Note

If a USB, iPod®, Bluetooth® or other auxiliary device is not connected to the infotainment system, the function is greyed-out/not listed and is not available.

See Radio (Type 2) on page 131.

See Audio players (Type 2) on page 136.

Picture and movie

1. Press  (21).
2. Touch **picture & movie**.



3. Touch **Source ▼**.

Touch **USB (picture)** to view picture files from a USB storage device or a device which supports MTP. See MTP (Media Transfer Protocol) player on page 140.

Touch **USB (movie)** to view movie files from a USB storage device or a device which supports MTP. See MTP (Media Transfer Protocol) player on page 140.

Touch **AUX (movie)** to view movie files from an auxiliary video (AUX) device.

4. Touch  to return to the HOME menu.

Note

If a USB storage device containing picture or movie files, or an AUX device is not connected to the infotainment system, the function is greyed-out and is not available.

See Picture system on page 143.

Phone

1. Connect a Bluetooth® phone to the infotainment system.
2. Press  (21).
3. Touch **phone**.



4. Touch  to return to the HOME menu.

Note

See Pairing and connecting a Bluetooth® device on page 159.

Smartphone link

1. Install the smartphone application on the smartphone.
2. Connect the smartphone through the USB port or Bluetooth®.
 - iPhone®: USB connection.
 - Android phone: Bluetooth® wireless technology.
3. Press  (21).
4. Touch **smartphone link**.

Note Not all regions support this function.



5. Touch  to return to the HOME menu.

See Smartphone link on page 168.

Settings

1. Press  (21).
2. Touch **settings**.



See Personalisation (Type 2) on page 154.

Radio (Type 2)

AM-FM radio

1. Press  (21).
2. Touch **audio**.



3. Touch **Source** ▼.
4. Touch **AM** or **FM**.
The last station is displayed.
5. Touch  to return to the HOME menu.

Automatic station search

To automatically search for available radio stations with clear reception:



- Touch **◀** or **▶**.
- Touch and drag left or right of the radio station.
- Rotate and hold **△** or **▽** on the steering wheel remote controls.

Manual station search

1. Touch **◀** or **▶** repeatedly.

Note

The radio tune bar must be turned off.

Using the preset buttons

Saving a preset

1. Select **FM** or **AM**.
2. Tune to a radio station.



3. Touch **<** or **>** to select a favourite preset page.
4. Touch and hold any of the preset buttons to save.

Note

- Up to seven favourite pages can be saved and each page can store up to five radio stations.
- To change a preset, tune to another radio station and touch and hold the button to save.

Listening using a preset

To select a favourite preset page:

1. Touch **<** or **>** repeatedly.
2. Touch a preset button.

Autostore

Radio stations with the best reception quality can be stored automatically:



1. Select **FM** or **AM**.
2. Touch **AS**.
3. Touch and hold **AS** to update the FM/AM autostore stations.

To listen to an AS station:

1. Select FM or AM.
2. Touch **AS**.
3. Touch < or > to select an autostore page.
4. Touch a preset button.

Note

If AS is pressed when there are no stored radio stations, the FM/AM autostore will be updated.

Viewing station information

1. Touch the radio station.



The available radio station information, including frequency, is displayed.

Using the FM/AM radio menu

1. Select **FM** or **AM**.
2. Touch **MENU**.



3. Touch a menu item to make a selection or to view more details.
4. Touch **↶** to return to the previous menu.

Favourite list

1. Select **FM** or **AM**.
2. Touch **MENU**.
3. Touch **favorite list**.



4. Touch **▲** or **▼** to scroll through the list.
5. Touch a radio station to make a selection.

FM/AM station list

1. Select **FM** or **AM**.
2. Touch **MENU**.
3. Touch **FM station list** or **AM station list**.



4. Touch **▲** or **▼** to scroll through the list.
5. Touch a radio station to make a selection.

Update the FM/AM station list

1. Select **FM** or **AM**.
2. Touch **MENU**.
3. Touch **update FM station list** or **update AM station list**.




The station list is updated.

4. Press **Cancel** to stop saving changes.

Tone settings

1. Select **FM** or **AM**.
2. Touch **MENU**.
3. Touch **tone settings**.

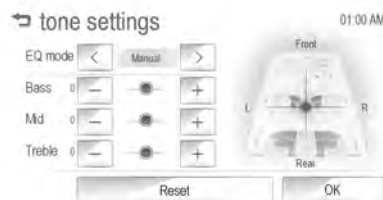

- EQ (equaliser): Touch < or > to select or turn off the sound style (Manual ⇄ Pop ⇄ Rock ⇄ Country ⇄ Classical ⇄ Talk).
- Touch -/+ to adjust the sound style manually.
- Bass: Adjust the bass level from -12 to +12.
- Mid (midrange): Adjust the midrange level from -12 to +12.

- Treble: Adjust the treble level from -12 to +12.
 - Fader: Adjust the front/rear speaker balance by touching and dragging the dot in the vehicle interior image.
 - Balance: Adjust the left/right speaker balance by touching and dragging the dot in the vehicle interior image.
 - Reset: Restore the settings back to the default settings.
4. Press **OK** to store.

Fixed mast antenna

- To remove the roof antenna, rotate it anticlockwise.
- To install the roof antenna, rotate it clockwise.

Caution

Remove the antenna before entering an area with a low ceiling or an automatic car wash.

Damage may occur to the antenna or the roof panel.

Audio players (Type 2)**Audio/picture/movie/
auxiliary device system****Cautions when using
MP3/WMA/OGG/WAV files**

- This product can play music files with .mp3, .wma, .ogg, .wav file name extensions.
- While this product can play files with 8kbps ~ 320kbps bit rate, files with a bit rate above 128kbps will result in higher quality sound.
- ID3 Tag information (version 1.0, 1.1, 2.2, 2.3 or 2.4) for MP3 files such as the album name and the artist.

**Cautions when using a USB
storage device, iPod® or iPhone®**

- Operation cannot be guaranteed if the HDD, USB mass storage device, CF or SD memory card is connected using a USB adaptor.
- Avoid static electricity when connecting or disconnecting the USB. Avoid connecting and disconnecting repeatedly over a short time.
- Operation is not guaranteed if the connecting terminal of the USB device is not metal.

Caution

In rare cases, a USB stick (thumb drive) may not be recognised by the system or may cause a malfunction.

- Avoid touching the USB connecting terminals with any objects or fingers.

- The USB storage device can only be recognised when it is formatted in FAT16/32, exFAT file system.
- Depending on the type and capacity of the USB device and the type of stored files, the time it takes to recognise the files may differ.
- Do not disconnect the USB storage device while it is being played. This may damage the product or affect the performance of the USB device.
- Disconnect the USB device when the vehicle is turned off. If the ignition is turned on while the USB storage device is connected, the device may become damaged or may not operate normally in some cases.
- A USB device can only be connected for the purpose of playing music, movies, viewing photo files or upgrading.

 
Caution

The USB port should not be used to charge USB accessory equipment as the heat generation using the USB terminal may cause performance issues or damage to the product.

- Music files to which DRM (Digital Right Management) is applied cannot be played.
- This product can support USB storage devices that contain 2,500 music files, 2,500 photo files, 250 movie files, 2,500 folders and 10 stages of folder structure.
Normal usage cannot be guaranteed for storage devices that exceed this limit.
- Some iPod® or iPhone® models may not support all functionality of the infotainment system.

- An iPod® or an iPhone® can play all music files supported.
Music file lists display up to 2,500 files on the screen in alphabetical order.
- Only connect an iPod® or iPhone® to the USB port with connection cables supported by iPod® and iPhone® products.
- When an iPod® or iPhone® is connected to the USB port using an iPod®/iPhone® cable, Bluetooth® music is not supported.
- To play a movie file from an iPod® or iPhone®, connect it to the AUX input by using an AUX cable for an iPod®/iPhone®.
When an iPod® or iPhone® is connected to the USB port, movie files will not play.
- Playing order, method and information, displayed on the infotainment system may differ from information displayed on the iPod® or iPhone®.

Connecting a USB device



1. Open the cover located above the glove box.
2. Connect the USB to the USB port.

Audio system


Music files contained on a USB storage device, iPod® or iPhone® can be played on the infotainment system.

USB port

Connect a USB storage device (or a device which supports MTP) containing music files to the USB port. See Connecting a USB device on page 138 and MTP (Media Transfer Protocol) player on page 140.

Note

- Once reading of the USB storage device is complete, it will play automatically.
- If a non-readable USB storage device is connected, an error message will be displayed and the previously used mode or FM radio will play.

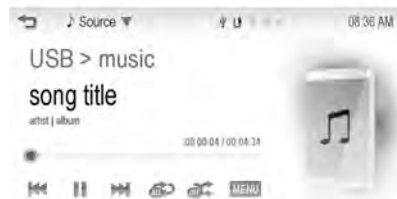

If the USB storage device is already connected to the infotainment system:

1. Press (21).
2. Touch **audio**.
3. Touch **Source ▼**.
4. Touch **USB**.

Ending USB music playback

1. Touch **Source ▼**.
2. Select another mode by touching AM, FM, AUX or Bluetooth®.
3. Remove the USB storage device.

Pause

- Touch **II** during play.
- Touch **▶** to resume play.

Playing the next track

- Touch **▶▶** to play the next track.

Playing the previous track

- Touch **◀◀** within 5 seconds of play.

Returning to the beginning of the current track

- Touch **◀◀** after 5 seconds of play.

Scanning forward or backward

- Touch and hold **▶▶** or **◀◀** during play.
- Release the button to resume play at normal speed.

Playing tracks repeatedly

- Touch  during play:
1: Plays the current track repeatedly.
ALL: Plays all tracks repeatedly.
OFF: Returns to normal play.

Playing tracks randomly

- Touch  during play:
ON: Plays all tracks randomly.
OFF: Returns to normal play.

Viewing information on a playing track

- Touch the title during play.



- Available information displayed may include the title, artist, album, file name and folder name.
- Incorrect information cannot be modified or corrected.
- Some symbols or unavailable languages may be displayed as .

Using the USB music menu

1. Touch **MENU** during play.




The number of songs in each play mode is displayed.

2. Touch the desired play mode.

Tone settings

1. Touch **MENU** during play.
2. Touch **▲** or **▼** to scroll through the list.
3. Touch **tone settings**.

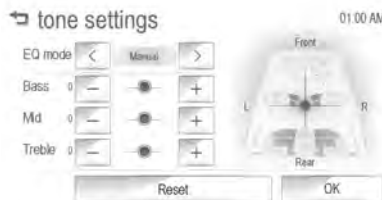


For further information, see Tone settings on page 135.

MTP (Media Transfer Protocol) player

To play music files from a device that supports MTP, connect the device to the USB port.

- When the audio system finishes reading the information on the device, it will play automatically.
- If a non-readable device that supports MTP is connected, an error message will display and the audio system will switch to the previously used mode.

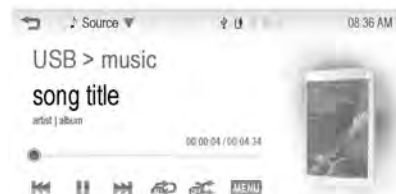

Note


- Depending on the connected device, some files may not play.
- File loading may take a few minutes depending on the type of the phone or the number of files/folders stored on the phone.
- When an MTP device is connected, the system scans audio files first and then scans picture and movie files. While scanning, picture or movie files are not available even if the audio file is played.
- An MTP device that has external memory may be recognised as USB1/USB2.
- If an MTP supported device is connected while BringGo is running simultaneously, a rear vision camera delay maybe experienced.
- MTP player operation is the same as the USB menu operation.
See Audio players on page 136.

iPod®/iPhone® player

Connect an iPod® or iPhone® containing music files to the USB port. See Connecting a USB device on page 138.

Note

- Once reading of the iPod® or iPhone® is complete, it will play automatically.
- If a non-readable iPod® or iPhone® is connected, an error message will be displayed and the previously used mode or FM radio will play.

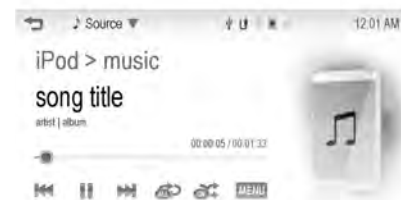

If the iPod® or iPhone® is already connected:

1. Press (21).
2. Touch **audio**.
3. Touch **Source ▼**.
4. Touch **iPod** to play from the iPod® or iPhone®.

Ending iPod®/iPhone® playback

1. Touch **Source ▼**.
2. Select another mode by touching AM, FM, AUX or Bluetooth®.
3. Remove the iPod®/iPhone® device.

Pause

- Touch **II** during play.
- Touch **►** to resume play.

Playing the next track

- Touch **►►** to play the next track.

Playing the previous track

- Touch **◄◄** within 2 seconds of the start of the track.

Returning to the beginning of the current track

- Touch **◄◄** after 2 seconds of the start of the track.

Scanning forward or backward

- Touch and hold **►►** or **◄◄** during play.
- Release the button to resume play at normal speed.

Playing tracks repeatedly

- Touch  during play:
1: Plays the current track repeatedly.
ALL: Plays all tracks repeatedly.
OFF: Returns to normal play.

Playing tracks randomly

- Touch  during play:
ON: Plays all tracks randomly.
OFF: Returns to normal play.

Viewing information on a playing track

- Touch the title during play.



- Available information displayed may include the title, artist and album.
- Incorrect information cannot be modified or corrected.
- Some symbols or unavailable languages may be displayed as .

Using the iPod® music menu

1. Touch **MENU** during play.




The number of songs in each play mode is displayed.

2. Touch the desired play mode.

Tone settings

1. Touch **MENU** during play.
2. Touch **▲** or **▼** to scroll through the list.
3. Touch **tone settings**.

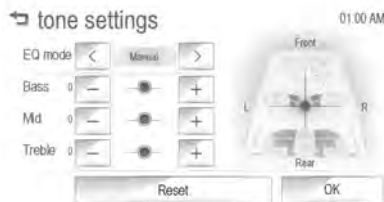

For further information, see Tone settings on page 135.

Picture system

Picture files stored on a USB storage device or a device which supports MTP, can be viewed on the infotainment system screen. See MTP (Media Transfer Protocol) player on page 140.

Cautions when using picture files

- File size:
JPG: within 64 to 5,000 pixels (width), within 64 to 5,000 pixels (height).
BMP, PNG, GIF: within 64 to 1,024 pixels (width), within 64 to 1,024 pixels (height).
- This product can view picture files with: .jpg, .bmp, .png, .gif file extensions (animated GIF not supported).
- Some files may not be viewed due to file format or the condition of the file.

Viewing a picture

Connect a USB storage device containing picture files to the USB port. See Connecting a USB device on page 138.

1. Press  (21).
2. Touch **picture & movie**.
3. Touch **Source ▼**.
4. Touch **USB (picture)**.



The picture is displayed.

5. Touch the screen to hide/show the control bar.

6. Touch the screen again to return to the previous screen.



An alert may be displayed.

Viewing a slide show

1. Touch .
The slide show begins.
2. Touch the screen to cancel the slide show.

Viewing a previous or next picture

1. Touch  or .

Rotating a picture

1. Touch  or .

Enlarging a picture

1. Touch  to enlarge the picture.

Using the USB picture menu

1. Touch **MENU**.



The USB picture menu is displayed.

2. Touch to select.

picture file list: Displays the list of available picture files.

sort by title: Displays pictures in alphabetical order.

sort by date: Displays pictures in date order.

slide show time: Select the slide show interval.

clock/temp display: To display the clock and temperature on the full screen, select On or Off.

display settings: Adjust the brightness and contrast.

3. When complete, touch ↩.

Movie system

Movie files stored on a USB storage device can be viewed on the infotainment system screen.

Cautions when using movie files

- Available resolution: within 720 x 576 (w x h) pixels
- Frame rate: less than 30 fps
- Playable movie file: .avi, .mpg, .mp4, .divx, .xvid, .wmv

A movie file may not always be played depending on the Codec format.

- Playable subtitle format: .smi
- Playable Codec format: divx, xvid, mpeg-1, mpeg-4 (mpg4, mp42, mp43), wmv9 (wmv3)
- Playable audio format: MP3, AC3, AAC, WMA.
- Music files to which DRM (Digital Right Management) is applied cannot be played.

Playing a movie file

Connect a USB storage device containing movie files to the USB port. See Connecting a USB device on page 138.

1. Press  (21).
2. Touch **picture & movie**.
3. Touch **Source ▼**.
4. Touch **USB (movie)**.



The movie begins to play.

5. Touch the screen to hide/show the control bar.

6. Touch the screen again to return to the previous screen.



Note

Movies are not available while the vehicle is in motion.

Pause

- Touch **II** during play.
- Touch **▶** to resume play.

Playing the next movie

- Touch **▶|** to play the next movie.

Playing the previous movie

- Touch **◀|** within 5 seconds of the start of play.

Returning to the beginning of the current movie

- Touch **◀|** after 5 seconds of play.

Scanning forward or backward

- Touch and hold **▶|** or **◀|** during play.
- Release the button to resume play at normal speed.

Viewing to full screen

1. Touch .
2. Touch the screen to return to the previous screen.

Using the USB movie menu

1. Touch **MENU**.



The USB movie menu is displayed.

2. Touch to select.

movie file list: Displays the list of available movie files.

clock/temp display: To display the clock and temperature on the full screen, select On or Off.

display settings: Adjust the brightness and contrast.

tone settings: Adjust the sound setup. See Tone settings on page 135.

3. When complete, touch **↩**.

Subtitle language

The movie may have subtitles.



1. Touch ◀.

Note

Subtitle language is available only if supported by the movie file.



2. Touch < or >.
3. Touch ▶.

Note

- Select from the subtitle languages supported by the DivX® movie file.
- The subtitle language can be turned on or off.
- Subtitle format: .smi. The subtitle file name should be same as the movie file name.

Audio language

The movie may have selectable audio languages.



1. Touch ◀.

Note

Audio language is available only if supported by the movie file.



2. Touch < or >.
3. Touch ►.


Note

- Select from the subtitle languages supported by the DivX® movie file.
- The subtitle language can be turned on or off.

Auxiliary device system

Music and movie files stored on an auxiliary device can be played on the infotainment system.

Connecting an auxiliary device

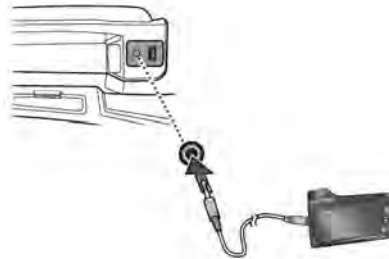

1. Open the cover located above the glove box.
2. Connect to the AUX input using the appropriate cable.

Types of AUX cables



- 3-pole cable: AUX cable for audio.



- 4-pole cable: AUX cable for movies. AUX cable for iPod®/ iPhone®.


Playing from an auxiliary device

Connect the auxiliary device containing music files to the AUX input. See Connecting an auxiliary device on page 149.

- Once connected, it will play automatically.
- The auxiliary device is used to control the playback of the content stored or available.

If the auxiliary device is already connected:

1. Press  (21).
2. Touch **audio**.
3. Touch **Source ▼**.
4. Touch **AUX**.

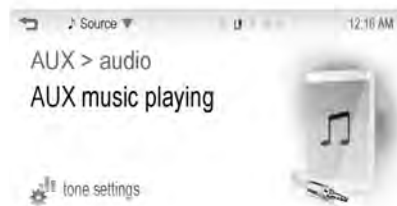

AUX music playing is displayed.

Tone settings

1. Touch **tone settings** during play.




For further information, see Tone settings on page 135.

Playing a movie from an auxiliary device

Connect the auxiliary device containing movie files to the AUX input. See Connecting an auxiliary device on page 149.

1. Press (21).
2. Touch **picture & movie**.
3. Touch **Source ▼**.
4. Touch **AUX (movie)**.

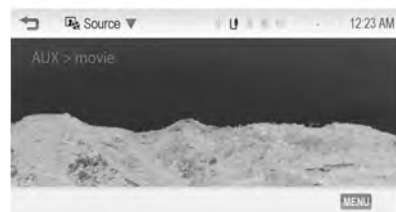

- The auxiliary device is used to control the content stored or available.

Note

When using an iPod® or iPhone®, connect to the AUX input using the AUX cable for an iPod®/iPhone® to play a movie file. See Types of AUX cables on page 149.



Note

Movies are not available while the vehicle is in motion.

Using the AUX movie menu

1. Touch **MENU**.



The AUX menu is displayed.

2. Touch to select:

tone settings: Adjust the sound setup. See Tone settings on page 135.

clock/temp display: To display the clock and temperature on the full screen, select On or Off.

display settings: Adjust the brightness and contrast.

3. When complete, touch ↩.

Bluetooth® music (Type 2)

General information

Music may be played from a Bluetooth® device/Bluetooth® phone.

The Bluetooth® device must first be paired with the infotainment system. See Bluetooth® phone on page 159.


- Bluetooth® music may not be supported depending on the mobile phone or Bluetooth® device.
- Supported profiles: HFP, A2DP, AVRCP, PBAP
- The infotainment system should be connected to the Bluetooth® device as a stereo headset. Set the Bluetooth® device type on the phone.
♪ is displayed if successfully connected as a stereo headset.

- Music from the Bluetooth® device is delivered through the infotainment system.
- If the Bluetooth® device is disconnected while music is playing, playback is stopped.
- Bluetooth® streaming is not available when a Bluetooth® hands-free phone is in use.
- For Bluetooth® music to play, the music must be played at least once from the music player mode of the Bluetooth® device after connecting as a stereo headset. After being played at least once, the music player will automatically play upon entering play mode and will automatically stop when the music player mode ends.
- If the Bluetooth® device is not in the waiting screen mode, some devices may not automatically play in Bluetooth® music play mode.

- Do not change the track too quickly when playing Bluetooth® music. It takes some time to transmit data from the Bluetooth® device to the infotainment system.
- The Infotainment system transmits the order to play from the Bluetooth® device in the Bluetooth® music play mode. If this is done in a different mode, then the device transmits the order to stop. Depending on the Bluetooth® device's options, this order to play/stop may sometimes take time to activate.
- Sometimes, sounds may be cut off during the Bluetooth® music playback.

Playing Bluetooth® music

1. Press  (21).
2. Touch **audio**.
3. Touch **Source ▼**.
4. Touch **Bluetooth**.

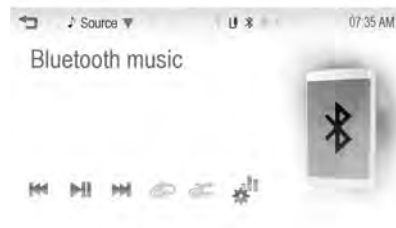

Bluetooth music is displayed.

Pause

- Touch **▶||** during play.
- Touch **▶||** to resume play.

Playing the next track

- Touch **▶▶** to play the next track.

Playing the previous track

- Touch **◀◀** within 2 seconds of the start of the track.

Returning to the beginning of the current track

- Touch **◀◀** after 2 seconds of the start of the track.

Scanning forward or backward

- Touch and hold **◀◀** or **▶▶** during play.

Playing tracks repeatedly

- Touch  during play:
1: Plays the current track repeatedly.
ALL: Plays all tracks repeatedly.
OFF: Returns to normal play.

Playing tracks randomly

- Touch  during play:
ON: Plays all tracks randomly.
OFF: Returns to normal play.

Note

Not all functions are supported by all Bluetooth® devices.

Tone settings

- Press  during play.




For further information, see Tone settings on page 135.

Personalisation (Type 2)

The infotainment system settings can be personalised.

- Press  (21).
- Touch **settings**.

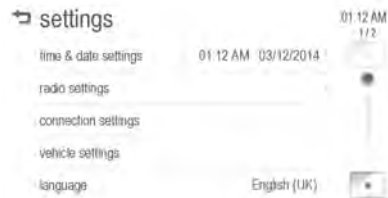

The settings menu is displayed.

- Touch to select.

Time and date settings

1. Press  (21).
2. Touch **settings**.
3. Touch **time & date settings**.



The time & date settings menu is displayed.

4. Touch to select.

set time format: Select 12 hr or 24 hr time display.

set date format: Set the date display format:

- YYYY/MM/DD: 2014/06/31
- DD/MM/YYYY: 31/06/2014
- MM/DD/YYYY: 06/31/2014

set time and date: Manually set the current hours, minutes and year/month/date by touching $\wedge$ or $\vee$.

5. Touch  to return to the previous menu.

Radio settings

1. Press  (21).
2. Touch **settings**.
3. Touch **radio settings**.



The radio settings menu is displayed.

4. Touch to select.

auto volume: The volume adjusts depending on the vehicle's speed. Select Off, Low, Medium or High.

radio favourites: Select the number of AM/FM favourites (FAV) pages to display.

radio tune bar: View the radio station tuning bar for selecting a radio station. Select On or Off.

radio text: Select On or Off to display radio station text when available.

radio factory settings: Restore the settings back to the default settings.

5. Touch  to return to the previous menu.

Connection settings

1. Press  (21).
2. Touch **settings**.
3. Touch **connection settings**.



The connection settings menu is displayed.

4. Touch to select.

bluetooth settings: Select the bluetooth settings menu:

- **pair device:** Select a device and connect, separate or delete.
- **change PIN code:** Manually change or set a PIN code.
- **discoverable:** To initiate the Bluetooth® connection from a Bluetooth® phone, select On.
- **device info:** Check the device information.

change ringtone: Select a ringtone.

ringtone volume: Change the ringtone volume.

5. Touch  to return to the previous menu.

Vehicle settings

When the ignition is on and the vehicle is stationary, settings can be changed in the vehicle settings menu. See Vehicle personalisation on page 69.

Language settings

1. Press  (21).
2. Touch **settings**.
3. Touch **language**.




The language menu is displayed.

Note

English is the only supported language.

Text scroll

1. Press  (21).
2. Touch **settings**.
3. Touch .

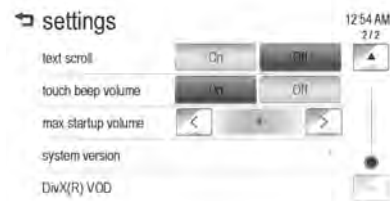

The settings menu is displayed.

4. Touch **On** or **Off**.


On: The text displayed on the audio screen is scrolled.

Off: The text is scrolled once then displayed in a shortened form.

5. Touch  to return to the previous menu.

Touch beep volume

1. Press  (21).
2. Touch **settings**.
3. Touch ▼.

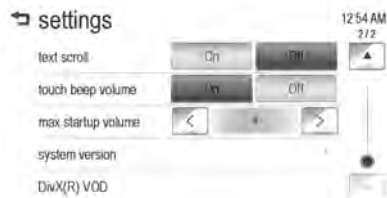


The settings menu is displayed.

4. Touch **On** or **Off**.
On: A beep sounds when the screen is touched.
Off: Cancels the beep sound.
5. Touch  to return to the previous menu.

Max startup volume

Adjust the maximum limit for the start-up volume.

1. Press  (21).
2. Touch **settings**.
3. Touch ▼.

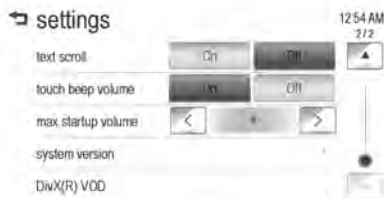


The settings menu is displayed.

4. Touch < or >.
Select a volume between 9 ~ 21.
5. Touch  to return to the previous menu.

System version

 1. Press  (21).
2. Touch **settings**.
3. Touch ▼.
4. Touch **system version**.



The system version information is displayed.

5. Touch  to return to the previous menu.

DivX® VOD

1. Press  (21).
2. Touch **settings**.
3. Touch ▼.



4. Touch **DivX® VOD**.
For more information, see Trademarks and licence agreements on page 257.

Bluetooth® phone (Type 2)

General information

Bluetooth® allows users with a Bluetooth® enabled mobile phone to make and receive hands-free calls using the vehicle's infotainment system and controls.

The Bluetooth® enabled mobile phone must be paired to the vehicle's infotainment system before it can be used in the vehicle.

Not all phones will support all functions. For more information visit: www.holden.com.au.

Bluetooth® also allows streaming of music files from a device, if files are available. See Bluetooth® music on page 152.

Warning

Do not use a mobile phone when driving.

Make sure that Bluetooth® is activated before driving. If not stop at a safe place to use a mobile phone.

Pairing and connecting a Bluetooth® device

1. Turn the Bluetooth® device on.
Refer to the Bluetooth® device's user guide.
2. Press  (21).
3. Touch **phone**.



4. Touch **Yes**.



5. Touch **Search Bluetooth Device**.

6. Touch the device to pair.



- If SSP (Secure Simple Pairing) is supported, confirm on the Bluetooth® device and touch **Yes** on the infotainment system screen.



- If SSP is not supported, input the PIN shown on the screen, into the Bluetooth® device.



7. When a Bluetooth® phone is successfully paired, the phone screen is displayed.

If the connection fails, a failure message is displayed.

Note

- When a Bluetooth® phone is successfully paired to the infotainment system, the phone book is downloaded automatically.

For best results, it is recommended to always accept the phone book download request when initially pairing a phone.

- If the phone book is not downloaded automatically, it may not be supported by the phone, is required to be initiated manually from the phone or the list in the phone book contains more than 1,000 entries.
- If a Bluetooth® device is already paired to the infotainment system, auto connection begins.

Pairing an additional device when a paired device is connected

- Press (21).
- Touch **settings**.
- Touch **connection settings**.
- Touch **bluetooth settings**.
- Touch **pair device**.
- Touch the device to pair from the pair device screen, if listed, then go to Step 9.



7. If not listed, touch **Search Bluetooth Device**.

8. Touch the device to pair on the searched list screen.



- If SSP (Secure Simple Pairing) is supported, confirm on the Bluetooth® device and touch **Yes** on the infotainment screen.



- If SSP is not supported, input the PIN shown on the screen, into the Bluetooth® device.



9. When pairing is successful, the device name is displayed on the pair device screen.

Checking the connected Bluetooth® device

1. Press  (21).
2. Touch **settings**.
3. Touch **connection settings**.
4. Touch **bluetooth settings**.
5. Touch **pair device**.



: Connected Bluetooth® device

: Bluetooth® music and handsfree enabled

: handsfree enabled

: Bluetooth® music enabled

Note

The infotainment system can register up to five Bluetooth® devices.

Disconnecting the Bluetooth® device

1. Press  (21).
2. Touch **settings**.
3. Touch **connection settings**.
4. Touch **bluetooth settings**.
5. Touch **pair device**.
6. Touch the name of the device to disconnect.



7. Touch **Yes**.

Connecting the Bluetooth® device

1. Press  (21).
2. Touch **settings**.
3. Touch **connection settings**.
4. Touch **bluetooth settings**.
5. Touch **pair device**.
6. Touch the device to be connected.



The device is connected.

Deleting the Bluetooth® device

1. Press (21).
2. Touch **settings**.
3. Touch **connection settings**.
4. Touch **bluetooth settings**.
5. Touch **pair device**.
6. Touch **Del**.



7. Touch **Yes** to confirm.

Hands-free phone

Making a call by entering a phone number:



1. Enter the phone number using the keypad on the screen.
 2. Touch .
- Alternatively, press on the steering wheel remote controls.

Note

To change a digit, touch .

To delete all digits, touch and hold .

Switching a call to the mobile phone (private mode)

1. Touch .
2. Touch **OK**.

To switch the call back to hands-free:

1. Touch again.

Switching the microphone on/off (mute)

1. Touch .


Re-dialling last number

1. Touch and hold .
Alternatively, press  on the steering wheel remote controls.

Note

Redialling is not possible when there is no call history.

Receiving calls

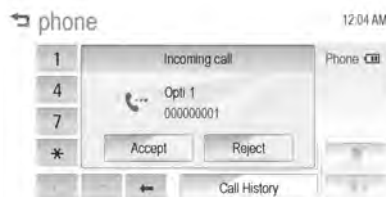

1. Touch **Accept**.

Alternatively, press  on the steering wheel remote controls

Note

Audio transmission will stop, the phone will ring and information will display on the screen.

To reject a call:

2. Touch **Reject**.

Alternatively, press  on the steering wheel remote controls.

Using the phone book menu

1. Touch **Phone Book**.



2. Touch  or  to scroll through the list.
3. Touch the entry to be dialled.



4. Touch the number to dial.

Searching for phone book entries

1. Touch **Phone Book**.




2. Touch .



3. Use the keypad to search by name.

For further information, see Searching by name on page 167.

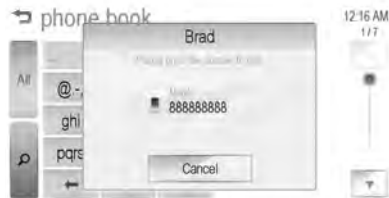

4. Touch the name to call.
5. Touch the number to dial.

Note

When the Bluetooth® phone is successfully paired to the infotainment system, the phone book is downloaded automatically.

For best results, it is recommended to always accept the phone book download request when initially pairing a phone.

If the phone book is not downloaded automatically, it may not be supported by the phone, is required to be initiated manually from the phone or the list in the phone book contains more than 1,000 entries.

Searching by name

Example: searching the name, alex.

1. Touch **abc** to select the first character.
Names which include a, b or c are displayed.
2. Touch **jkl** to select the second character.
Names which also include j, k or l are displayed.
3. Touch **def** to select the third character.
Names which also include d, e or f are displayed.
4. Touch **wxyz** to select the fourth character.
Names which also include w, x, y or z are displayed.

Note

As more letters of the name are entered, the list of possible names reduces.

5. Touch **alex** to select.

Making a call from the call history

1. Touch **Call History**.



2. Touch **↩**, **✕** or **↩**.
↩: Dialed call
✕: Missed call
↩: Received call
3. Touch the entry to be dialed.

Making a call with speed dial

- Touch and hold the speed dial number using the keypad on the phone screen.
- Only speed dial numbers already stored on the mobile phone can be used for speed dial calls.
- Up to 2-digit speed dial numbers are supported.
- For 2-digit speed dial numbers, touch the 1st digit then touch and hold the 2nd digit to make a call.

Note

Not all phones support this feature.

Smartphone link (Type 2)

Use smartphone link when a smartphone is connected to the infotainment system.

- When using an iPhone®, connect the iPhone® through the USB port to use applications.
- When using an Android phone, connect the Android phone to the infotainment system using Bluetooth® to use applications.

Connecting to applications

1. Install the application on the smartphone.
2. Connect the smartphone and the infotainment system through the USB port or Bluetooth®.
iPhone: USB connection
Android phone: Bluetooth® connection
3. Activate the application on the smartphone.

4. Press  (21).
5. Touch **smartphone link**.
6. Touch the application icon.
The application screen is displayed.

iPhone® error messages

If the infotainment system fails to activate the application on the iPhone®, an error message is displayed:



If required:

- Unlock the iPhone®.
- Close the other active application.

- Install the application on the iPhone®.

If the iOS version of the iPhone® is less than 4.0, an error message is displayed:



- Activate the application on the iPhone®, then press the required application menu on the infotainment system.

Android smartphone error messages

If the infotainment system fails to activate the application on the smartphone, connected with Bluetooth®, an error message is displayed.



1. Reset all settings related to the phone, then press the required application menu on the infotainment system.

 
2. Reconnect the smartphone to the infotainment system with Bluetooth®, then press the required application menu on the infotainment system.
3. When stopping the application on the smartphone, it may take some time to return to normal operation.

Activate the application after approximately 10 to 20 seconds.

Displaying/hiding application icons

To display or hide application icons on the smartphone link menu:

1. Press  (21).
2. Touch **smartphone link**.



3. Touch **settings**.



The app settings menu is displayed.

4. Press an application icon to hide the application icon shown on the smartphone link menu.
5. Press an application icon to display the application icon hidden on the smartphone link menu. A check mark is shown.
6. Touch **OK**.

Note

If an application is activated on the smartphone link menu and a phone is connected,  is displayed on the HOME screen.

Stitcher internet radio

Some images and explanations may vary due to mobile phone operating systems, versions and/or application (app) versions.

Using Stitcher

Listen to news, comedy, sports and radio talk shows in one app.

Choose from 5,000+ on demand podcasts and live AM/FM stations.

Note

Stitcher requires an active data connection to function.

1. Install the Stitcher application on the smartphone.
2. Connect the smartphone and the infotainment system through the USB port or Bluetooth®.

iPhone: USB connection

Android phone: Bluetooth® connection

3. Activate the Stitcher application on the smartphone.

To use Stitcher:

4. Press  (21).
5. Touch **smartphone link**.



6. Touch **Stitcher**.



The Stitcher screen is displayed.

Note

If a smartphone is not connected to the infotainment system or the application is not installed on the smartphone, the Stitcher menu is not displayed.

Thumbs up and thumbs down

Rate songs/content using thumbs up and thumbs down.

- Touch  or .

Saving the favourite station

- Press  to save the station as a favourite station.

Pause

1. Touch  during playback.
2. Touch  to resume play.

Playing the next station

- Touch  to move to the next station.

Using the Stitcher menu

1. Touch **MENU** during play.



2. Touch ▲ or ▼ to scroll through the list.
3. Touch to select.

Pandora internet radio

Some images and explanations may vary due to mobile phone operating systems, versions and/or application (app) versions.

Using Pandora

Pandora® is an internet radio service that streams personalised radio stations based on artists, songs, genres and comedians.

Create stations using the Pandora website or smartphone application, then use 👍 (thumbs up) or 👎 (thumbs down) to personalise stations. To set up an account or for more information, go to www.pandora.com.

Note Pandora requires an active data connection to function.

1. Install the Pandora application on the smartphone.
2. Connect the smartphone and the infotainment system through the USB port or Bluetooth®.

iPhone: USB connection

Android phone: Bluetooth® connection


3. Activate the Pandora application.

To use Pandora:

4. Press ⏮ (21).
5. Touch **smartphone link**.



6. Touch **Pandora**.

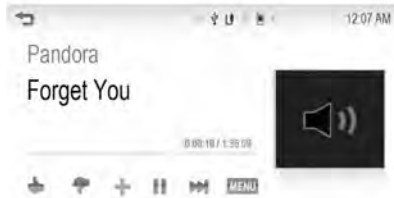

The Pandora screen is displayed.

Note

If a smartphone is not connected to the infotainment system or the application is not installed on the smartphone, the Pandora menu is not displayed.

Bookmarks

Touch **+** while playing a song to bookmark either the artist or the song. Bookmarks are viewable on www.pandora.com.

Thumbs down

Touch  to change to the next song and not play the song on this station again. This helps Pandora choose which songs should not play on this station. This feature is only available on user created stations.

Thumbs up

Touch  to help Pandora choose which songs should play on this station.

Pause

1. Touch **II** during playback.
2. Touch **▶** to resume play.

Playing the next station

- Touch **▶▶** to move to the next song.

Pandora skip limit

Pandora limits the number of skips allowed on their service. When the skip limit is reached,  will not skip the currently playing track, but  feedback will be recorded.

Pandora advertisements

Pandora may display advertisements. Artist name and track title will not be displayed and the skip track button is not available.

Tuneln® radio

Tuneln® is an internet based radio service that provides live streaming to thousands of radio stations from all over the world.



1. From the Home screen, select the Smartphone link
2. Select the Tuneln® icon  on the touch-screen
3. Follow the prompts on screen to listen to radio stations streamed live from around the world.

BringGo™ navigation system

You will first need to purchase the BringGo™ App from the iTunes or Google Play store.

The full Navigation system allows you to access local search, 3D maps, turn-by-turn directions and emergency contacts. The BringGo™ App is also supported by local points of interest including cafes and restaurants.



1. From the Home screen, select the Smartphone link.
2. Select the BringGo™ icon  on the touch-screen.
3. Follow the prompts on screen to use the navigation system.

Note

For full details on how to use this App, refer to www.bringgo.com/customer/manuals.html

Climate control

Air conditioning system	175
Air vents.....	178
Maintenance	179

Air conditioning system

Danger

Do not sleep in a vehicle with the air conditioning or heating system on. It may cause serious harm or death due to a drop in the oxygen level and/or body temperature.

Controls



- Temperature
- Demisting and defrosting

- Fan speed
- Air recirculation
- Air distribution
- Cooling

Temperature

Rotate the temperature switch:

Red: warm

Blue: cold

Fan speed

Rotate the fan speed switch  to the desired speed, between **0** and **4**.

Air distribution

Select an air outlet by rotating the switch. Air is directed:

- : To the instrument panel vents.
- : To the instrument panel vents and floor vents.
- : To the floor vents. A small amount of air is directed to the windscreen and side vents.
- : Between the windscreen and floor vents and some to the side vents.
- : To the windscreen with a small amount of air directed to the side vents.

Windscreen demister



1. Rotate the temperature switch to the desired temperature.
2. Press .
3. Rotate the fan speed switch  to the desired speed.
4. Rotate the air distribution switch to .

Note

If air conditioning is not required, rotate the air distribution switch to .

Air recirculation system



1. Press .

** Warning**

Driving with recirculation mode on for a prolonged period of time can make you sleepy. Periodically switch to outside air mode for fresh air.

The exchange of fresh air is reduced in air recirculation mode. In operation without cooling, the air humidity increases, so the windows may mist up. The quality of the passenger compartment air deteriorates, which may cause the vehicle occupants to feel drowsy.

Cooling

The air conditioning system cools and dehumidifies (dries) the air when the outside temperature is a little above the freezing point, therefore condensation may form and drip from under the vehicle.

If no cooling or drying is required, switch the cooling system off to save fuel.

Even though the air conditioning is turned on, the vehicle will produce warm air if the air temperature switch is in the red area.

1. Turn the ignition on.
2. Rotate the temperature switch to cold air.
3. Press .
4. Rotate the fan speed switch to the required speed.
5. Rotate the air distribution switch to the required setting.

To turn the air conditioning system off:

1. Rotate the fan speed switch  to 0.

Maximum cooling




Use maximum cooling for quick cooling of the passenger compartment.

1. Turn the ignition on.
2. Rotate the temperature switch to cold air.
3. Press .
4. Rotate the fan speed switch  to 4.
5. Push .

Air vents

Adjustable air vents

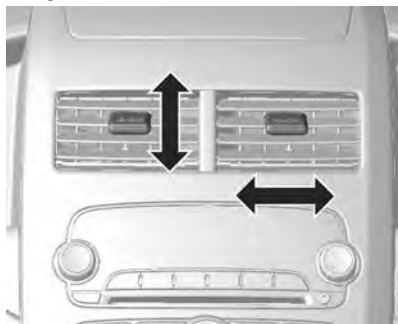

Direct the air flow by tilting the vents.

Note

At least one air vent must be open while the air conditioning is on.



1. Rotate the switch anticlockwise.
2. Rotate the vent to the desired direction.
3. To close, rotate the switch clockwise.

Warning


Do not attach objects to the vents.
Damage or injury may occur.

Fixed air vents

Fixed air vents are located beneath the windscreen, front door windows and in the footwells.

Maintenance

Air intake

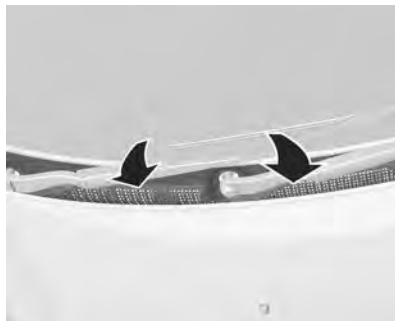

Outside air is drawn into the vehicle through the opening between the bonnet and the windscreen. Keep the area clear of debris.

Pollen/dust filter

The passenger compartment air filter filters contaminants such as pollen and dust from entering the vehicle.

Caution

Have the passenger compartment air filter replaced if driving frequently on dusty and unpaved roads or polluted areas.

Air conditioning regular operation

To ensure efficient performance, switch the cooling on for a few minutes once a month, even in winter.

Note

Cooling is not possible when the outside temperature is low.

Driving and operating

Driving information.....	180
Starting and operating	180
Automatic transmission	184
Manual transmission.....	189
Brakes	190
Ride control systems	192
Object detection systems	195
Fuel.....	199

Driving information

Before entering the vehicle

Check that windows, mirrors and lamps are clean.

Visually check tyre inflation. Check tyre pressures weekly.

Before driving off

1. Close and secure all doors.
2. Position the seat for comfortable driving.
3. Adjust rear view mirrors.
4. Fasten seat belts.
5. Check that warning indicators illuminate when turning the ignition on. See Warning lights, gauges and indicators on page 55.

Starting and operating

New vehicle running-in


Use the following precautions to improve performance:

- Do not make full throttle starts.
- Avoid downshifting to brake or slow the vehicle.
- Avoid hard stops except in emergencies. This will allow your brakes to bed in properly.
- Avoid hard stops except in emergencies to avoid premature wear and early replacement of brakes.
- Avoid heavy acceleration and prolonged high speed driving to avoid damage to the engine and to conserve fuel.
- Do not tow any other vehicle.

Brakes

- Do not let the vehicle run down hills, or coast with the engine off, as the power assistance does not operate.
- Ensure that there are no obstructions which could limit brake pedal use.
- Continuous or heavy use of brakes will shorten the life of the brake pads.

Ignition positions

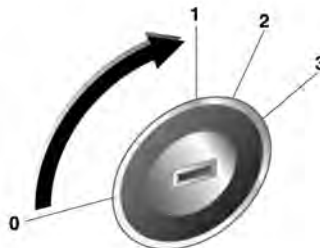

Warning

Do not turn the engine off while the vehicle is moving as there will not be any power assist for brakes or steering.

Never remove the key while the vehicle is moving, as this will lock the steering.

0: (LOCK) The key can only be inserted and removed from this position.

1: (ACC) When the key is in this position, the audio system operates.


2: (ON) When the key is in this position, the engine is ready to start and all electrical systems are active.

3: (START) Turn the key to this position and release when the engine is running.

Caution

Do not leave the key in positions 1 or 2 for a long time, unless the engine is running, otherwise the vehicle's battery will discharge.

Starting the engine

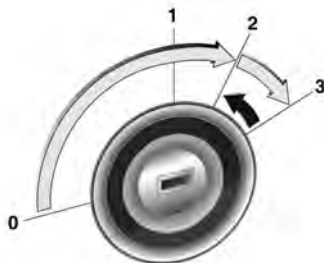

1. Apply the park brake.
2. Turn the key to position 1 while moving the steering wheel slightly to release the lock.
Manual transmission: Push the clutch pedal to the floor and move the shift lever to the neutral position.
Automatic transmission: Move the shift lever to **P** or **N**.
Do not accelerate.
3. Turn the key to position 3.

4. Release the key when the engine is running.

Before restarting or to switch the engine off, turn key back to position 0.

Caution

Do not keep the key in position 3 for more than 10 seconds.
If the engine does not start, wait 10 seconds before trying again.

Parking

1. Apply the park brake.
2. Automatic transmission: Select position **P**.
Manual transmission: If facing uphill or on flat ground, select 1st gear. If facing downhill, select reverse gear.
On an uphill slope, turn the front wheels away from the kerb.
On a downhill slope, turn the front wheels towards the kerb.
3. Shut all windows.
4. Turn the ignition off and remove the key.
5. Press  on the key to lock all doors. See Keys and locks on page 16.

⚠ Warning

Be careful where you park or drive. As with any vehicle, do not park or operate the vehicle in areas where combustible materials such as dry grass or leaves can come in contact with a hot exhaust system.

Exhaust gases are hazardous, especially if they concentrate in closed rooms.

Never leave the engine running in an enclosed space such as a closed garage or underground car park.

Engine exhaust**⚠ Danger**

Engine exhaust gases contain poisonous carbon monoxide, which is colourless and odourless and could be fatal if inhaled.

If exhaust gases enter the interior of the vehicle, open the windows. Have the cause of the fault repaired by a Holden Dealer.

Avoid driving with an open tailgate/boot, otherwise exhaust gases could enter the vehicle.

Catalytic converter

The catalytic converter reduces the amount of harmful substances in the exhaust gas.

Caution

Use of low quality fuel or fuel with too low an octane number may damage the engine, the catalytic converter or electronic components.

Unburnt petrol will overheat and damage the catalytic converter. Therefore avoid excessive use of the starter, running the fuel tank dry and starting the engine by pushing or towing.

If the engine misfires, runs unevenly, engine performance is reduced or other problems occur, contact a Holden Dealer as soon as possible.

In an emergency, drive for a short period, keeping the vehicle and engine speed low.

Automatic transmission

The automatic transmission allows manual gear shifting (manual mode) or automatic gear shifting (automatic mode).

The automatic transmission is an electronically controlled six-speed transmission. Sixth gear is overdrive.

Warning

Do not press the accelerator pedal while shifting from **P** or **N** to **R** or a forward gear.

Use **D** as much as possible.

Never shift to **P** or **R** while the vehicle is in motion.

When stopping on an uphill grade, do not hold the vehicle in place by pressing the accelerator pedal. Use the brake pedal.

Press the brake pedal when shifting from **P** or **N** to **R** or a forward gear.

Selecting a gear


1. Press the brake pedal while moving the shift lever to either the **R**, **D** or **M**.

Warning

Do not shift between **D** and **R** or **P** while the vehicle is moving.

2. Release the park brake and the brake pedal.
3. Slowly press the accelerator pedal.

Transmission display

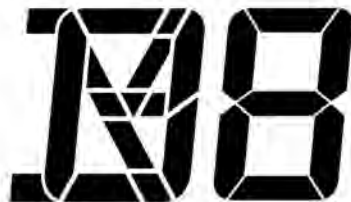

The selected gear or transmission mode is displayed on the instrument cluster.

Shift lever



- P:** (park) In park position, the front wheels are locked. Select **P** only when the vehicle is stationary and the park brake is applied.
- R:** (reverse) Place in reverse only when the vehicle is stationary.
- N:** (neutral)
- D:** (drive) Used for general driving. Allows the transmission to be shifted into any of the six forward gears.
- M:** (manual) See Manual mode on page 186.

Caution

Do not accelerate while engaging a gear.

Never depress the accelerator pedal and brake pedal at the same time.

When a gear is engaged, the vehicle slowly begins to creep when the brake is released.

Do not use the **P** (park) position in place of the park brake.


Turn off the engine, apply the parking brake and remove the ignition key when leaving the vehicle.

Never leave the vehicle unattended while the engine is running.

Shifting between gear positions



Movement between certain gear positions requires pressing the release button on the shift lever and/or the brake pedal to the floor.

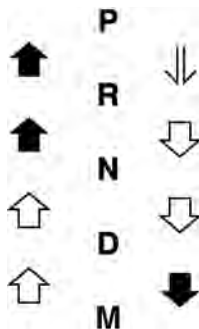


Follow the descriptions as indicated by the arrows when moving the shift lever.



Press the release button to select a gear.



 Push the brake pedal to the floor and press the release button to select a gear.



Shift freely to select a gear.

Manual mode



1. Move the shift lever to position **M**.
2. Press the gear shift button on the side of the shift lever:
 - +: shift up gear
 - : shift down gear

Note

- To maintain the required levels of vehicle performance and safety, certain gearshifts may not occur when in manual mode.

- Downward shifts are made automatically when the vehicle slows down.
- When the vehicle stops, first gear is automatically selected.

Engine braking

To utilise the engine braking effect, select a lower gear when driving downhill.

Warning

Do not downshift by two or more gear positions at one time.

Note

Use of engine compression during long mountainous descents may prolong the life of your brakes.

Parking

1. Press the brake pedal.
2. Select position **P**.
3. Pull the park brake lever up firmly.
4. Remove the ignition key.

Kickdown



For faster acceleration:

1. Press the accelerator pedal all the way down and hold.
The transmission shifts to a lower gear depending on the engine speed.

Neutral idle control

This feature is designed to reduce fuel consumption when idling and stationary.

When idling in a forward gear while the brake pedal is pressed, the transmission switches into neutral.

When the brake pedal is released, the transmission switches back to the selected forward gear.

Fault

In the event of a fault,  illuminates. The transmission no longer shifts automatically or manually because it is locked in a certain gear.

Contact a Holden Dealer.

Interruption of power supply

If the power supply is interrupted, the shift lever cannot be moved out of position **P**.

If the battery is discharged, start the vehicle using jump leads. See Jump starting on page 237.

If the battery is not the cause of the fault, release the shift lever and remove the ignition key from the ignition lock.


Release shift lever

Before shifting out of **P**:

1. Turn the ignition on.
2. Press the brake pedal to the floor.

If you cannot shift out of **P** with the ignition on and the brake pedal pressed:

3. Turn the ignition off and remove the key.
4. Press and hold the brake pedal.
5. Pull up on the park brake lever.

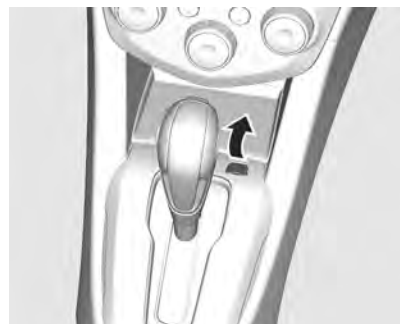

6. Remove the cap on the centre console with a thin object such as a flat-blade screwdriver.



7. Press the ignition key into the slot.
8. Move the shift lever to **N**.
9. Remove the key from the slot.
10. Replace the cap.
11. Have the vehicle repaired by a Holden Dealer as soon as possible.

Manual transmission



- To engage reverse gear, pull the ring on the shift lever upwards then engage the gear.
- Do not engage reverse gear while the vehicle is moving.
- If the gear does not engage, move the shift lever to neutral, release the clutch pedal, press the clutch pedal again then repeat gear selection.

- Ensure the clutch pedal is completely pushed to the floor.
- Do not use the pedal as a foot rest.

Caution

Do not drive with your hand resting on the shift lever.

Brakes

The brake system comprises two independent brake circuits.

If one brake circuit fails, the vehicle can still be braked using the other brake circuit. However, braking effect is achieved only when the brake pedal is pressed firmly. Considerably more force is needed for this. The braking distance is extended. Contact a Holden Dealer.

Caution

Do not drive with your foot resting on the brake pedal. This will accelerate wear of the brake components and cause the brakes to become overheated.

Warning

After driving through deep water, washing the vehicle or using the brakes excessively such as when descending a steep hill, the brakes can temporarily lose their stopping power. This may be due to wet brake components or overheating.

Shift to a lower gear when going down hills. Do not continuously apply the brakes.

To dry out the brakes:

- Ensure there is a clear area ahead.
- Lightly apply the brakes.
- Maintain a slow forward speed until performance returns to normal.

Antilock brake system (ABS)

The ABS:

- Continuously monitors the vehicle's braking system preventing the wheels from locking up.
- Allows maximum braking effort while full steering control is retained, even in the event of panic braking.

Warning

Do not let this special safety feature tempt you into taking risks when driving. Traffic safety can only be achieved by adopting a responsible driving style. You should always adjust the vehicle's speed to suit road and traffic conditions. Always maintain an adequate distance to the vehicle in front of you.

Operation

ABS operation is noticeable by pulsing of the brake pedal and the noise of the regulation process.


Keep the brake pedal fully pressed throughout the braking process, without pumping it.

Caution

If there is a malfunction with the ABS, the vehicle's brake system remains operational, but without ABS assistance. Have a Holden Dealer check the system as soon as possible.

See Antilock Brake System (ABS) warning light on page 60.

Park brake

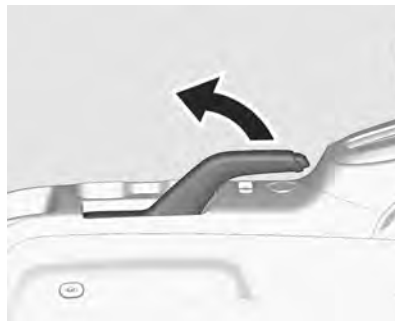

Applying the park brake:

1. Pull the lever straight up, without pressing the release button.

Releasing the park brake:

1. Pull the lever slightly upwards.
2. Push in the release button on the top of the lever and lower the lever all the way down.

⚠ Warning

Never drive the vehicle with the park brake applied.

Brake assist

If the brake pedal is pressed quickly and forcefully, maximum brake force is automatically applied (full braking).

Maintain steady pressure on the brake pedal for as long as full braking is required. Maximum brake force is automatically reduced when the brake pedal is released.

Hill start assist (HSA)

The HSA system assists in preventing rollback when driving off, while on an incline.

1. Release the brake pedal.
2. Press the accelerator pedal.

The brakes remain on for approximately 2 seconds.

Ride control systems

Traction control system (TCS)

TCS improves driving stability when necessary, regardless of the type of road surface or tyre grip, by preventing the driving wheels from spinning.

As soon as the driving wheels start to spin, engine output is reduced and the wheels are braked individually. This considerably improves the driving stability of the vehicle on slippery road surfaces.

TCS is activated as soon as the ignition is turned on.

Warning

Do not let this special safety feature tempt you into taking risks when driving.

Adapt speed to the road conditions.

Operation



TCS can be deactivated when spinning of drive wheels is required:

1. Press 
 illuminates

To reactivate TCS:

1. Press  again
TCS is also reactivated the next time the ignition is turned on.
See Traction Control System (TCS) off light on page 61.

Electronic stability control (ESC)

The ESC:

- Improves driving stability in any driving situation.
- Assists in maintaining vehicle stability when the vehicle's grip level is exceeded such as a sudden lane change, slippery or unexpected road conditions.
- Alters engine power and/or braking on specific wheels, improving the vehicle's steering control and power delivery, on wet or slippery roads, particularly on snow and ice.

Warning

Do not let this special safety feature tempt you into taking risks when driving. Traffic safety can only be achieved by adopting a responsible driving style. The vehicle's speed should always be adjusted to suit road and traffic conditions.

Activation

- The ESC is automatically switched on each time the engine is started.
- When ESC is active  illuminates.

See Electronic Stability Control (ESC) light on page 61.

Deactivation



In certain circumstances, it may be helpful to deactivate ESC.

1. Press  for several seconds.

 illuminates on the instrument cluster.

ESC is reactivated by pressing  again.

Cruise control



The cruise control:

- Maintains the vehicle's speed without pressure on the accelerator pedal.
- Will only operate at speeds above approximately 25 km/h.
- Controls are located on the passenger side of the steering wheel.

⚠ Warning

Do not use the cruise control when road or driving conditions require varying speeds. A consistent speed isn't practical in heavy, varying traffic or on winding, slippery or rough roads.

The cruise control does not apply the vehicle's brakes. Therefore the vehicle may gain speed when going down steep hills.

When climbing steep hills it is possible for the vehicle to lose speed. You may need to switch off the cruise control and use the accelerator pedal.

Setting cruise control

1. Press .
 illuminates white.
2. Accelerate to the desired speed (above 25 km/h).
3. Rotate the wheel towards **SET/-** and release.
 illuminates green.
4. Take your foot off the accelerator pedal.

Increasing set speed

1. Rotate the wheel towards **RES/+** and hold it.
The vehicle will accelerate.
2. Release the wheel at the desired speed.
3. Rotate the wheel towards **RES/+** and release it immediately.
The speed will increase by 1-2 km/h.

Decreasing set speed

1. Rotate the wheel towards **SET/-** and hold it.
The vehicle will decelerate.
2. Release the wheel at the desired speed.
3. Rotate the wheel towards **SET/-** and release it immediately.
The speed will decrease by 1-2 km/h.

To temporarily accelerate

When the cruise control is on:

1. Press the accelerator pedal.

Note

Increasing speed will not interfere with cruise control operation or change the set speed.

To return to the set speed:

1. Take your foot off the accelerator pedal.

Temporary deactivation

Do one of the following:

- Press $\otimes$.
- Reduce vehicle speed below approximately 25 km/h.
- Press the brake pedal or press the clutch pedal.

$\otimes$ illuminates white.

Resume stored speed

When the cruise control has a desired speed previously set:

1. Press **RES/+**.

The most recently set speed will automatically resume.


Deactivation

1. Press $\otimes$.
 $\otimes$ extinguishes.

Object detection systems

Park assist (PA)

The vehicle may have PA.

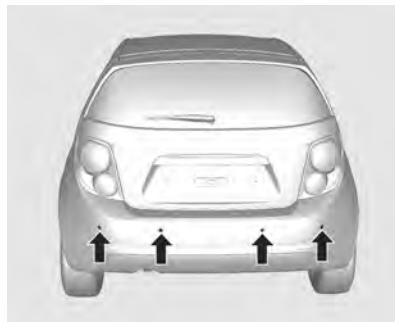

The PA system is able to detect and indicate obstacles at the rear of the vehicle when reversing.

The system consists of four sensors on the rear bumper.

Warning

The driver is always responsible for taking care and attention while manoeuvring the vehicle. The PA is only an aid and is neither intended to, nor able to take over any responsibility.

The park sensors may not be able to detect all objects under every condition e.g. objects too close to the vehicle, objects above or below the sensors, or objects with a surface that absorbs ultrasonic waves. Additionally, some ambient conditions like ultrasonic waves or heavy rain can cause disruptive reflections from an object's surface. Such objects may not be detected.

Always manoeuvre the vehicle slowly to allow yourself sufficient time to react. The warning tones may not sound if the vehicle's speed is above 10 km/h.

Activation

The system is activated automatically when:

- The ignition is turned on
- Reverse gear is selected

Alarm tones

- Alarm tones sound when an object is detected.
- The interval between the alarm tones becomes shorter as the vehicle gets closer to an object.
- When the distance is less than 40 cm, the alarm tones sound continuously.

Deactivation

The PA is deactivated automatically when:

- Reverse gear is deselected.
- A fault occurs in the system.

Fault

If a fault occurs, **P_w** illuminates:

- Move the vehicle with care.
- Check and clean the sensors.

Notes on operation

- The alarm tones differ depending on the objects detected.
- If the sensors receive other ultrasonic signals e.g. metallic sounds or exhaust brake noise from heavy commercial vehicles, the system may not work properly.
- The system may not activate if the sensors are frozen or covered with dirt.
- Clean dirty sensors with a soft sponge and clean water.
- Do not push or scratch the surface of the sensors.
- Do not hit or direct high pressure water directly at the sensors as they may be damaged.

- The system may not recognise sharp objects, thick winter clothes or other materials which absorb ultrasonic waves.
- The system may not operate correctly when the vehicle is driven over uneven surfaces.

Rear vision camera (RVC)

The rear vision camera (RVC) system is designed to assist the driver when reversing by displaying a view of the area behind the vehicle.

The RVC cannot display objects:

- Close to the corners of the vehicle.
- Forward of the camera.
- Higher than the camera.

Note

- The distance of the objects seen on the display differs from the actual distance.
- The area displayed depends on the road condition and vehicle orientation.

Warning

Never rely solely on the rear vision camera when reversing the vehicle. There are blind spots that cannot be sensed by the camera.

The rear vision camera is not intended to replace the driver's judgment or attention toward the rear of the vehicle when reversing.

Before entering the vehicle, always check the area around the vehicle is clear of obstacles and people.

Always perform head checks and use the vehicle's mirrors when reversing.


If the vehicle sustains any damage in the area of the rear vision camera, the camera may become misaligned. Contact your Holden Dealer.

Activation

When the ignition key is in the ON position and the vehicle is shifted into R (Reverse), the rear vision camera image is displayed on the infotainment display.

Once the vehicle is shifted out of R, the infotainment system display returns to the previous screen.


Guidelines

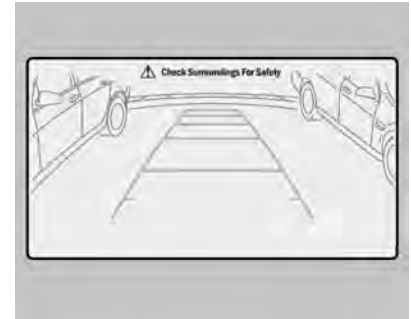

When the camera image is displayed, static guidelines are also displayed to assist with reversing the vehicle.

⚠ Warning

The driver is always responsible for taking care and attention while manoeuvring the vehicle. The camera display and guidelines are only an aid and are neither intended to, nor able to take over any responsibility.

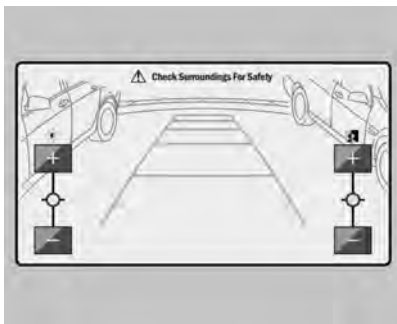Display settings

Display brightness and contrast can be adjusted.

1. Touch the infotainment display while the camera image is displayed.
2. Touch the + or - screen buttons.

Camera location

The camera is located on the tailgate or boot lid at the rear of the vehicle.

Cleaning

The lens requires regular cleaning to ensure optimum performance.

Use only a soft cloth, mild soap and water.

⚠ Warning

Do not use abrasive cleaners or scouring pads as they could scratch the lens, impairing the systems performance.

Always keep the camera lens free from dirt, snow or ice. Only use mild soap and water with a soft cloth to clean the lens.

If the system does not operate properly

The rear view camera may not operate properly or display a clear image if:

- The rear view camera or the guidelines are turned off. See Vehicle settings on page 72.
- It is dark.
- The sun or headlight beams are shining directly into the camera lens.
- Ice, snow, mud, or anything else covers the camera lens.

- There are extreme temperature changes.
- The rear of the vehicle is damaged. The position and mounting angle of the camera can change or the camera can be affected. Have the camera and its position and mounting angle checked at your Holden dealer.

Fuel

Danger

EXHAUST WARNING – CARBON MONOXIDE POISONING

Exhaust gases can produce carbon monoxide, a dangerous gas, which can cause unconsciousness and even death to both humans and animals.

Gases could be inhaled if the exhaust system on your vehicle is faulty.

To protect against exhaust gases entering the vehicle, the exhaust system and body should be inspected:

- Each time the vehicle is serviced.
- Whenever a change is noticed in the sound of the exhaust system.
- Whenever the exhaust system, underbody or rear of the vehicle is damaged.

Take the vehicle to a Holden Dealer if you think the vehicle needs inspecting for any of the above reasons.

Do not sit (or leave children or pets) in a parked vehicle for any extended period of time with the engine running. Do not run the engine in an enclosed area (such as the garage) any longer than is needed to move the vehicle.

Driving with the tailgate/boot open is not recommended. If you must travel with the tailgate/boot open, close all windows, ensure that the climate controls are set to outside (rather than recirculate) with air directed to the face and the fan on the highest speed. Do not exceed 50 km/h.

⚠ Warning**FUEL**

Fuel is extremely flammable and highly explosive.

Always switch off the engine of the vehicle and any mobile phones when refuelling.

Do not smoke or allow open flames or sparks near the vehicle when refuelling.

If fuel fumes are detected while driving, the cause should be found and corrected without delay by a Holden Dealer.

Caution**FUEL ADDITIVES**

Various additives are used in the formulation of good quality fuel and the use of supplementary additives in fuel is not required unless specified by Holden.

Under no circumstances should fuel containing the manganese additive known as MMT (methyl cyclopentadienyl manganese tricarbonyl) be used, as this additive is known to cause contamination of catalytic converters, spark plugs and the malfunction of On-Board-Diagnostic (OBD) systems. The use of fuel additives that are not recommended by Holden may affect your New Vehicle Voluntary Warranty to the extent that Holden considers that the additives affect the specifications and quality of the vehicle.

Caution**USE OF FUEL
CONTAINING ETHANOL**

When purchasing such fuel, we recommend that the vehicle be operated on fuel containing no more than 10% ethanol.

Under no circumstances should fuel containing more than 10% ethanol be used. Use of such fuels may result in engine malfunction, starting and operating difficulties and materials degradation. These adverse effects could result in permanent damage to the vehicle and personal injury. It is also important to note that when ethanol blends are used, fuel consumption can be expected to increase due to the lower energy content of ethanol.

The use of fuel containing more than 10% ethanol may also affect your New Vehicle Voluntary Warranty to the extent that Holden considers that the fuel affects the

specifications and quality of your vehicle.

The use of any fuel, other than the fuel specified below, may seriously damage the vehicle and may void the warranty. Only clean fuel of good quality should be used.

Fuel type

Use unleaded petrol of regular 91 Research Octane Number (RON) rating or higher.

Use of Premium unleaded petrol (95 RON or higher) on the 1.4 L and 1.6 L engines, may provide a small improvement in performance and fuel economy.

Use of Premium unleaded petrol (95 RON or higher) on the 1.4 L engine is recommended.

Purchasing your fuel from a reputable fuel retailer may reduce the risk of purchasing fuel which contains abnormal fuel properties.

Caution

Use of fuel with too low an octane rating could lead to uncontrolled combustion and engine damage.

Equivalent standardised fuels with an ethanol content of max. 10% by volume may be used.

Refuelling

Always fill the fuel tank at the intermediate or fast fill rate. Do not add any more fuel after the fuel filler first clicks off or fuel blows back. This allows room for the fuel to expand inside the tank.

Wipe off any overflowing fuel immediately from the vehicle. Replace the fuel cap and close the fuel opening then spray or splash with water.




The fuel filler door is located in the driver side of vehicle, at the rear.

1. Stop the engine.



2. Press .
3. Open the fuel filler door.
4. Rotate the fuel filler cap slowly, anticlockwise.

If a hissing sound is heard, wait for it to stop before completely unscrewing the cap.

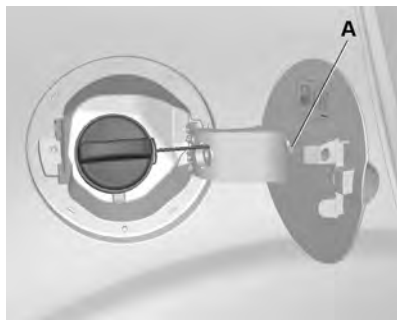

5. Remove the cap.
The cap is tethered to the hinge.
6. Hook the cap over (A) while refuelling.
7. After refuelling, close cap.
8. Rotate the cap clockwise until it clicks.
9. Push the fuel filler door closed until it latches.

Note If in cold weather the fuel filler door does not open, tap the door lightly.

Vehicle care

General information	203
Vehicle checks.....	205
Bulb replacement.....	216
Electrical system.....	222
Vehicle tools	226
Wheels and tyres.....	226
Jump starting	237
Towing	240
Appearance care	243

General information

Where specified, use only Holden genuine parts and accessories.

Emission information

The emission control systems are designed to reduce the amount of hydrocarbons (HC), carbon monoxide (CO), and oxides of nitrogen (NOx) that are emitted from the engine and fuel system into the atmosphere. HC and NOx, when exposed to sunlight under certain conditions, contribute to photochemical smog. In addition, CO is toxic when it becomes highly concentrated in the air.

Emission control system

Major emission control systems that the vehicle may have are:

1. Evaporative emission control system. This system is designed to prevent the escape of fuel vapour from the fuel system and

recycle the vapours through the normal combustion process.

2. Crankcase emission control system. This system is designed to prevent blow-by gases from escaping into the atmosphere and recycle them through the combustion process.
3. Exhaust emission control system. The various components of this system operate collectively to limit HC, CO and NOx emissions in the exhaust gas. The exhaust emission control system consists of components including electronic control of spark, fuel and idle speed. In addition vehicles have a catalytic converter and closed loop mixture control system.

It is recommended that service and repair to fuel or emission systems be carried out by an authorised Holden Dealer.

Owner responsibility

The engine, engine control system and exhaust system of the vehicle must NOT be modified in any way.

Warning

Any person who removes, modifies or hinders any part of the emission control system may be contravening Australian Design Rules. It is also illegal to drive a vehicle modified in this way.

Maintenance requirements

Have the vehicle serviced at the frequency shown in the Maintenance schedule, in the Service/Warranty Booklet.

It is recommended that servicing be carried out by an authorised Holden Dealer who will maintain the vehicle's emission control system as per the Service/Warranty Booklet.

Vehicle storage

If the vehicle is to be stored for several months:

- Wash and wax the vehicle.
- Clean and preserve rubber seals.
- Change engine oil.
- Drain the washer fluid reservoir.
- Check coolant and corrosion protection.
- Adjust the tyre pressure to the value specified for a full load.
- Park the vehicle in a dry, well ventilated place.
- Engage first or reverse gear to prevent the vehicle from moving.
- Do not apply the park brake.
- Open the bonnet, close all doors and lock the vehicle.

Disconnect the clamp from the negative terminal of the vehicle battery.

Close the bonnet.

Before returning the vehicle to the road:

- Connect the clamp to the negative terminal of the vehicle battery.
Check the power windows operation.
- Check the tyre pressures.
- Fill the washer fluid reservoir.
- Check the engine oil level.
- Check the coolant level.

Vehicle checks

Doing your own service work



Warning


Do not touch engine compartment components when the ignition is on due to extremely high voltages.

Note


The cooling fan may still operate when the ignition is off.

Bonnet


Opening

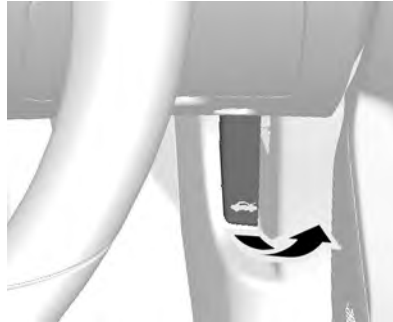

1. Pull the release lever rearwards.
2. Return the lever to its original position.

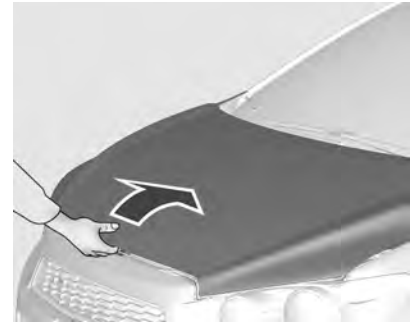

3. Push the safety catch towards the passenger side and open the bonnet.

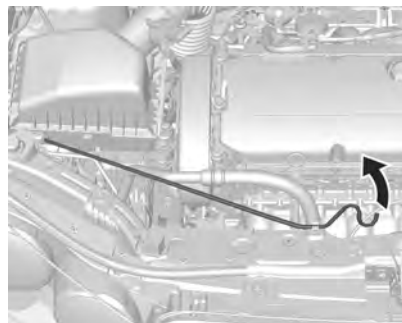

4. Pull up the support rod away from the holder.
5. Secure on the driver side of the bonnet.

Closing


Warning

To avoid injury and/or damage to the vehicle, check each time, before the bonnet is closed, that the contact area is unobstructed.

1. Place the support rod into the holder.
2. Lower the bonnet and allow it to drop into the catch.
3. Check that the bonnet is engaged.

Warning

If while driving you notice that the bonnet has not been properly closed, pull the vehicle over to the side of the road at the earliest possible moment and close the bonnet correctly.

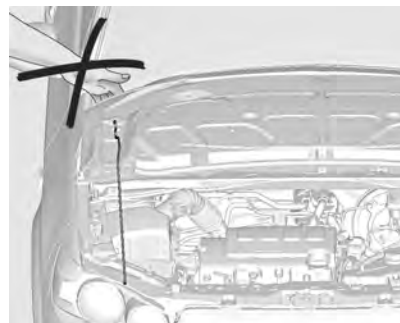


Note

Do not pull down on the bonnet when the bonnet is supported by the rod.


Engine compartment overview

1.6 L engine

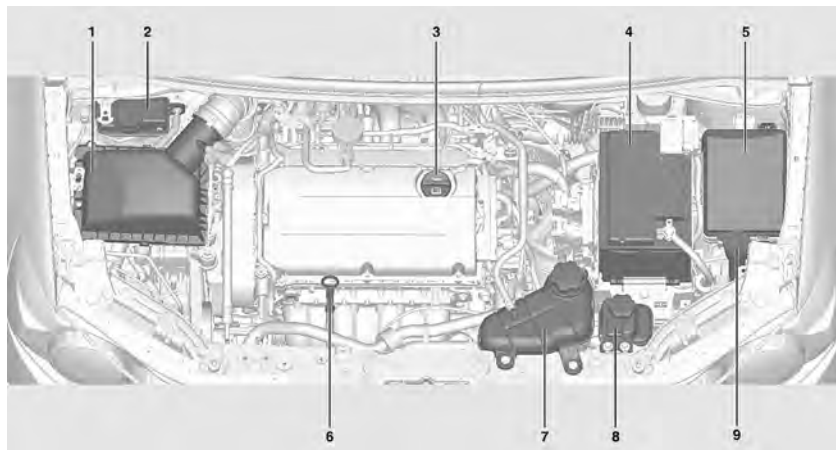

1. Engine air filter, see page 211
2. Brake fluid reservoir, see page 214
3. Engine oil filler cap, see page 210
4. Battery, see page 215
5. Fuse box, see page 223
6. Dipstick for engine oil, see page 209
7. Engine coolant reservoir, see page 211
8. Hydraulic power steering fluid reservoir, see page 212
9. Windscreen washer fluid reservoir, see page 213

1.4 L engine

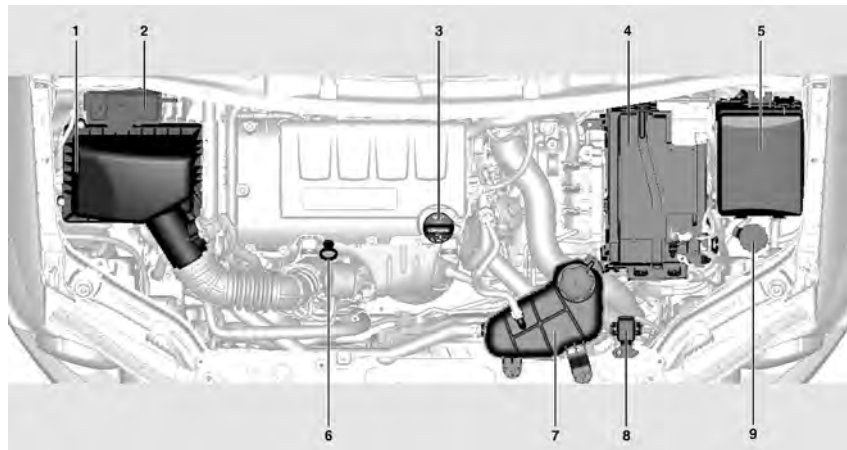


1. Engine air filter, see page 211
2. Brake fluid reservoir, see page 214
3. Engine oil filler cap, see page 210
4. Battery, see page 215
5. Fuse box, see page 223
6. Dipstick for engine oil, see page 209
7. Engine coolant reservoir, see page 211
8. Auxiliary fuse box, see page 224
9. Windscreen washer fluid reservoir, see page 213


Engine oil

Checking oil level

- Check the engine oil level before a long journey.
 - The engine must be at operating temperature and the ignition turned off for at least 10 minutes.
1. Park the vehicle on a level surface.
 2. Remove the dipstick and wipe clean.
 3. Insert the dipstick to the stop on the handle.

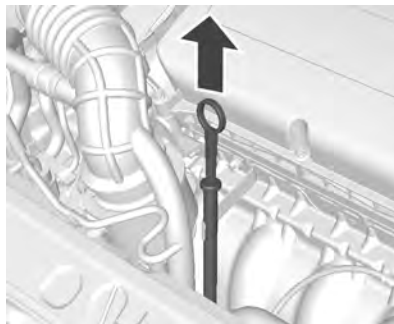

4. Remove and read the oil level.

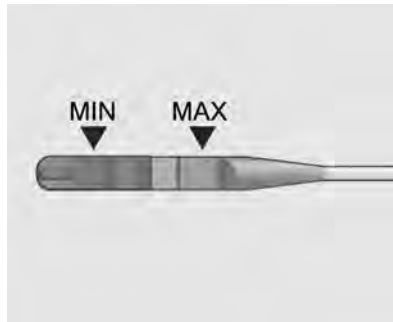

The level should be at the **MAX** mark. Add oil if the level is at the **MIN** mark.

5. Insert the dipstick to the stop on the handle.


Note

The engine oil level must not exceed the **MAX** mark on the dipstick.

For correct engine oil specification, see Recommended fluids, lubricants and parts on page 249.

Adding engine oil

See Capacities on 254.

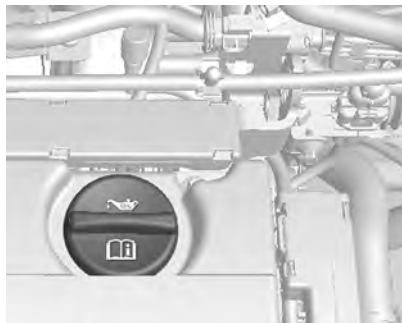

The engine oil filler cap is located on the top of the engine.

1. Rotate the engine oil filler cap anticlockwise and remove.
2. Add enough oil to reach below the **MAX** mark on the dipstick.
3. Check the level on the dipstick and add further oil if necessary.

The engine oil must not exceed the **MAX** mark on the dipstick.

Caution

Overfilled engine oil must be drained or suctioned out.

4. Replace the engine oil filler cap tightly by rotating clockwise.

Note

Non-detergent and other low quality oils, the use of break-in oil, tune up compounds, friction reducing compounds and other supplemental additives are not recommended.

Danger

Engine oil is an irritant and if ingested, can cause illness or death.

Keep out of reach of children.

Avoid repeated or prolonged contact with skin.

Wash exposed areas with soap and water or hand cleaner.

Be careful when draining the engine oil as it may be hot.


Engine oil change intervals

Refer to the Service/Warranty Booklet and see Engine oil life system on page 248.

Automatic transmission fluid

Automatic transmission fluid does not normally require servicing unless the vehicle is operated under certain conditions. Refer to the Service/Warranty Booklet.

Engine air filter

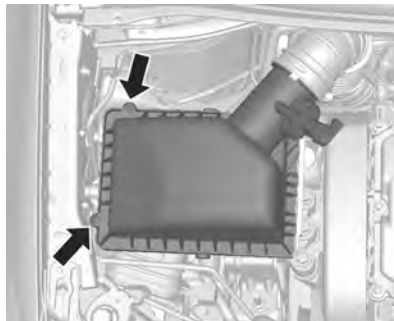

1. Unscrew both screws.
2. Loosen the cover hinges.
3. Open the cover.
4. Replace the air filter.
5. Lock the cover with the cover hinges and screws.

Caution

Do not operate the vehicle without the air filter installed.
Engine damage may occur.

Engine coolant

Engine coolant level

Check the coolant level at least once a week.

Checking coolant level

Warning

Do not remove the radiator cap if the engine and radiator are still hot. Scalding fluid and steam can be blown out under pressure which could cause serious burns.



If the cooling system is cold, the coolant level should be above the line on the coolant reservoir.

Adding coolant

Caution

If the coolant level is too low, engine damage may occur.

Do not spill coolant on the vehicle's exterior surfaces as it can damage the paintwork. If you do, wash it off immediately.

Note

Use only approved coolant. See Recommended fluids, lubricants and parts on page 249.

1. Turn the ignition off.
2. Remove the coolant reservoir cap.
3. Add the required amount of coolant.
4. Replace the cap securely.

If the coolant requires regular topping up, contact a Holden Dealer.

⚠Warning

Avoid repeated or prolonged contact with coolant.

Wash off with soap and water.

Keep out of reach of children.

Power steering fluid

Adding power steering fluid



The hydraulic power steering fluid level must be between the **MIN** and the **MAX** marks.

Use only Holden specified power steering fluid. See Recommended fluids, lubricants and parts on page 249.

1. Turn the ignition off.

Caution

Extremely small amounts of contamination can cause steering system damage and cause it to not work properly.

Do not allow contaminants to contact the fluid side of the reservoir cap/dipstick or to enter the reservoir.

2. Rotate the power steering fluid reservoir cap anticlockwise and remove.
3. Add the required amount of power steering fluid.
Do not overfill the reservoir.

If the power steering fluid requires regular topping up, contact a Holden Dealer.

Caution

Do not operate the vehicle without the required amount of power steering fluid. Damage to the power steering system may occur.

Washer fluid

Check the fluid level weekly.

Adding washer fluid

1. Lift the front of the cap up.
Use the correct amount of washer fluid additive. Refer to a Holden Dealer.
Do not use ordinary soap or detergent as they froth up and damage the wiper rubbers.
2. Secure the cap.

Brake fluid

Warning

Brake fluid is poisonous and corrosive and will damage the paint finish of the vehicle if spilt.

Caution

Avoid contact with eyes and skin. Wash any affected area immediately.

Checking brake fluid level



The level should be between the **MIN** and **MAX** area.

If the fluid level is correct, do not remove the reservoir cap, as brake fluid exposed to the atmosphere will quickly absorb moisture.

Adding brake fluid

See Recommended fluids, lubricants and parts on page 249.

1. Turn the ignition off.
2. Wipe the sides of the cap clean.
3. Rotate the brake fluid reservoir cap anticlockwise and remove.

4. Top up with the recommended brake fluid.

Warning

Using brake fluid other than GM recommended brake fluid may cause corrosion to components of the braking system and reduced braking performance.

Use only new brake fluid. Use of old, used or inferior brake fluid may endanger the functioning of the brake system.

5. Secure the cap and clean up any spilt fluid.

If the brake fluid requires regular topping up, contact a Holden Dealer immediately.

Caution

Do not dispose of used brake fluid with household waste. Use the local, authorised waste management facility.

Battery

Warning

Batteries emit an explosive gas mixture which may be ignited. Therefore, you should keep sparks and flames away from the battery at all times. Never smoke near a battery.

Batteries contain sulphuric acid. If acid contacts skin or clothing, flush immediately with plenty of water. In case of eye contact, flush with plenty of water and contact a doctor immediately. Battery acid also damages paint and fabrics. To minimise damage, wash off immediately.

Keep batteries out of the reach of children.

Take care with all metal objects and tools including items you may wear (for example jewellery, rings and metal watch bands) near battery terminals.

The vehicle battery is maintenance free.

Battery replacement

For battery location, see Engine compartment overview on page 207.

For replacement, refer to a Holden Dealer or authorised repairer.

Caution

Do not dispose of batteries with household waste.
Use the local, authorised waste management facility.

Battery disconnection

The battery may discharge if the vehicle is not used for approximately four weeks.

To disconnect the battery:

1. Turn the ignition off.
2. Disconnect the clamp from the negative terminal of the vehicle battery.

Ensure the ignition is turned off before reconnecting the vehicle battery.

For emergency starting when the battery is flat, see Jump starting on page 237.

Bulb replacement

Contact a trained service technician if unsure about the bulb replacement process.

When replacing bulbs:

- Turn the ignition off and remove the key.
- Turn off related switches.
- Fit bulbs of the specified wattage only.
- Do not touch bulbs or reflectors with bare hands.
- Clean stained bulbs with methylated spirits.
- For passenger side bulb replacement, remove the washer neck by rotating anticlockwise and pulling out. To replace the washer neck, rotate clockwise until it clicks into place.

Bulbs to be changed by a Holden Dealer

- Side turn signal lamps
- Centre High Mounted Stoplamp (CHMSL)
- Courtesy lamps
- Fog lamps

Caution


Condensation may temporarily appear on the inside of exterior lamp lenses after rain or washing the vehicle. Condensation occurs when there is a temperature difference between the inside and outside of the lamp allowing a fine mist on the inside surface of the lamp lens. This condensation will disappear when the vehicle is in a dry environment or the lamp is on. If water does collect in the lamp contact a Holden Dealer.

Headlamps

Low and high beam



1. Remove the protective cover.
2. Disconnect the electrical connector.

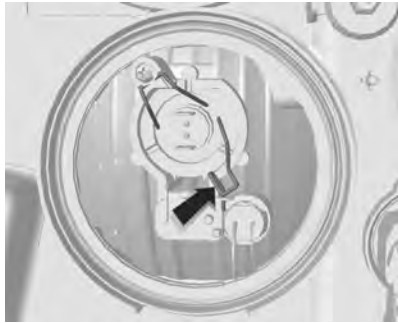

3. Press the spring clip to disengage.



4. Remove the bulb from the reflector housing.
5. Detach the plug connector from the bulb.
6. Insert a new bulb by engaging the lugs in the recesses on the reflector.
7. Attach the plug connector onto the bulb.
8. Engage the spring clip.
9. Place the headlamp protective cover in position and close.
10. Check lamp operation.

Parking lamps



1. Remove the protective cover.



2. Remove the side lamp bulb holder from the reflector.
3. Detach the plug connector from the bulb.



4. Remove the bulb from the socket.
5. Insert a new bulb.
6. Attach the plug connector onto the bulb.
7. Insert the side lamp bulb holder into the reflector.
8. Place the headlamp protective cover in position and close.
9. Check lamp operation.

Front turn signal lamps




1. Rotate the bulb holder anticlockwise to disengage.




2. Push the bulb into the socket slightly and rotate anticlockwise, to remove.
3. Insert a new bulb.
4. Place the bulb into the socket and rotate clockwise.
5. Replace the bulb holder and rotate clockwise to engage.
6. Check lamp operation.

Tail lamps, turn signals, stop lamps and reverse lamps

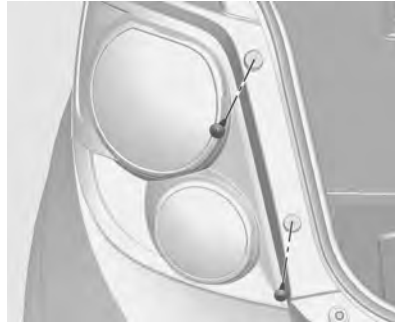


Hatch shown


1. Unscrew both screws.
2. Hold both sides of the tail lamp assembly.
3. Pull rearwards to disengage the two locator pins from the outer panel.

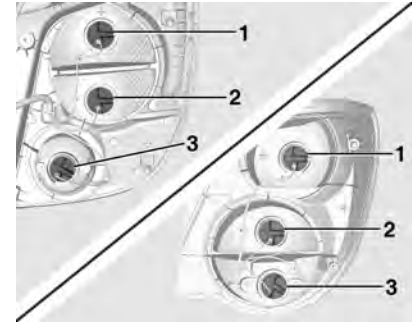

- Tail/stop lamp (1)
- Turn signal lamp (2)
- Reverse lamp (3)

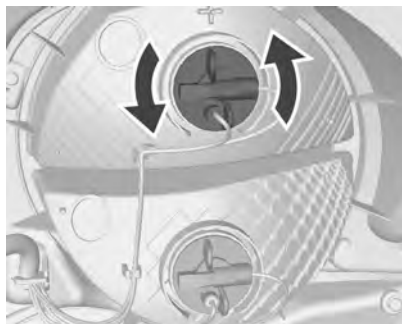

4. Rotate the bulb holder anticlockwise.

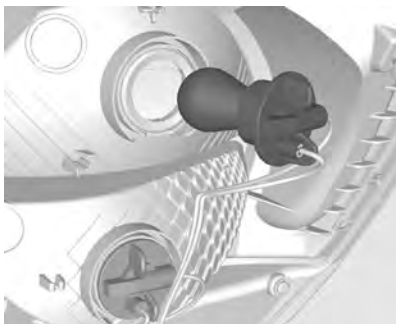

5. Remove the bulb holder.


Note

Avoid damage to the exposed bulbs.

6. Disengage the tail lamp bulb electrical harness from the retainer clips on the tail lamp assembly.
7. Renew the bulb.
8. Insert the bulb holder into the tail lamp assembly and screw into place.

9. Tighten the screws.
10. Close the covers and engage.
11. Check lamp operation.

Number plate lamp

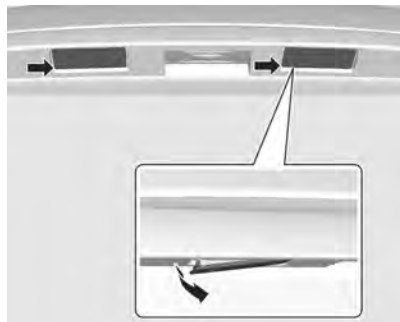


1. Prise the lamp out with a screwdriver.
2. Remove the bulb housing by pulling downwards.
Do not pull on the cable.
3. Rotate the bulb holder anticlockwise to disengage.
4. Remove the bulb from the holder.
5. Insert a new bulb.
6. Insert the bulb holder into the bulb housing and rotate clockwise.

7. Insert the bulb housing and secure using a screwdriver.
8. Check lamp operation.

Interior lamps

Load compartment lamp

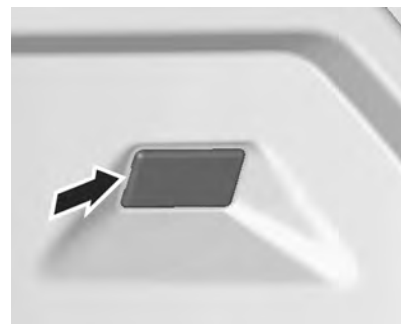

1. Using a flat-blade screwdriver, prise the lamp assembly outwards.



2. Remove the bulb.
3. Insert a new bulb.
4. Replace the lamp assembly firmly into place.
5. Check lamp operation.

Electrical system

Fuses

Warning

Turn off the ignition (LOCK position) and any electrical equipment before changing a fuse.

- Replace blown fuses promptly.
- A blown fuse can be recognised by its melted wire.
- Do not replace the fuse until the cause of the fault has been remedied.
- Some functions are protected by several fuses.

Fuse extractor

A fuse extractor is located in the fuse box in the engine compartment.

Place the fuse extractor on the top or side of the fuse to extract the fuse.

Replace the fuse cover securely after use.


Warning

When replacing a fuse be sure to use a fuse of the specified amperage.

Never install a wire or similar as it could damage electrical components and cause a fire.

Any improper alterations to the electrical system may cause a fire hazard and engine damage. To maintain your own safety and that of the vehicle, have any work involving the electrical system or the replacement of high current fuses or relays carried out by a Holden Dealer.


Engine compartment fuse box

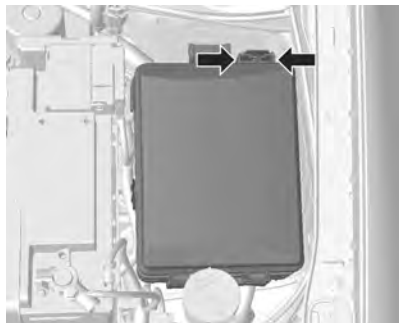

The fuse box is located in the engine compartment.

To disengage the cover:

1. Lift upwards and remove.

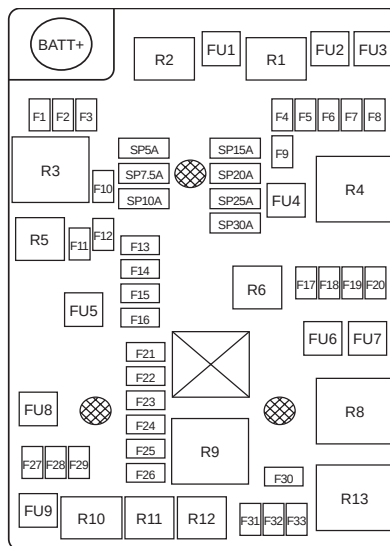

The vehicle may not be equipped with all of the fuses, relays and features shown.

Fuses

F1	ABS VALVE	(30A)
F2	SUNROOF	(20A)
F3	SPARE	(25A)
F4	REAR WIPER	(20A)
F5	RVC	(5A)
F6	ABS OIL	(5A)
F7	AOS/ROS	(5A)
F8	OSRVM	(7.5A)
F9	SPARE	(20A)
F10	RR WDW DEFOG	(30A)
F11	SPARE	(15A)
F12	OSRVM HTD	(7.5A)
F13	HEATED SEAT FRONT	(25A)
F14	FSCM 1	(20A)
F15	FLEX FUEL	(10A)
F16	WASHER	(10A)
F17	FUEL PUMP	(20A)
F18	ECM 5	(10A)
F19	FSCM 2/LEVELING	(10A)
F20	TCM 1	(10A)

F21	ECM 1	(10A)
F22	COIL.....	(10A)
F23	ECM 4	(10A)
F24	ECM 3	(10A)
F25	ECM 2	(20A)
F26	INJECTOR/IG COIL.....	(15A)
F27	ECM	(15A)
F28	AC CLUTCH	(10A)
F29	TCM	(15A)
F30	HORN	(15A)
F31	FRT FOG	(10A)
F32	HIGH BEAM LH	(10A)
F33	HIGH BEAM RH.....	(10A)
FU1	ABS PUMP	(40A)
FU2	FRT WIPER.....	(30A)
FU3	BLOWER	(40A)
FU4	RUN/CRANK IEC.....	(30A)
FU5	SPARE	(30A)
FU6	COOL FAN K5.....	(40A)
FU7	COOL FAN K4.....	(30A)
FU8	EVP	(20A)
FU9	START	(25A)

Relays

R1	FRT WIPER CONT
R2	FRT WIPER SPEED
R3	RR DEFOG
R4	RUN/CRANK
R5	SPARE
R6	FUEL PUMP
R8	COOL FAN K3
R9	P/T
R10	START
R11	AC CLUTCH
R12	HIGH BEAM
R13	COOL FAN K1


Auxiliary fuse box

(1.4 L)

The fuse box is located in the engine compartment next to the engine coolant reservoir.

Relays

R1	COOL FAN K3
R2	COOL FAN K7

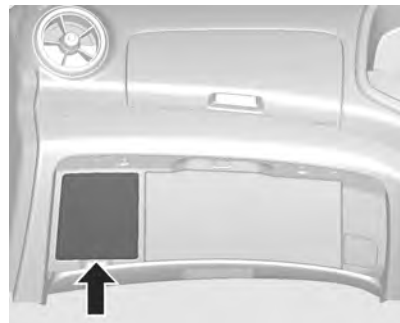Instrument panel fuse box


The interior fuse box is located in the glove box.

To remove the cover:

1. Open the glove box.
2. Pull up on the lower edge of the cover.

To replace the cover:

1. Insert the cover at the upper edge.
2. Push in at the lower edge to secure.

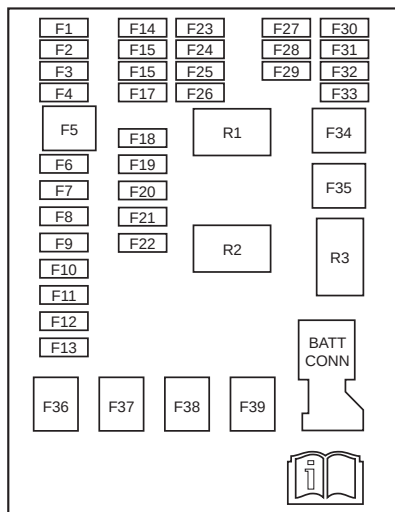

The vehicle may not be equipped with all of the fuses, relays and features shown.

Fuses

F1	DLIS	(2A)
F2	DLC	(15A)
F3	AIRBAG	(10A)
F4	L/GATE	(10A)
F5	SPARE	(20A)
F6	BCM8	(30A)
F7	BCM7	(20A)
F8	BCM6	(20A)
F9	BCM5	(25A)
F10	BCM4	(30A)
F11	BCM3	(30A)
F12	BCM2	(20A)
F13	BCM1	(20A)
F14	IPC	(10A)
F15	ONSTAR	(10A)
F16	URPA	(10A)
F17	RAIN SNSR	(5A)
F18	AUDIO	(15A)
F19	TRAILER	(20A)
F20	VLBS/FCA/LDW	(10A)

F21	CHEVYSTAR	(4A)
F22	HVAC	(10A)
F23	HDLP ALC	(10A)
F24	CLUTCH SW	(7.5A)
F25	IPC AOS	(10A)
F26	AIRBAG RUN/CRANK	(10A)
F27	TRAILER RUN/CRANK	(10A)
F28	CLOCKSPRING	(2A)
F29	HVAC	(10A)
F30	SPARE	(10A)
F31	S/ROOF SW	(10A)
F32	CIGAR APO	(20A)
F33	SPARE	(20A)
F34	PWR WNDW REAR	(25A)
F35	PWR WNDW FRONT	(25A)
F36	DCDC CONV	(30A)
F37	PWR WNDW EXP DRV	(20A)
F38	PTC2	(60A)
F39	PTC1	(40A)

Relays

R1	RUN RELAY
R2	L/GATE RELAY
R3	RAP/ACCY

Vehicle tools


Tools

Tyre repair kit

The vehicle may have a tyre repair kit in place of a spare tyre.

The tools and tyre repair kit are located below the floor cover, in the load compartment. See Tyre sealant and compressor kit on page 230.

Spare wheel

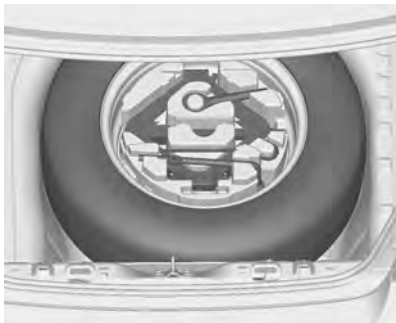

The jack and tools are located above the spare wheel, in the load compartment. See Tyre changing on page 234.

Wheels and tyres

Tyre and rim condition

- To avoid tyre and rim damage and possible tyre blowout, do not drive over sharp edges.
- Drive over edges slowly and at right angles, if possible.
- When parking, ensure the tyres are not pressed against the edge of the kerb.
- Check the tyres regularly for damage, stones, punctures, cuts, cracks, bulges etc. Check the rims for damage. Contact a Holden Dealer, if in doubt.

Tyre pressure

Keep the tyres at the recommended pressures to avoid increased fuel consumption, uneven and premature tyre wear.

The correct pressures are shown on the tyre placard and in the tyre pressure table. See Tyre pressure on page 254.

- Tyre pressure should be checked when cold as tyre pressure will increase as the tyres warm up.
- Check the air pressure of tyres (including the spare) weekly, to ensure occupant safety, as well as reducing fuel consumption and increasing the life of the tyres.
- Replace any valve dust caps or extensions.

Tyre placard



The correct pressures for tyres are shown on the tyre placard in the passenger's door frame.

Always inflate the spare tyre to the pressure specified for maximum load.

Tread depth

Check tread depth at regular intervals.



- Replace the tyres when:
They are worn to the point where the tread wear indicators (TWI) appear.
The tyres originally fitted to the vehicle have built in TWI. These show as plain bars across the tread pattern at regular intervals across the tyre.

- If there is more wear on the front tyres than on the rear, swap the front and rear wheels.

Ensure that the direction of rotation of the wheels is the same as previous.

- Tyres age, even if they are not used. Replacement of tyres every six years is recommended.

Warning


Do not attempt to drive on a flat tyre more than is necessary to stop safely. Driving even a short distance can damage the tyre and wheel beyond repair. Tyres which have been repaired or retreaded are not capable of being driven safely at high speeds. Therefore, their use is not recommended.

Tyre rotation

It is recommended that you:

- Rotate tyres approximately every year or 15,000 km, whichever occurs first.

Driving conditions, driving techniques, vehicle loading and weather may warrant more frequent tyre checks and rotation.

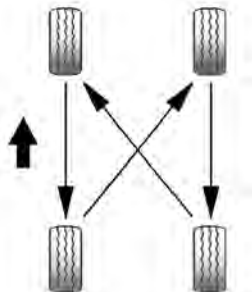

Front and rear tyres can wear differently depending on:

- Types of roads driven on
- Driving habits

- Tyre pressures
- Wheel alignment and balance

New tyres should be fitted in pairs to the front. If replacing only one tyre, pair it on the same axle with the least worn of the other three.

Buying new tyres

Refer to the tyre placard on the vehicle for tyre size and load rating.

Using a different size or type of tyre may affect:


- Ride
- Handling
- Speedometer accuracy
- Vehicle ground clearance
- Tyre clearance
- Snow chain clearance

⚠Warning

Do not use different sizes or types of tyres and wheels than those originally fitted to the vehicle. Safety and performance of the vehicle may be affected. It may also affect handling and lead to serious injury.

When replacing tyres, install all four tyres and wheels of the same size, type, tread, brand and load-carrying capacity.

Tyre chains

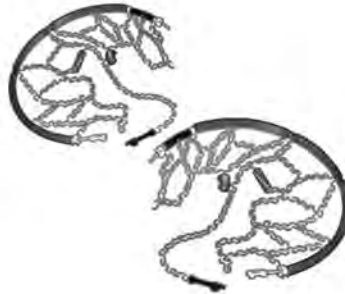

Tyre chains are only permitted on the front wheels.

Always use fine mesh chains that add no more than 10 mm to the tyre tread and the inboard sides (including chain lock).

⚠Warning

Tyre chains may only be used at speeds up to 50 km/h. Tyre chains should only be used for short distances if the roads are not snow covered. The hard road surface causes rapid wear and the chain may break. Tyre chain links should not be thicker than 10 mm and the clasp should be well away from the bodywork. Thicker chains may damage the vehicle body.

Tyre sealant and compressor kit

The vehicle may have an emergency tyre sealant and compressor kit, in place of a spare tyre. It is located below the floor cover in the load compartment.

The repair kit:

- Repairs minor damage to the tyre tread or sidewall.

Note

Do not remove any objects that have penetrated the tyre.

- Repairs damage up to 4 mm in the tread area of the tyre.
- Does not repair damage at the tyre's side wall, near the rim.

Take the vehicle to a Holden Dealer to have the tyre repaired or replaced as soon as possible.

⚠ Warning


Do not drive faster than 80 km/h.
Do not drive on the repaired tyre for an extended time. Steering and handling may be affected.

Note


- If unusual noises are heard or the compressor becomes hot, turn the compressor off for at least 30 minutes.
- Check the expiry date on the tyre sealant canister before use. The tyre sealant canister must be replaced before its expiry date.
- The compressor and sealant can be used from approximately -30°C to 70°C .

Temporary puncture repair

1. Apply the park brake.
2. Place manual transmissions into first or reverse gear.
Place automatic transmissions into position **P**.

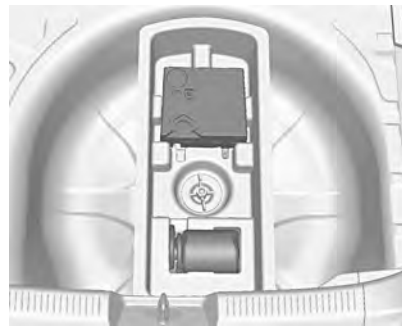

3. Remove the tyre repair kit from the compartment under the floor cover, in the load compartment.
4. Remove the compressor and sealant bottle.

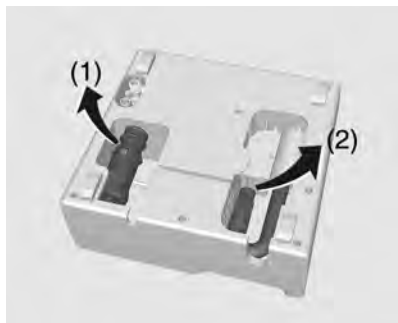

5. Remove the electrical connection cable (1) and air hose (2) from the underside of the compressor.



6. Place the switch on the compressor to **O**.
7. Screw the compressor air hose to the connection on the sealant bottle.
8. Connect the compressor plug to the accessory socket (power outlet).
9. Start the engine and let it idle to ensure the battery does not run down.

Warning

Do not run the engine in an enclosed area or with passengers in the vehicle. See Fuel on page 199 for exhaust gas warnings.

10. Place the compressor near the tyre so that the sealant bottle is upright.



11. Unscrew the valve cap from the defective tyre.
12. Screw the filler hose to the tyre valve.



13. Press the switch on the compressor to **I**.

The tyre fills with sealant.

The compressor pressure gauge briefly indicates up to 6 bar while the sealant bottle is emptying (approx. 30 seconds).

The pressure starts to drop.

Once the sealant is pumped into the tyre, the tyre is inflated.

The prescribed tyre pressure (approximately 2.4 bar) should be obtained within 10 minutes.

14. When the correct pressure is obtained, switch off the compressor.

Warning

Do not over inflate tyres due to risk of injury or damage to the tyre.

15. If the tyre pressure is not obtained within 10 minutes, remove the tyre repair kit.
16. Move the vehicle one tyre rotation.



17. Reattach the tyre repair kit and continue the filling procedure for 10 minutes.

Warning

If the recommended pressure cannot be reached after approximately 10 minutes, the vehicle should not be driven. The tyre is too severely damaged and the tyre repair kit cannot inflate the tyre. Disconnect and stow the tyre repair kit back in its original position. Contact a Holden Dealer.

18. Drain excess tyre pressure with the button over the pressure indicator.

Do not run the compressor longer than 10 minutes.

19. Detach the tyre repair kit.
20. Push the catch on the bracket to remove the sealant bottle from the bracket.


21. Screw the tyre inflation hose to free the connection of the sealant bottle. This prevents sealant from escaping.
22. Stow the tyre repair kit in the load compartment.

Warning

Always stow the tyre repair kit in its original position. Unsecured loads increase the risk of injury during heavy braking, sudden avoidance manoeuvres or a collision.

23. Remove any excess sealant using a cloth.
24. After inflating the tyre, remove the maximum speed label and place it in a visible location.
It reminds you to drive cautiously and not to exceed 80 km/h until the damaged tyre is replaced or repaired.

25. Continue driving immediately so that sealant is evenly distributed in the tyre.
26. After driving approximately 10 km (but no more than 10 minutes), stop at a safe location to check the tyre pressure.

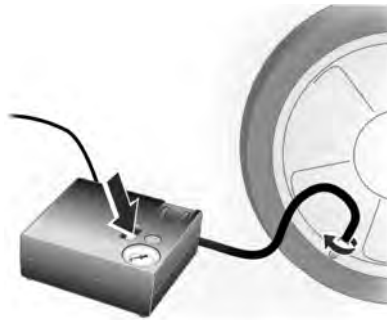

27. Screw the compressor air hose directly onto the tyre valve and compressor to check the tyre pressure.
28. If the tyre pressure is more than 1.3 bar, set it to the correct value (approx. 2.4 bar).

29. Repeat the procedure from Step 25 until there is no more loss of pressure.

If the tyre pressure has fallen below 1.3 bar, do not continue driving. Contact a Holden Dealer.

30. Dispose of the used tyre sealant canister at a Holden Dealer or in accordance with local and State codes and practices. Replace with a new canister.
31. Stow the tyre repair kit in the load compartment.

This is a temporary puncture repair. Take the vehicle to a Holden Dealer to have the tyre repaired or replaced as soon as possible.

Tyre changing

The vehicle may have a spare tyre.

Warning

All passengers must be out of the vehicle when it is being jacked.

Do not jack a vehicle with a trailer attached. Remove the trailer first.

Only jack the vehicle on hard, level surfaces.

Ensure moving parts of the jack are adequately lubricated before use.

Use the jack only at the designated lifting points. Use in other locations may result in the vehicle falling off the jack, or damage to the vehicle.

Do not start or run the engine while the vehicle is supported by the jack.


Use the jack only for lifting the vehicle when changing wheels.

Do not get under a vehicle that is supported by a jack. No person should place any portion of their body under a vehicle that is supported by a jack.

Vehicles with alloy wheels may have a steel spare wheel. Drive carefully and do not exceed 80 km/h if the tyre size or tread pattern of the spare tyre is different to the other tyres on the vehicle. Although the spare tyre was fully inflated when the vehicle was new, it can lose air over time. Check the inflation pressure regularly.

After installing the spare tyre on the vehicle, stop as soon as possible to check the inflation pressure is correct. Have the flat tyre repaired or replaced and installed back on the vehicle as soon as possible.

Removing the spare tyre

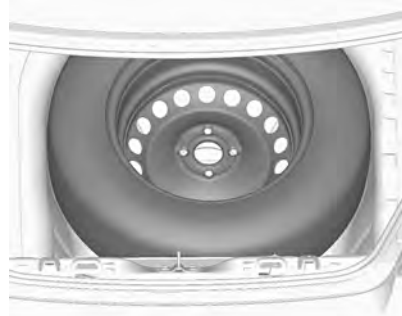

The spare tyre is located in the load compartment beneath the floor covering.

1. Park on a hard, level surface, in a safe location.
2. Apply the park brake firmly.
3. Place manual transmissions in first or reverse gear.
Place automatic transmissions in position **P**.
4. Switch the hazard warning flashers on.

5. Turn off the engine and remove the key.
6. Chock the wheel diagonally opposite the flat tyre with a suitable solid object.


Note

Do not change more than one wheel at one time.

7. Remove the tools from the load compartment.
8. Remove the spare wheel from the load compartment.



9. Place the wheel wrench over the wheel nuts and loosen by half a turn, but do not remove the wheel nuts.

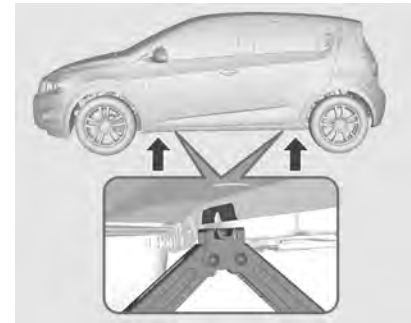

Hatch shown

10. Position the jack beneath the jack location closest to the wheel being changed.

The locations are identified by half circles in the underside of the door sill.

11. Rotate the jack handle to raise the lift head slightly.
12. Attach jack handle to the jack and attach wrench to the jack handle.

13. Wind the jack up by hand until it engages with the jacking point.
Ensure that the jack is not tilted and the base is resting squarely on the ground.

⚠ Warning


Failure to position the jack as described could cause the vehicle to slip off the jack.

Do not get under a vehicle that is supported by a jack. No person should place any portion of their body under a vehicle that is supported by a jack.



14. Rotate the wrench checking the correct position of the jack, until the wheel is clear of the ground.
15. Unscrew the wheel nuts and place in a clean, dry place.
16. Exchange the wheel on the vehicle with the spare wheel.
17. Clean the wheel nuts and thread before replacing, then lightly tighten with the wheel nut wrench.
18. Lower the vehicle by reversing the jacking procedure.

19. Remove the jack from under the vehicle.

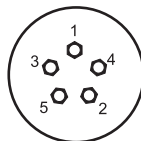

20. With the wheel on the ground, use the wheel wrench to tighten the wheel nuts in the sequence shown.
21. Replace the flat tyre and tools in the load compartment.
- Note**
To avoid rattling, tighten the screw head on the jack and make sure the jack isn't touching any other vehicle tools.
22. Have the flat tyre renewed or repaired.

⚠ Warning

As soon as possible after changing a wheel, have the wheel nuts tightened with a torque wrench to 140 Nm (Newton metres). Wheel nuts must be tightened evenly to the correct torque, as wheel nuts which have not been tightened properly could eventually allow the wheel to come off while the vehicle is moving.

Jump starting

Read the following warnings and procedure in full before attempting to jump start the vehicle.

If you are still unsure about jump starting, Holden strongly recommends for your safety and that of the vehicle that you seek the assistance of a suitably trained service technician.

⚠ Warning

Do not push start or tow start the vehicle. If unburnt fuel were to reach the catalytic converter and ignite, the converter could overheat or be destroyed by backfire. Therefore, if the battery is flat, jump start, but do not push start the vehicle.

Batteries produce explosive gases, contain corrosive acids and supply levels of electrical current high enough to cause burns. Therefore, adhere to the following when working near a battery:


- Do not attempt jump starting directly from the battery in the engine compartment.
- Do not let the jumper lead clamps touch each other or other metal parts.
- Do not allow the jumper leads to contact any rotating engine components.

- Do not use open flames or sparks near the battery.
- Do not smoke near the battery.
- Never use a quick charger to start the engine.
- The battery must be removed from the vehicle for recharging.
- Wear eye protection such as safety glasses and avoid leaning over the battery.
- Battery acid is corrosive. If it gets on your skin, wash with plenty of water immediately. If it gets in your eyes you should not only flush with lots of water, but should also seek medical help. Battery acid also damages paint and fabrics. To minimise damage, wash it off immediately.
- Remove rings, metal watch bands and other metal jewellery before working around the battery.

• If a permanently connected hands free telephone kit is fitted to the vehicle, remove the fuse for the telephone kit before jump starting. Remember to replace the fuse afterwards.

- A discharged battery can freeze at temperatures of 0°C. Defrost the frozen battery before connecting jumper leads.
- Use a booster battery with the same voltage (12 volts). Its capacity (Ah) must not be much less than that of the discharged battery.
- Use jumper leads with insulated terminals and a cross section of at least 16 mm².
- Do not disconnect the discharged battery from the vehicle.
- Switch off all unnecessary electrical devices.
- The vehicles must not come into contact with each other during the jump starting process.

1. Position the two vehicles so they are not touching.
2. Apply the park brake.
3. For manual transmission, place the shift lever in neutral.
For automatic transmission, place the shift lever in **P**.
4. Turn the ignition off.
5. Turn off all lamps and accessories in both vehicles, except the hazard warning flashers or any lights needed for the work area.

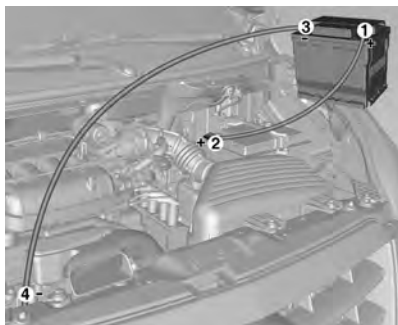

6. Connect one end of the RED lead to the positive terminal of the booster battery (1).
7. Connect the other end of the RED lead to the positive terminal of the discharged battery (2).
8. Connect the BLACK lead to the negative terminal of the booster battery (3).

9. Connect the other end of the black lead to a vehicle grounding point, such as the engine block or an engine mounting bolt (4).

Connect as far away from the discharged battery as possible (at least 60 cm).

Note

Route the leads so that they cannot catch on rotating parts within the engine compartment.

10. Start the engine of the vehicle providing the jump start and allow to idle for at least 5 minutes.
11. Start the engine of the vehicle with the flat battery.
Start attempts should be made for no longer than 15 seconds at an interval of 1 minute.
12. Allow both engines to idle for approximately 3 minutes with the leads connected.

13. Switch on the headlamps and the heated rear window of the vehicle that received the jump start.

14. Leave the engines running while removing the BLACK negative jumper lead first, followed by the RED positive jumper lead.


Note

While removing each clamp, do not touch any other metal while the other end remains attached.


Towing

Towing the vehicle

Flat-bed tow truck

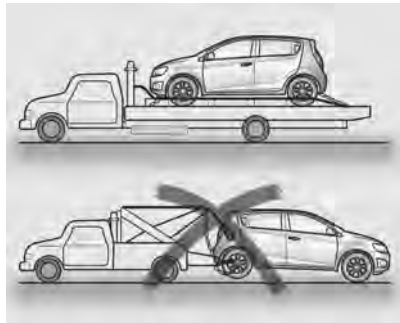

Hatch shown

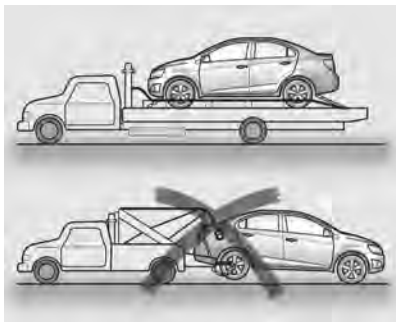


Sedan shown


A flat-bed tow truck is the best method of towing the vehicle to avoid damage.

Standard tow truck


If a flat-bed tow truck is not available:

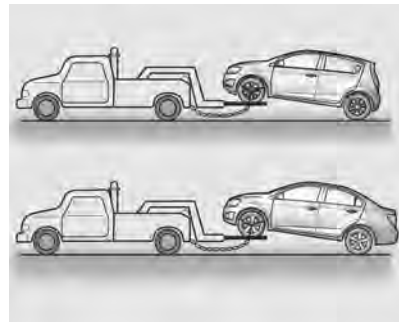

1. Use a standard tow truck, where the front wheels are raised and the rear wheels are in contact with the ground.

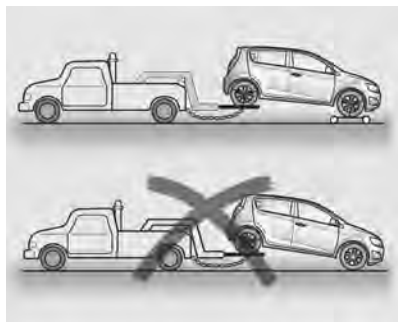

Hatch shown

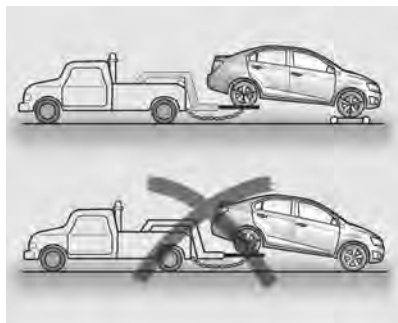

Sedan shown

2. Alternatively, use a standard tow truck and a towing dolly to prevent the front wheels from contacting the road.

Caution

If the vehicle is towed with the front wheels contacting the road, the vehicle's drive system could be severely damaged.

Towing the vehicle**Caution**

Automatic transmission: Do not tow the vehicle using the towing eye, the transmission may be severely damaged.

Manual transmission: The vehicle may be towed facing forward at a maximum speed of 80 km/h.

Proper lifting or towing equipment is necessary when lifting or towing the vehicle to prevent damage. State and local laws must be followed.

Note

- A driver must be in the vehicle to steer and operate the brakes.
- Release the park brake and place the shift lever in neutral.
- Drive slowly when towing.
- When the engine is not running, considerably more force is needed to brake and steer.

- To prevent the entry of exhaust fumes from the towing vehicle, close the windows and press .
- When the transmission is defective, the front axle must be raised off the ground.



1. Press the cap to disengage and remove.
2. Remove the towing eye from the load compartment. See Vehicle tools on page 226.



3. Screw in the towing eye until it stops in a horizontal position.
4. Fit the towing equipment to the front towing eye.

Note

The towing eye must only be used for towing and not for recovering the vehicle.


5. Turn the ignition on to release the steering column and to operate the brake lamps, horn and windscreen wipers.
6. Place the shift lever into neutral.

7. After towing, unscrew the towing eye and place back in the load compartment.
8. Reinstall the cap firmly.


Towing another vehicle

Warning

To prevent damage, use only proper towing equipment.

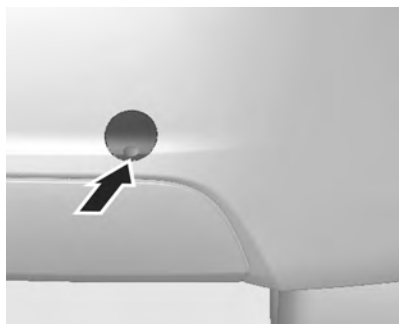

1. Press the cap to disengage and remove.
2. Remove the towing eye from the load compartment. See Vehicle tools on page 226.

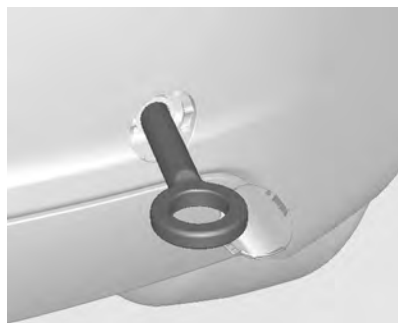

3. Screw in the towing eye until it stops in a horizontal position.
4. Fit the towing equipment to the front towing eye.

Note

The towing eye must only be used for towing and not for recovering the vehicle.

5. After towing, unscrew the towing eye and place back in the load compartment.
6. Reinstall the cap firmly.

Appearance care

Exterior care

Washing

The paintwork of the vehicle is exposed to environmental influences. Wash and wax regularly. When using automatic vehicle washes, select a programme that includes waxing.

Bird droppings, dead insects, resin, pollen and the like should be cleaned off immediately, as they contain aggressive constituents which can cause paint damage. Failure to do so may result in permanent damage, particularly in hot weather conditions.

Road bloom is a gradual build up of road and environmental grime. This should be removed with a paint cleaner once a year, in addition to normal washing.

If using a vehicle wash, comply with the vehicle wash manufacturer's instructions. Never use an automatic wash that requires anything touching the paint (other than water). The wipers must be switched off. Remove the antenna and external accessories.

If you wash your vehicle by hand, make sure that the insides of the wheel housings are also thoroughly rinsed out.

Clean edges and folds on opened doors and the bonnet as well as the areas they cover.

Have the door hinges of all doors greased by a Holden Dealer.

Caution

Do not clean the engine compartment with a steam-jet or high-pressure jet cleaner.

Thoroughly rinse and chamois off the vehicle. Rinse chamois frequently. Use separate chamois for painted and glass surfaces: remnants of wax on the windows will impair vision.

Do not use hard objects to remove spots of tar. Use tar removal spray on painted surfaces.

⚠Warning

Take care when moving the vehicle after washing, in case water has affected the brakes. Applying the brakes lightly will indicate whether they have been affected. To dry them quickly, lightly apply the brakes while maintaining a slow forward speed with a clear area ahead, until brake performance returns to normal.

Exterior lamps

Headlamp and other lamp covers are made of plastic. Do not use any abrasive, solvent based cleaners or caustic agents and do not dry-clean them.

Air intakes

Clear debris from the air intakes, between the bonnet and windscreen and below the front bumper, when washing the vehicle.

Polishing and waxing

Wax the vehicle regularly (at the latest when water no longer beads).

Polishing is necessary only if the paint has become dull or if solid deposits have become attached to it.

Paintwork polish with silicone forms a protective film, making waxing unnecessary.

Plastic body parts must not be treated with wax or polishing agents.

Windows and windscreen wiper blades

Use a soft lint-free cloth or chamois leather together with window cleaner and insect remover.

- Never use abrasive cleaners to clean glass.
- Refer to a Holden Dealer for windscreen washer additive.
- Old wiper blades can cause windscreen scratching. Regularly inspect and replace them.

Caution

Do not operate the wiper blades by hand as this damages the wiper drive mechanism.

When cleaning the rear window, make sure the heating element inside is not damaged.

Clean smearing wiper blades with a soft cloth and window cleaner.

Wheels and tyres

Do not use high-pressure jet cleaners.

- Remove oil and grease with soap and water or detergent.
- Do not use petrol to clean tyres.
- Use a good quality tyre and bumper shine if required.
- A good quality wheel cleaner can be used for cleaning alloy wheels.
- Do not use abrasive cleaners.

Paintwork damage

Rectify minor paintwork damage with a touch-up pen before rust forms.

Have more extensive damage or rust areas repaired by your Holden Dealer.

Caution

Do not spill coolant on the vehicle's exterior surfaces as it can damage the paint work. If you do, wash it off immediately.

Underbody

Substances can cause rust under the vehicle.

- Hose the underbody with clean water whenever the vehicle is washed.
- Where the vehicle is exposed to heavy concentrations of corrosive materials, inspect and wash the complete underbody at least once each year, preferably after winter exposure.

Interior care

Warning

Many cleaning products are toxic, flammable or may damage the interior. When cleaning the interior, avoid volatile cleaners such as acetone, lacquer thinners, enamel reducers, nail polish removers, or cleaners such as laundry soaps, bleaches or reducing agents. Never use carbon tetrachloride, petrol or naphtha for any cleaning purpose. Ensure that the vehicle is well ventilated while using any cleaners and always follow the cleaning product manufacturer's recommendations. Water based cleaners, rather than solvent based cleaners, are recommended.

Steam cleaning of seats is not recommended.

Interior and upholstery

Only clean the vehicle interior, including the instrument panel fascia and panelling, with a dry cloth or interior cleaner.

The instrument panel should only be cleaned using a soft damp cloth.

Clean fabric upholstery with a vacuum cleaner and brush. Remove stains with an upholstery cleaner.

Clean seat belts with a mild, non-abrasive soap and lukewarm water.

After washing, thoroughly, sponge the solution out of the belts.

Caution

Close Velcro fasteners as open Velcro fasteners on clothing could damage seat upholstery.

Plastic and rubber parts

Plastic and rubber parts can be cleaned with the same cleaner as used to clean the body. Use interior cleaner if necessary. Do not use any other agent. Avoid solvents and petrol in particular. Do not use high pressure jet cleaners.

Service and maintenance

General information	248
Recommended fluids, lubricants and parts	249

General information

Service information

In order to ensure economical and safe vehicle operation and to maintain the value of your vehicle, it is of vital importance that all maintenance work is carried out at the proper intervals as specified.

See your Service/Warranty Booklet for the service schedules and for more information.

Engine oil life system

The vehicle has a computer system that lets you know when to change the engine oil and filter.

The frequency of the oil change depends on driving patterns, engine RPM and engine temperature.

When the system has calculated that oil life has been diminished, Code 82 (change engine oil soon) will appear in the Driver Information Centre (DIC).

When Code 82 (change engine oil soon) is displayed, have the engine oil and filter changed as soon as possible, within the next 1,000 km.

It is possible that, if you are driving under the best conditions, the oil life system may not indicate that an oil change is necessary for a longer period than that shown in the Maintenance schedule. However, the engine oil and filter must be changed in accordance with the Maintenance schedule outlined in the Service/Warranty Booklet.

Recommended fluids, lubricants and parts


Engine type	1.6 L DOHC Petrol	1.4 L DOHC Petrol
Engine oil specification	SAE 5W-30;  (dexos™ 1) or SAE 5W-30;  (dexos™ 2)	SAE 5W-30;  (dexos™ 2)
Coolant specification	50% clean fresh water and 50% Dexcool® anti-freeze coolant, conforming to specification number GM6277M	
Manual transmission fluid	SAE 75W-90	GM Part number 93165694 (BOT 303, low viscosity 70W)
Automatic transmission fluid	Dexron® VI	
Brake fluid	DOT 4 Hydraulic brake fluid, conforming to specification number GMW3356	
Power steering fluid	Dexron® VI	–
Battery	12 volts, 60 amp hours	

Technical data

Vehicle identification	250
Vehicle data	252

Vehicle identification

Vehicle identification number (VIN)

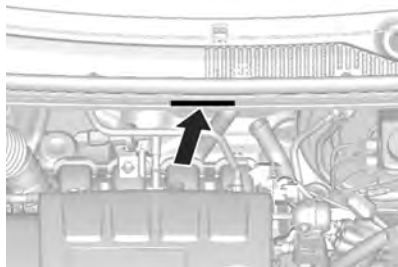

The Vehicle Identification Number (VIN), is engraved in the centre of the firewall and also on a plate on the passenger side at the lower edge of the front windscreen.

Identification plate



An identification label is located on the front passenger's door frame.

The label shows:

- 1 = Approval number
- 2 = Manufacturer
- 3 = Category
- 4 = Number of seats
- 5 = Vehicle identification number
- 6 = Compliance date


Engine number

1.6 L engine



The engine serial number is located next to the oil filter.

1.4 L engine

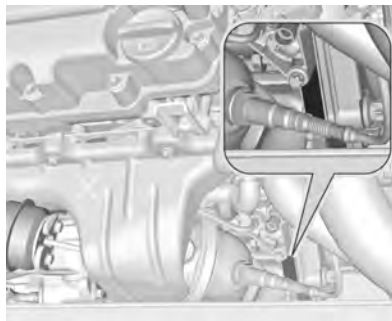

The engine serial number is located in the front part of the engine compartment.

Vehicle data

Engine data

Engine type	1.6 L DOHC Petrol	1.4 L DOHC Petrol
Number of cylinders	4	4
Engine	1598 cc	1364 cc
Engine power	Please refer to holden.com.au	
Engine torque	Please refer to holden.com.au	
Octane rating (RON)		
Minimum	91	91
Recommended	91	95
Ethanol compatibility	E10	

Vehicle weight

Overloading is a safety hazard and could also shorten the life of the vehicle.

Maximum vehicle payloads

	Occupants (average 68 kg each)	Luggage (kg)	Total load (kg)
Hatch and sedan	5	68	408

Axle loads

Maximum front and rear axle loads

Do not exceed the maximum axle loads, including the weight of any options or accessories fitted to the vehicle. Weigh at a weighbridge if unsure.

	Front axle load (kg)	Rear axle load (kg)
Hatch and sedan	1090	830

Dimensions (mm)

	Length	Width	Height	Wheel base
5 door hatch	4039	1735	1517	2525
4 door sedan	4399	1735	1517	2525

The above figures are based on the design dimensions.

Capacities

Engine type	1.6 L DOHC Petrol	1.4 L DOHC Petrol
Refill engine oil including filter (approximately)	4.5 L	4.0 L
Coolant (approximately)	5.6 L	6.0 L
Fuel tank	46.0 L	46.0 L

Tyre pressure

Tyre size	Wheel size	Recommended pressure					
		Front		Rear		Spare	
		kPa	PSI	kPa	PSI	kPa	PSI
195/65 R15 91H	15x6.0J	240	35	240	35	240	35
205/55 R16 91H	16x6.0J	240	35	240	35	240	35
205/50 R17 89H	17x6.5J	240	35	240	35	240	35

Customer information

Customer information 255

Customer Information

Owner Assistance

Holden Customer Care

At Holden, we want you to be completely satisfied with your ownership experience. This applies to your vehicle and any Holden representative you may deal with. Refer below for two options for seeking assistance with your query.

Holden Dealerships

Holden encourages you to seek assistance from your Holden Dealership. Each Holden Dealership is equipped to manage any sales, servicing, parts or technical query.

In the instance that you wish to escalate a query to a higher level of staff, further options are available to you. As a first step, Holden suggests you discuss any concern with the relevant Department Manager (Sales Manager or Service Manager).

Alternatively, the Dealership General Manager or Dealer Principal will also be happy to assist you.

Holden Customer Care Office

Should you wish to speak to a Holden representative, you are welcome to contact the Holden Customer Care team. Refer below for operating hours and various methods of communication.

Operating Hours

Weekdays: 8am – 7pm AEST
Saturday: 9am – 1pm AEST

Telephone

Holden Customer Care can be telephoned from anywhere within Australia for only the cost of a local call.

The contact number is:

1800 033 349

Email

Alternatively, you may prefer to email Holden at:

holdencustomer care@gm.com

Written Correspondence

You can also write to Holden at the address below:

**The Manager
Holden Customer Care Centre
GPO Box 1714
Melbourne 3001**

Your written correspondence should clearly outline your concern or query and include:

- Your name and address
- Telephone numbers, both private and business
- Servicing dealer's name and address
- Vehicle model
- Vehicle identification number (I.S.O.V.I.N.), refer to the inside front cover of the Service/Warranty Booklet in your vehicle's glove box
- Date of purchase
- Current odometer reading

Most of this information will be found on the Vehicle Identification

Certificate, located inside the front cover of the Service/Warranty Booklet in your vehicle's glove box.

Before you write however, remember that the telephone is the quicker and more efficient means of communication.

New Zealand

The information in this Owner's Handbook applies primarily to Australian Holden vehicles and there may be some differences to the Warranty and Owner Assistance provisions for New Zealand.

Applicable details for New Zealand are set out in the Holden Warranty and Owner Assistance Information booklet enclosed in the New Zealand glove box wallet.

New Zealand Assistance can be reached on:

0800 HOLDEN (0800 465 336)

This number provides access to New Zealand Roadside Assistance as well as New Zealand Customer Care.

Alternatively, you may prefer to email Holden at:

holdencustomer@gm.com

You can also write to Holden at the address below:

**The Manager
Holden Customer Care Centre
P.O. Box 11195
Ellerslie
Auckland 1542
New Zealand**

Trademarks and licence agreements

About DivX® video

DivX® is a digital video format created by DivX®, LLC, a subsidiary of Rovi Corporation.

This is an official DivX Certified® device that plays DivX® video. Visit divx.com for more information and software tools to convert your files into DivX® videos.

About DivX® video-on demand

The DivX Certified® device must be registered in order to play purchased DivX® Video-on-Demand (VOD) movies. See DivX® VOD on page 159.

To obtain a registration code, locate the DivX® VOD section in the device setup menu. Go to vod.divx.com for more information on how to complete your registration.

A

ABS	190
Accessories	
Power outlet	54
Active safety systems	
Antilock Brake System (ABS).....	190
Electronic Stability Control (ESC)	192
Airbags	37
Airbag fault warning	59
Airbags and child restraints.....	41
SRS warning light.....	59
Air conditioning	175
Air pressure, tyres	227, 254
Alternator warning light.....	59
Anchorage points, child restraints.....	44
Anti-freeze specification	249
Antilock Brake System (ABS)	190
Assistance	255
Audio players.....	136
Audio systems	78

Automatic transmission	184
Fluid	249
Manual mode	186
Auxiliary devices.....	101, 149
Auxiliary fuse box	224
Axle loads.....	253

B

Battery	215, 249
Disconnection.....	215
Jump starting.....	237
Replacement	215
Bluetooth® music	108, 152
Bluetooth® phone.....	112, 159
Bonnet	205
Boot	16, 23
Brakes	190
ABS.....	190
ABS warning lamp.....	60
Brake fluid level.....	214, 249
Brake warnings	60
Park brake.....	191
Bulb replacement.....	216

C

Capacities, fluid	254
Carbon monoxide, warning.....	199
Car key	16
CD player.....	94
Central locking.....	16
Central locking system	19
Changing a flat tyre	226, 234
Child restraints.....	41
Anchor points	44
Types of restraint.....	41
Child safety locks.....	21
Child safety switch.....	26
Cleaning	243
Exterior.....	243
Interior	246
Climate control.....	175
Clock.....	111, 155
Clutch	12, 189
Code warnings.....	64
Console	47

Coolant	
Capacities	254
Cooling system message	62
Engine coolant	211
Specification	249
Cover (load compartment)	49
Cruise control	193
Cup holders	47
D	
Dashboard layout	8
Demister, windscreen	176
Dimensions	253
Dipping headlamps	9, 74
Dipstick	
Engine oil	209
Display information	55, 63
DivX®	159, 257
Door ajar light	63
Doors	21
Child safety locks	21
Key	16
Locking and unlocking	21
Driver Information Centre (DIC)	65

Driving	
Parking	182
Running-in	180
Safety	183
Starting the engine	182
Driving precautions	180
E	
Electrical system	222
Electric mirrors	24
Electric windows	25
Electronic Stability Control (ESC)	192
Warnings	61
Emergencies	
Bulb replacement	216
Changing a flat tyre	234
Customer assistance	255
Engine overheating	211
Flat battery	237
Flat tyre	234
Fuse replacement	222
Towing	240
Emissions	203

Engine	
Adding oil	210
Air filter	211
Compartments	207
Cooling system	211
Number location	251
Oil life system	248
Overheating	211
Specifications	252
Starting	14, 182
Temperature warning	62
Engine oil	209
Capacities	254
Change interval	210
Dipstick	209
Low oil pressure warning	62
Ethanol	200, 252
Exhaust fumes warning	199
Exterior lighting	73
Exterior mirrors	24
F	
Fan, climate control	175
Flat battery	237

Flat tyre..... 226
 Changing a flat tyre..... 226, 234
 Fluid levels
 Brake..... 214
 Coolant..... 211
 Engine oil 209
 Power steering 212
 Windscreen washer..... 213
 Fog lamps..... 75
 Fuel..... 199
 Additives..... 200
 Ethanol..... 200
 Fuel cap 201
 Fuel filler door 201
 Fuel type 201
 Fumes warning..... 200
 Gauge 57
 Low fuel warning 62
 Octane rating..... 201, 252
 Precautions 199
 Refuelling 201
 Tank capacity 254
 Fuses and relays 222

G

Gauges..... 55
 Fuel 57
 Information displays 55
 Odometer 56
 Speedometer..... 56
 Tachometer 57
 Glove box 47

H

Hand brake 191
 Hands-free phone..... 164
 Hazard warning 9, 74
 Headlamps 216
 High beam indicator lamp 74
 Operation 73
 Head restraints 6, 29
 Heated front seats 32
 Heated rear window..... 26
 Heating and ventilation..... 175
 High beam 9, 63, 74
 Hill Start Assist (HSA)..... 191
 Horn..... 51

I

Identification label..... 250
 Identification number 250
 Ignition switch/lock..... 181
 Immobiliser 23, 62
 Indicators/warning lamps..... 55
 Infant and child restraints 41
 Inflation, tyres 227, 254
 Information displays..... 55, 63
 Infotainment display..... 63
 Infotainment system 78
 Audio players 136
 Auxiliary devices 101, 149
 Bluetooth® music 108, 152
 Bluetooth® phone 112, 159
 CD player 94
 Controls..... 80, 82
 Display 80, 82
 iPod® 106, 141
 Media Transfer Protocol
 (MTP) player 140
 Movie system 145
 MP3..... 95
 Operation 84, 127
 Overview 79

Personalisation.....110, 154
 Picture system..... 143
 Radio..... 88, 131
 Smartphone link 168
 Steering wheel remote
 controls..... 81, 83
 Theft-deterrent feature 79
 Time/date settings..... 111, 155
 USB port..... 103, 138
 Instrument panel..... 8
 Interior lamps..... 76
 Interior mirrors 25
 iPod® 103, 106, 141

J

Jack
 Jacking locations..... 235
 Operation 235
 Storage..... 226
 Jump starting 237

K

Keys
 Code number 17
 Ignition key 4, 16

L

Lighting 73
 Automatic light control..... 73
 Bulb replacement 216
 Courtesy lamp 76
 Exit lighting..... 77
 Fog lamps 75
 Hazard lamps..... 9, 74
 Headlamps..... 73
 High/low beam 74
 Instrument panel 76
 Interior lamps 76
 Lamp control 73
 Reversing lamps 75
 Turn signals..... 75
 Load compartment cover..... 49
 Loading capacity..... 252, 253
 Loading the vehicle..... 49, 252
 Locks
 Bonnet lock 205
 Boot lock 16, 23
 Child safety locks 21
 Door locks 21

Ignition switch/lock 14
 Locking and unlocking..... 16, 181
 Tailgate lock 16, 22

M

Maintenance 204
 Manual door locks 21
 Manual transmission..... 189
 Fluid 249
 Mirrors
 Exterior..... 24
 Interior 25
 Movie system..... 145
 MP3 95
 MTP (Media Transfer Protocol)
 player 140

N

New vehicle running-in 180
 Number location (engine) 251

O

Object detection system 195
 Octane rating 201, 252
 Odometer..... 56

Oil	
Adding oil	210
Change interval	210
Checking oil level	209
Dipstick.....	209
Low pressure warning	62
Overheating	211
Engine temperature warning	62
P	
Park assist.....	195
Park brake	191
Park brake warning	60
Parking	15, 182
Parking lamps.....	217
Personalisation	110, 154
Petrol	201, 252
Phone	112, 159
Picture system.....	143
Polishing.....	244
Pollen/dust filter.....	179, 211
Power mirrors	24
Power outlet.....	54
Power steering	
Fluid	212, 249
Power windows.....	25
Puncture	226
Push/tow start warnings	237
R	
Radiator cap	211
Radio	88, 131
Rear view mirror	25
Rear vision camera.....	197
Rear window demister	26
Refuelling.....	201
Relays.....	222
Restraints	29
Child restraints	41
Infant restraints	42
Ride control systems	192
Roof	
Sunroof.....	27
Running-in a new vehicle	180
S	
Seat belts	
Force limiters.....	34
Seat belt warning	58
Tensioners.....	34

Seats	29
Adjustment	5, 31
Child restraints	41
Front seats	30
Head restraints.....	6, 29
Heated seats.....	32
Rear seats.....	32
Security	
Immobiliser.....	23, 62
Key code	17
Service warning light	59
Servicing.....	248
Settings.....	69, 71
Smartphone link.....	168
Snow chains	229
Spare tyre	226
Specifications	249, 252
Axle loads.....	253
Capacities	254
Dimensions	253
Engine	252
Loading	252
Tyre pressure	254
Speedometer	56

Stability control	192
Starting	180
Flat battery	237
Normal.....	182
Steering	50
Power steering fluid.....	212, 249
Tilt	7, 50
Steering wheel remote controls	81, 83
Storage compartments	46
Sunglasses holder	48
Sunroof	27
Sun visors.....	27
Supplemental Restraint System (SRS).....	38

T

Tachometer	57
Tailgate	22
Tank capacity	254
Technical data.....	250
Telephone.....	112, 159
Temperature warning.....	62
Theft-deterrent feature.....	79
Tilt steering	50

Time and date settings	111, 155
Tools	226
Towing	240
Traction Control System (TCS)	192
Warning.....	61
Trademarks and licence agreements.....	257
Transmission	
Automatic	184
Fluid	249
Manual	189
Trip computer	67
Turn signals	75
Tyre pressure.....	227, 254
Tyres	
Chains.....	229
Changing.....	234
Placard	227
Repair kit.....	230
Replacement.....	227
Rotation.....	228
Tread depth.....	227
Tyre sealant and compressor kit.....	230

U

USB port.....	103, 138
---------------	----------

V

Vanity mirror	27
Vehicle care.....	203
Vehicle data.....	252
Vehicle Identification Number (VIN)	250
Vehicle loading	252
Vehicle personalisation.....	69
Vehicle storage	204
Ventilation system.....	175
Vents.....	178

W

Warning lights.....	55
Washer fluid.....	213
Washing the vehicle	243
Wheels and tyres.....	226
Windows	25
Windscreen demister.....	176
Windscreen washer fluid	213
Wiper blades.....	245
Wipers and washers	51

