


Mercury Grand Marquis 1998 – 2002 fuse box diagram

Passenger compartment fuse panel

The fuse panel is located below and to the left of the steering wheel by the brake pedal. Remove the panel cover to access the fuses.

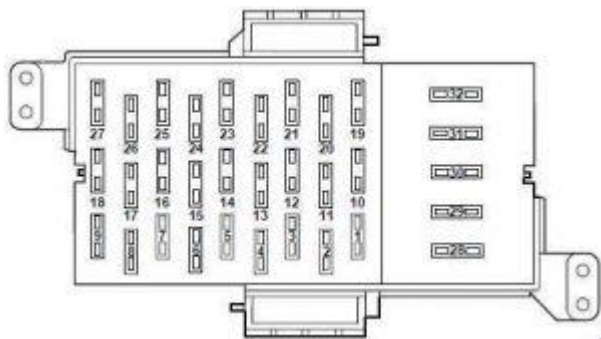

Mercury Grand Marquis – fuse box diagram – passenger compartment

Nº	A	Description
1	–	Not Used
2	–	Not Used

3	–	Not Used
4	10	Air Bags
5	–	Not Used
6	15	Instrument Cluster, Warning Lamps Module, Transmission Control Switch, Lighting Control Module (LCM)
7	–	Not Used
8	25	Power Train Control Module (PCM) Power Relay, Coil-on -Plugs, Radio Noise Capacitator, Passive Anti-theft System (PATS)
9	–	Not Used


10	10	Rear Window Defrost
11	–	Not Used
12	–	Not Used
13	5	Radio
14	10	Traction Control Switch, Anti-lock Brakes (ABS), Instrument Cluster
15	15	Speed Control Servo, Main Light Switch Illumination, Lighting Control Module (LCM), Clock

16	15	Reversing lamps, Turn Signals, Shift Lock, DRL Module, EVO Steering, Electronic Day/Night Mirror
17	30	Wiper Motor, Wiper Control Module
18	30	Heater Blower Motor
19	20	Auxiliary Power Point
20	–	Not Used
21	15	Multifunction Switch, Lighting Control Module (LCM), Passive Anti-theft System (PATs) Indicator, Parking Lamps, Instrument Panel Light

22	15	Speed Control Servo, Hazard Lights
23	15	Power Windows/Door Locks, PATS, Exterior Rear View Mirrors, EATC Module, Instrument Cluster, Clock, Lighting Control Module (LCM), Interior Lamps
24	10	Left Hand Low Beam
25	20	Power Point, Cigar Lighter
26	10	Right Hand Low Beam

27	25	Lighting Control Module (LCM), Main Light Switch, Cornering Lamps, Fuel Tank Pressure Sensor
28	20	Power Windows
29	–	Not Used
30	–	Not Used
31	–	Not Used
32	20	ABS Values

Power distribution box

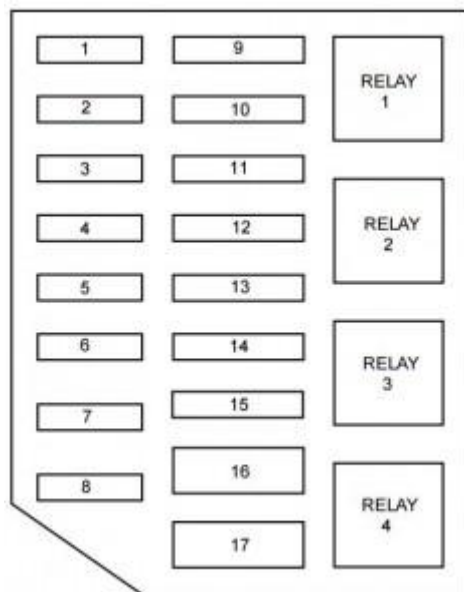

Mercury Grand Marquis 3rd Generation – fuse box – power distribution box

The power distribution box is located in the engine compartment. The power distribution box contains high-current fuses that protect your vehicle's main electrical systems from overloads.

Nº	A	Description
1	20	Electric Fuel Pump Relay
2	30	Generator, Starter Relay, Fuses 15 and 18

3	25	Radio, CD Changer, Subwoofer Amplifier
4	–	Not Used
5	15	Horn Relay
6	20	DRL Module
7	20	Power Door Locks, Power Seats, Trunk Lid Release
8	30	Air Suspension System
9	50	See Fuses 5 and 9
10	50	See Fuses 1, 2, 6, 7, 10, 11, 13 and Circuit Breaker 14

11	50	See Fuses 4, 8, 16 and Circuit Breaker 12
12	30	PCM Power Relay, PCM
13	50	High Speed Cooling Fan Relay
14	40	Rear Window Defrost Relay, Also see Fuse 17
15	40	Anti-Lock Brake Module
16	–	Not Used
17	30	Cooling Fan Relay
R1		Rear Defrost Relay
R2		Horn Relay

R3		Cooling Fan Relay
R4		Air Suspension Pump Relay