

Citroen C8 mk2 (2008 – 2012) – fuse box diagram

Year of production: 2008, 2009, 2010, 2011, 2012

Three fuseboxes, located under the dashboard, in the battery compartment and under the bonnet.

Battery compartment fuses

Ref.	Ampere rating [A]	Functions
F1	—	Free
F2	—	Free
F3	5	Brakes
F4	25	Driver's seat memorisation
F5	25	Passenger's seat memorisation – Sun roof
F6	20	Sun roof
F7	20	Sun roof
F8	10	Passenger's heated seat
F9	10	Driver's heated seat
F10	15	Signalling
F11	20	3rd row 12V accessory socket
F12	20	2nd row 12V accessory socket

Fuses under the dashboard

Ref.	Ampere rating [A]	Functions
F1	15	Rear wipe
F3	5	Airbag
F4	10	Steering angle sensor – ESP – Photochromic interior rear view mirror – Diagnostic socket – Clutch – Air conditioning – Suspension – Particle filter

F5	30	Sun roof – Front window
F6	30	Rear window
F7	5	Interior lamps – Vanity mirrors – Glovebox
F8	20	Displays – Alarm – Radio – CD changer – Diesel fuel additive system – Deflation detection – Sliding side door
F9	30	Cigar lighter
F10	15	Trailer relay unit – Controls at the steering wheel
F11	15	Diagnostic socket – Siren – Automatic gearbox – Ignition
F12	15	Seat belts warning lamp – Sliding doors – Airbag – Parking assistance – Driver's seat memorisation – Passenger's electric seat – Hands-free kit.
F13	5	Trailer relay unit
F14	15	Rain sensor – Sun roof – Air conditioning – Odometer warning lamp control unit – Instrument panel – Telematics
F15	30	Locking – Deadlocking – Child safety
F17	40	Heated rear screen

Fuses under the bonnet

Ref.	Ampere rating [A]	Functions
F1	20	Engine ECU – Exhaust Gas Recycling electrovalve – Diesel fuel high pressure regulation electrovalve – EGR electrovalve
F2	15	Horn
F3	10	Windscreen/rear screen wash pump
F4	20	Headlamp wash pump
F5	15	Fuel pump – Regulation electrovalve
F6	10	Gearbox – Power steering – Air flowmeter – Preheater unit – Engine oil level – Brakes – Headlamps adjustment
F7	10	ESP
F8	20	Starter motor

F9	10	Engine ECU
F10	30	Electrovalves – Oxygen sensor – Injectors – Ignition coil – ECU – Diesel fuel heater
F11	40	Air flow
F12	30	Windscreen wipe
F13	40	Built-in Systems Interface (Ignition+)
F14	—	Free

WARNING: Terminal and harness assignments for individual connectors will vary depending on vehicle equipment level, model, and market.