


6. Sunroof Switch

A: REMOVAL


- 1) Disconnect the ground cable from the battery.
- 2) Remove the spot map light. <Ref. to LI-34, REMOVAL, Spot Map Light.>
- 3) Disconnect the harness connector, and then remove the sunroof switch (A).

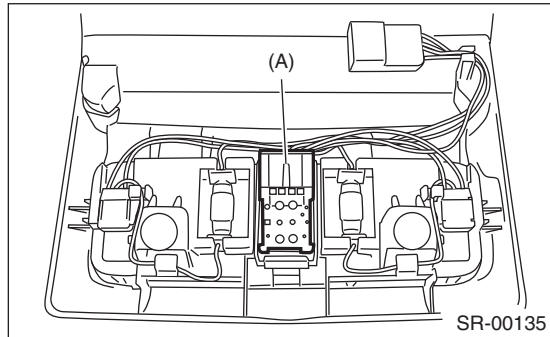

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

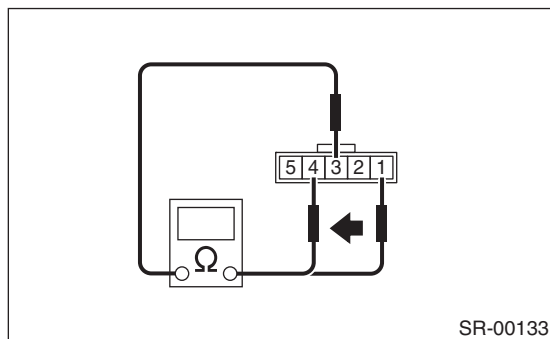

Inspect the continuity between each terminal during operation of the switches.

Switch	Terminal No.	Standard
Open	1 and 3	Less than 1 Ω
Close	4 and 3	Less than 1 Ω

Sunroof Switch

SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)

EXTERIOR/INTERIOR TRIM



	Page
1. General Description	2
2. Front Grille	23
3. Front Hood Grille	24
4. Front Under Cover	25
5. Fuel Tank Protector	26
6. Mud Guard	27
7. Front Bumper	28
8. Rear Bumper	35
9. Cowl Panel	37
10. Roof Spoiler	38
11. Side Sill Spoiler	39
12. Roof Molding	40
13. Roof Rail	41
14. Door Trim	42
15. Instrument Panel Lower Cover	44
16. Glove Box	45
17. Console Box	46
18. Center Console	47
19. Instrument Panel Assembly	50
20. Lower Inner Trim	52
21. Upper Inner Trim	53
22. Rear Quarter Trim	55
23. Sun Visor	57
24. Assist Grip	58
25. Roof Trim	59
26. Rear Gate Trim	60
27. Floor Mat	61
28. Rear Gate Garnish	62
29. Heat Shield Cover	63
30. Trailer Hitch	64
31. Ornament	65