


Chevrolet Traverse 2017 fuse box diagram

Engine Compartment Fuse Block

The underhood fuse block is located in the engine compartment, on the passenger side of the vehicle.

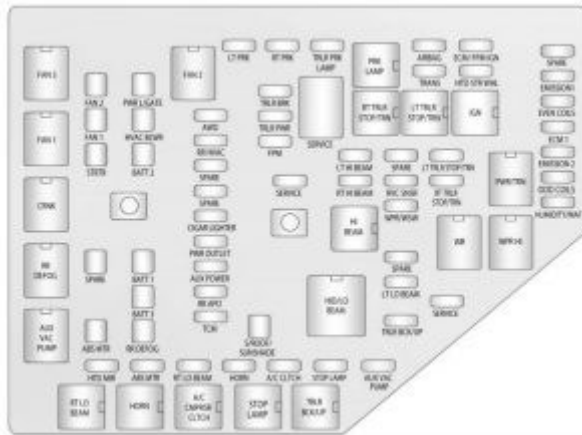

Chevrolet Traverse – fuse box diagram – engine

compartment

Fuses	Description
A/C CLUTCH	A/C clutch
ABS MTR	ABS motor
AIRBAG	Airbag System
AUX POWER	Auxiliary Power
AUX VAC PUMP	Auxiliary Vacuum Pump
AWD	AWD system
BATT 1	Battery 1
BATT 2	Battery 2
BATT 3	Battery 3
CIGAR LIGHTER	Cigarette Lighter
ECM 1	Engine Control Module 1
ECM/FPM IGN	Engine Control Module/Fuel Pump Control Module Ignition
EMISSION 1	Emission 1
EMISSION 2	Emission 2
EVEN COILS	Injector coils – even
FAN 1	Cooling Fan 1
FAN 2	Cooling Fan 2
FPM	Fuel pump power module
HORN	Horn
HTD MIR	Heated exterior rearview mirror
HTD STR WHL	Heated Steering Wheel
HUMIDITY/MAF	Humidity sensor/MAF senso

HVAC BLWR	HVAC blower
LT HI BEAM	Left high-beam headlamp
LT LO BEAM	Left low-beam headlamp
LT PRK	Left parking lamp
LT TRLR STOP/TRN	Left trailer stoplamp/Turn signal lamp
ODD COILS	Injector Coils – odd
PWR L/GATE	Power liftgate
PWR OUTLET	Power outlet
RR APO	Rear accessory power outlet
RR DEFOG	Rear defogger
RR HVAC	Rear climate control system
RT HI BEAM	Right high-beam headlamp
RT LO BEAM	Right low-beam headlamp
RT PRK	Right parking lamp
RT TRLR STOP/TRN	Right trailer stoplamp/Turn signal lamp
RVC SNSR	Regulated voltage control sensor
S/ROOF/SUNSHADE	Sunroof
SERVICE	Service Repair
SPARE	—
STOP LAMPS	Stoplamps
STRTR	Starter
TCM	Transmission control module
TRANS	Transmission
TRLR BCK/UP	Trailer reverse lamps
TRLR BRK	Trailer brake lamps
TRLR PRK LAMP	Trailer parking lamps
TRLR PWR	Trailer power
WPR/WSW	Windshield wiper/Washer

Relays	Usage
A/C CMPRSR CLTCH	A/C clutch
AUX VAC PUMP	Auxiliary vacuum pump
CRNK	Switched power
FAN 1	Cooling Fan 1
FAN 2	Cooling Fan 2
FAN 3	Cooling Fan 3
HI BEAM	High-beam headlamps
HID/LO BEAM	Low-beam HID headlamps
HORN	Horn

IGN	Ignition – main
LT TRLR STOP/TRN	Left trailer stoplamp/Turn signal lamp
PRK LAMP	Parking lamps
PWR/TRN	Powertrain
RR DEFOG	Rear window defogger
RT LO BEAM	Right low-beam headlamp
RT TRLR STOP/TRN	Right trailer stoplamp/Turn signal lamp
STOP LAMP	Stop Lamps
TRLR BCK/UP	Trailer reverse lamps
WPR	Windshield Wiper
WPR HI	Windshield wiper – high speed

Instrument Panel Fuse Block


The instrument panel fuse block is located under the instrument panel on the passenger side of the vehicle.



Chevrolet Traverse – fuse box diagram – instrument panel (fuse side)

Fuses	Description
#	GMC NON HID = Lo Beam
*	GMC NON HID = High Shutter
**	Chevy = Fog Lamps
***	Buick China = Rear Fog Lamp
AIRBAG	Airbag
AMP	Amplifier
BCK UP/STOP	Back-up Lamp/Stoplamp
BCM	Body Control Module

CNSTR/VENT	Canister Vent
CTSY	Courtesy Lamps
DR LCK	Door Locks
DRL/LO BEAM	Daytime running lamps relay/Low-beam headlamps relay
DSPLY	Display
FRT WSW	Front Windshield Washer
HTD/COOL SEAT	Heated/Cooling Seats
HVAC	HVAC
INADV PWR INT LAMPS	Inadvertent power/Interior light pipe lamps
INFOTMNT/MSM	Infotainment/Memory Seat Module
LT TRN SIG	Left turn signal lamp
OBS DET/URS	Rear park assist/Side blind zone alert/Forward collision alert/Universal remote system
PDM	Power mirrors/Liftgate release
PWR MODE	Power Mode
PWR MIR	Power Mirrors
RDO	Radio
REAR WPR	Rear Wiper
RT TRN SIG	Passenger Side Turn Signal
STR WHL ILLUM	Steering Wheel Illumination
USB CHRG	USB Charging

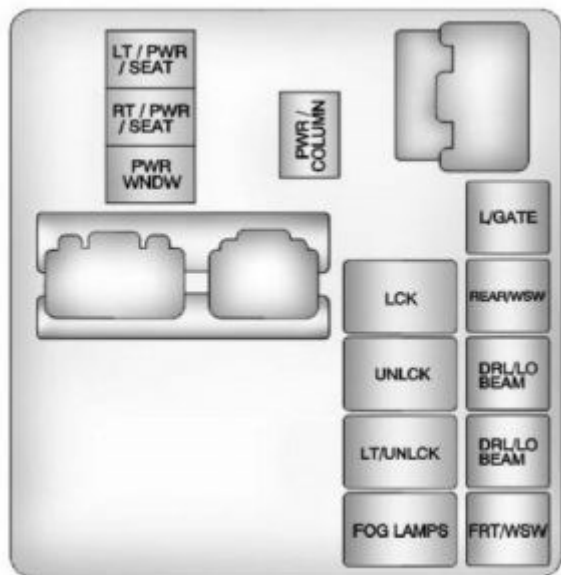

Chevrolet Traverse – fuse box diagram –

instrument panel (relay side)

Relays	Description
LT/PWR/SEAT	Left power seat relay
RT/PWR/SEAT	Right power seat relay
PWR/WNDW	Power windows relay

PWR/COLUMN	Power steering column relay
L/GATE	Liftgate Relay
LCK	Power Lock Relay
REAR/WSW	Rear Window Washer Relay
UNLCK	Power Unlock Relay
DRL/LO BEAM	Daytime running lamps relay/Low-beam headlamps relay
LT/UNLCK	Left unlock relay
DRL/LO BEAM	Daytime running lamps relay (if equipped)
FOG LAMPS	Fog Lamps Relay
FRT/WSW	Front Windshield Washer Relay