

UPPER INSTRUMENT PANEL

PRECAUTION


1. PRECAUTION FOR VEHICLE WITH SRS AIRBAG AND SEAT BELT PRETENSIONER
- (a) Some operations in this section may affect the SRS airbags. Prior to performing the corresponding operations, read the SRS airbag NOTICE (See page [RS-1](#)).
- NOTICE:
- When disconnecting the negative (-) battery terminal, initialize the following systems after the terminal is reconnected.

System Name	See Procedure
Power Window Control System	WS-5
Sliding Roof System	RF-3

IP-2


INSTRUMENT PANEL – UPPER INSTRUMENT PANEL

COMPONENTS

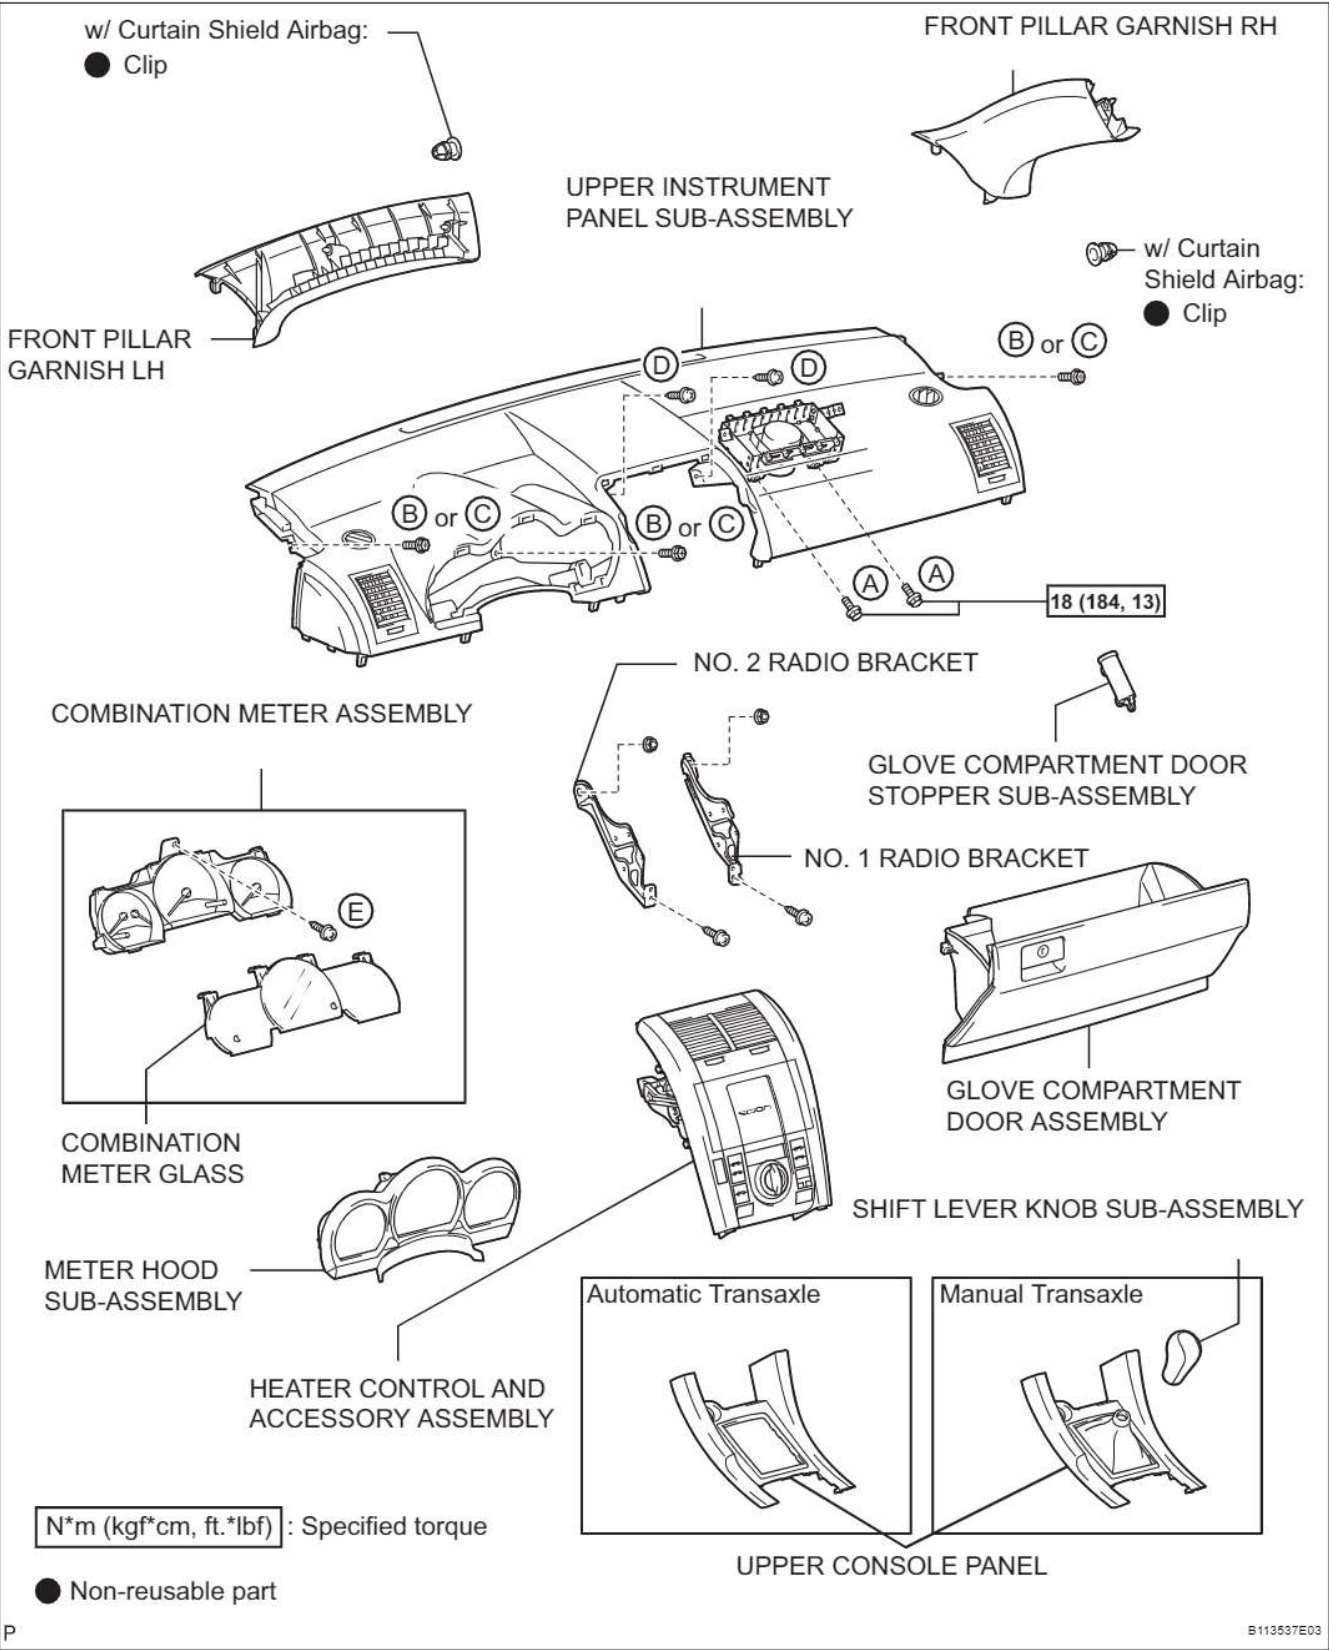

INSTRUMENT PANEL – UPPER INSTRUMENT PANEL

IP-3

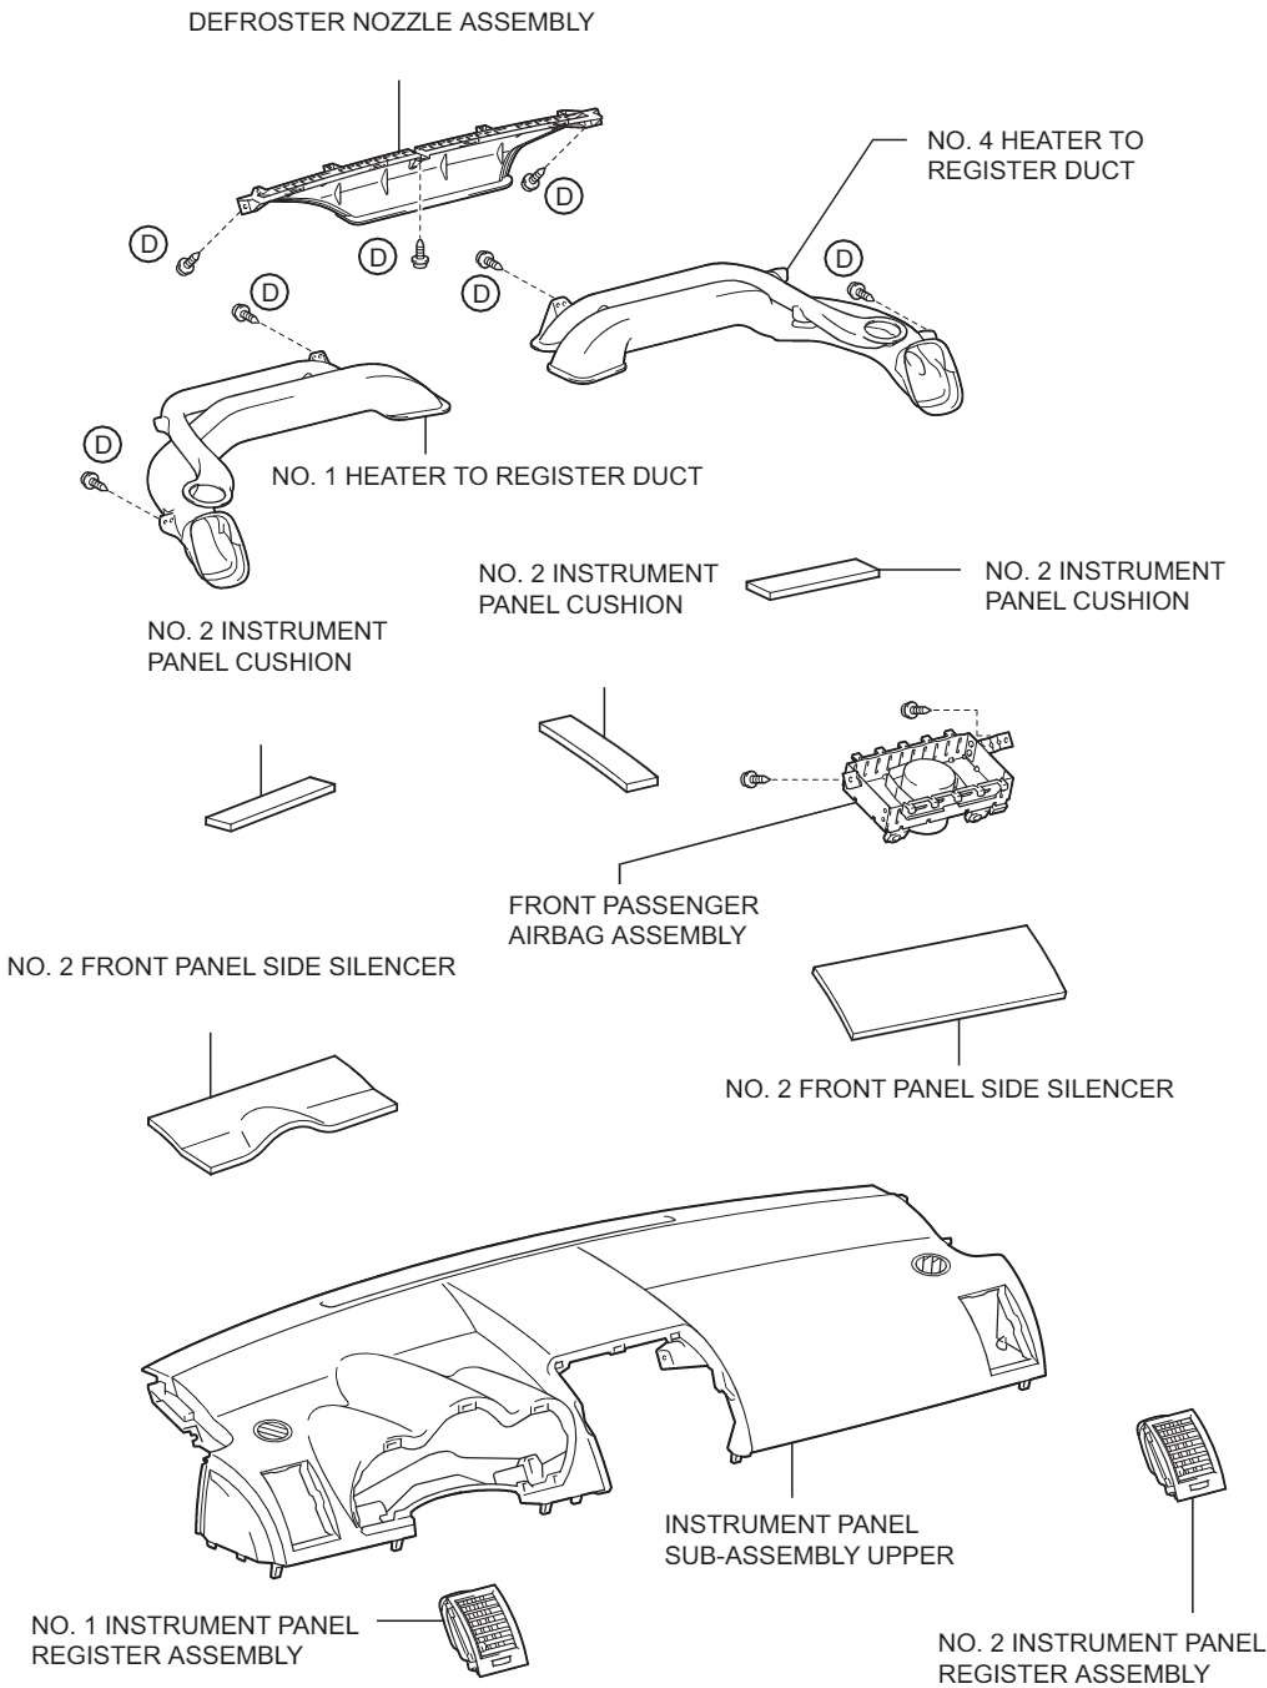

IP

P

B113539E02




 
 
IP-4

INSTRUMENT PANEL – UPPER INSTRUMENT PANEL

REMOVAL

1. BOLT, SCREW AND NUT TABLE

HINT:
All bolts, screws and nuts relevant to installing and removing the instrument panel are shown along with their alphabet code in the table below.

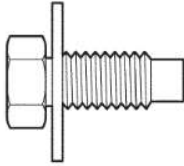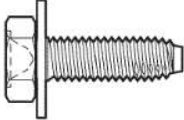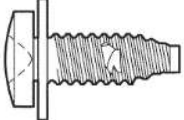Code	Shape	Code	Shape	Code	Shape
<A>	 φ= 8 (0.32) L = 20 (0.79) 91633-60820		 φ= 6 (0.24) L = 20 (0.79) 90159-60610	<C>	 φ= 7 (0.28) L = 20 (0.79) 90159-70004
<D>	 φ= 5 (0.20) L = 14 (0.55) 93568-55014	<E>	 φ= 5 (0.20) L = 16 (0.63) 93567-15016	mm (in.) (L = Length)	

P

B086148E01


IP

2. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:
Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.


3. REMOVE METER HOOD SUB-ASSEMBLY

- (a) Tilt the steering column assembly down as far as possible.
- (b) Using a moulding remover, detach the 9 claws.
HINT:
Tape the moulding remover tip before use.
- (c) Remove the meter hood.

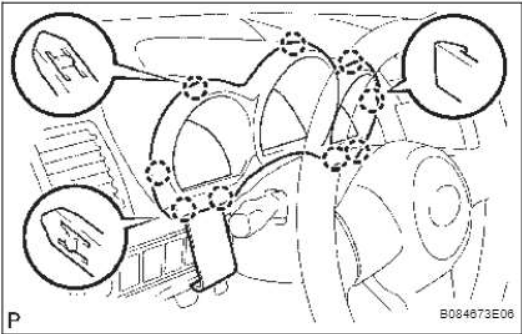


INSTRUMENT PANEL – UPPER INSTRUMENT PANEL


IP-5

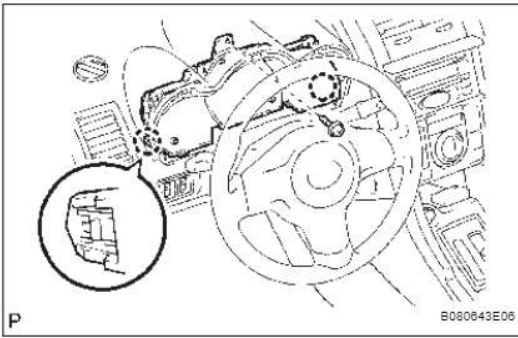**4. REMOVE COMBINATION METER ASSEMBLY**


- (a) Remove the screw, and detach the 2 claws.
- (b) Remove the combination meter and disconnect the connector.

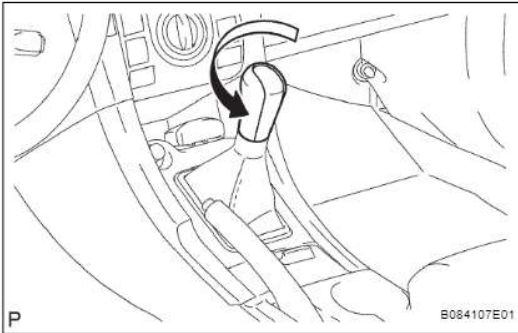**5. REMOVE SHIFT LEVER KNOB SUB-ASSEMBLY (Manual Transaxle)**

- (a) Turn the shift lever knob counterclockwise and remove the shift lever knob.

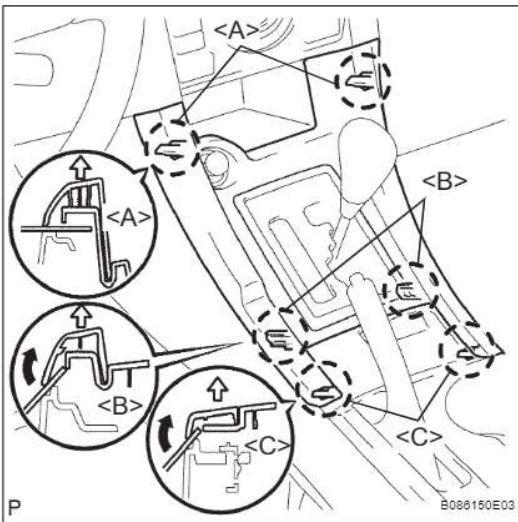**6. REMOVE UPPER CONSOLE PANEL**

- (a) Using a moulding remover, detach the 6 claws.
HINT:
Tape the moulding remover tip before use.

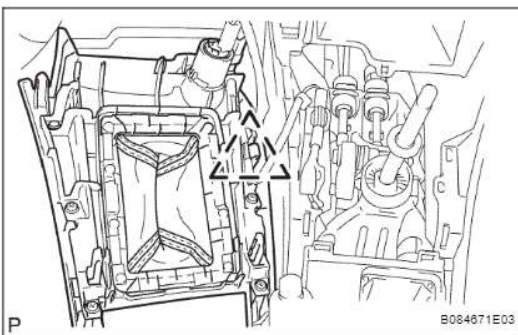**7. REMOVE HEATER CONTROL AND ACCESSORY ASSEMBLY****8. REMOVE NO. 1 RADIO BRACKET**

- (a) Remove the nut, screw and No. 1 radio bracket.


9. REMOVE NO. 2 RADIO BRACKET

- (a) Remove the nut, screw and No. 2 radio bracket.

IP


IP-6

INSTRUMENT PANEL – UPPER INSTRUMENT PANEL

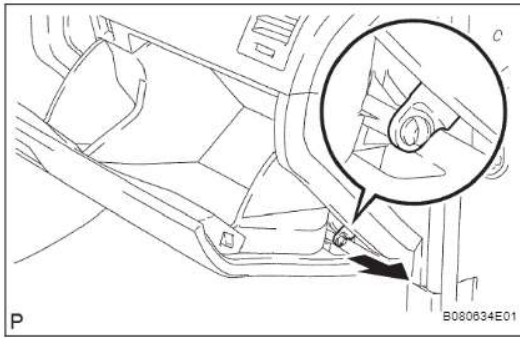


10. REMOVE GLOVE COMPARTMENT DOOR ASSEMBLY

- (a) Disconnect the glove compartment door stopper from the glove compartment door.

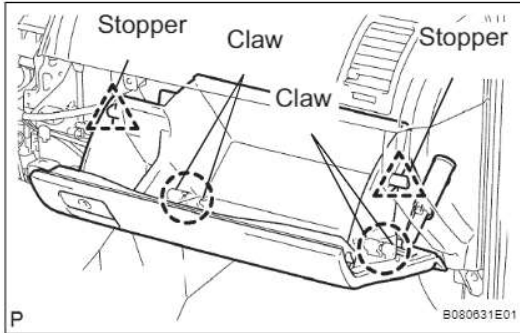

- (b) Slightly press in on the upper sides of the glove compartment door assembly to release the 2 stoppers.
- (c) Detach the 4 claws and remove the glove compartment door.

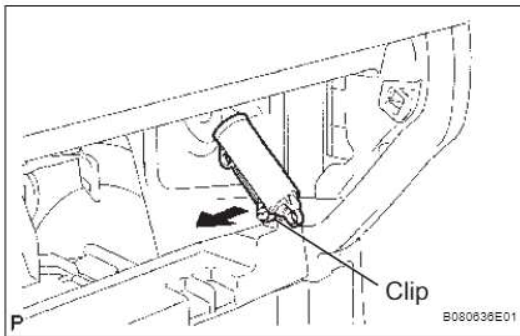

11. REMOVE GLOVE COMPARTMENT DOOR STOPPER SUB-ASSEMBLY

- (a) Detach the clip and remove the glove compartment door stopper.

12. REMOVE FRONT PILLAR GARNISH LH (w/o Curtain Shield Airbag) (See page IR-12)

13. REMOVE FRONT PILLAR GARNISH LH (w/ Curtain Shield Airbag) (See page IR-12)

14. REMOVE FRONT PILLAR GARNISH RH (w/o Curtain Shield Airbag)

HINT:

Use the same procedures for the RH side and LH side.

15. REMOVE FRONT PILLAR GARNISH RH (w/ Curtain Shield Airbag)

HINT:

Use the same procedures for the RH side and LH side.


16. DISCONNECT PASSENGER AIRBAG CONNECTOR

17. REMOVE UPPER INSTRUMENT PANEL SUB-ASSEMBLY


- (a) Remove the 5 screws and 2 bolts.
- (b) Detach the 13 claws.

INSTRUMENT PANEL – UPPER INSTRUMENT PANEL**IP-7**


- (c) Pull the upper instrument panel rearward to remove it.

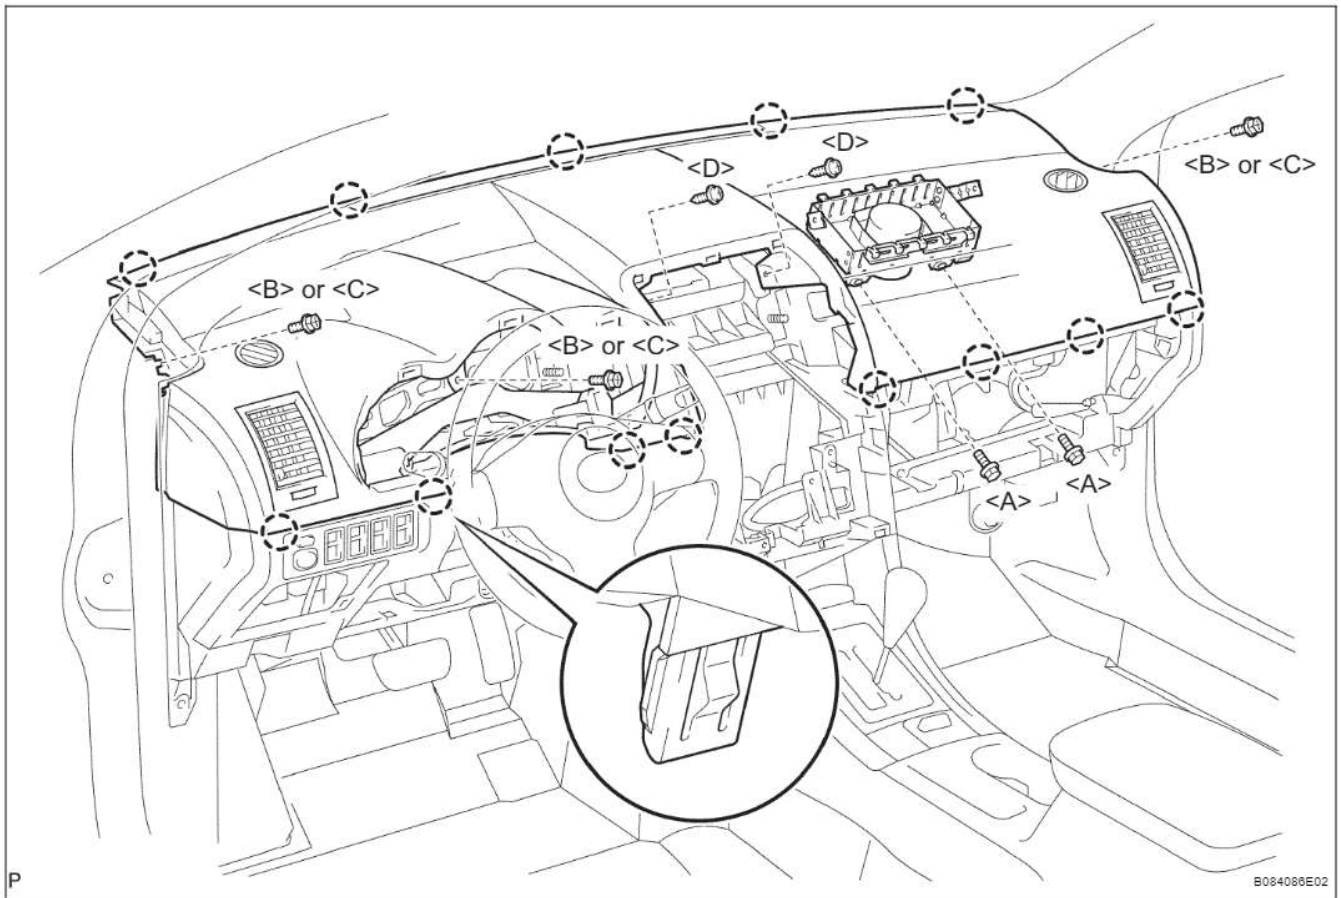**IP****DISASSEMBLY****1. REMOVE NO. 1 HEATER TO REGISTER DUCT**

- (a) Remove the 2 screws and No. 1 heater to register duct.

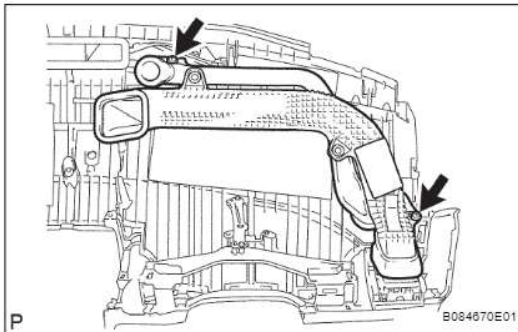
**2. REMOVE NO. 4 HEATER TO REGISTER DUCT**

- (a) Remove the 2 screws and No. 4 heater to register duct.

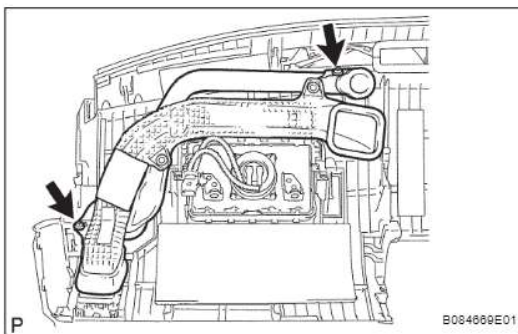


IP-8

INSTRUMENT PANEL – UPPER INSTRUMENT PANEL

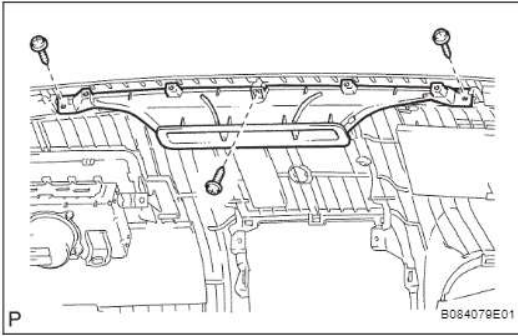**3. REMOVE DEFROSTER NOZZLE ASSEMBLY**

- (a) Remove the 3 screws and the defroster nozzle assembly.

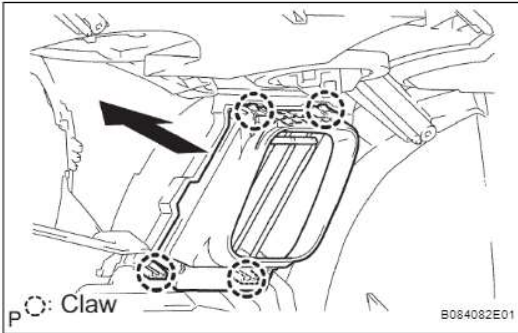**4. REMOVE NO. 1 INSTRUMENT PANEL REGISTER ASSEMBLY**

- (a) Detach the 4 claws, then remove the No. 1 instrument panel register assembly.

5. REMOVE NO. 2 INSTRUMENT PANEL REGISTER ASSEMBLY

HINT:

Use the same procedures for the No. 2 instrument panel register assembly and No. 1 instrument panel register assembly.



6. REMOVE FRONT PASSENGER AIRBAG ASSEMBLY

- (a) Remove the front passenger airbag (see page [RS-367](#)).


7. REMOVE NO. 2 INSTRUMENT PANEL CUSHION**8. REMOVE NO. 2 FRONT PANEL SIDE SILENCER**

REASSEMBLY


1. **INSTALL NO. 2 FRONT PANEL SIDE SILENCER**
2. **INSTALL NO. 2 INSTRUMENT PANEL CUSHION**
3. **INSTALL FRONT PASSENGER AIRBAG ASSEMBLY**
(a) Install the front passenger airbag (see page [RS-11](#)).
4. **INSTALL NO. 1 INSTRUMENT PANEL REGISTER ASSEMBLY**
(a) Attach the 4 claws to install the No. 2 instrument panel register.
5. **INSTALL NO. 2 INSTRUMENT PANEL REGISTER ASSEMBLY**
HINT:
Use the same procedures for the No. 2 instrument panel register and No. 1 instrument panel register.

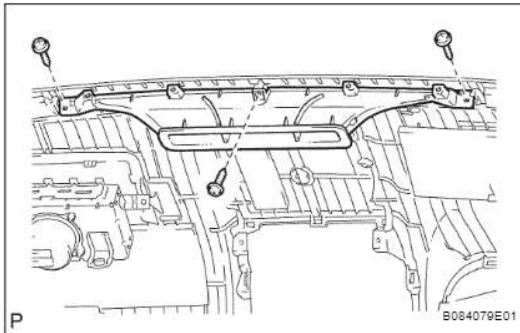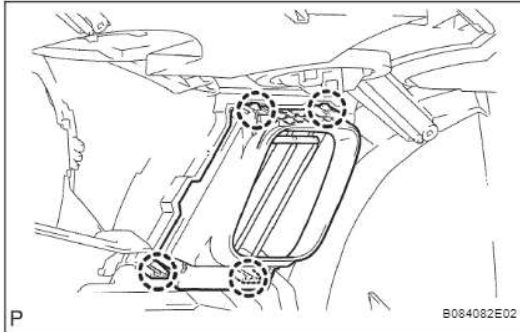

6. **INSTALL DEFROSTER NOZZLE ASSEMBLY**
(a) Install the defroster nozzle with the 3 screws.

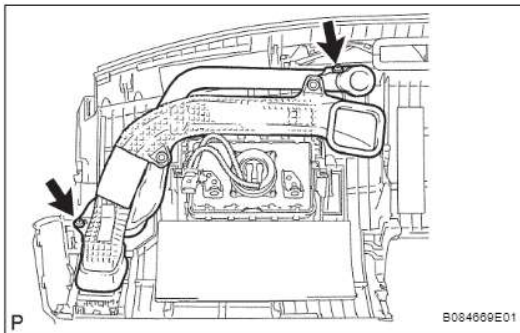

7. **INSTALL NO. 4 HEATER TO REGISTER DUCT**
(a) Install the No. 4 heater to register duct with the 2 screws.

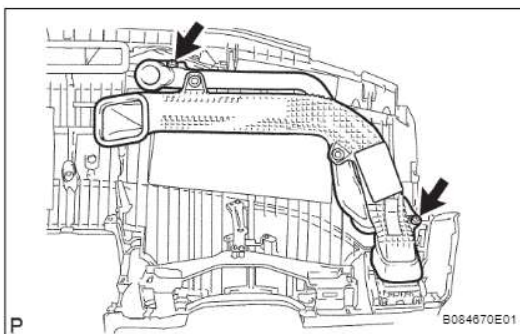


8. **INSTALL NO. 1 HEATER TO REGISTER DUCT**
(a) Install the No. 1 heater to register duct with the 2 screws.

IP-10

INSTRUMENT PANEL – UPPER INSTRUMENT PANEL

INSTALLATION**1. INSTALL UPPER INSTRUMENT PANEL SUB-ASSEMBLY**

- (a) Detach the 13 claws to install the upper instrument panel.
- (b) Install the 5 screws and 2 bolts.
Torque: 18 N*m (184 kgf*cm, 13 ft.*lbf) for Bolt

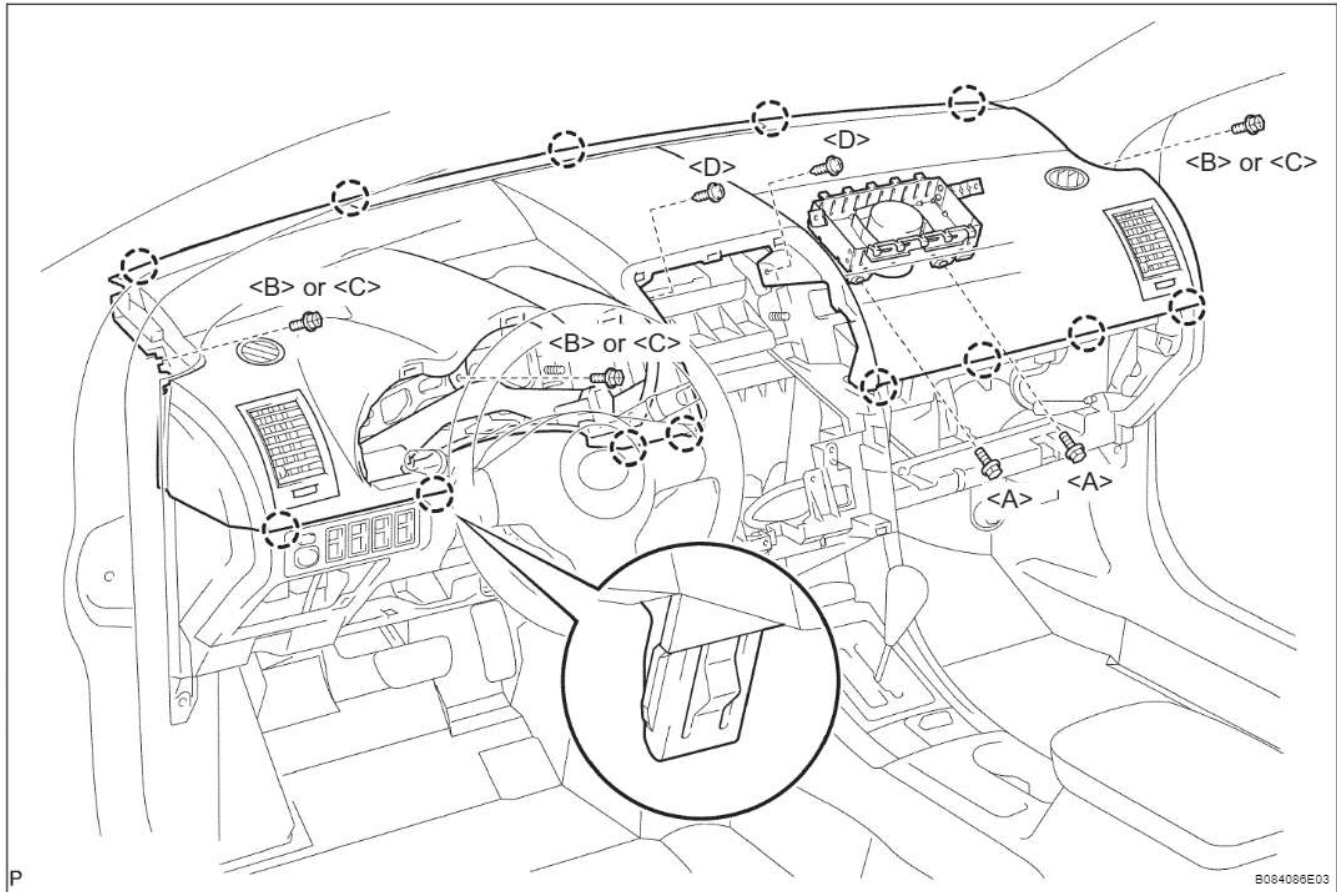**2. INSTALL PASSENGER AIRBAG CONNECTOR****3. INSTALL FRONT PILLAR GARNISH LH (w/o Curtain Shield Airbag) (See page [IR-17](#))****4. INSTALL FRONT PILLAR GARNISH LH (w/ Curtain Shield Airbag) (See page [IR-17](#))****5. INSTALL FRONT PILLAR GARNISH RH (w/o Curtain Shield Airbag)**

HINT:

Use the same procedures for the RH side and LH side.


6. INSTALL FRONT PILLAR GARNISH RH (w/ Curtain Shield Airbag)

HINT:


Use the same procedures for the RH side and LH side.

INSTRUMENT PANEL – UPPER INSTRUMENT PANEL


IP-11

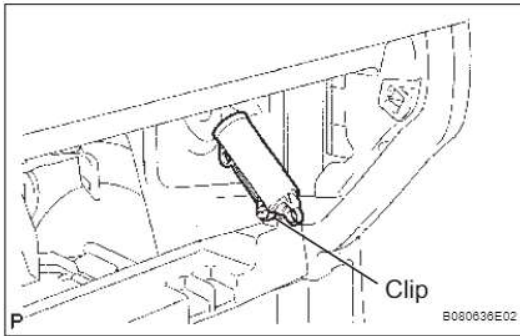**7. INSTALL GLOVE COMPARTMENT DOOR STOPPER SUB-ASSEMBLY**

- (a) Attach the claw to install the glove compartment door

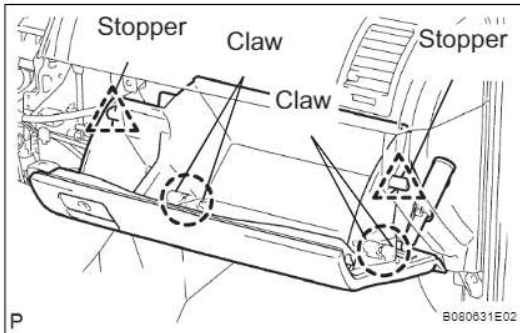**8. INSTALL GLOVE COMPARTMENT DOOR ASSEMBLY**

- (a) Attach the 4 claws to install the glove compartment door assembly.
 (b) Slightly press in on the upper sides of the glove compartment door assembly to engage the 2 stoppers.

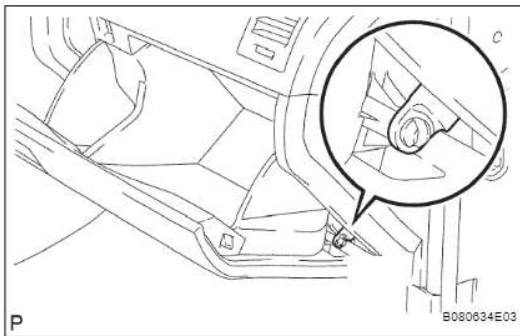


- (c) Connect the glove compartment door stopper to the glove compartment door assembly.

9. INSTALL NO. 1 RADIO BRACKET

- (a) Install the No. 1 radio bracket with the nut and screw.

10. INSTALL NO. 2 RADIO BRACKET

- (a) Install the No. 2 radio bracket with the nut and screw.

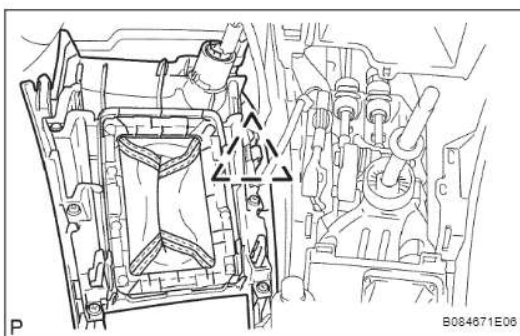
**11. INSTALL HEATER CONTROL AND ACCESSORY ASSEMBLY****12. INSTALL UPPER CONSOLE PANEL**

- (a) Install the clamp and console panel.
 (b) Connect the connector.


IP

IP-12

INSTRUMENT PANEL – UPPER INSTRUMENT PANEL

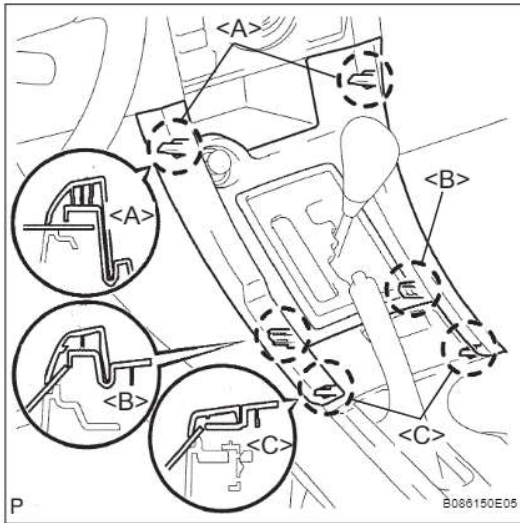

(c) Attach the 6 claws to install the console panel.

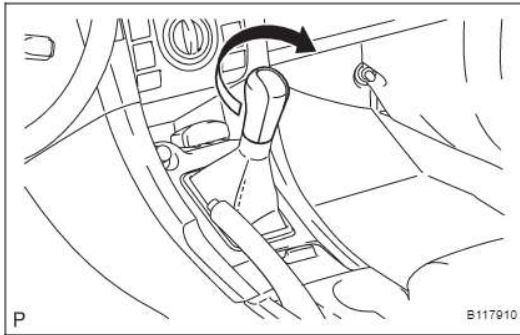


13. INSTALL SHIFT LEVER KNOB SUB-ASSEMBLY (Manual Transaxle)

(a) Turn the shift lever knob clockwise and install the shift lever knob.

14. INSTALL COMBINATION METER ASSEMBLY

- (a) Connect the connector.
- (b) Attach the 2 claws to install the combination meter.
- (c) Install the screw.

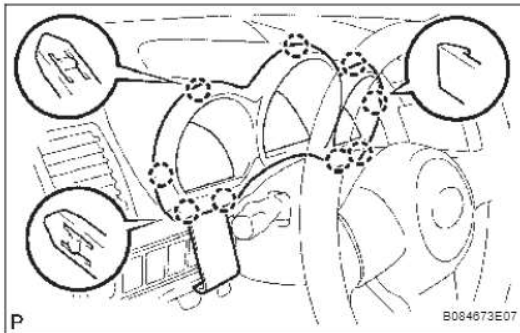

15. INSTALL METER HOOD SUB-ASSEMBLY

(a) Attach the 9 claws to install the meter hood.

16. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

17. PERFORM INITIALIZATION

(a) Perform initialization (see page [IN-23](#)).

NOTICE:

Certain systems need to be initialized after disconnecting and reconnecting the cable from the negative (-) battery terminal.

18. CHECK SRS WARNING LIGHT

(a) Check the SRS warning light (see page [RS-11](#)).

LOWER INSTRUMENT PANEL

PRECAUTION


1. PRECAUTION FOR VEHICLE WITH SRS AIRBAG AND SEAT BELT PRETENSIONER
- (a) Some operations in this section may affect the SRS airbags. Prior to performing the corresponding operations, read the SRS airbag NOTICE (See page [RS-1](#)).
- NOTICE:
- When disconnecting the negative (-) battery terminal, initialize the following systems after the terminal is reconnected.

System Name	See Procedure
Power Window Control System	WS-5
Sliding Roof System	RF-3


IP-14

INSTRUMENT PANEL – LOWER INSTRUMENT PANEL

COMPONENTS

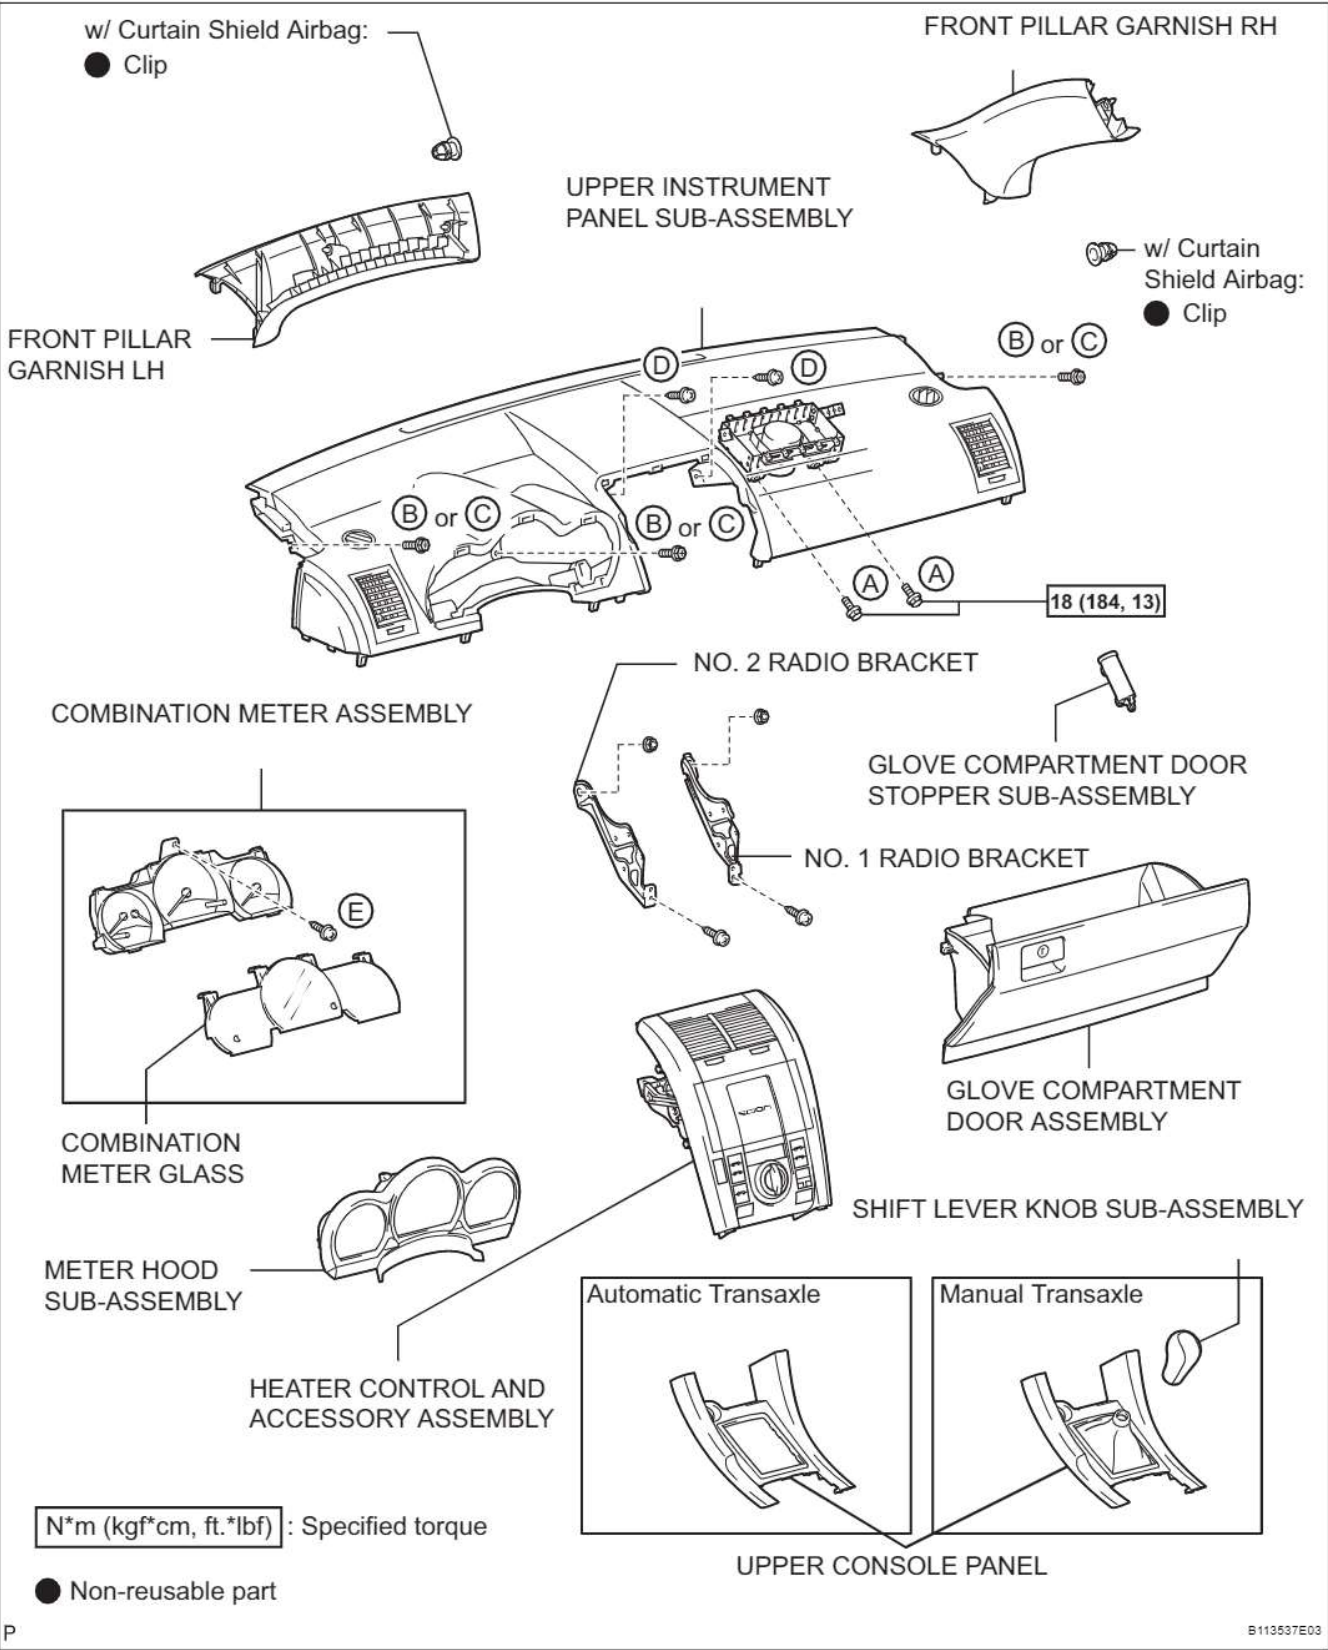


INSTRUMENT PANEL – LOWER INSTRUMENT PANEL

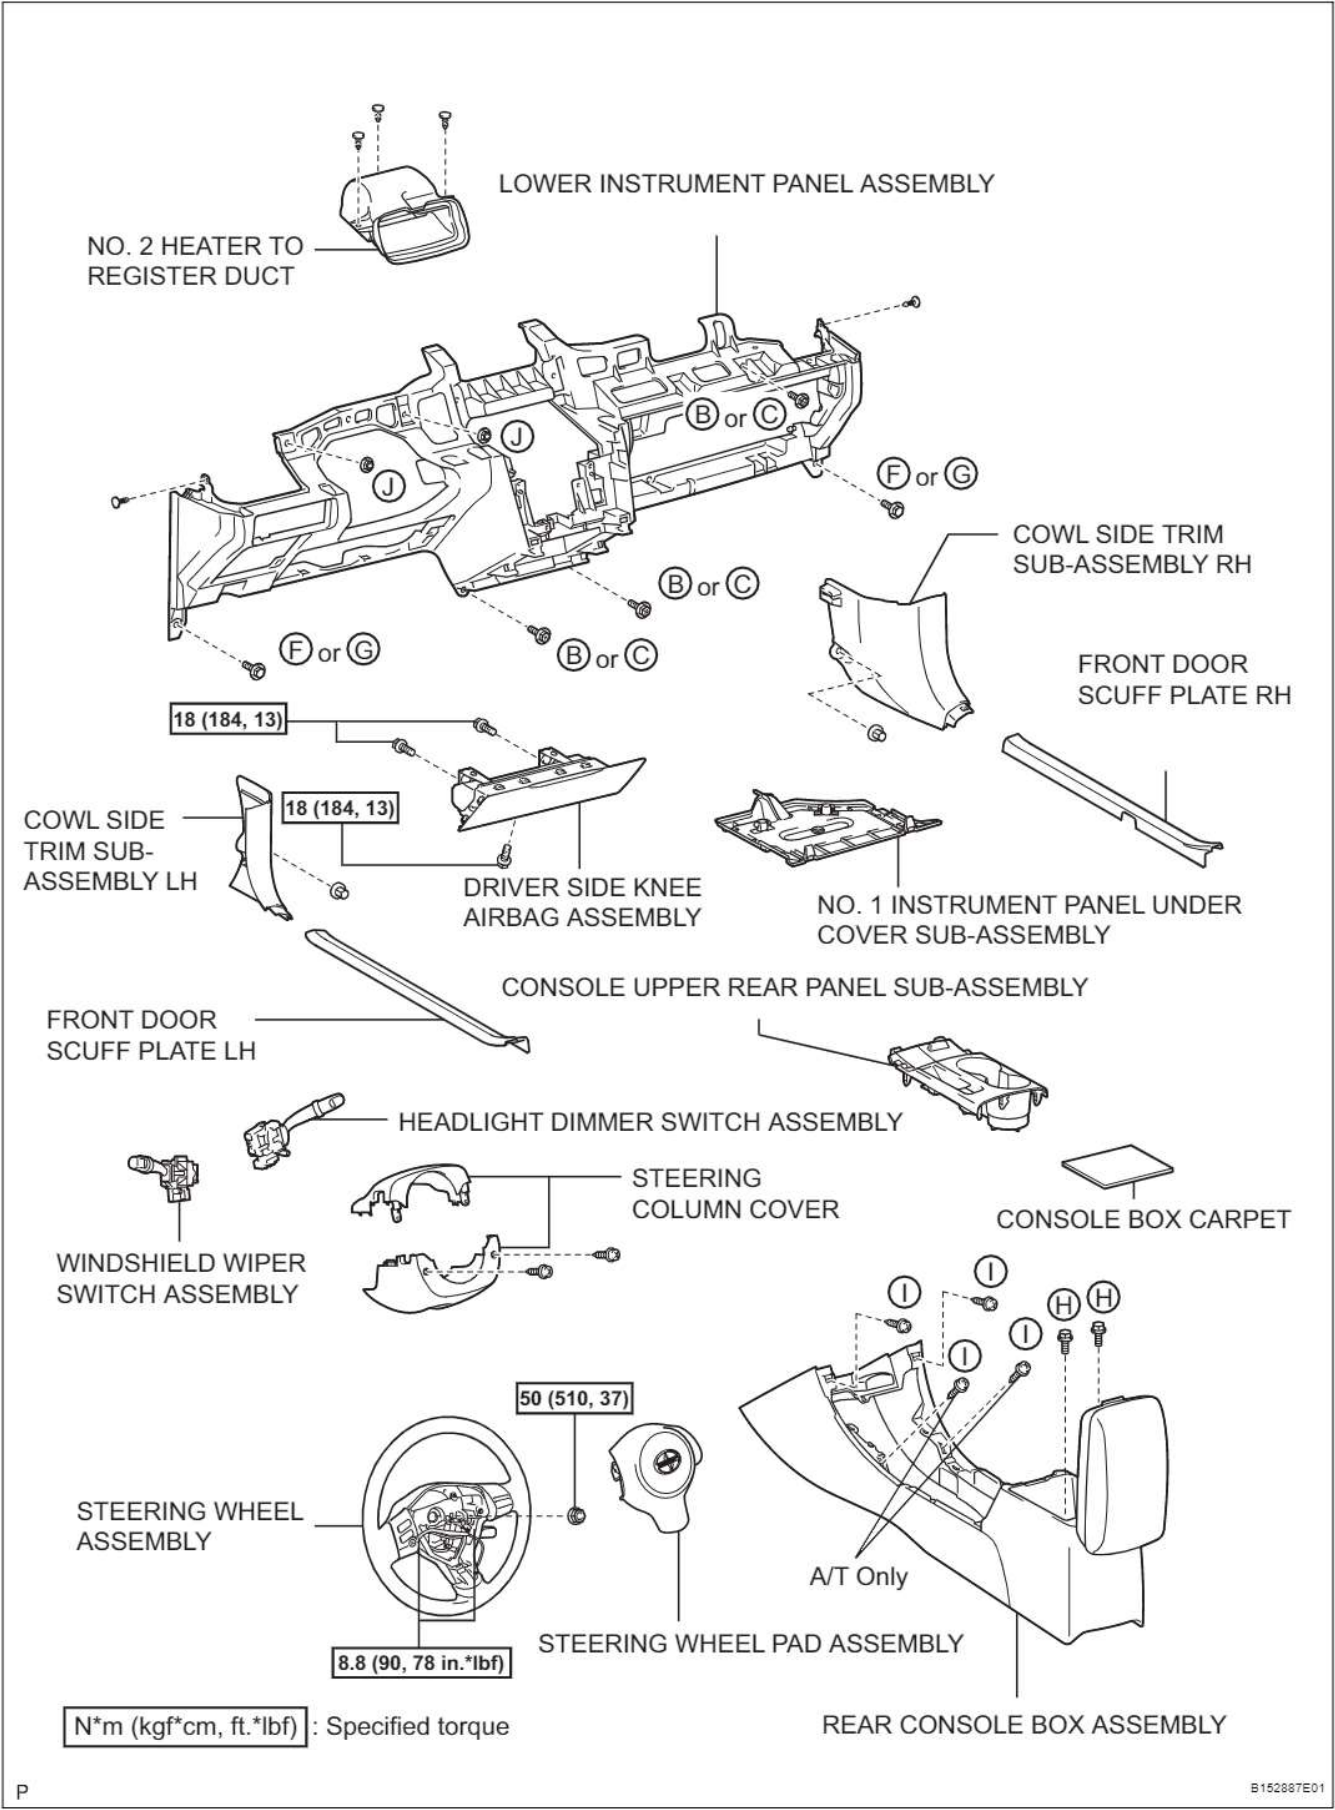

IP-16

INSTRUMENT PANEL – LOWER INSTRUMENT PANEL









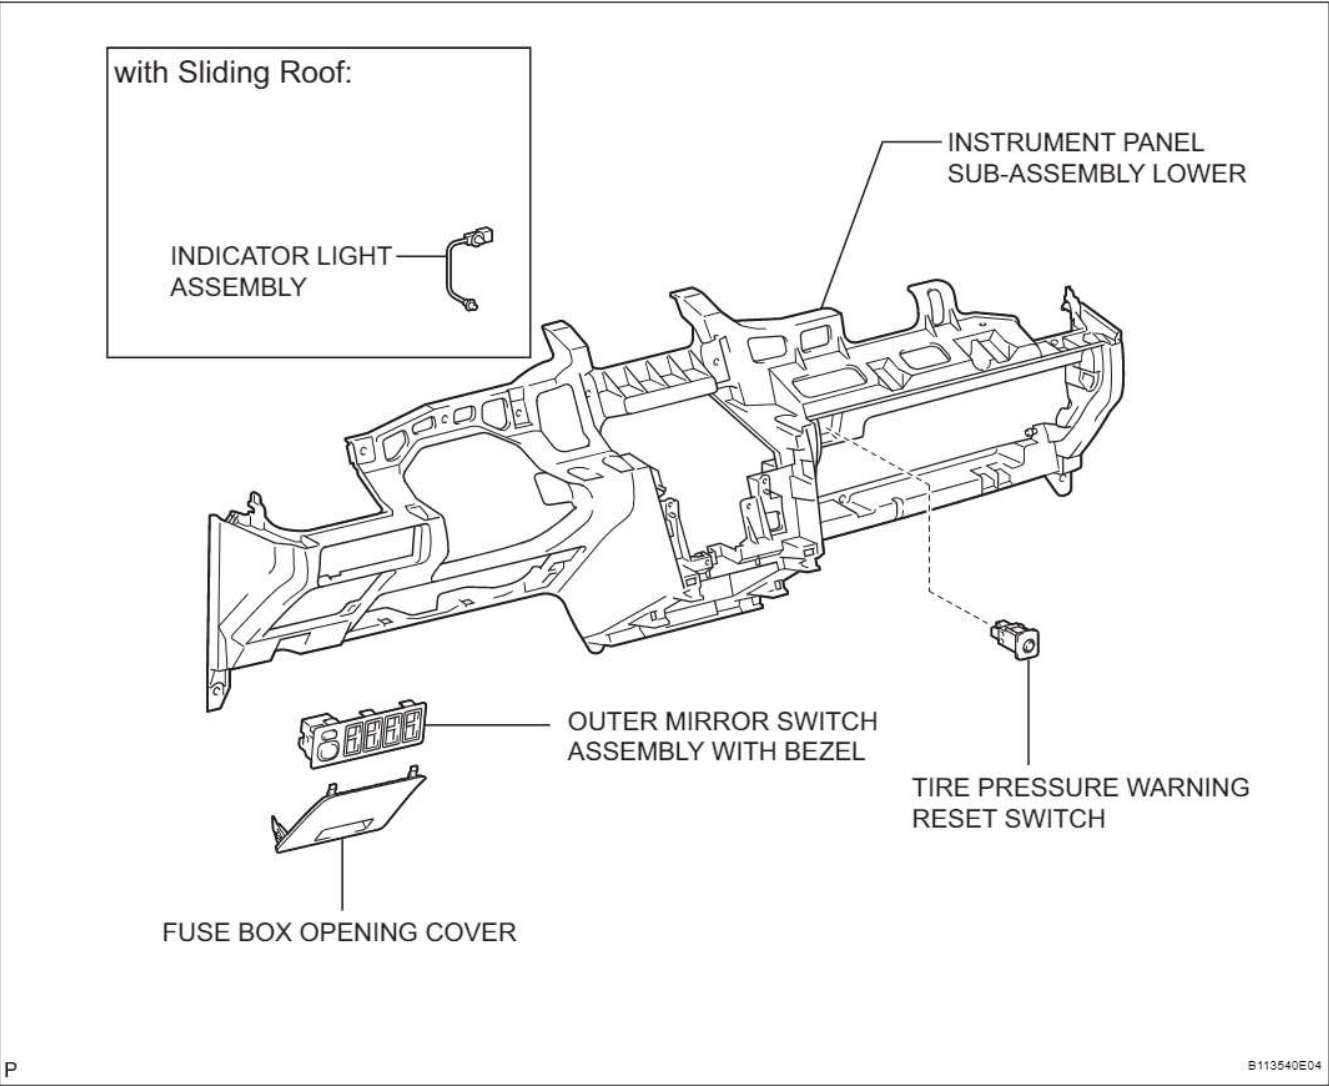


INSTRUMENT PANEL – LOWER INSTRUMENT PANEL

REMOVAL

1. BOLT, SCREW AND NUT TABLE

     HINT:
All bolts, screws and nuts relevant to installing and removing the instrument panel are shown along with their alphabet code in the table below.

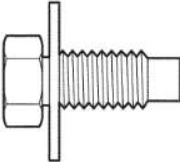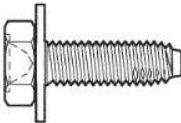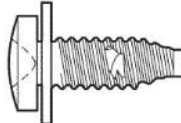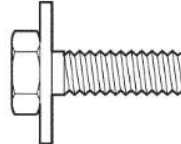mm (in.) (L=Length)					
Code	Shape	Code	Shape	Code	Shape
<A>	 φ = 8 (0.32) L = 20 (0.79) 91633-60820		 φ = 6 (0.24) L = 20 (0.79) 90159-60610	<C>	 φ = 7 (0.28) L = 20 (0.79) 90159-70004
<D>	 φ = 5 (0.20) L = 14 (0.55) 93568-55014	<E>	 φ = 5 (0.20) L = 16 (0.63) 93567-15016	<F>	 φ = 6 (0.24) L = 16 (0.63) 91635-60616
<G>	 φ = 6 (0.24) L = 20 (0.79) 90119-06077	<H>	 φ = 6 (0.24) L = 16 (0.63) 91553-80616	<I>	 φ = 5 (0.20) L = 16 (0.63) 93568-55016
<J>	 φ = 6 (0.24) 90179-06026				

2. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:
Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

IP-18


INSTRUMENT PANEL – LOWER INSTRUMENT PANEL

3. REMOVE UPPER INSTRUMENT PANEL SUB-ASSEMBLY


- (a) Remove the upper instrument panel (see page [IP-4](#)).

4. REMOVE STEERING WHEEL PAD ASSEMBLY (See page [RS-345](#))**5. REMOVE STEERING WHEEL ASSEMBLY (See page [SR-8](#))****6. REMOVE STEERING COLUMN COVER (See page [SR-8](#))****7. REMOVE HEADLIGHT DIMMER SWITCH ASSEMBLY (See page [LI-41](#))****8. REMOVE WINDSHIELD WIPER SWITCH ASSEMBLY (See page [WW-12](#))****9. REMOVE CONSOLE UPPER REAR PANEL SUB-ASSEMBLY**

- (a) Detach the 7 claws and remove the console upper rear panel.

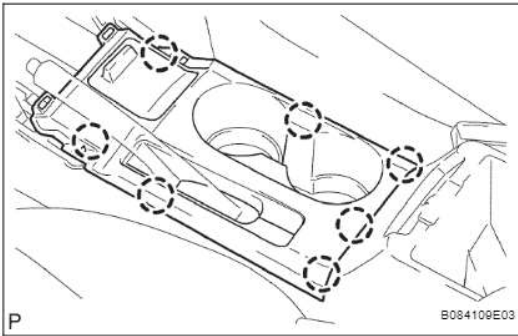**10. REMOVE REAR CONSOLE BOX ASSEMBLY**


- (a) Disconnect the connector.
(b) Remove the console box carpet.

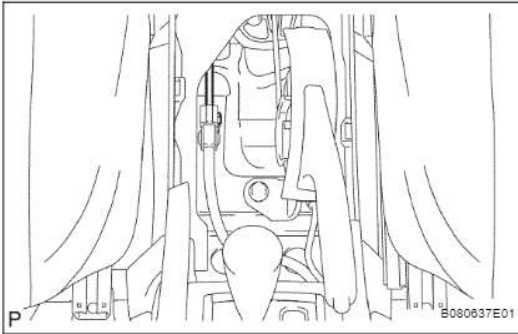

- (c) Manual transaxle:
Remove the 2 screws.
(d) Automatic transaxle:
Remove the 4 screws.
(e) Remove the 2 bolts.
(f) Remove the clamp and console box, and disconnect the connector.


11. REMOVE DRIVER SIDE KNEE AIRBAG ASSEMBLY

- (a) Remove the driver side knee airbag (see page [RS-359](#)).

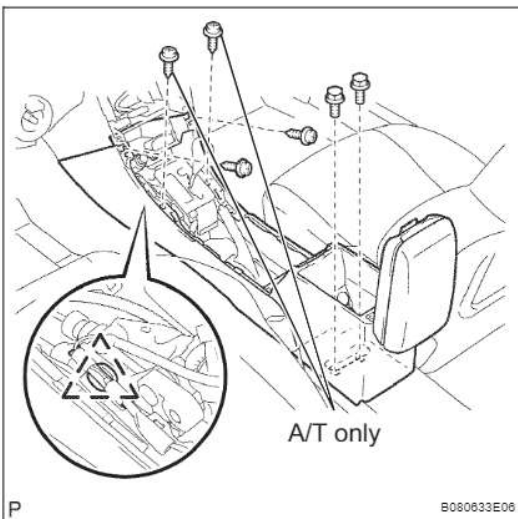


INSTRUMENT PANEL – LOWER INSTRUMENT PANEL

IP-19

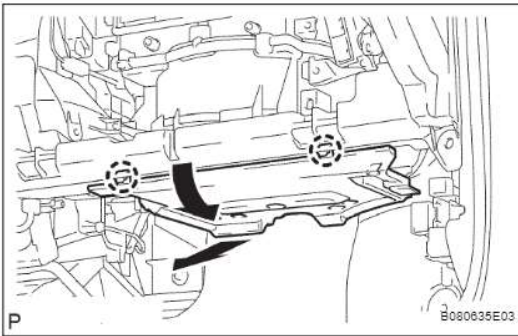**12. REMOVE NO. 1 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY**

- (a) Detach the 2 claws.
- (b) Remove the instrument panel under cover, as shown in the illustration.

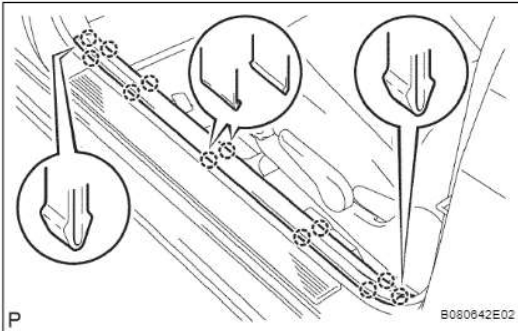
**13. REMOVE FRONT DOOR SCUFF PLATE LH**

- (a) Detach the 12 claws and remove the front door scuff plate.

14. REMOVE FRONT DOOR SCUFF PLATE RH

HINT:

Use the same procedures for the RH side and LH side.

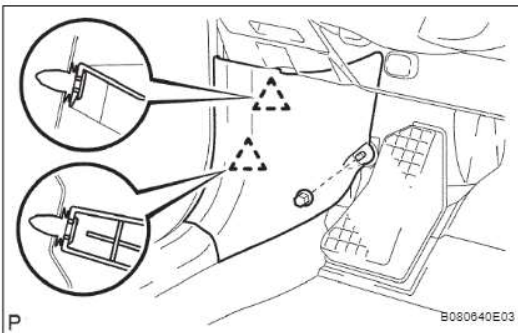
**15. REMOVE COWL SIDE TRIM SUB-ASSEMBLY LH**

- (a) Remove the clip.
- (b) Remove the 2 clips and cowl side trim.

16. REMOVE COWL SIDE TRIM SUB-ASSEMBLY RH

HINT:

Use the same procedures for the RH side and LH side.

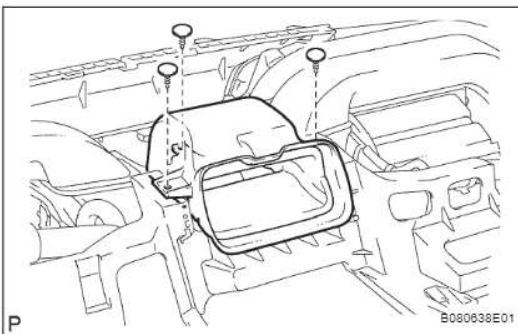**17. REMOVE NO. 2 HEATER TO REGISTER DUCT**

- (a) Remove the 3 clips, and No. 2 heater to register duct.


18. REMOVE LOWER INSTRUMENT PANEL ASSEMBLY

- (a) Disconnect the hood lock control cable.
- (b) Remove the 3 screws, 2 bolts and 2 nuts.
- (c) Remove the 2 clips.
- (d) Detach the 7 wire harness clamps.
- (e) Disconnect the 3 connectors.
- (f) Pull the lower instrument panel toward the rear of the vehicle, and check that the wire harnesses are not caught, and then remove the lower instrument panel.

IP

IP-20

INSTRUMENT PANEL – LOWER INSTRUMENT PANEL

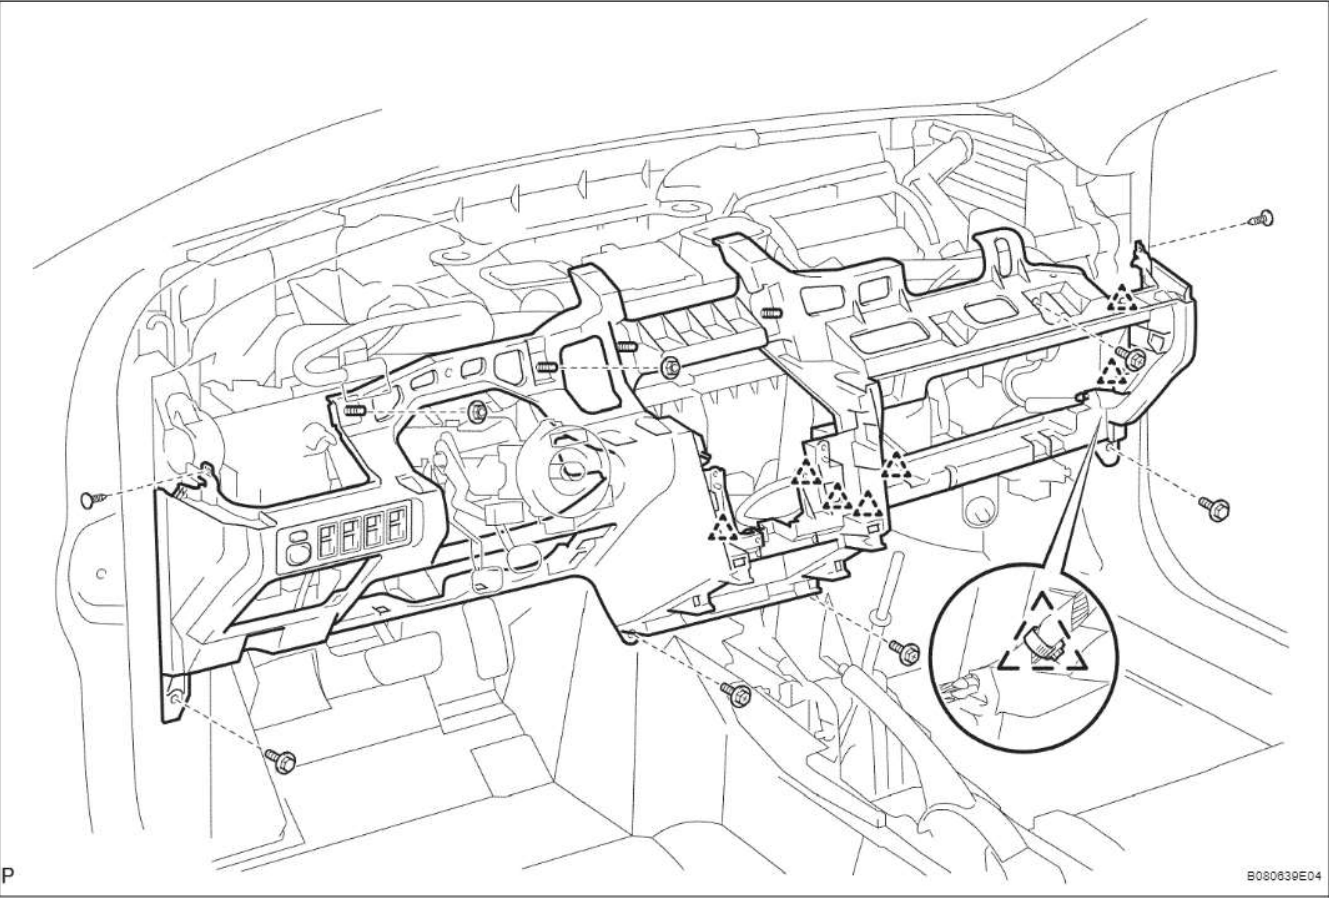

IP

DISASSEMBLY

1. REMOVE FUSE BOX OPENING COVER
2. REMOVE OUTER MIRROR SWITCH ASSEMBLY WITH BEZEL
3. REMOVE TIRE PRESSURE WARNING RESET SWITCH
4. REMOVE INDICATOR LIGHT ASSEMBLY (w/ Sliding Roof)
5. REMOVE INSTRUMENT PANEL SUB-ASSEMBLY LOWER


IP-22**INSTRUMENT PANEL – LOWER INSTRUMENT PANEL**

REASSEMBLY

1. **INSTALL STEREO JACK ADAPTER ASSEMBLY**
2. **INSTALL INSTRUMENT PANEL SUB-ASSEMBLY LOWER**
3. **INSTALL INDICATOR LIGHT ASSEMBLY (w/ Sliding Roof)**
4. **INSTALL TIRE PRESSURE WARNING RESET SWITCH**
5. **INSTALL OUTER MIRROR SWITCH ASSEMBLY WITH BEZEL**
6. **INSTALL FUSE BOX OPENING COVER**

INSTRUMENT PANEL – LOWER INSTRUMENT PANEL**IP-23****INSTALLATION****1. INSTALL LOWER INSTRUMENT PANEL ASSEMBLY**


- (a) Install the lower instrument panel, and check that the wire harness are not caught.

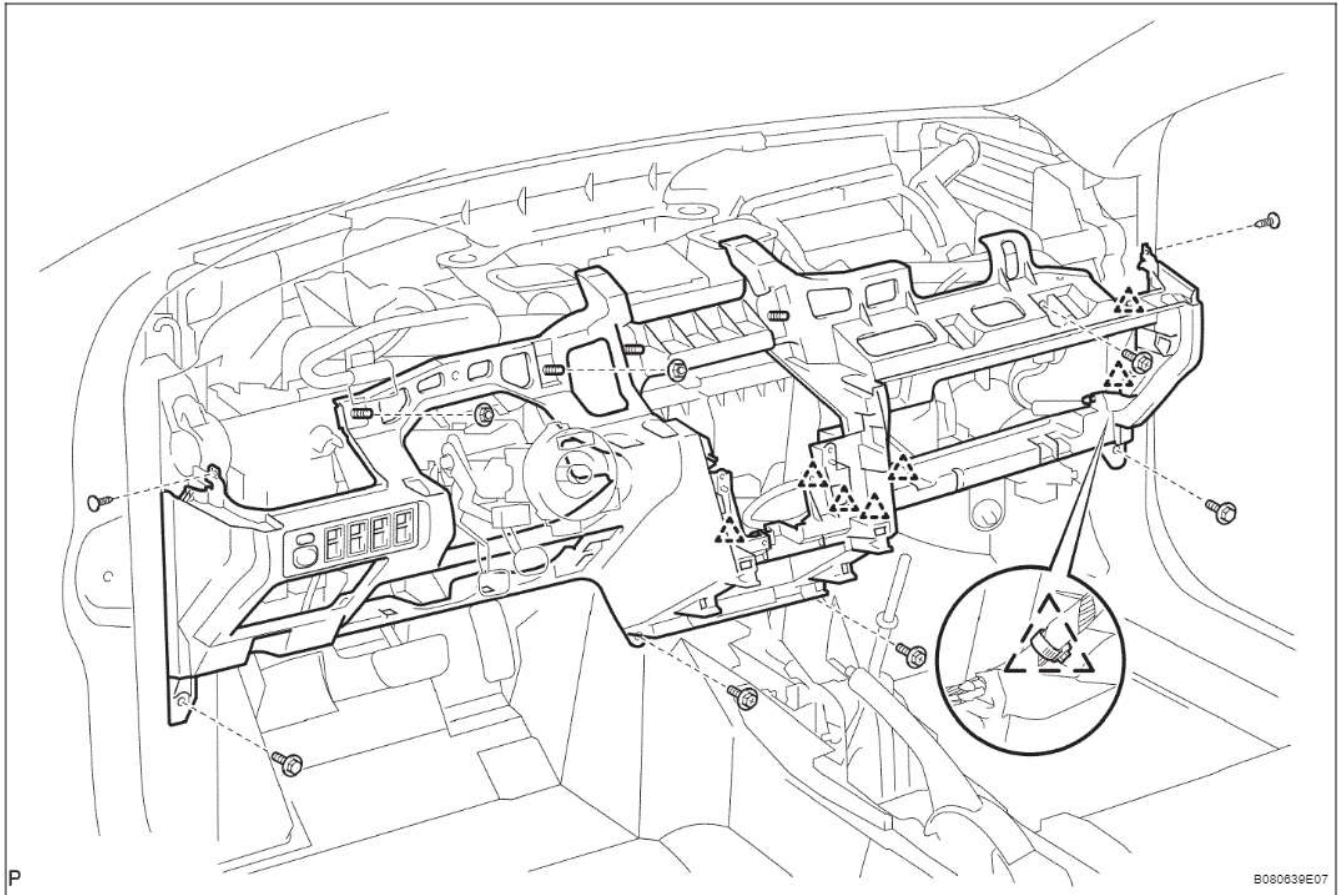

- (b) Connect the 3 connectors.
 (c) Attach the 7 wire harness clamps.
 (d) Install the 2 clips.
 (e) Install the 3 screws, 2 bolts and 2 nuts.
 (f) Connect the hood lock control cable.


2. INSTALL NO. 2 HEATER TO REGISTER DUCT

- (a) Install the No. 2 heater to register duct with the 3 clips.

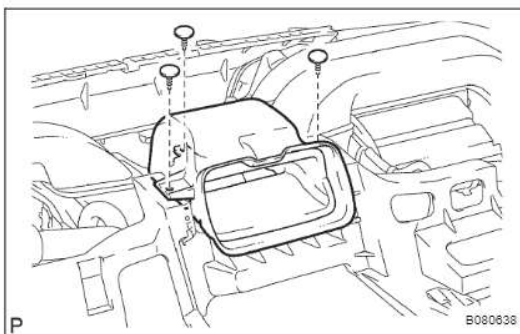

IP-24

INSTRUMENT PANEL – LOWER INSTRUMENT PANEL

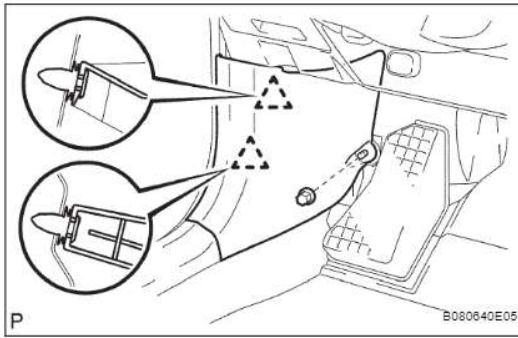**3. INSTALL COWL SIDE TRIM SUB-ASSEMBLY LH**

- (a) Attach the 2 clips to install the cowl side trim.
- (b) Install the clip.

4. INSTALL COWL SIDE TRIM SUB-ASSEMBLY RH

HINT:

Use the same procedures for the RH side and LH side.

5. INSTALL FRONT DOOR SCUFF PLATE LH

- (a) Attach the 12 claws to install the front door scuff plate LH.

6. INSTALL FRONT DOOR SCUFF PLATE RH

HINT:


Use the same procedures for the RH side and LH side.

7. INSTALL NO. 1 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY


- (a) Install the instrument panel under cover, as shown in the illustration.
- (b) Attach the 2 claws.

8. INSTALL DRIVER SIDE KNEE AIRBAG ASSEMBLY


- (a) Install the driver side knee airbag (see page [RS-358](#)).

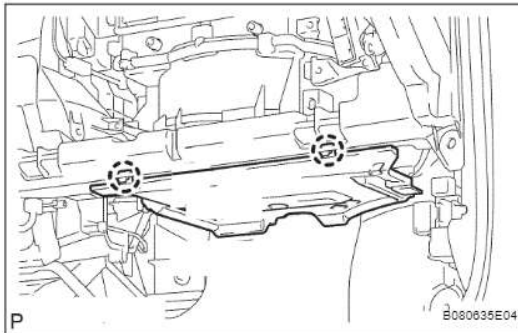**9. INSTALL REAR CONSOLE BOX ASSEMBLY**

- (a) Connect the clamp and install the console box.
- (b) Install the 2 bolts.
- (c) Manual transaxle:
Install the 2 screws.
- (d) Automatic transaxle:
Install the 4 screws.

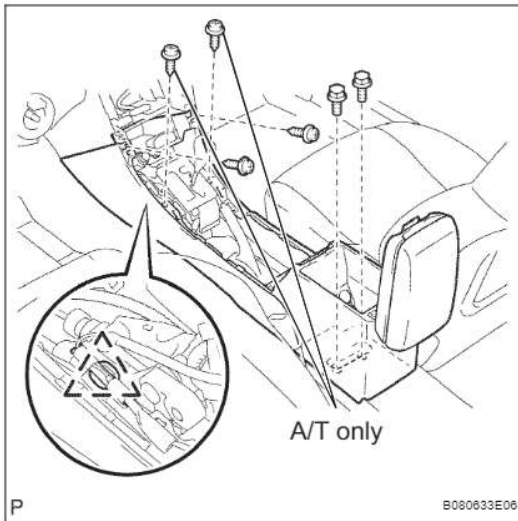


- (e) Install the console box carpet.
- (f) Connect the connector.

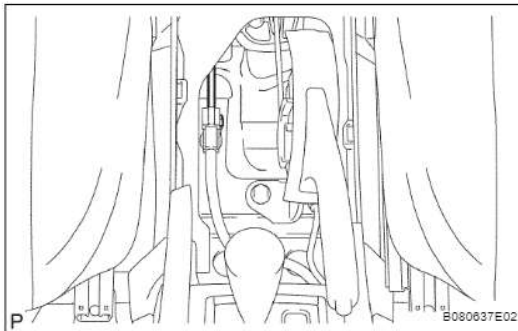

INSTRUMENT PANEL – LOWER INSTRUMENT PANEL

IP-25

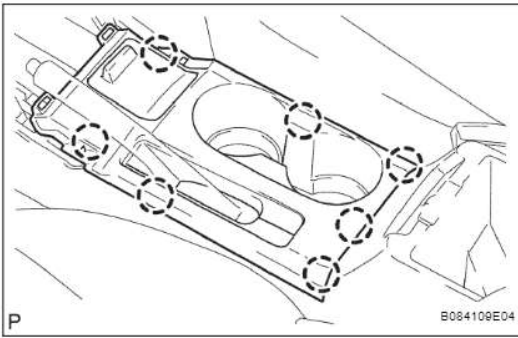


10. **INSTALL CONSOLE UPPER REAR PANEL SUB-ASSEMBLY**
 - (a) Attach the 7 claws to install the console upper rear panel.
11. **INSTALL WINDSHIELD WIPER SWITCH ASSEMBLY**
(See page [WW-13](#))
12. **INSTALL HEADLAMP DIMMER SWITCH ASSEMBLY**
(See page [LI-42](#))
13. **INSTALL STEERING COLUMN COVER**
14. **INSTALL STEERING WHEEL ASSEMBLY** (See page [SR-15](#))
15. **INSTALL STEERING WHEEL PAD ASSEMBLY** (See page [RS-346](#))
16. **INSTALL UPPER INSTRUMENT PANEL ASSEMBLY**
 - (a) Install the upper instrument panel (see page [IP-9](#)).
17. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**
18. **PERFORM INITIALIZATION**
 - (a) Perform initialization (see page [IN-23](#)).
NOTICE:
Certain systems need to be initialized after disconnecting and reconnecting the cable from the negative (-) battery terminal.
19. **CHECK SRS WARNING LIGHT**
 - (a) Check the SRS warning light (see page [RS-11](#)).

IP

REAR CONSOLE BOX


COMPONENTS

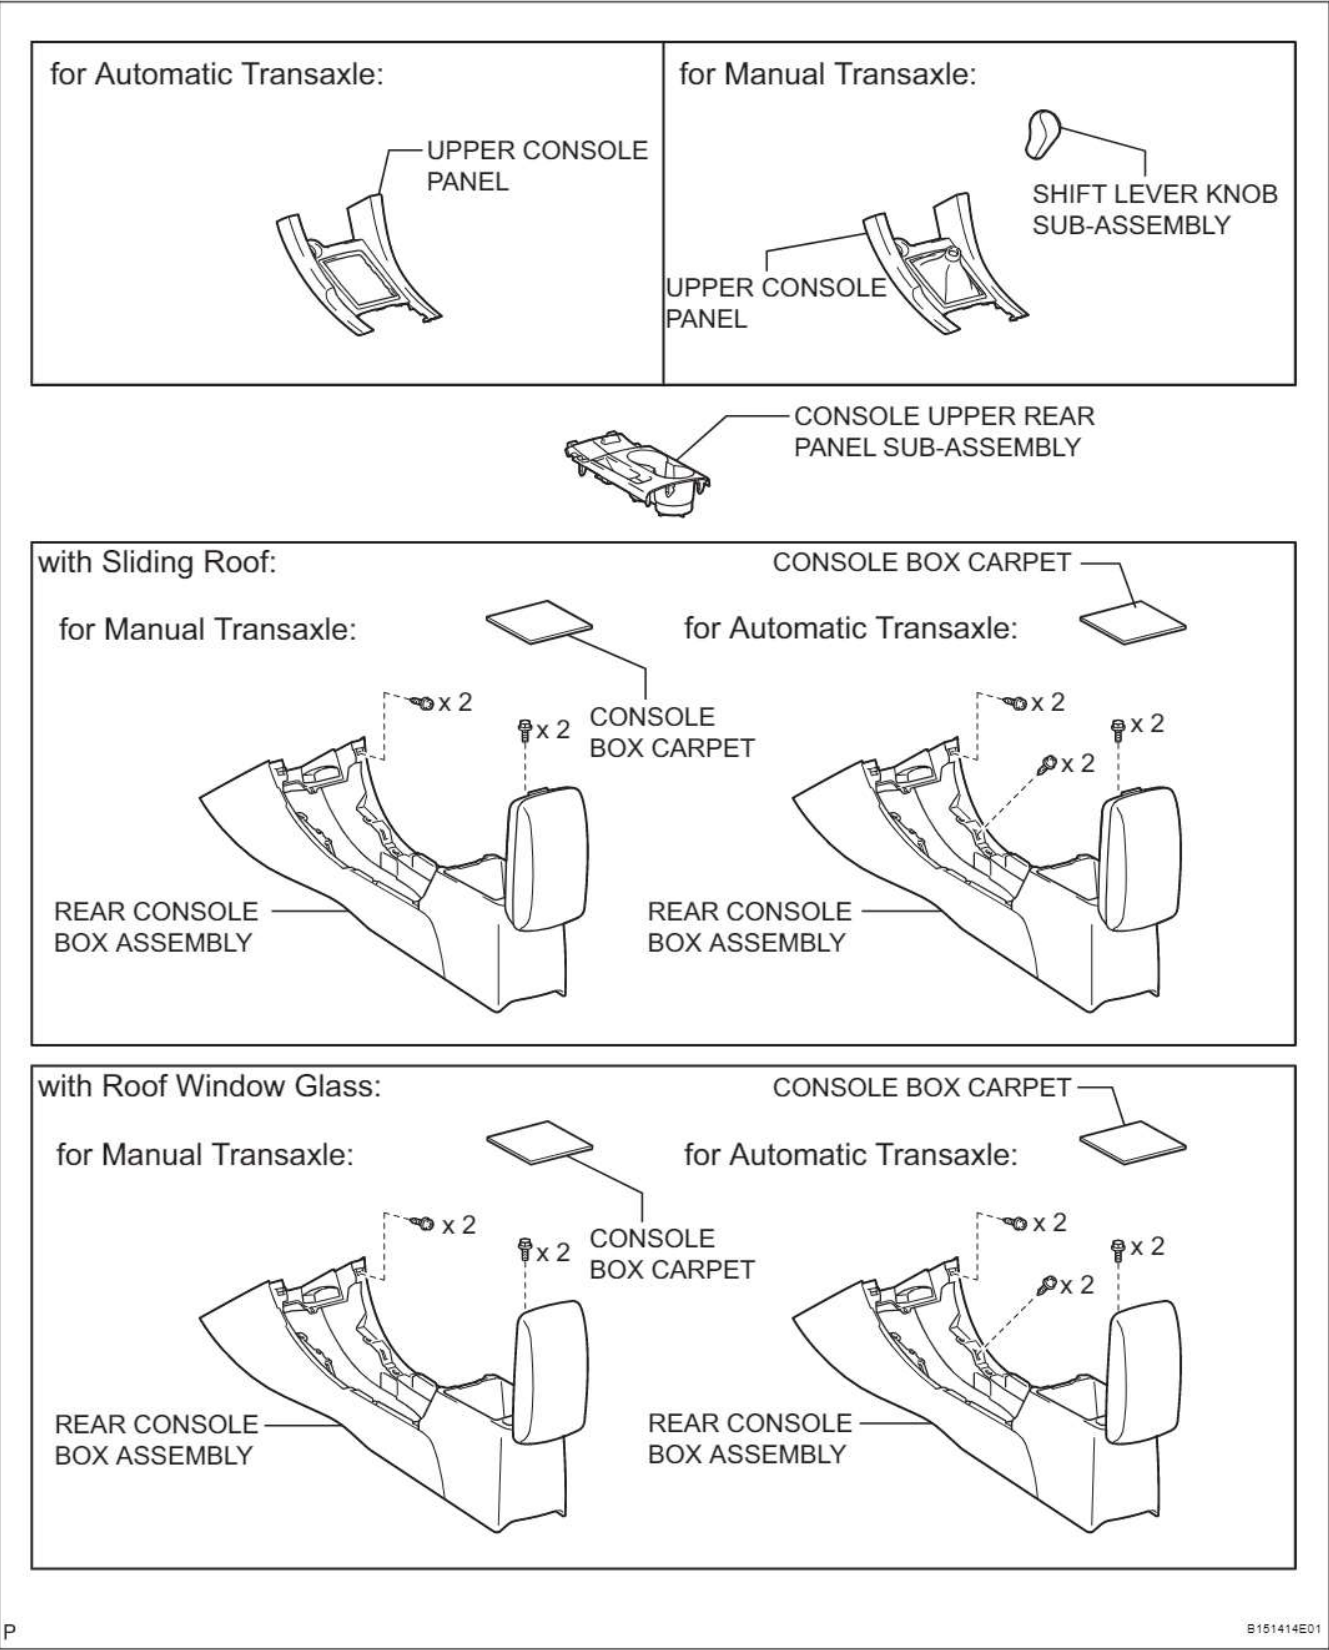

INSTRUMENT PANEL – REAR CONSOLE BOX

IP-25

with Sliding Roof:

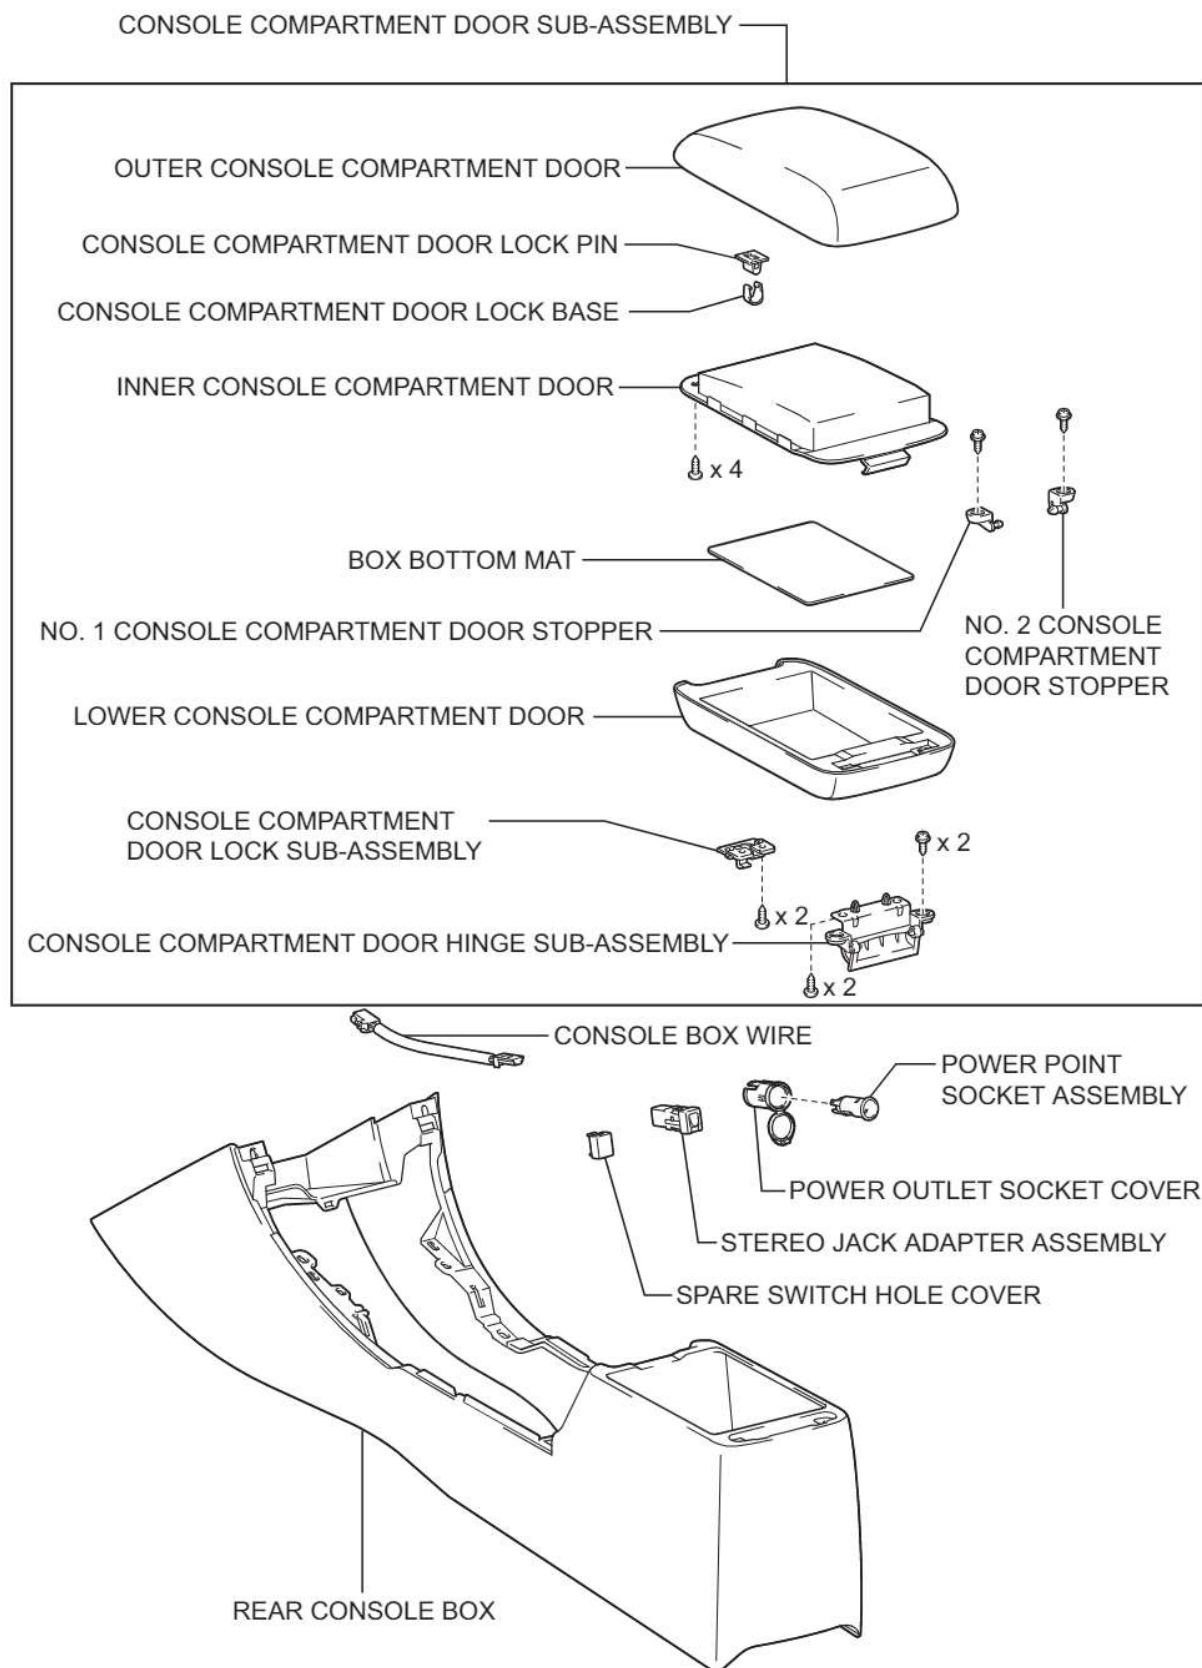

IP


P

B151430E01

IP-26

INSTRUMENT PANEL – REAR CONSOLE BOX

with Roof Window Glass:

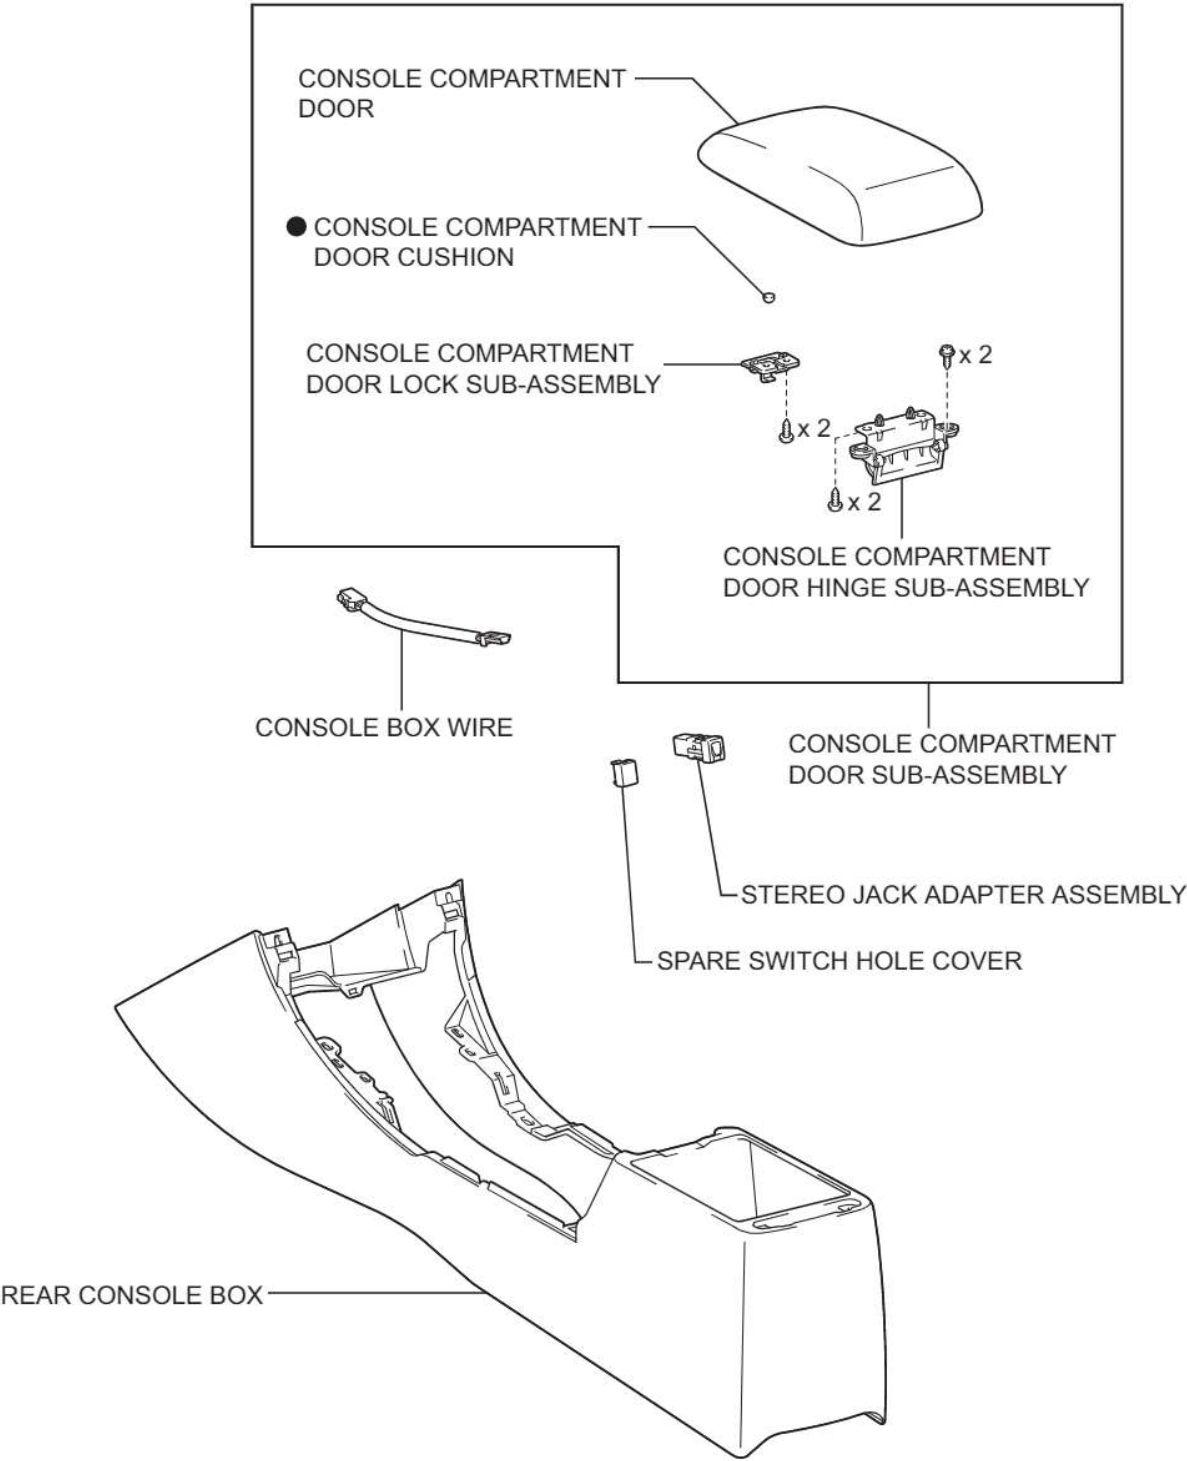

● Non-reusable part

P


B151427E01

REMOVAL



1. REMOVE SHIFT LEVER KNOB SUB-ASSEMBLY (See page [IP-5](#))
2. REMOVE UPPER CONSOLE PANEL (See page [IP-5](#))
3. REMOVE CONSOLE UPPER REAR PANEL SUB-ASSEMBLY (See page [IP-18](#))
4. REMOVE REAR CONSOLE BOX ASSEMBLY (See page [IP-18](#))

DISASSEMBLY

1. REMOVE CONSOLE COMPARTMENT DOOR SUB-ASSEMBLY (w/ Sliding Roof)
 - (a) Remove the 2 screws.

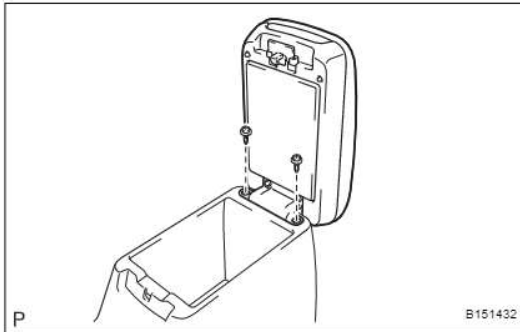


- (b) Remove the console compartment door sub-assembly as shown in the illustration.

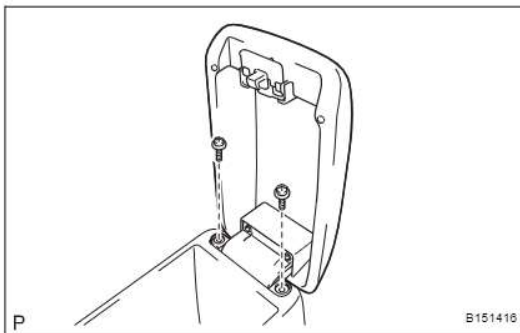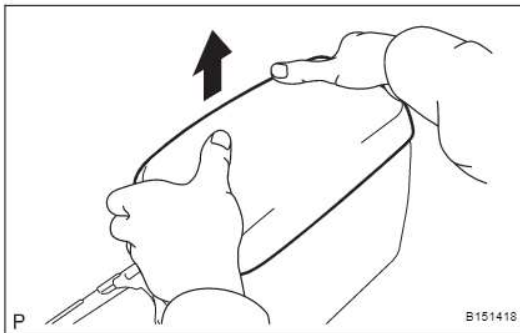


2. REMOVE CONSOLE COMPARTMENT DOOR SUB-ASSEMBLY (w/ Roof Window Glass)
 - (a) Remove the 2 screws.

- (b) Remove the console compartment door sub-assembly as shown in the illustration.

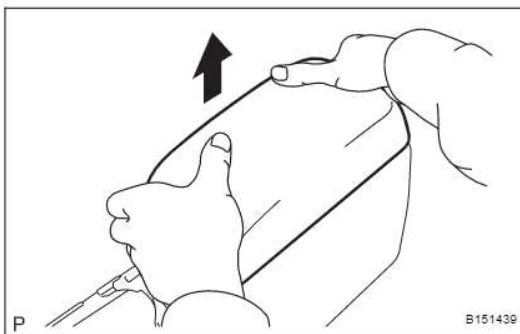


IP-28

INSTRUMENT PANEL – REAR CONSOLE BOX

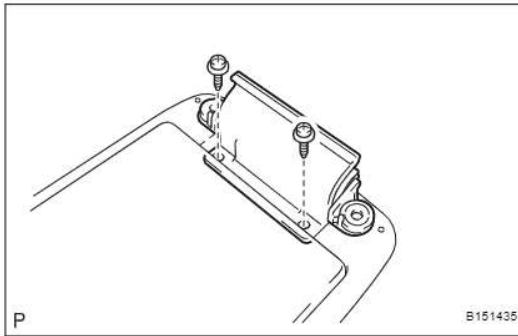

3. REMOVE CONSOLE COMPARTMENT DOOR HINGE SUB-ASSEMBLY (w/ Sliding Roof)

- (a) Remove the 2 screws and the console compartment door hinge sub-assembly.

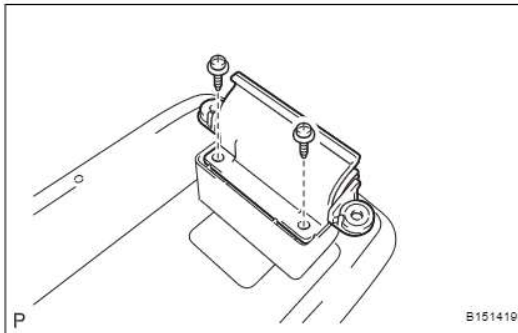


4. REMOVE CONSOLE COMPARTMENT DOOR HINGE SUB-ASSEMBLY (w/ Roof Window Glass)

- (a) Remove the 2 screws and the console compartment door hinge sub-assembly.




5. REMOVE BOX BOTTOM MAT (w/ Sliding Roof)

- (a) Remove the box bottom mat.

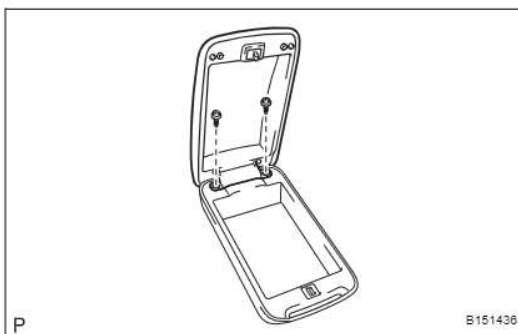

6. REMOVE OUTER CONSOLE COMPARTMENT DOOR (w/ Sliding Roof)

- (a) Remove the 2 screws and outer console compartment door.

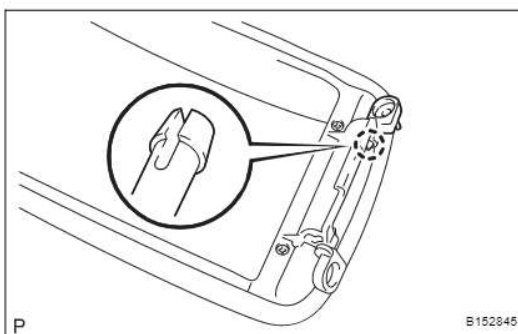


7. REMOVE NO. 1 CONSOLE COMPARTMENT DOOR STOPPER (w/ Sliding Roof)

- (a) Disengage the claw and remove the No. 1 console compartment door stopper.

IP


INSTRUMENT PANEL – REAR CONSOLE BOX

IP-29

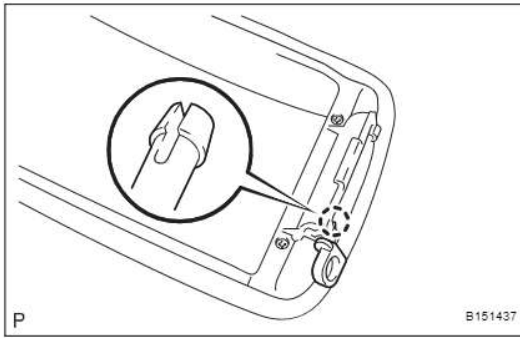

8. REMOVE NO. 2 CONSOLE COMPARTMENT DOOR STOPPER (w/ Sliding Roof)

- (a) Disengage the claw and remove the No. 2 console compartment door stopper.

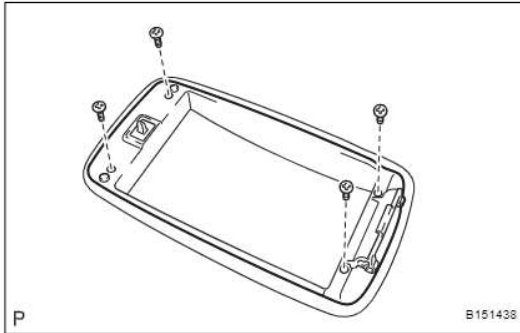


9. REMOVE INNER CONSOLE COMPARTMENT DOOR (w/ Sliding Roof)

- (a) Remove the 4 screws and inner console compartment door.


10. REMOVE CONSOLE COMPARTMENT DOOR LOCK PIN (w/ Sliding Roof)

11. REMOVE CONSOLE COMPARTMENT DOOR LOCK BASE (w/ Sliding Roof)

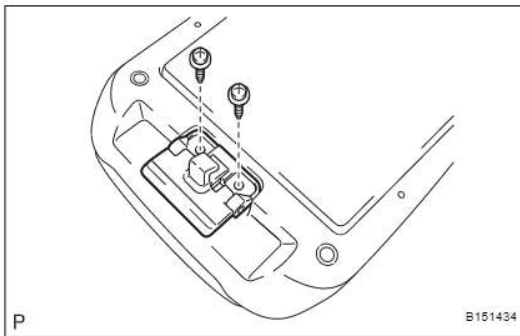


12. REMOVE CONSOLE COMPARTMENT DOOR LOCK SUB-ASSEMBLY (w/ Sliding Roof)

- (a) Remove the 2 screws and remove the console compartment door lock sub-assembly.

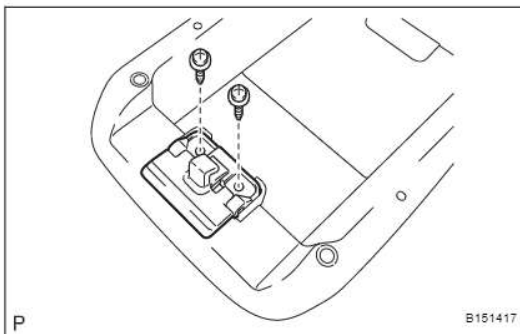

13. REMOVE CONSOLE COMPARTMENT DOOR LOCK SUB-ASSEMBLY (w/ Roof Window Glass)

- (a) Remove the 2 screws and remove the console compartment door lock sub-assembly.

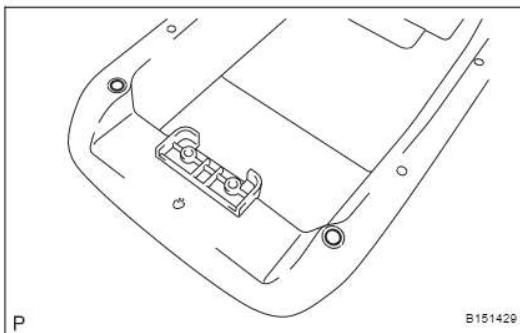


14. REMOVE CONSOLE COMPARTMENT DOOR CUSHION (w/ Roof Window Glass)

- (a) Remove the 2 console compartment door cushions.


IP

IP-30


INSTRUMENT PANEL – REAR CONSOLE BOX

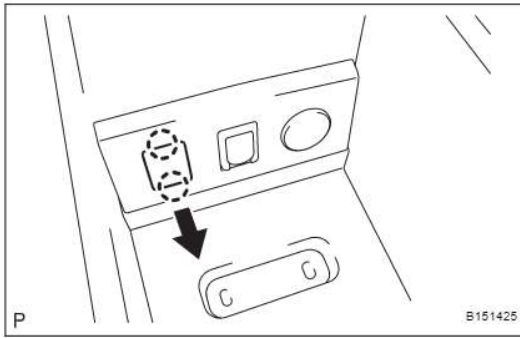**15. REMOVE SPARE SWITCH HOLE COVER**

- (a) Disengage the 2 claws and remove the spare switch hole cover.

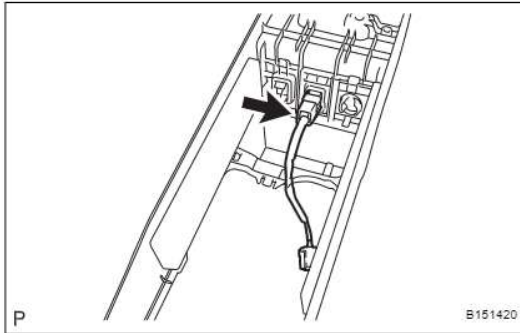**16. REMOVE CONSOLE BOX WIRE**

- (a) Disconnect the connector and remove the console box wire.

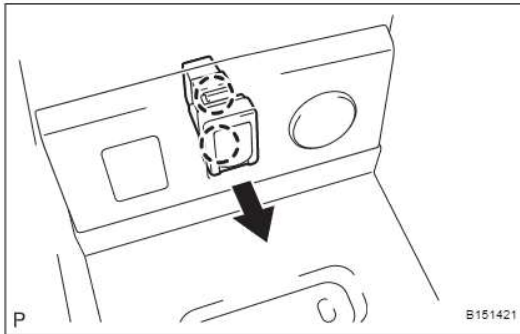**17. REMOVE STEREO JACK ADAPTER ASSEMBLY**

- (a) Remove the 2 claws and stereo jack adapter assembly.

18. REMOVE POWER POINT SOCKET ASSEMBLY (w/ Sliding Roof) (See page OT-5)**19. REMOVE POWER OUTLET SOCKET COVER (w/ Sliding Roof)**


- (a) Disengage the 2 claws and remove the power outlet socket cover.

IP

REASSEMBLY

1. INSTALL POWER OUTLET SOCKET COVER (w/ Sliding Roof)


- (a) Engage the 2 claws and install the power outlet socket cover.

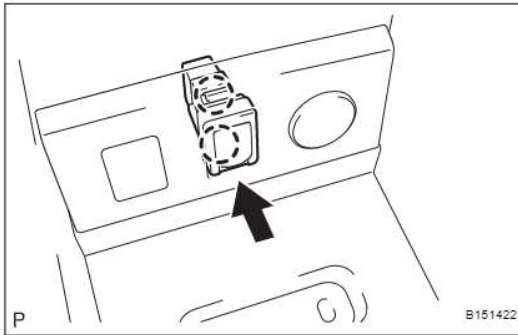

2. INSTALL POWER POINT SOCKET ASSEMBLY (w/ Sliding Roof)


3. INSTALL STEREO JACK ADAPTER ASSEMBLY

- (a) Engage the 2 claws and install the stereo jack adapter assembly.

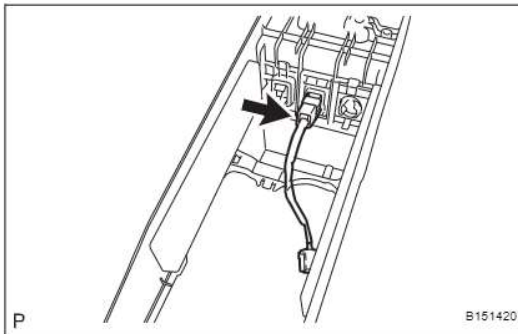


4. INSTALL CONSOLE BOX WIRE

- (a) Connect the connector and install the console box wire.

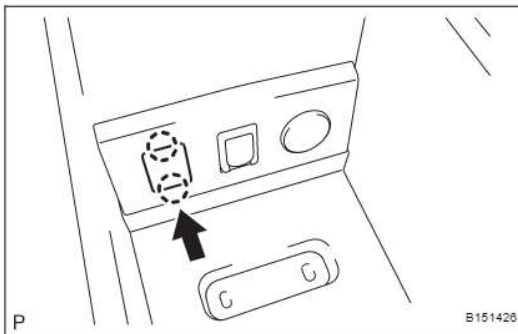

5. INSTALL SPARE SWITCH HOLE COVER

- (a) Engage the 2 claws and install the spare switch hole cover.

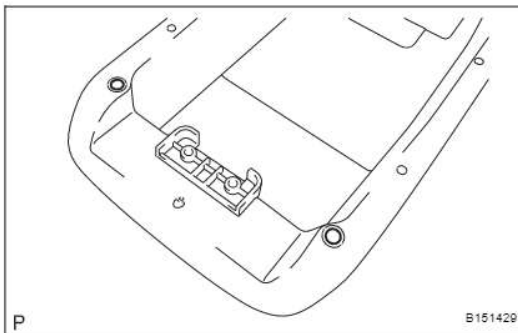


6. INSTALL CONSOLE COMPARTMENT DOOR CUSHION (w/ Roof Window Glass)

- (a) Peel off the release paper from console compartment door cushion.
(b) Install 2 new console compartment door cushions.


IP-32

INSTRUMENT PANEL – REAR CONSOLE BOX

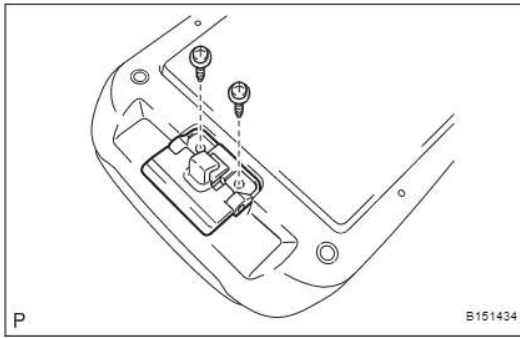

7. INSTALL CONSOLE COMPARTMENT DOOR LOCK SUB-ASSEMBLY (w/ Sliding Roof)

- (a) Install the console compartment door lock sub-assembly with the 2 screws.

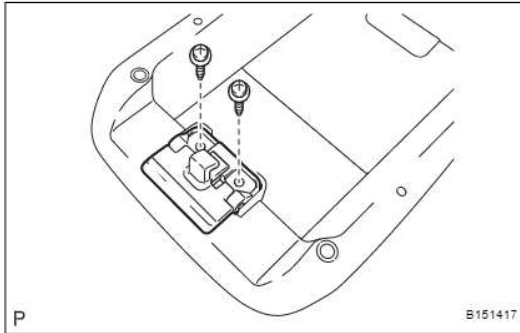


8. INSTALL CONSOLE COMPARTMENT DOOR LOCK SUB-ASSEMBLY (w/ Roof Window Glass)

- (a) Install the console compartment door lock sub-assembly with the 2 screws.


9. INSTALL CONSOLE COMPARTMENT DOOR LOCK BASE (w/ Sliding Roof)

10. INSTALL CONSOLE COMPARTMENT DOOR LOCK PIN (w/ Sliding Roof)

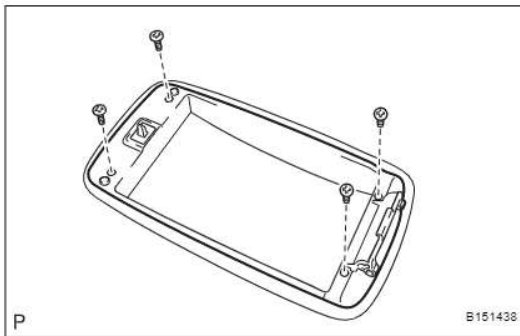


11. INSTALL INNER CONSOLE COMPARTMENT DOOR (w/ Sliding Roof)

- (a) Install the inner console compartment door with the 4 screws.

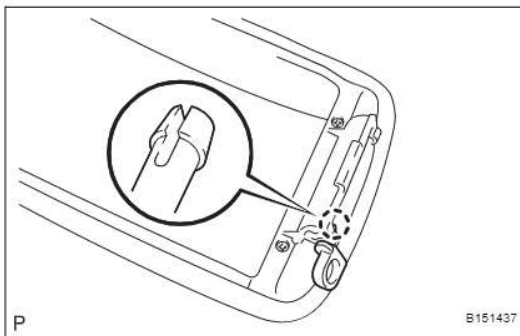

12. INSTALL NO. 2 CONSOLE COMPARTMENT DOOR STOPPER (w/ Sliding Roof)

- (a) Engage the claw and install the No. 2 console compartment door stopper.

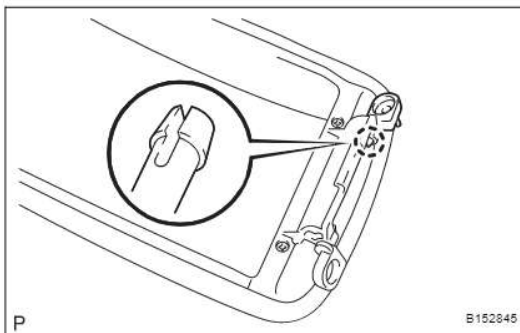


13. INSTALL NO. 1 CONSOLE COMPARTMENT DOOR STOPPER (w/ Sliding Roof)

- (a) Engage the claw and install the No. 1 console compartment door stopper.


INSTRUMENT PANEL – REAR CONSOLE BOX

IP-33

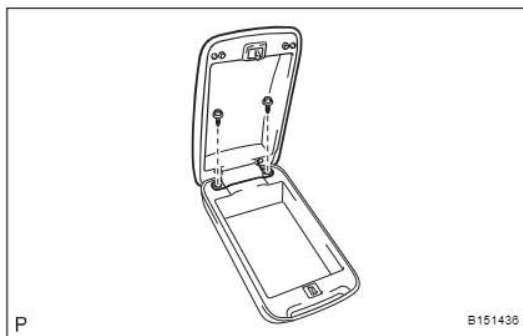


14. INSTALL OUTER CONSOLE COMPARTMENT DOOR (w/ Sliding Roof)

- (a) Install the outer console compartment door with the 2 screws.

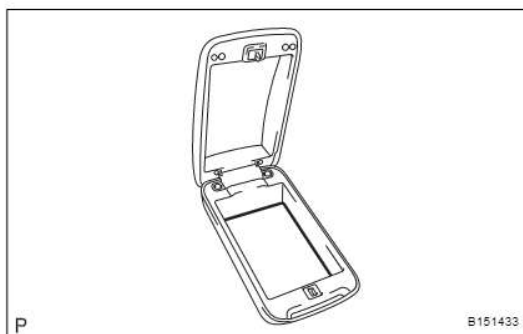

15. INSTALL BOX BOTTOM MAT (w/ Sliding Roof)

- (a) Install the box bottom mat.

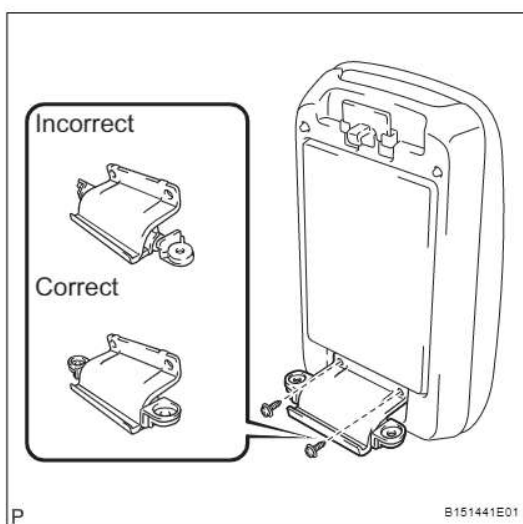


16. INSTALL CONSOLE COMPARTMENT DOOR HINGE SUB-ASSEMBLY (w/ Sliding Roof)

- (a) Install the console compartment door hinge sub-assembly with the 2 screws.

NOTICE:

Make sure that the stopper is positioned as shown in the illustration.

IP

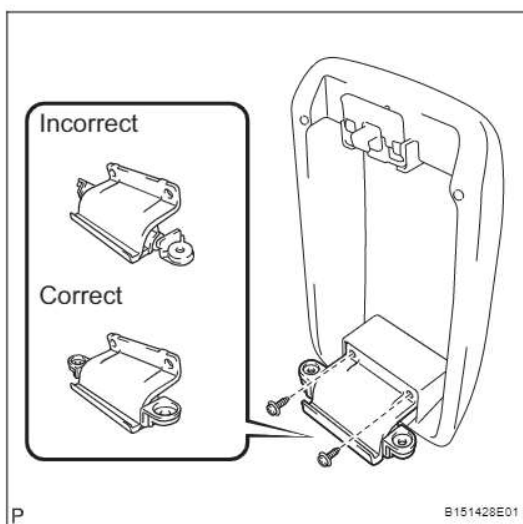

17. INSTALL CONSOLE COMPARTMENT DOOR HINGE SUB-ASSEMBLY (w/ Roof Window Glass)

- (a) Install the console compartment door hinge sub-assembly with the 2 screws.

NOTICE:


Make sure that the stopper is positioned as shown in the illustration.

IP-34

INSTRUMENT PANEL – REAR CONSOLE BOX

**18. INSTALL CONSOLE COMPARTMENT DOOR SUB-ASSEMBLY (w/ Sliding Roof)**

- (a) Insert the pins on the console compartment door into the guide holes on the console box to temporarily install the console compartment door.

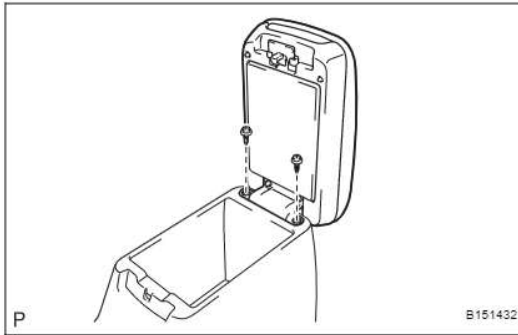


- (b) Install the console compartment door sub-assembly with the 2 screws.

IP

**19. INSTALL CONSOLE COMPARTMENT DOOR SUB-ASSEMBLY (w/ Roof Window Glass)**

- (a) Insert the pins on the console compartment door into the guide holes on the console box to temporarily install the console compartment door.

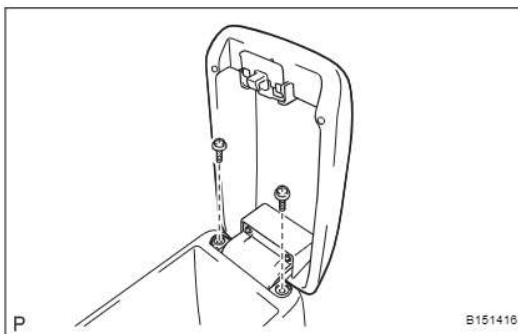

- (b) Install the console compartment door sub-assembly with the 2 screws.

INSTALLATION

1. INSTALL REAR CONSOLE BOX ASSEMBLY (See page [IP-22](#))
2. INSTALL CONSOLE UPPER REAR PANEL SUB-ASSEMBLY (See page [IP-23](#))
3. INSTALL UPPER CONSOLE PANEL (See page [IP-11](#))
4. INSTALL SHIFT LEVER KNOB SUB-ASSEMBLY (for Manual Transaxle) (See page [IP-12](#))