


Lincoln Town Car 1981 – 1982 fuse box diagram

Fuse box diagram

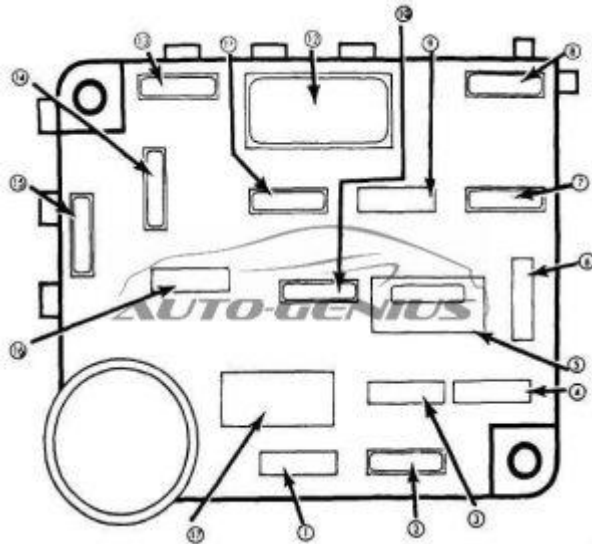

Lincoln Town Car – fuse box diagram

Nº	A	Protected Component
1	5	Instrument panel lights
2	10	Warning lights, seat belt chimes and air bag warning light
3	4	Automatic headlight dimmer
4	20	Horn and instrument panel cigar lighter
5	30	Circuit Breaker: Power door locks and seats
6	—	—
7	15	Courtesy lights, clock feed, miles to empty, seat back latch control, key warning buzzer, garage door opener, autolamp system, keyless entry, illuminated entry, visor mirror light and door cigar lighters

8	15	Tail, license, parking and side marker lights, electronic cluster display dimmer on electronic dashboard models
9	10	Electric heated rear view mirrors, rear window defogger indicator lamp on electronic dashboard models
10	20	Radio, power antenna and CB radio
11	20	Number 1 accessory feed, deck lid release, cornering light relay, speed control, heated rear window and air conditioning clutch, electronic instrument cluster and module on electronic dashboard models
12	25	Circuit Breaker: Windshield wiper/washer
13	15	Stop and hazard warning lights
14	15	Number 2 accessory feed, turn signal and back-up lights, trailer towing relays and air bag module
15	30	Heater and automatic temperature control blower
16	10	Tail, parking, side marker, coach and license lights on electronic dashboard models only
17	20	Circuit Breaker: Sun roof, door power window, keyless entry, illuminate entry

Circuit Breaker:

- 18 Amp. — Integral with headlight switch to protect headlight circuit
- 20 Amp. — Located at starter relay to protect power windows

Fusible Links:

Fusible links are located in wiring harness at starter motor relay to protect heated rear window, trailer towing brakes and lights, electronic instrument cluster power feed and air bag power feed.

